



# Yamaha 225GETO 2003

## Parts Manual

[www.floodmarine.co.uk](http://www.floodmarine.co.uk)

+44 2882 246 539


Authorised Yamaha Dealers



# Contents

<b>BOTTOM COWLING</b>	3
<b>BRACKET 1</b>	7
<b>BRACKET 2</b>	10
<b>CONTROL</b>	13
<b>CRANKSHAFT. PISTON</b>	18
<b>CYLINDER. CRANKCASE 1</b>	21
<b>CYLINDER. CRANKCASE 2</b>	24
<b>ELECTRICAL 1</b>	26
<b>ELECTRICAL 2</b>	28
<b>ELECTRICAL 3</b>	31
<b>ELECTRICAL 4</b>	35
<b>FUEL 1</b>	36
<b>FUEL 2</b>	40
<b>FUEL INJECTION NOZZLE</b>	41
<b>FUEL INJECTION PUMP</b>	44
<b>GENERATOR</b>	48
<b>INTAKE</b>	50
<b>LOWER CASING. DRIVE 1</b>	52
<b>LOWER CASING. DRIVE 2</b>	58
<b>METER</b>	60
<b>OIL PUMP</b>	62
<b>OIL TANK</b>	64
<b>POWER TRIM &amp; TILT ASSY 1</b>	67
<b>POWER TRIM &amp; TILT ASSY 2</b>	70
<b>REMOTE CONTROL ASSY</b>	73
<b>REMOTE CONTROL BOX</b>	78
<b>REPAIR KIT 1</b>	79
<b>REPAIR KIT 2</b>	81
<b>STARTING MOTOR</b>	83
<b>STEERING GUIDE</b>	85
<b>TOP COWLING</b>	86
<b>UPPER CASING</b>	88


## Bottom Cowling

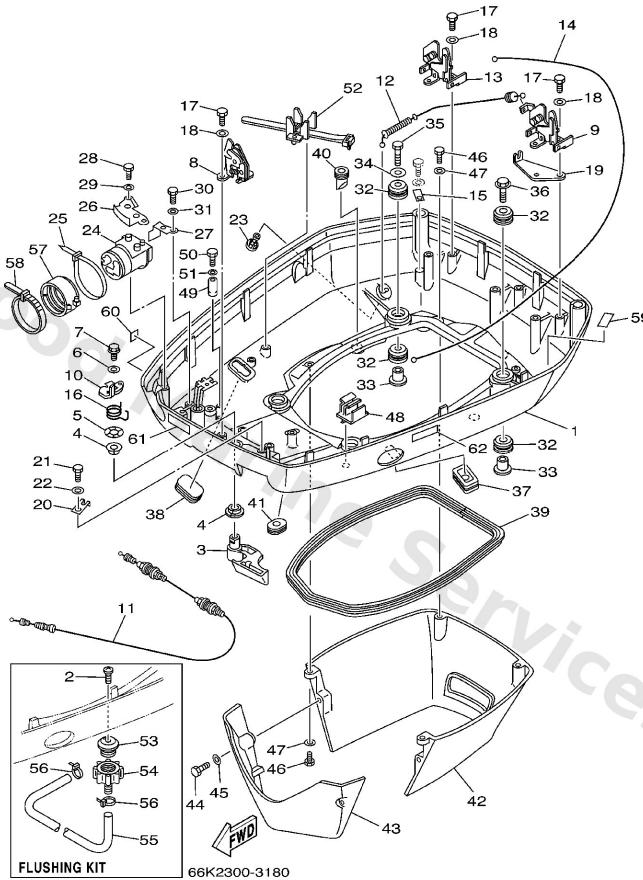

E5

Ref	Part	
1	<a href="#">61A-42711-05-8D</a> Cowling, Bottom 1	<a href="#">Buy now</a>
2	<a href="#">90169-05M00</a> Screw truss head tapping <b>FLUSHING KIT</b>	<a href="#">Buy now</a>
3	<a href="#">61A-42815-01-8D</a> Lever, Clamp	<a href="#">Buy now</a>
4	<a href="#">90386-13M88</a> Bush(6r3)	<a href="#">Buy now</a>
5	<a href="#">90206-13M10</a> Washer, wave (6e5)	<a href="#">Buy now</a>
6	<a href="#">90201-06M30</a> Washer, plate (6a1)	<a href="#">Buy now</a>
7	<a href="#">90109-06M50</a> Bolt(61a)	<a href="#">Buy now</a>
8	<a href="#">6R3-42824-00</a> Base, clamp lever	<a href="#">Buy now</a>
9	<a href="#">6R3-42811-01</a> Stay	<a href="#">Buy now</a>
10	<a href="#">6R3-42816-00</a> Lever, clamp	<a href="#">Buy now</a>
11	<a href="#">6R3-42850-10</a> Wire, complete	<a href="#">Buy now</a>
12	<a href="#">61A-42850-01</a> Wire Complete	<a href="#">Buy now</a>
13	<a href="#">6R3-42811-10</a> Stay	<a href="#">Buy now</a>
14	<a href="#">61A-42850-20</a> Wire, complete	<a href="#">Buy now</a>
15	<a href="#">682-44117-00</a> Bracket 1	<a href="#">Buy now</a>


## Bottom Cowling

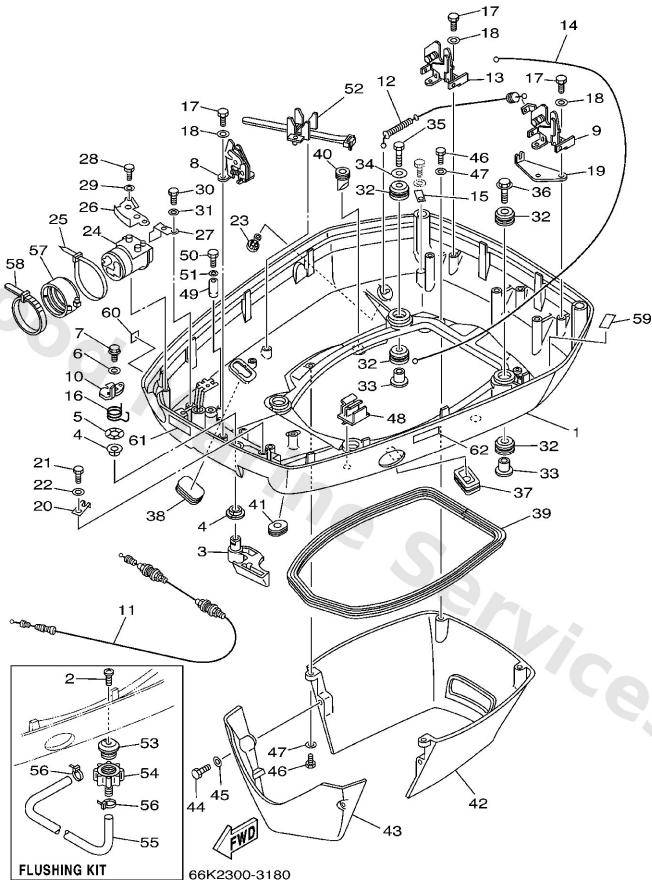

E5

Ref	Part	
16	<a href="#">6R3-42813-00</a> Spring, clamp lever	<a href="#">Buy now</a>
17	<a href="#">97095-06016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
18	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
19	<a href="#">6N7-42828-00</a> Plate, clamp	<a href="#">Buy now</a>
20	<a href="#">6R3-42828-00</a> Plate, clamp	<a href="#">Buy now</a>
21	<a href="#">97095-06010</a> Bolt	<a href="#">Buy now</a>
23	<a href="#">6E5-44391-00</a> Nipple, hose	<a href="#">Buy now</a>
24	<a href="#">61A-42725-31</a> Grommet	<a href="#">Buy now</a>
25	<a href="#">90465-13M30</a> Clamp	<a href="#">Buy now</a>
26	<a href="#">61A-42738-02-5B</a> Plate, fitting	<a href="#">Buy now</a>
27	<a href="#">64D-42738-10-5B</a> Plate, fitting	<a href="#">Buy now</a>
30	<a href="#">97095-06012</a> Bolt(gh1)	<a href="#">Buy now</a>
32	<a href="#">90480-22M81</a> Grommet	<a href="#">Buy now</a>
33	<a href="#">90387-08M37</a> Coller (6e5)	<a href="#">Buy now</a>
34	<a href="#">90201-08M54</a> Washer, plate (6e5)	<a href="#">Buy now</a>


## Bottom Cowling

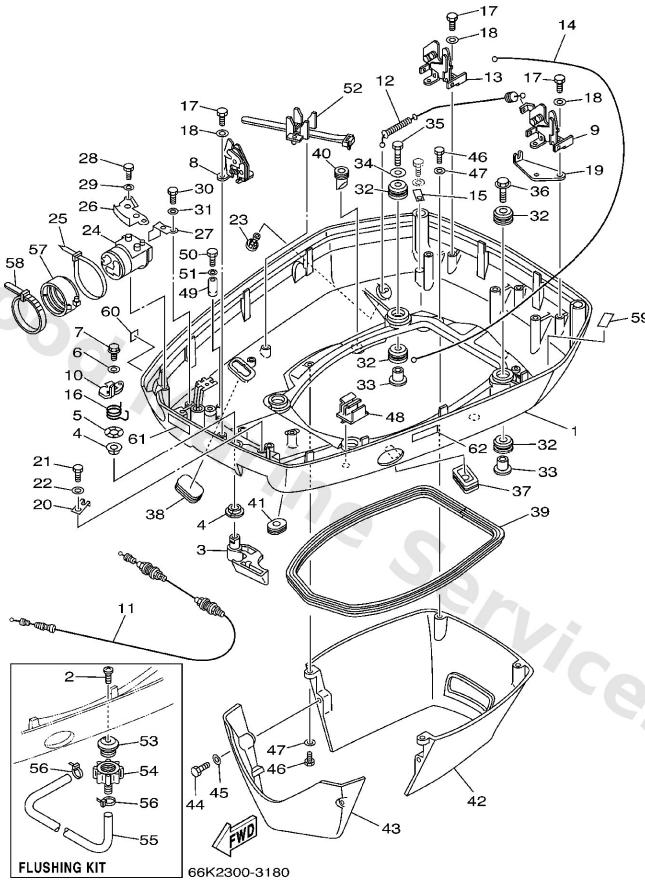

E5

Ref	Part	
35	<a href="#">97075-08035</a> Bolt(70w)	<a href="#">Buy now</a>
36	<a href="#">90119-08M22</a> Bolt, with washer	<a href="#">Buy now</a>
37	<a href="#">688-42726-10</a> Grommet	<a href="#">Buy now</a>
38	<a href="#">6H4-42726-00</a> Grommet	<a href="#">Buy now</a>
39	<a href="#">61A-42716-00</a> Rubber seal 1	<a href="#">Buy now</a>
40	<a href="#">61A-42717-00</a> Rubber, seal 2	<a href="#">Buy now</a>
41	<a href="#">61A-42727-00</a> Grommet	<a href="#">Buy now</a>
42	<a href="#">61A-42741-01-8D</a> Apron	<a href="#">Buy now</a>
43	<a href="#">61A-42771-01-8D</a> Apron	<a href="#">Buy now</a>
44	<a href="#">97095-06030</a> Bolt(jf7)	<a href="#">Buy now</a>
46	<a href="#">97095-06020</a> Bolt(7u8)	<a href="#">Buy now</a>
48	<a href="#">6E5-82594-00</a> Clamp	<a href="#">Buy now</a>
49	<a href="#">6E5-82588-00</a> Plate	<a href="#">Buy now</a>
52	<a href="#">688-82594-00</a> Clamp	<a href="#">Buy now</a>
53	<a href="#">6R3-12572-00</a> Adapter <b>FLUSHING KIT</b>	<a href="#">Buy now</a>


## Bottom Cowling

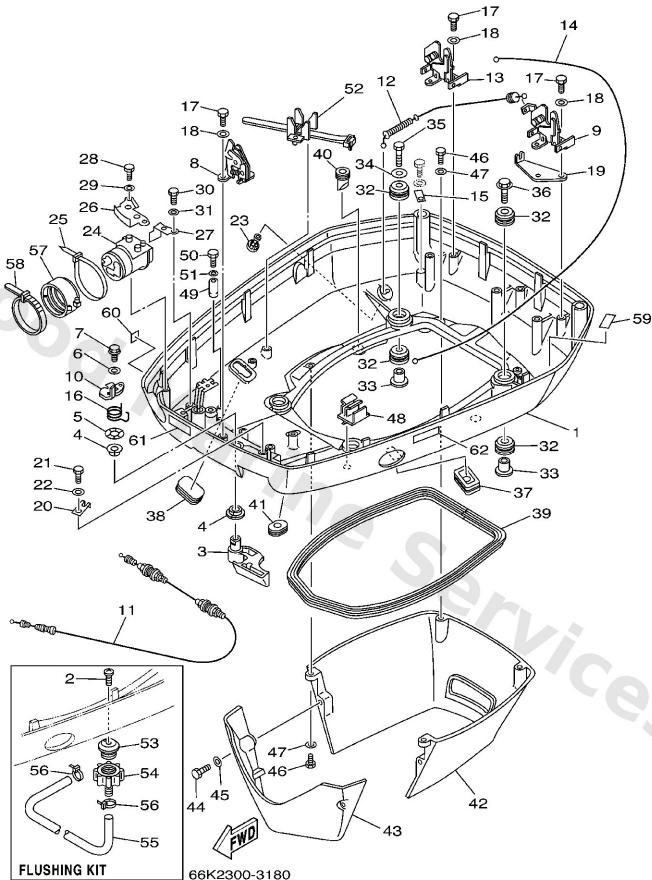

E5

Ref	Part	
54	<u>6R3-12580-00</u> Joint assembly <b>FLUSHING KIT</b>	<a href="#">Buy now</a>
55	<u>90445-11M36</u> Hose (I700) <b>FLUSHING KIT</b>	<a href="#">Buy now</a>
56	<u>90465-11M10</u> Clamp <b>FLUSHING KIT</b>	<a href="#">Buy now</a>
57	<u>68F-42753-00</u> Fastner	<a href="#">Buy now</a>
58	<u>90464-20258</u> Clamp	<a href="#">Buy now</a>
59	<u>6K7-42791-00</u> Mark 1	<a href="#">Buy now</a>
60	<u>6A1-28176-00</u> Label Caution	<a href="#">Buy now</a>
61	<u>65L-2415E-60</u> Label, Caution	<a href="#">Buy now</a>
62	<u>6E3-8257H-00</u> Plate Mark	<a href="#">Buy now</a>


## Bracket 1

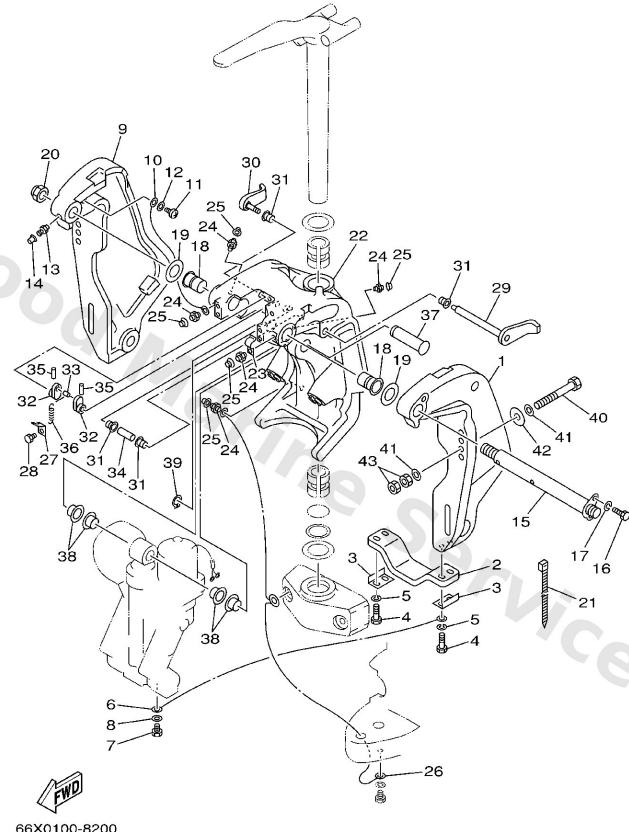

**F4**

Ref	Part	
1	<a href="#">64E-43111-02-8D</a> Bracket, clamp	<a href="#">Buy now</a>
2	<a href="#">6G5-45251-02</a> Anode	<a href="#">Buy now</a>
3	<a href="#">6G5-44526-00</a> Plate	<a href="#">Buy now</a>
4	<a href="#">97095-06030</a> Bolt(jf7)	<a href="#">Buy now</a>
5	<a href="#">92995-06100</a> Washer(6a1)	<a href="#">Buy now</a>
6	<a href="#">6E5-82148-00</a> Wire, lead 5	<a href="#">Buy now</a>
7	<a href="#">97095-06010</a> Bolt	<a href="#">Buy now</a>
8	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
9	<a href="#">64E-43112-02-8D</a> Bracket, clamp	<a href="#">Buy now</a>
11	<a href="#">97880-06012</a> Screw, pan head(62j)	<a href="#">Buy now</a>
12	<a href="#">92990-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
13	<a href="#">93700-06M03</a> Nipple, grease(6a1)	<a href="#">Buy now</a>
14	<a href="#">663-45119-00</a> Cap, grease nipple AP	<a href="#">Buy now</a>
15	<a href="#">64E-43131-01</a> Bolt, clamp bracket	<a href="#">Buy now</a>
16	<a href="#">97095-08020</a> Bolt, hexagon	<a href="#">Buy now</a>

## Bracket 1

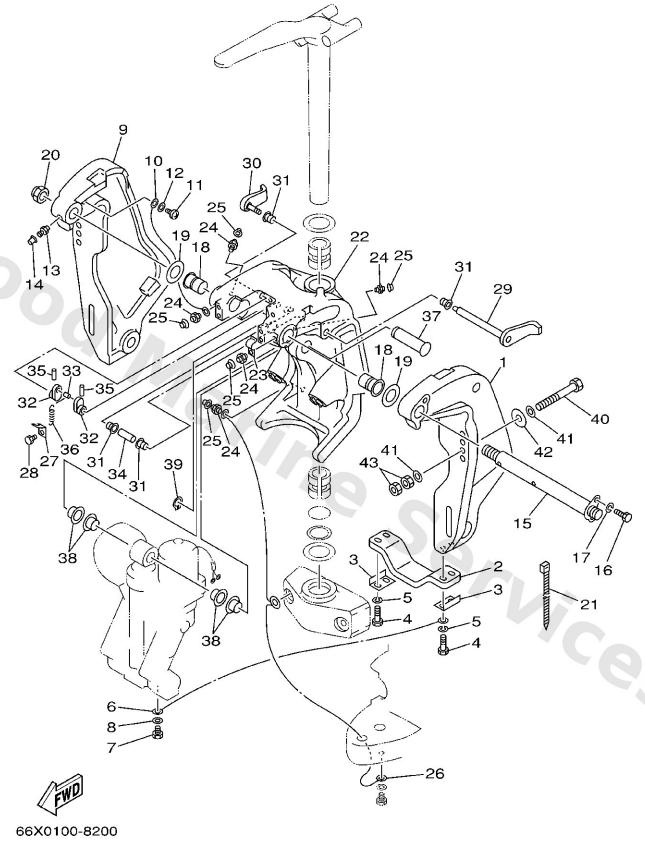


66X0100-8200

F4

Ref	Part	
17	<a href="#">92995-08100</a> Ybs67-8 washer, spring	<a href="#">Buy now</a>
18	<a href="#">90386-25M31</a> Bushing (6e5)	<a href="#">Buy now</a>
19	<a href="#">90201-26M59</a> Washer, plate (6e5)	<a href="#">Buy now</a>
20	<a href="#">90185-22M11</a> Nut, self-locking	<a href="#">Buy now</a>
21	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
22	<a href="#">64E-43311-10-8D</a> Bracket, swivel	<a href="#">Buy now</a>
23	<a href="#">90465-08M63</a> Clamp(61u)	<a href="#">Buy now</a>
26	<a href="#">66K-82149-00</a> Wire, lead 3	<a href="#">Buy now</a>
27	<a href="#">6G5-43144-00</a> Hook, spring	<a href="#">Buy now</a>
29	<a href="#">6G5-43181-02</a> Lever, tilt stop 1	<a href="#">Buy now</a>
30	<a href="#">6G5-43185-02</a> Lever, tilt stop 2	<a href="#">Buy now</a>
31	<a href="#">90386-10M16</a> Bushing (688)	<a href="#">Buy now</a>
32	<a href="#">6G5-43148-00</a> Collar, distance	<a href="#">Buy now</a>
33	<a href="#">90249-06M19</a> Pin(6e5)	<a href="#">Buy now</a>
34	<a href="#">90387-10M05</a> Collar(6e5)	<a href="#">Buy now</a>


## Bracket 1

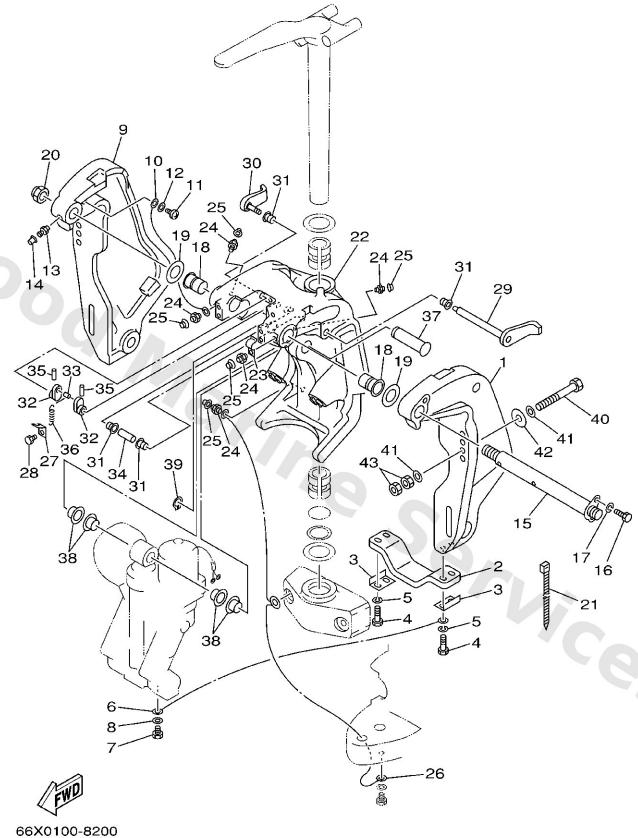

Ref	Part	
35	<a href="#">91690-30020</a> Pin, spring (6h4)	<a href="#">Buy now</a>
36	<a href="#">90506-14M24</a> Spring, tension(6e5)	<a href="#">Buy now</a>
37	<a href="#">64E-43126-00</a> Pin, upper shock mount	<a href="#">Buy now</a>
38	<a href="#">90386-22M98</a> Bush(61u)	<a href="#">Buy now</a>
39	<a href="#">93410-22M11</a> Circlip(61u)	<a href="#">Buy now</a>
40	<a href="#">90101-12M05</a> Bolt (l:130mm)	<a href="#">Buy now</a>
41	<a href="#">90201-13M01</a> Washer, plate(6e5)	<a href="#">Buy now</a>
42	<a href="#">90201-12M05</a> Washe, plate(663)	<a href="#">Buy now</a>
43	<a href="#">95380-12600</a> Nut (707)	<a href="#">Buy now</a>

F4


## Bracket 2

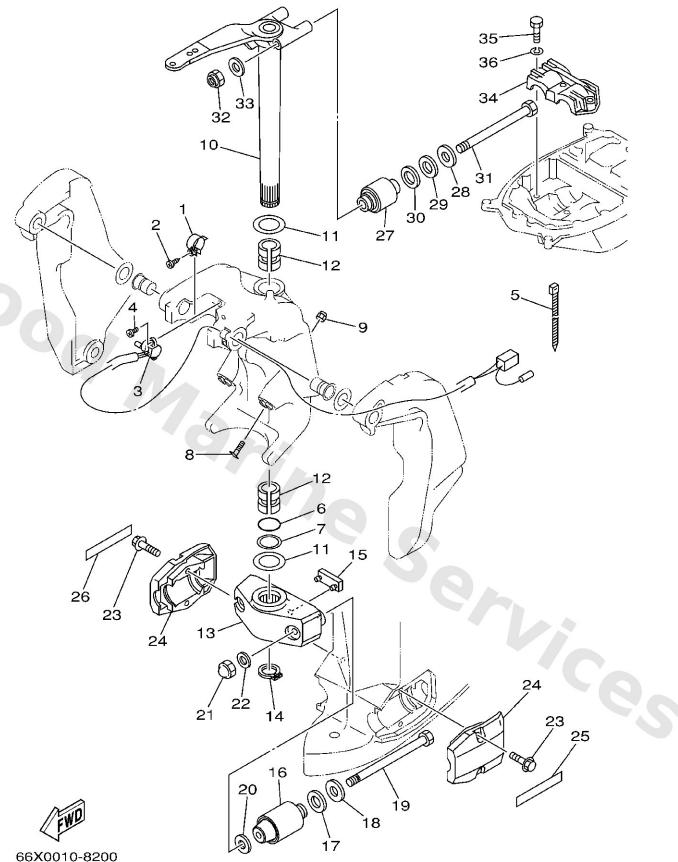

F6

Ref	Part	
1	<a href="#">64E-43139-02</a> Cam, trim sender (with screw)	<a href="#">Buy now</a>
2	<a href="#">97780-60525</a> Screw, tapping(65j)	<a href="#">Buy now</a>
3	<a href="#">64E-83672-02</a> Trim sender	<a href="#">Buy now</a>
4	<a href="#">97885-06016</a> Screw, pan head(6b0)	<a href="#">Buy now</a>
5	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
6	<a href="#">93210-37MH7</a> O-ring(61u)	<a href="#">Buy now</a>
7	<a href="#">90202-40M47</a> Washer, plate(61a)	<a href="#">Buy now</a>
8	<a href="#">64E-43376-00</a> Bolt, thrust receiver	<a href="#">Buy now</a>
9	<a href="#">95780-10300</a> Nut, nylon (6e5)	<a href="#">Buy now</a>
10	<a href="#">66K-42510-00-8D</a> Steering bracket assembly	<a href="#">Buy now</a>
11	<a href="#">90201-38M60</a> Washer, plate (6e5)	<a href="#">Buy now</a>
12	<a href="#">90386-38M32</a> Bush(6e5)	<a href="#">Buy now</a>
13	<a href="#">66K-44551-00-8D</a> Housing, lower mount rubber	<a href="#">Buy now</a>
14	<a href="#">93410-37M04</a> Circlip (6e5)	<a href="#">Buy now</a>
15	<a href="#">6E5-44575-00</a> Damper, lower mount rubber	<a href="#">Buy now</a>


## Bracket 2

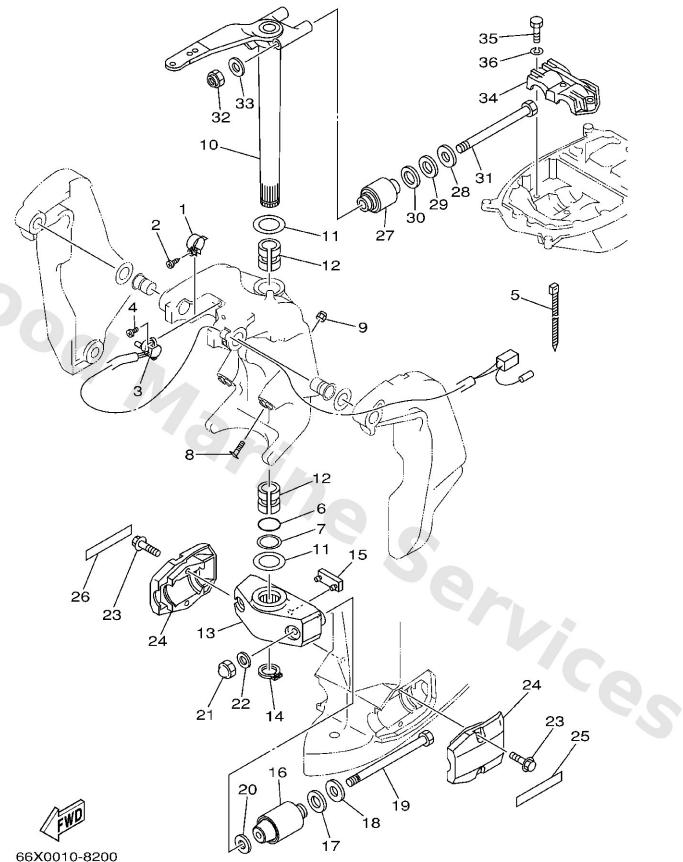

F6

Ref	Part	
16	<a href="#">66K-44555-00-94</a> Mount damper, lower side	<a href="#">Buy now</a>
17	<a href="#">90202-32M19</a> Washer, plate (6e5)	<a href="#">Buy now</a>
18	<a href="#">90201-16M55</a> Washer, plate (6e5)	<a href="#">Buy now</a>
19	<a href="#">90109-14M80</a> Bolt	<a href="#">Buy now</a>
20	<a href="#">90201-15M58</a> Washer, plate (6e5)	<a href="#">Buy now</a>
21	<a href="#">95380-14800</a> Nut, crown (6e5)	<a href="#">Buy now</a>
22	<a href="#">92995-14600</a> Washer (6e5)	<a href="#">Buy now</a>
23	<a href="#">90101-10M70</a> Bolt(6j9)	<a href="#">Buy now</a>
24	<a href="#">66K-44553-00-NA</a> Cover, lower mount	<a href="#">Buy now</a>
25	<a href="#">65N-43155-N0</a> Mark 1	<a href="#">Buy now</a>
26	<a href="#">65N-43156-N0</a> Mark 2	<a href="#">Buy now</a>
27	<a href="#">66K-44514-00-94</a> Mount damper, upper side	<a href="#">Buy now</a>
28	<a href="#">90201-16M01</a> Washer, plate(61a)	<a href="#">Buy now</a>
29	<a href="#">90202-28M46</a> Washer, plate(61a)	<a href="#">Buy now</a>
30	<a href="#">90201-28M01</a> Washer, plate(61a)	<a href="#">Buy now</a>


## Bracket 2

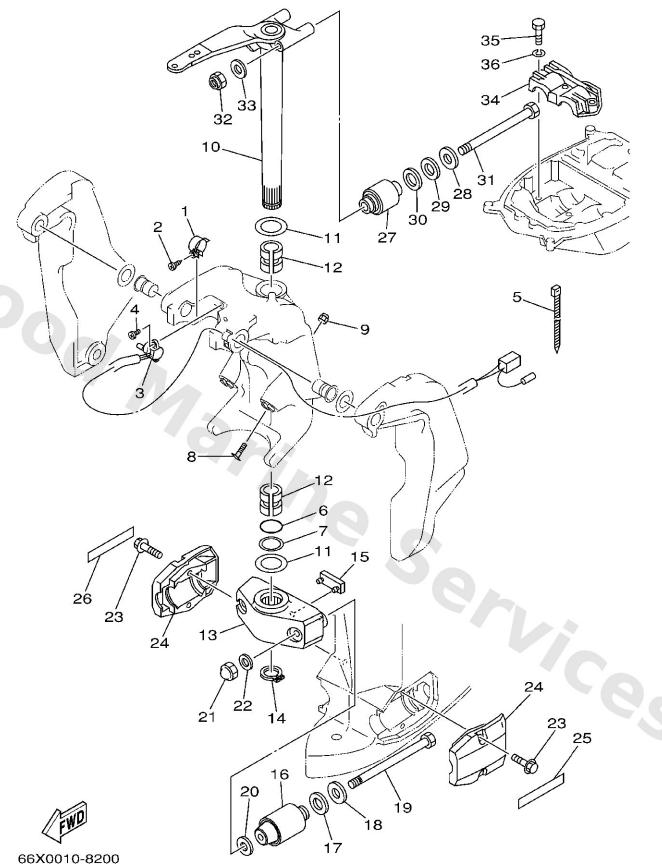

Ref	Part	
31	<a href="#">90109-14M10</a> Bolt	<a href="#">Buy now</a>
32	<a href="#">90185-14M00</a> Nut, self-locking(61a)	<a href="#">Buy now</a>
34	<a href="#">61A-44511-00-94</a> Cover, upper mount	<a href="#">Buy now</a>
35	<a href="#">97095-10045</a> Bolt(64d)	<a href="#">Buy now</a>
36	<a href="#">92995-10600</a> Washer, plate	<a href="#">Buy now</a>

F6


# Control

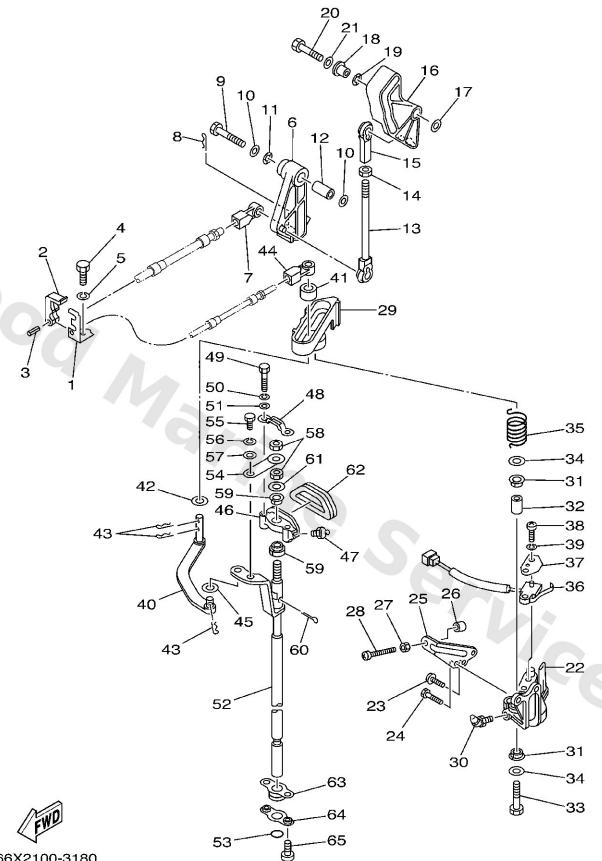

**F1**


Ref	Part	
1	<a href="#">65L-48531-00</a> Bracket Remote Control 1	<a href="#">Buy now</a>
2	<a href="#">663-48538-00</a> Clamp, cable 1	<a href="#">Buy now</a>
3	<a href="#">91690-30010</a> Pin, spring (663)	<a href="#">Buy now</a>
4	<a href="#">97095-08020</a> Bolt, hexagon	<a href="#">Buy now</a>
5	<a href="#">92995-08100</a> Ybs67-8 washer, spring	<a href="#">Buy now</a>
6	<a href="#">65L-41632-01</a> Lever, magneto control	<a href="#">Buy now</a>
7	<a href="#">6E5-48344-00</a> Cable end, remote control	<a href="#">Buy now</a>
8	<a href="#">90468-18008</a> Clip 620436610000	<a href="#">Buy now</a>
9	<a href="#">97013-08045</a> Bolt	<a href="#">Buy now</a>
10	<a href="#">92990-08200</a> Ybs66-8 washer, plain	<a href="#">Buy now</a>
11	<a href="#">90206-12M00</a> Washer, wave (676)	<a href="#">Buy now</a>
12	<a href="#">90387-08M16</a> Collar	<a href="#">Buy now</a>
13	<a href="#">61A-41237-00</a> Joint, link	<a href="#">Buy now</a>
14	<a href="#">95380-05600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
15	<a href="#">682-41237-00</a> Joint, link 2	<a href="#">Buy now</a>

# Control

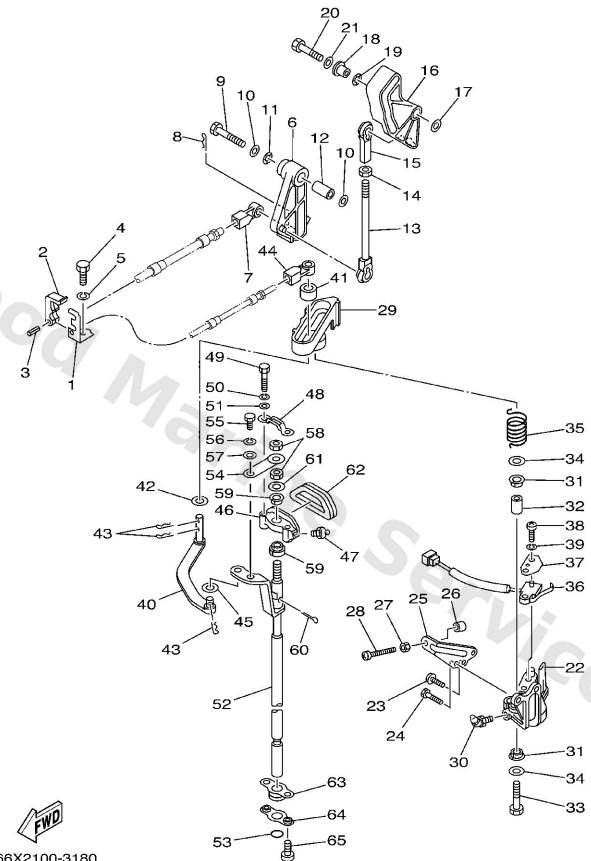

**F1**


Ref	Part	
16	<a href="#">66K-41213-00</a> Cam, Accel	<a href="#">Buy now</a>
17	<a href="#">90201-06M31</a> Washer (6a0)	<a href="#">Buy now</a>
18	<a href="#">90387-06M29</a> Coller (6a0)	<a href="#">Buy now</a>
19	<a href="#">90206-10M04</a> Washer, wave (676)	<a href="#">Buy now</a>
20	<a href="#">97013-06030</a> Bolt	<a href="#">Buy now</a>
21	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
22	<a href="#">61A-44117-01-1S</a> Bracket	<a href="#">Buy now</a>
23	<a href="#">90159-05M25</a> Screw,pan head (646)	<a href="#">Buy now</a>
24	<a href="#">97095-06020</a> Bolt(7u8)	<a href="#">Buy now</a>
25	<a href="#">69L-42744-00</a> Stay	<a href="#">Buy now</a>
26	<a href="#">688-44194-00</a> Cap	<a href="#">Buy now</a>
27	<a href="#">95380-06600</a> Nut(661)	<a href="#">Buy now</a>
28	<a href="#">90157-06M11</a> Screw, pan head(697)	<a href="#">Buy now</a>
29	<a href="#">61A-44176-00-1S</a> Bracket	<a href="#">Buy now</a>
30	<a href="#">93700-06M01</a> Nipple, grease(61a)	<a href="#">Buy now</a>

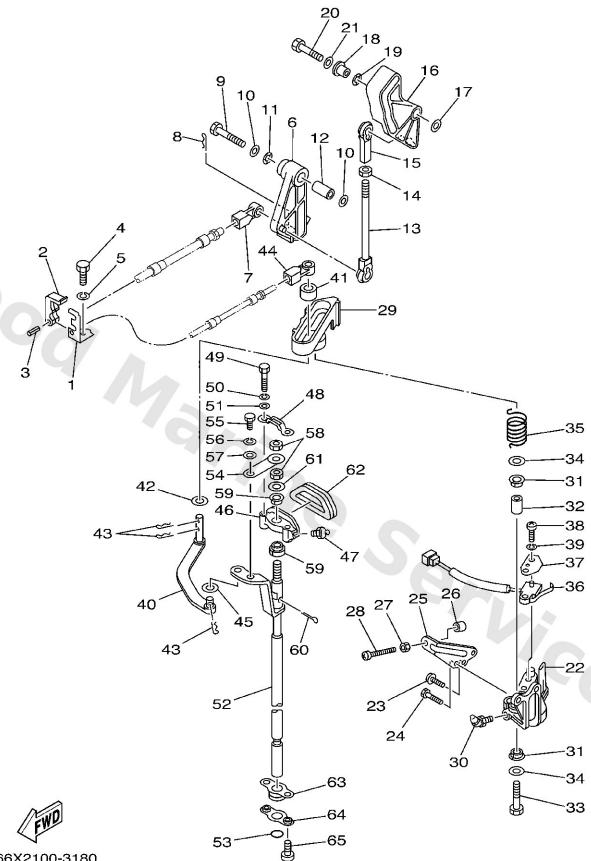

**F1**

Ref	Part	
31	<a href="#">90386-12069</a> Bush(666)	<a href="#">Buy now</a>
32	<a href="#">90387-08M09</a> Collar(61a)	<a href="#">Buy now</a>
33	<a href="#">97095-08035</a> Bolt(70w)	<a href="#">Buy now</a>
34	<a href="#">92995-08200</a> Ybs66-8 washer, plain	<a href="#">Buy now</a>
35	<a href="#">90508-20M31</a> Spring, torsion(61a)	<a href="#">Buy now</a>
36	<a href="#">61A-8259F-00</a> Switch assembly	<a href="#">Buy now</a>
37	<a href="#">61A-82588-01</a> Plate	<a href="#">Buy now</a>
38	<a href="#">97885-04016</a> Screw, panhead (796)	<a href="#">Buy now</a>
39	<a href="#">92995-04100</a> Ybs67-4 washer, spring	<a href="#">Buy now</a>
40	<a href="#">61A-44121-00</a> Lever, shift rod	<a href="#">Buy now</a>
41	<a href="#">6E5-44122-00</a> Bushing, shift rod lever	<a href="#">Buy now</a>
42	<a href="#">90202-08M20</a> Washer, plate (6e5)	<a href="#">Buy now</a>
45	<a href="#">90202-06007</a> Washer plate 626441880000	<a href="#">Buy now</a>
46	<a href="#">61A-44118-00-8D</a> Bracket	<a href="#">Buy now</a>
47	<a href="#">93700-06M03</a> Nipple, grease(6a1)	<a href="#">Buy now</a>


# Control

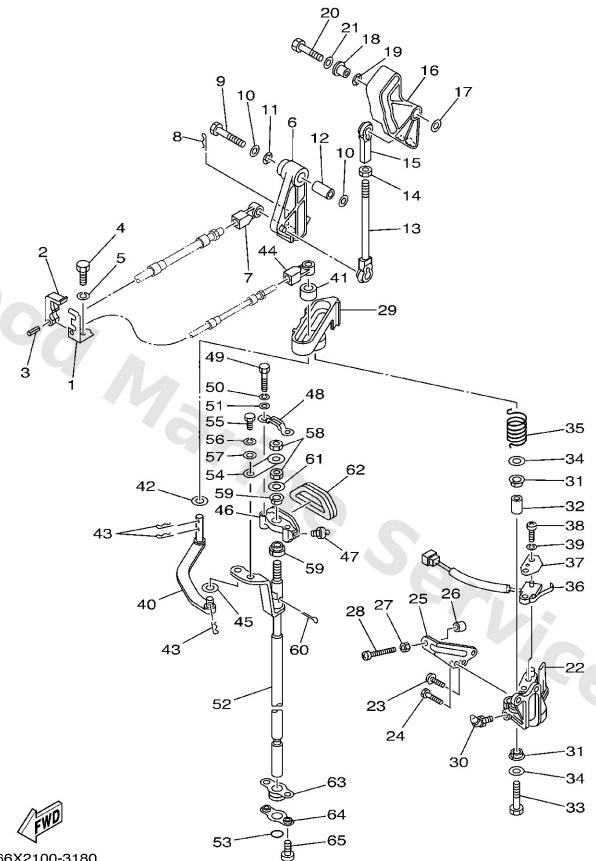

F1

Ref	Part	
48	<a href="#">61A-44116-00</a> Spring	<a href="#">Buy now</a>
49	<a href="#">97095-06030</a> Bolt(jf7)	<a href="#">Buy now</a>
50	<a href="#">92995-06100</a> Washer(6a1)	<a href="#">Buy now</a>
51	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
52	<a href="#">66K-44120-00</a> Handle Gear Shift assembly	<a href="#">Buy now</a>
53	<a href="#">93210-09165</a> O-ring	<a href="#">Buy now</a>
54	<a href="#">61A-44112-00</a> Stay, handle gear shift	<a href="#">Buy now</a>
55	<a href="#">97013-06012</a> Bolt(gh1)	<a href="#">Buy now</a>
56	<a href="#">92903-06100</a> Washer(6a1)	<a href="#">Buy now</a>
58	<a href="#">95313-08600</a> Nut(6l2)	<a href="#">Buy now</a>
59	<a href="#">90386-90M90</a> Bush(61a)	<a href="#">Buy now</a>
60	<a href="#">91490-20012</a> Pin, cotter (648)	<a href="#">Buy now</a>
61	<a href="#">90201-09M02</a> Washer, plate(61a)	<a href="#">Buy now</a>
62	<a href="#">61A-15315-00</a> Seal, crankcase	<a href="#">Buy now</a>
63	<a href="#">61A-42724-00</a> Grommet	<a href="#">Buy now</a>


# Control

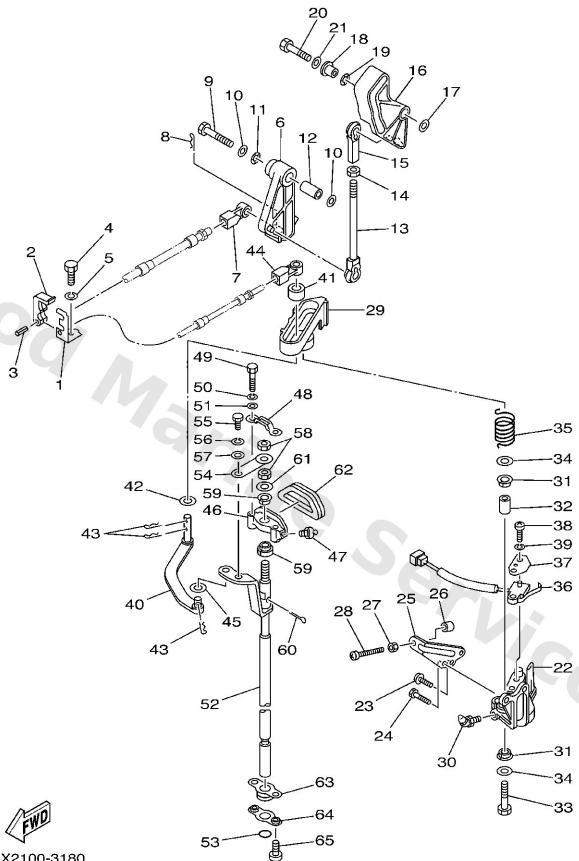

**F1**

Ref	Part	
64	<a href="#">61A-44138-00</a> Washer	<a href="#">Buy now</a>
65	<a href="#">97885-06008</a> Screw, pan head(6a3)	<a href="#">Buy now</a>


# Crankshaft. Piston

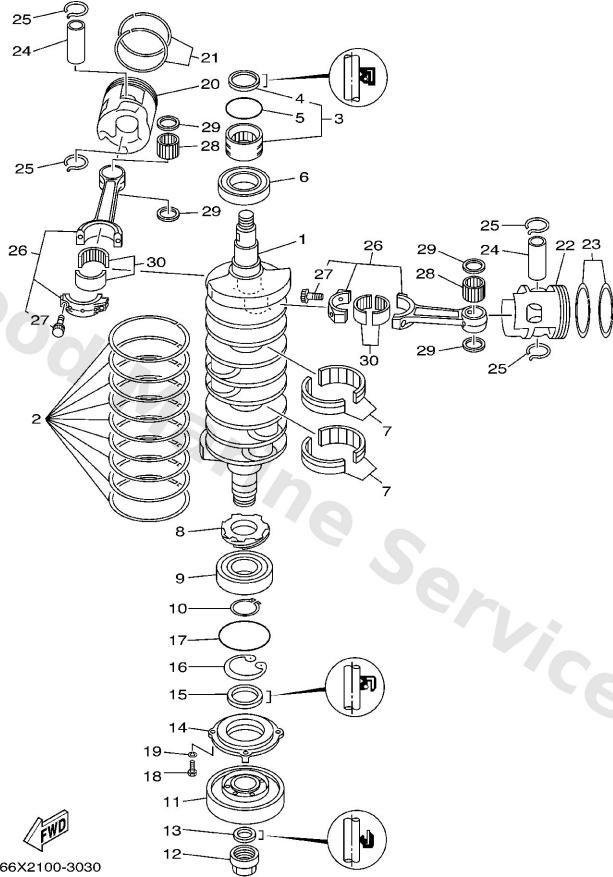

**B1**


Ref	Part	
1	<a href="#">61A-11411-00</a> Crankshaft	<a href="#">Buy now</a>
2	<a href="#">61A-11447-00</a> Seal, crank	<a href="#">Buy now</a>
3	<a href="#">93311-940V0</a> Bearing, cylindrical(61a)	<a href="#">Buy now</a>
4	<a href="#">93102-40M38</a> Oil seal(61a)	<a href="#">Buy now</a>
5	<a href="#">93210-54M54</a> O-ring (6g1)	<a href="#">Buy now</a>
6	<a href="#">93306-209U1</a> Bearing(61a)	<a href="#">Buy now</a>
7	<a href="#">93310-959U0</a> Bearing, cylindrical(61a)	<a href="#">Buy now</a>
8	<a href="#">61A-11536-00</a> Gear, drive	<a href="#">Buy now</a>
9	<a href="#">93306-308U0</a> Bearing(61a)	<a href="#">Buy now</a>
10	<a href="#">93410-40M03</a> Circlip(n02)	<a href="#">Buy now</a>
11	<a href="#">61A-11586-01</a> Pulley, crankshaft balance	<a href="#">Buy now</a>
12	<a href="#">61A-11555-01</a> Nut, crankshaft 1	<a href="#">Buy now</a>
13	<a href="#">93104-22M07</a> Oil seal(61a)	<a href="#">Buy now</a>
14	<a href="#">61A-15359-00-94</a> Housing, oil seal	<a href="#">Buy now</a>
15	<a href="#">93102-40M36</a> Oil seal	<a href="#">Buy now</a>

# Crankshaft. Piston

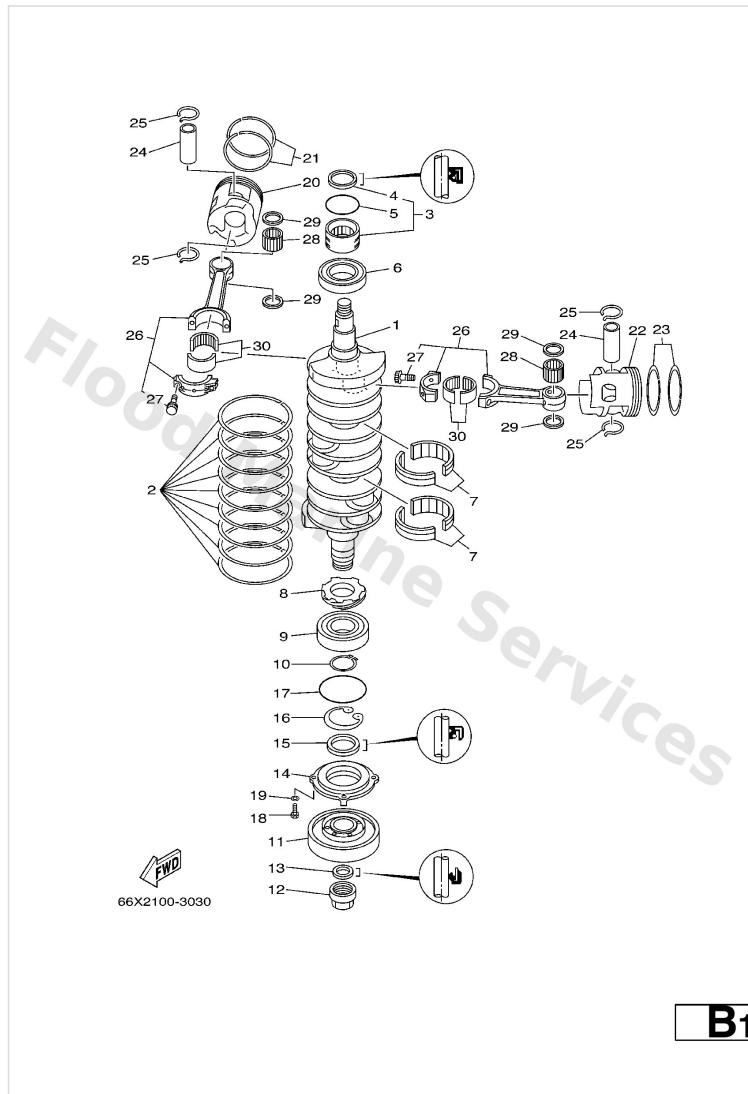

Ref	Part	
16	<a href="#">93420-61M07</a> Circlip(61a)	<a href="#">Buy now</a>
17	<a href="#">93210-81MA6</a> O-ring(61a)	<a href="#">Buy now</a>
18	<a href="#">97095-06020</a> Bolt(7u8)	<a href="#">Buy now</a>
19	<a href="#">92995-06100</a> Washer(6a1)	<a href="#">Buy now</a>
20	<a href="#">69L-11631-00-85</a> Piston (std)	<a href="#">Buy now</a>
20	<a href="#">69L-11635-00</a> Piston (0.25mm o/s) AP	<a href="#">Buy now</a>
20	<a href="#">69L-11636-00</a> Piston (0.50mm o/s) AP	<a href="#">Buy now</a>
21	<a href="#">64D-11603-01</a> Piston ring set (std)	<a href="#">Buy now</a>
21	<a href="#">64D-11604-01</a> Piston ring set (0.25mm o/s) AP	<a href="#">Buy now</a>
21	<a href="#">64D-11605-01</a> Piston ring set (0.50mm o/s) AP	<a href="#">Buy now</a>
22	<a href="#">69L-11642-00-85</a> Piston 2 (std)	<a href="#">Buy now</a>
22	<a href="#">69L-11645-00</a> Piston 2 (0.25mm o/s) AP	<a href="#">Buy now</a>
22	<a href="#">69L-11646-00</a> Piston 2 (0.50mm o/s) AP	<a href="#">Buy now</a>
24	<a href="#">61A-11633-02</a> Pin, piston	<a href="#">Buy now</a>
25	<a href="#">61A-11634-00</a> Clip, piston pin	<a href="#">Buy now</a>


## Crankshaft. Piston

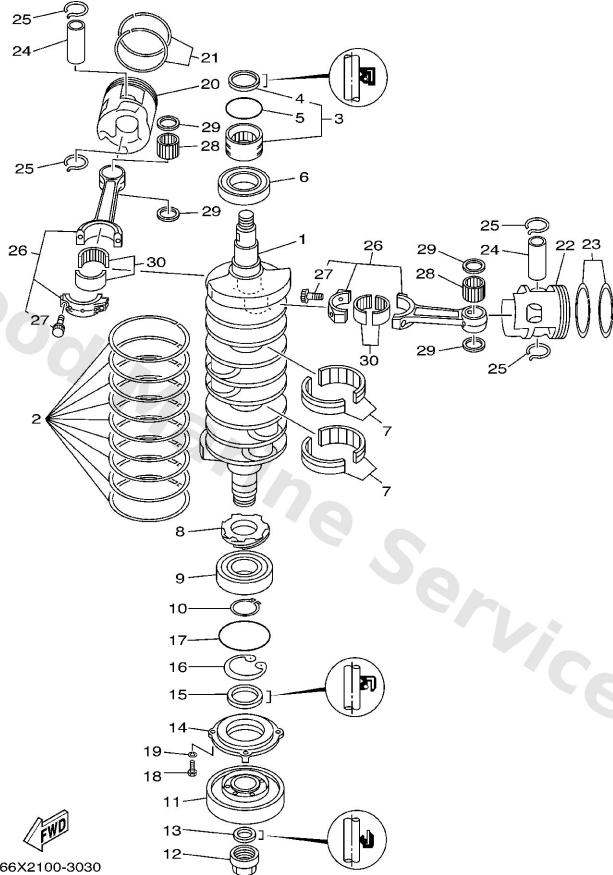

Ref	Part	
26	<a href="#">66K-11650-00</a> Connecting rod kit	<a href="#">Buy now</a>
27	<a href="#">90109-09001</a> Bolt	<a href="#">Buy now</a>
28	<a href="#">93310-326V4</a> Bearing, cylindrical(61a)	<a href="#">Buy now</a>
29	<a href="#">90201-26M03</a> Washer, plate(61a)	<a href="#">Buy now</a>
30	<a href="#">93310-840U1</a> Bearing	<a href="#">Buy now</a>

B1


# Cylinder. Crankcase 1

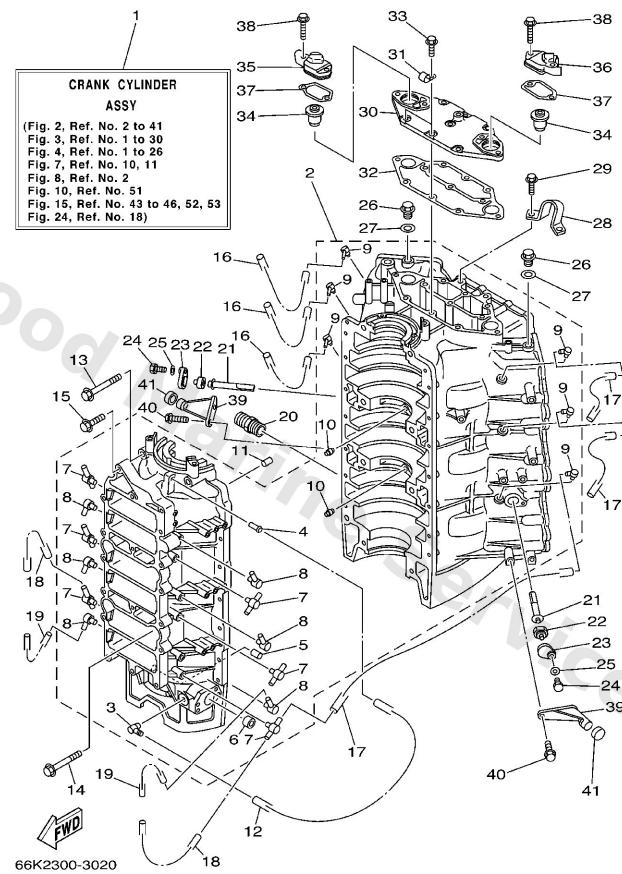

A6

Ref	Part	
3	<a href="#">6E5-11372-01</a> Nipple, hose	<a href="#">Buy now</a>
4	<a href="#">624-14485-00</a> Pipe, joint	<a href="#">Buy now</a>
5	<a href="#">90384-06M07</a> Bush, bimetal formed(6r3)	<a href="#">Buy now</a>
6	<a href="#">90383-16M01</a> Bush, formed(61a)	<a href="#">Buy now</a>
7	<a href="#">6F6-11372-00</a> Nipple, hose	<a href="#">Buy now</a>
8	<a href="#">650-11372-00</a> Nipple, hose	<a href="#">Buy now</a>
10	<a href="#">663-11518-01</a> Lock, bearing	<a href="#">Buy now</a>
11	<a href="#">93608-12063</a> Pin, dowel (626)	<a href="#">Buy now</a>
12	<a href="#">90445-07M11</a> Hose (I770)	<a href="#">Buy now</a>
13	<a href="#">90105-10M62</a> Bolt, washer based(61a)	<a href="#">Buy now</a>
14	<a href="#">90105-10M75</a> Bolt, washer based(65j)	<a href="#">Buy now</a>
15	<a href="#">90119-06M13</a> Bolt, with washer (682)	<a href="#">Buy now</a>
16	<a href="#">90445-07M44</a> Hose (I390)	<a href="#">Buy now</a>
17	<a href="#">90445-07M40</a> Hose (I390)	<a href="#">Buy now</a>
18	<a href="#">90445-07MA6</a> Hose (I200)	<a href="#">Buy now</a>


# Cylinder. Crankcase 1

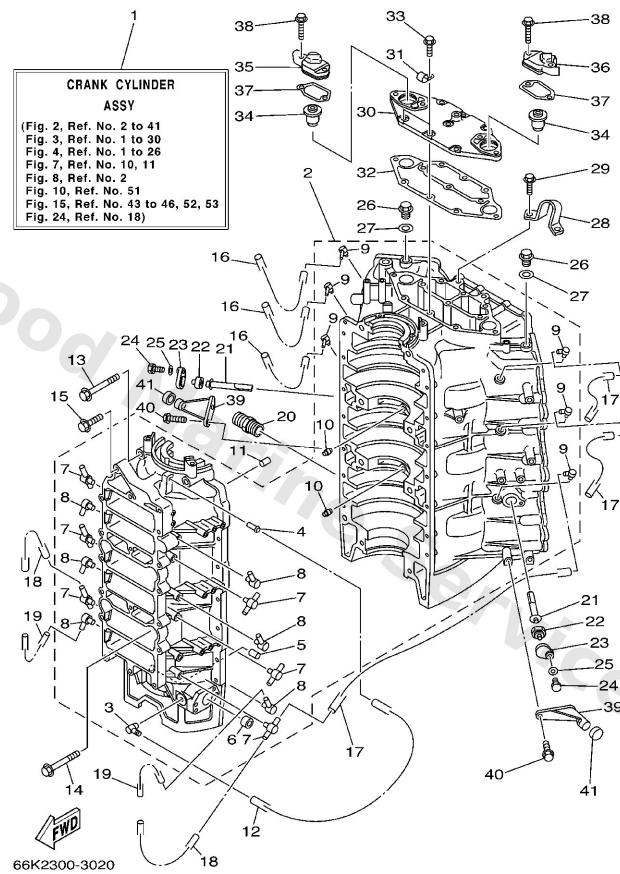

A6

Ref	Part	
20	<a href="#">6G5-12581-00</a> Joint, hose	<a href="#">Buy now</a>
21	<a href="#">61A-11325-00</a> Anode	<a href="#">Buy now</a>
22	<a href="#">6H3-11328-00</a> Grommet, anode	<a href="#">Buy now</a>
24	<a href="#">97013-06016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
25	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
26	<a href="#">90340-14M00</a> Plug, straight screw(62y)	<a href="#">Buy now</a>
27	<a href="#">90430-14115</a> Gasket (663)	<a href="#">Buy now</a>
28	<a href="#">6E5-11119-01</a> Hanger, engine	<a href="#">Buy now</a>
29	<a href="#">90119-08MA3</a> Bolt, with washer	<a href="#">Buy now</a>
30	<a href="#">61A-11371-00-1S</a> Cover	<a href="#">Buy now</a>
31	<a href="#">90465-06M86</a> Clamp	<a href="#">Buy now</a>
32	<a href="#">61A-11381-A0</a> Gasket 1	<a href="#">Buy now</a>
33	<a href="#">90119-06MA2</a> Bolt, with washer	<a href="#">Buy now</a>
34	<a href="#">6E5-12411-30</a> Thermostat	<a href="#">Buy now</a>
35	<a href="#">61A-12413-00-1S</a> Cover, thermostat	<a href="#">Buy now</a>


# Cylinder. Crankcase 1

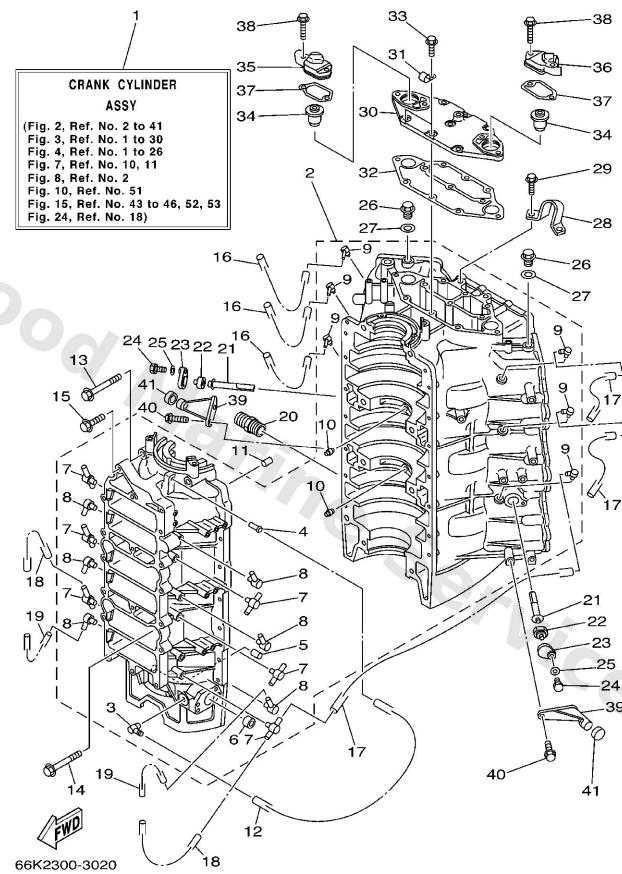

Ref	Part	
36	<a href="#">61A-12413-10-1S</a> Cover, thermostat	<a href="#">Buy now</a>
37	<a href="#">61A-12414-A0</a> Gasket, cover	<a href="#">Buy now</a>
38	<a href="#">90119-06MA5</a> Bolt, with washer	<a href="#">Buy now</a>
39	<a href="#">6E5-42761-00-1S</a> Stopper	<a href="#">Buy now</a>
41	<a href="#">68F-44533-00</a> Damper, upper mount rubber	<a href="#">Buy now</a>

A6


## Cylinder. Crankcase 2

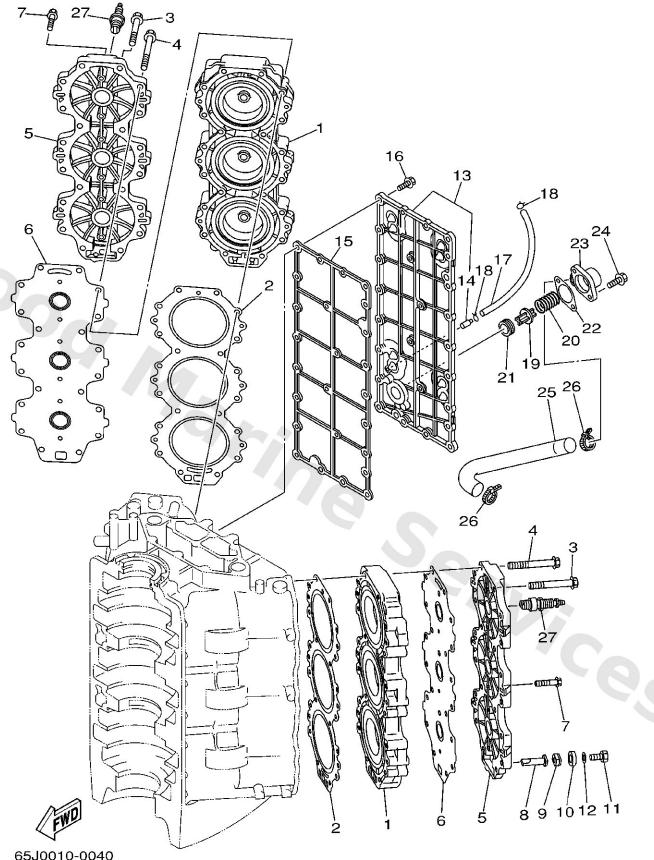

**B3**

Ref	Part	
1	<a href="#">62J-11111-01-1S</a> Head, cylinder 1	<a href="#">Buy now</a>
2	<a href="#">69L-11181-00</a> Gasket, cylinder head 1	<a href="#">Buy now</a>
3	<a href="#">90119-08MA5</a> Bolt, with washer	<a href="#">Buy now</a>
4	<a href="#">90119-08M99</a> Bolt, with washer	<a href="#">Buy now</a>
5	<a href="#">61A-11191-00-1S</a> Cover, cylinder head 1	<a href="#">Buy now</a>
6	<a href="#">61A-11193-A1</a> Gasket, head cover 1	<a href="#">Buy now</a>
7	<a href="#">90119-06MA5</a> Bolt, with washer	<a href="#">Buy now</a>
8	<a href="#">6J8-11325-00</a> Anode	<a href="#">Buy now</a>
9	<a href="#">6H3-11328-00</a> Grommet, anode	<a href="#">Buy now</a>
10	<a href="#">6H3-11327-00-1S</a> Cover, anode	<a href="#">Buy now</a>
11	<a href="#">97013-06016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
12	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
13	<a href="#">61A-41113-00-1S</a> Outer cover, exhaust	<a href="#">Buy now</a>
14	<a href="#">650-24378-00</a> Pipe, joint 2	<a href="#">Buy now</a>
15	<a href="#">61A-41112-A0</a> Gasket, exhaust inner cover	<a href="#">Buy now</a>


## Cylinder. Crankcase 2

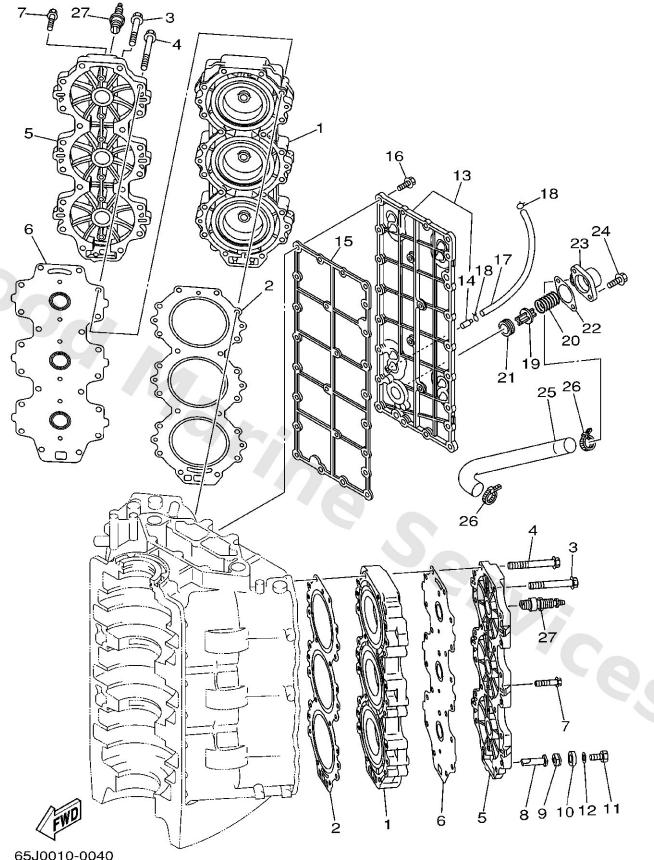

**B3**

Ref	Part	
16	<a href="#">90119-06MA3</a> Bolt, with washer	<a href="#">Buy now</a>
17	<a href="#">90445-09M25</a> Hose (I1500)	<a href="#">Buy now</a>
18	<a href="#">90467-08004</a> Clip, pipe 6162435600	<a href="#">Buy now</a>
19	<a href="#">6G5-12416-00</a> Valve, pressure control	<a href="#">Buy now</a>
20	<a href="#">90501-16M11</a> Spring, compression (688)	<a href="#">Buy now</a>
21	<a href="#">90480-20M05</a> Grommet (688)	<a href="#">Buy now</a>
22	<a href="#">6G5-11382-A1</a> Gasket 2	<a href="#">Buy now</a>
23	<a href="#">6G5-11372-00-1S</a> Cover, bypass 2	<a href="#">Buy now</a>
24	<a href="#">90119-06MA2</a> Bolt, with washer	<a href="#">Buy now</a>
25	<a href="#">61A-12576-00</a> Hose 1	<a href="#">Buy now</a>
26	<a href="#">90465-13M18</a> Clamp	<a href="#">Buy now</a>
27	<a href="#">94702-00309</a> Plug, spark (br9hs-10)	<a href="#">Buy now</a>

# Electrical 1

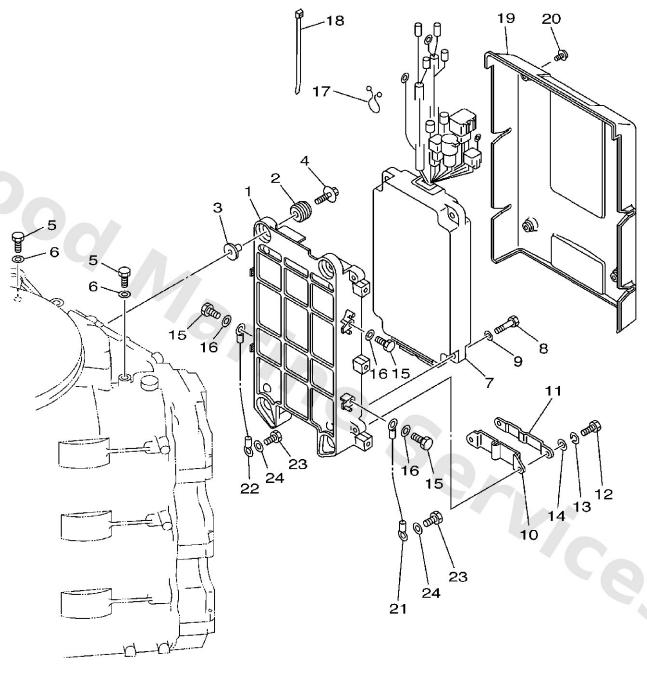


65J0010-9121

D4


Ref	Part	
1	<a href="#">61A-85542-01-94</a> Bracket	<a href="#">Buy now</a>
2	<a href="#">90480-09M12</a> Grommet (6a0)	<a href="#">Buy now</a>
3	<a href="#">90387-06M03</a> Collar (676)	<a href="#">Buy now</a>
4	<a href="#">90119-06M28</a> Bolt, With Washer	<a href="#">Buy now</a>
5	<a href="#">97013-06016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
6	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
7	<a href="#">66K-85540-01</a> C.d.i. Unit assembly	<a href="#">Buy now</a>
8	<a href="#">97013-06025</a> Bolt(62y)	<a href="#">Buy now</a>
10	<a href="#">61A-85548-00</a> Holder	<a href="#">Buy now</a>
11	<a href="#">61A-85525-00</a> Cover	<a href="#">Buy now</a>
12	<a href="#">97095-06016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
13	<a href="#">92995-06100</a> Washer(6a1)	<a href="#">Buy now</a>
14	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
15	<a href="#">97013-06014</a> Bolt(gj3)	<a href="#">Buy now</a>
17	<a href="#">90464-15M11</a> Clamp (3y2)	<a href="#">Buy now</a>

# Electrical 1

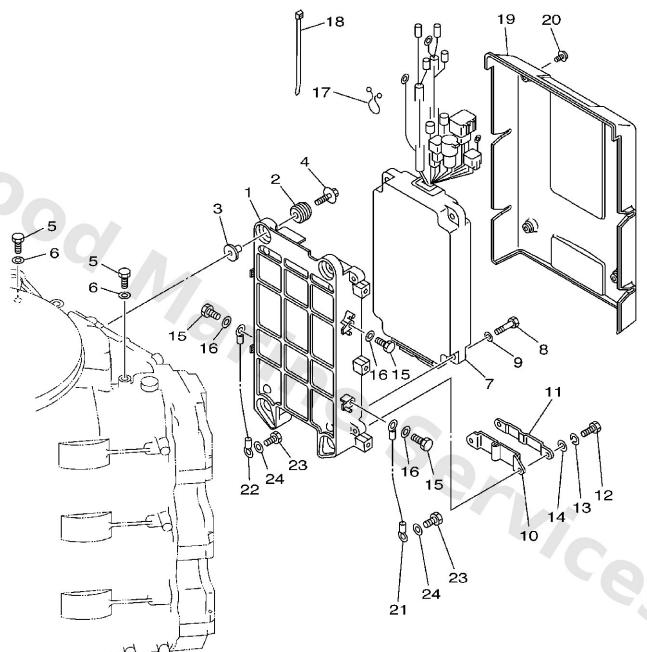


Ref	Part	
18	<a href="#">90465-11M52</a> Clamp(6e7)	<a href="#">Buy now</a>
19	<a href="#">61A-85537-00</a> Cover	<a href="#">Buy now</a>
20	<a href="#">90159-06M03</a> Screw (6g5)	<a href="#">Buy now</a>
21	<a href="#">61A-82519-00</a> Wire, Earth Lead	<a href="#">Buy now</a>
22	<a href="#">6G0-82519-00</a> Wire, earth lead	<a href="#">Buy now</a>
23	<a href="#">97095-06012</a> Bolt(gh1)	<a href="#">Buy now</a>

D4

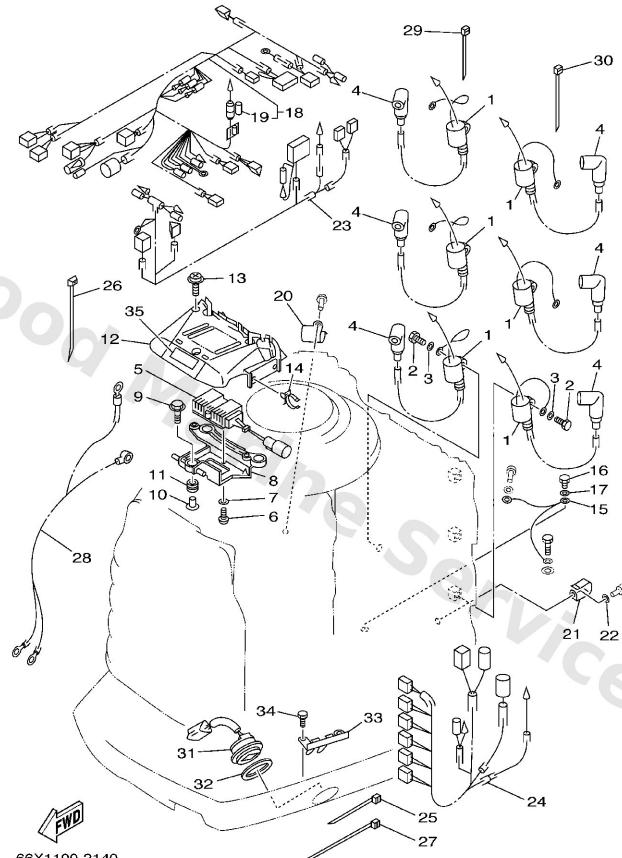

D5

Ref	Part	
1	<a href="#">61A-85570-00</a> Ignition coil assembly	<a href="#">Buy now</a>
2	<a href="#">97013-06020</a> Bolt(62y)	<a href="#">Buy now</a>
3	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
4	<a href="#">6E3-82370-21</a> Plug cap assembly	<a href="#">Buy now</a>
5	<a href="#">65L-85370-00</a> Resistor assembly	<a href="#">Buy now</a>
6	<a href="#">97885-05010</a> Screw, pan head(62x)	<a href="#">Buy now</a>
7	<a href="#">92995-05600</a> Washer, plain (646)	<a href="#">Buy now</a>
8	<a href="#">65L-81915-00-94</a> Plate, Regulator Fitting	<a href="#">Buy now</a>
9	<a href="#">90119-06M65</a> Bolt, with washer	<a href="#">Buy now</a>
10	<a href="#">90387-06M60</a> Collar (6h3)	<a href="#">Buy now</a>
11	<a href="#">90480-10M23</a> Grommet(6k7)	<a href="#">Buy now</a>
12	<a href="#">65L-81916-00</a> Cover, Terminal	<a href="#">Buy now</a>
13	<a href="#">90159-06M03</a> Screw (6g5)	<a href="#">Buy now</a>
14	<a href="#">90464-19M45</a> Clamp(65j)	<a href="#">Buy now</a>
15	<a href="#">61A-82531-00</a> Wire, lead	<a href="#">Buy now</a>

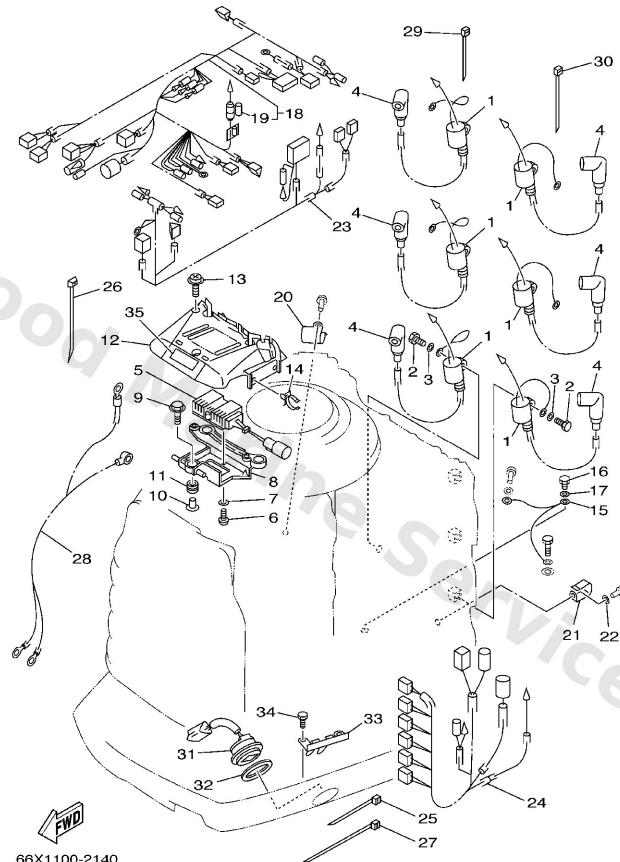


D5


Ref	Part	
16	<a href="#">97095-06012</a> Bolt(gh1)	<a href="#">Buy now</a>
17	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
18	<a href="#">66K-82590-10</a> 14 -	<a href="#">Buy now</a>
19	<a href="#">705-82151-00</a> Fuse (30a)	<a href="#">Buy now</a>
20	<a href="#">90465-08M89</a> Clamp	<a href="#">Buy now</a>
21	<a href="#">90465-05M87</a> Clamp	<a href="#">Buy now</a>
23	<a href="#">65L-8259M-00</a> Wire Harness assembly 2	<a href="#">Buy now</a>
24	<a href="#">65L-8259N-01</a> Wire Harness assembly 3	<a href="#">Buy now</a>
25	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
26	<a href="#">90465-11M52</a> Clamp(6e7)	<a href="#">Buy now</a>
27	<a href="#">90465-13M18</a> Clamp	<a href="#">Buy now</a>
28	<a href="#">66K-82105-00</a> Battery Cable	<a href="#">Buy now</a>
31	<a href="#">61A-82563-00</a> Trim & tilt switch assembly	<a href="#">Buy now</a>
32	<a href="#">6E5-82587-00</a> Gasket	<a href="#">Buy now</a>
33	<a href="#">61A-83614-00</a> Bracket	<a href="#">Buy now</a>

## Electrical 2

Ref	Part	
35	<a href="#">65L-83625-50</a> Mark 5	<a href="#">Buy now</a>

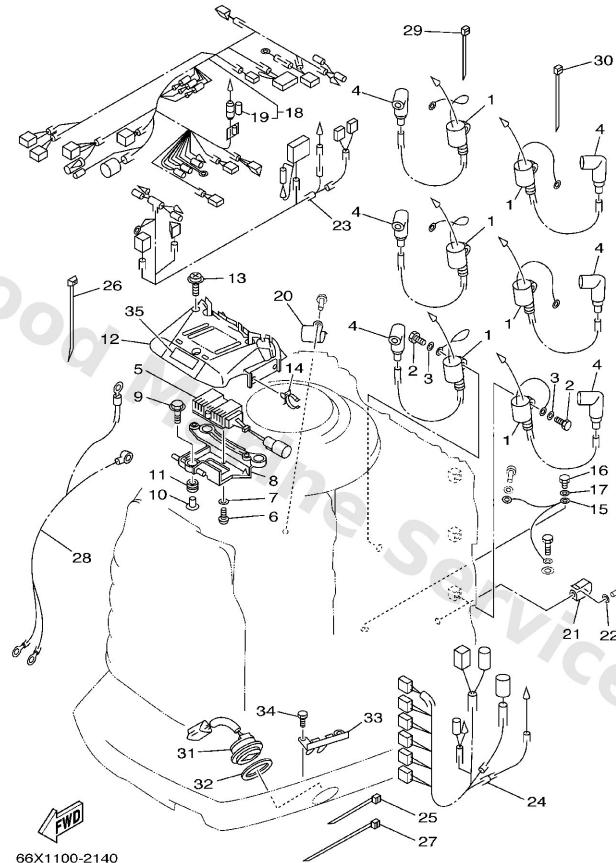


D5

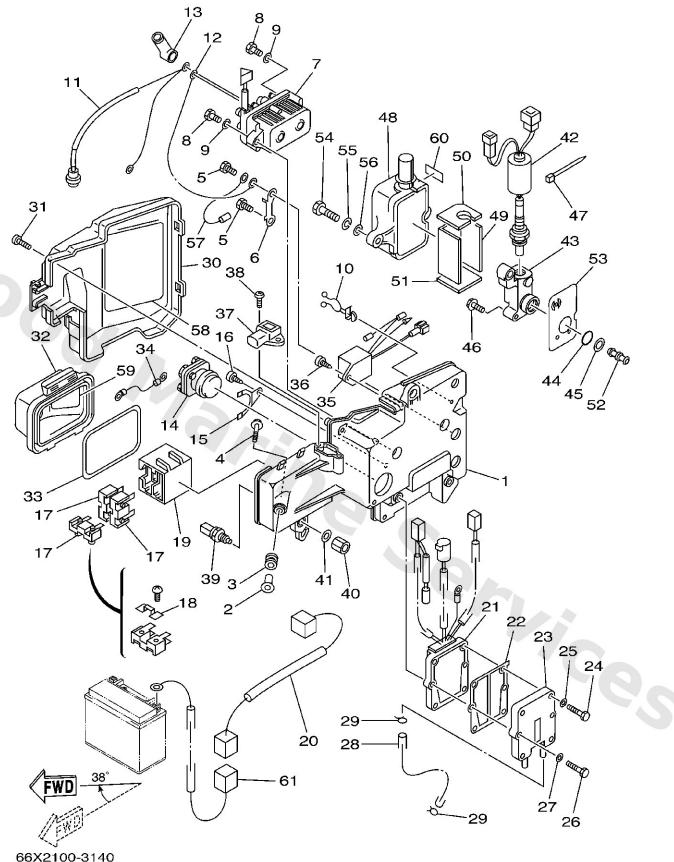


D7

Ref	Part	
1	<a href="#">65L-81948-00</a> Bracket	<a href="#">Buy now</a>
2	<a href="#">624-42542-00</a> Collar	<a href="#">Buy now</a>
3	<a href="#">6A0-82317-00</a> Damper, ignition coil	<a href="#">Buy now</a>
4	<a href="#">90119-06M65</a> Bolt, with washer	<a href="#">Buy now</a>
5	<a href="#">97013-06014</a> Bolt(gj3)	<a href="#">Buy now</a>
6	<a href="#">61A-87149-00</a> Connector	<a href="#">Buy now</a>
7	<a href="#">61A-81950-00</a> Relay assembly	<a href="#">Buy now</a>
8	<a href="#">97013-06030</a> Bolt	<a href="#">Buy now</a>
9	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
10	<a href="#">90464-18M46</a> Clamp(65j)	<a href="#">Buy now</a>
11	<a href="#">61A-81949-10</a> Wire, lead	<a href="#">Buy now</a>
12	<a href="#">61A-81949-00</a> Wire, lead	<a href="#">Buy now</a>
13	<a href="#">6G5-82119-00</a> Cover, lead wire	<a href="#">Buy now</a>
14	<a href="#">61A-81941-00</a> Starter relay assembly	<a href="#">Buy now</a>
15	<a href="#">61A-81952-00</a> Holder, relay	<a href="#">Buy now</a>

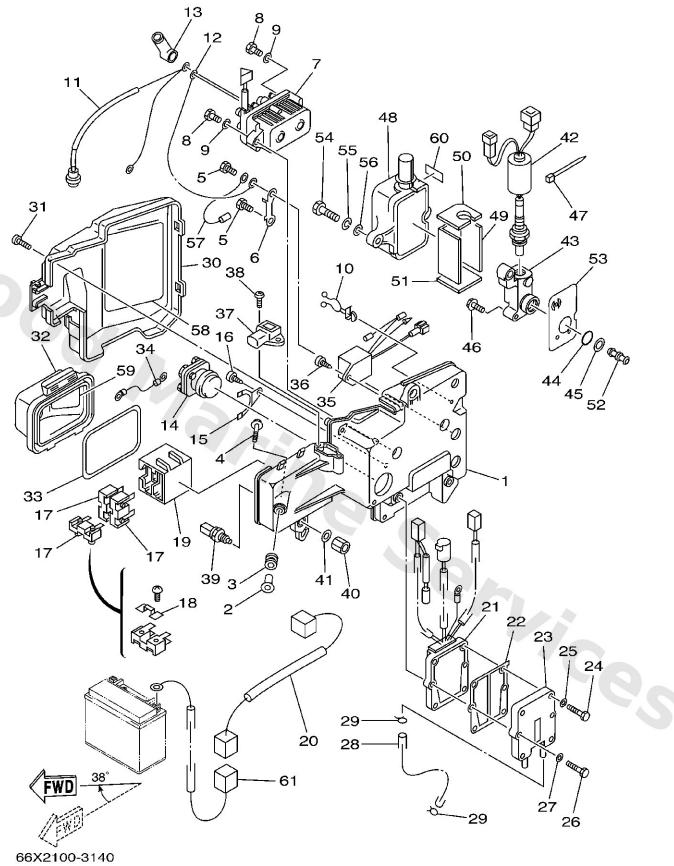


D7

Ref	Part	
16	<a href="#">97780-50612</a> Screw, tapping(61a)	<a href="#">Buy now</a>
17	<a href="#">61A-82150-00</a> Fuse holder assembly	<a href="#">Buy now</a>
18	<a href="#">61A-82151-00</a> Fuse(12v-80a)	<a href="#">Buy now</a>
19	<a href="#">61A-82153-00</a> Stay, fuse holder	<a href="#">Buy now</a>
20	<a href="#">66K-81949-10</a> Wire, Lead	<a href="#">Buy now</a>
21	<a href="#">61A-81960-02</a> Rectifier & regulator assembly	<a href="#">Buy now</a>
22	<a href="#">69J-81975-A0</a> Plate, rectifier fitting	<a href="#">Buy now</a>
23	<a href="#">69J-81972-01-1S</a> Cover, rectifier	<a href="#">Buy now</a>
24	<a href="#">97013-06025</a> Bolt(62y)	<a href="#">Buy now</a>
28	<a href="#">90445-09224</a> Hose (I1500)	<a href="#">Buy now</a>
29	<a href="#">90467-08004</a> Clip, pipe 6162435600	<a href="#">Buy now</a>
30	<a href="#">65L-81942-00</a> Cover	<a href="#">Buy now</a>
31	<a href="#">90169-05M00</a> Screw truss head tapping	<a href="#">Buy now</a>
32	<a href="#">61A-82154-01</a> Case	<a href="#">Buy now</a>
33	<a href="#">61A-82176-00</a> Damper	<a href="#">Buy now</a>

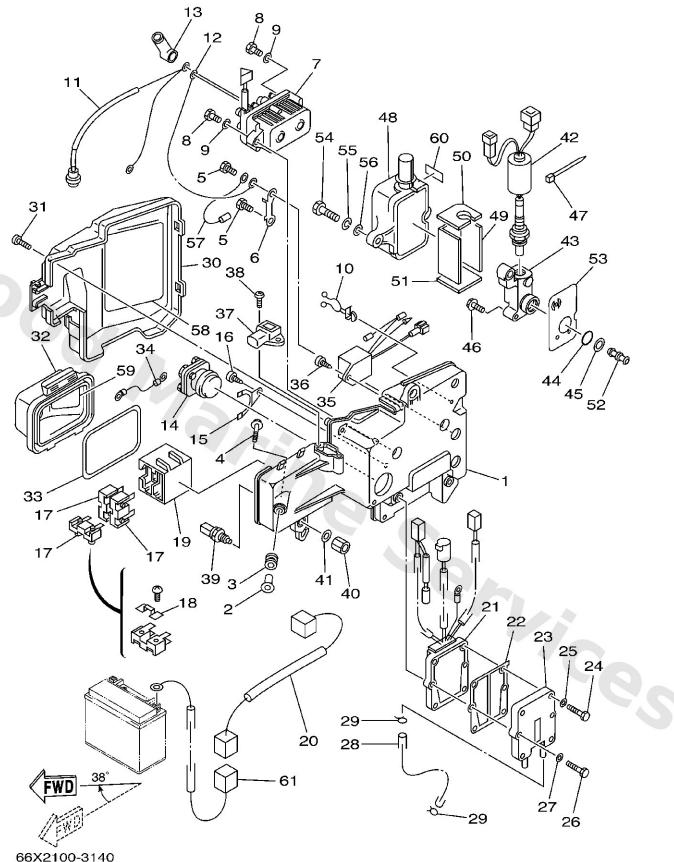


D7

Ref	Part	
34	<a href="#">61A-82117-00</a> Wire, lead	<a href="#">Buy now</a>
35	<a href="#">65L-81950-01</a> Relay assembly	<a href="#">Buy now</a>
36	<a href="#">97780-60625</a> Screw, tapping(65j)	<a href="#">Buy now</a>
37	<a href="#">67H-82380-00</a> Sensor, pressure	<a href="#">Buy now</a>
39	<a href="#">65L-85886-00</a> Thermosensor	<a href="#">Buy now</a>
40	<a href="#">90170-12M36</a> Nut	<a href="#">Buy now</a>
41	<a href="#">90201-12M34</a> Washer (692)	<a href="#">Buy now</a>
42	<a href="#">65L-8592A-01</a> Sensor	<a href="#">Buy now</a>
43	<a href="#">69L-11395-00</a> Holder	<a href="#">Buy now</a>
44	<a href="#">93210-17003</a> O-ring	<a href="#">Buy now</a>
45	<a href="#">69L-11397-00</a> Gasket	<a href="#">Buy now</a>
46	<a href="#">90119-06M74</a> Bolt, with washer(63m)	<a href="#">Buy now</a>
47	<a href="#">90465-13M18</a> Clamp	<a href="#">Buy now</a>
48	<a href="#">65L-85832-00</a> Case, under	<a href="#">Buy now</a>
49	<a href="#">65L-11354-00</a> Gasket	<a href="#">Buy now</a>

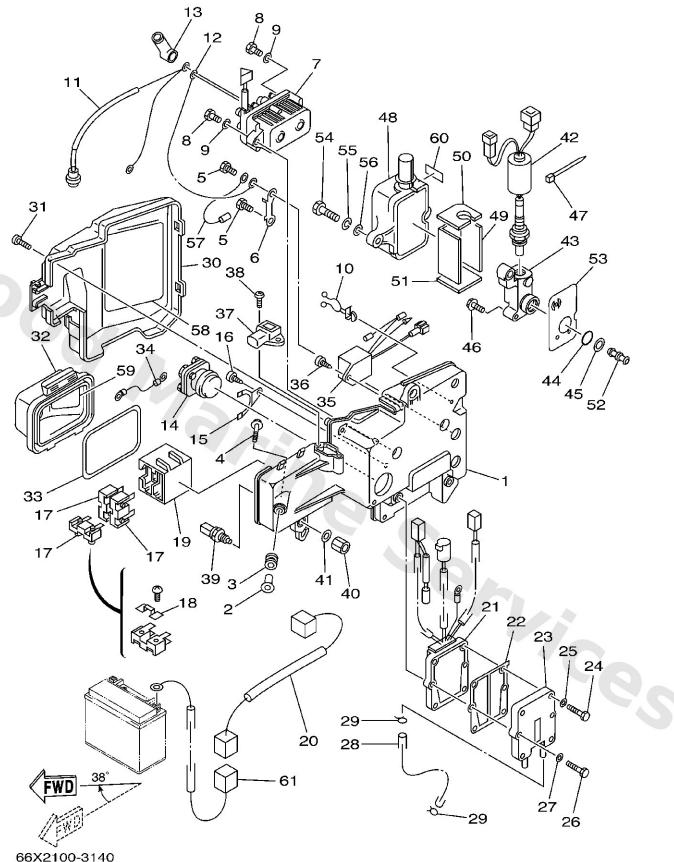

Ref	Part	
50	<a href="#">65L-1131N-00</a> Gasket, holder	<a href="#">Buy now</a>
51	<a href="#">65L-11396-00</a> Gasket, holder	<a href="#">Buy now</a>
52	<a href="#">65L-11353-11</a> Joint	<a href="#">Buy now</a>
53	<a href="#">69L-11357-00</a> Seal, cylinder 3	<a href="#">Buy now</a>
54	<a href="#">97095-06030</a> Bolt(jf7)	<a href="#">Buy now</a>
55	<a href="#">92995-06100</a> Washer(6a1)	<a href="#">Buy now</a>
56	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
57	<a href="#">66K-82519-00</a> Wire, Earth Lead	<a href="#">Buy now</a>
58	<a href="#">65L-81919-00</a> Graphic, Regulator	<a href="#">Buy now</a>
59	<a href="#">61A-81919-00</a> Graphic Regulator	<a href="#">Buy now</a>
60	<a href="#">65L-83625-50</a> Mark 5	<a href="#">Buy now</a>
61	<a href="#">68F-81949-00</a> Wire, lead AP	<a href="#">Buy now</a>

D7

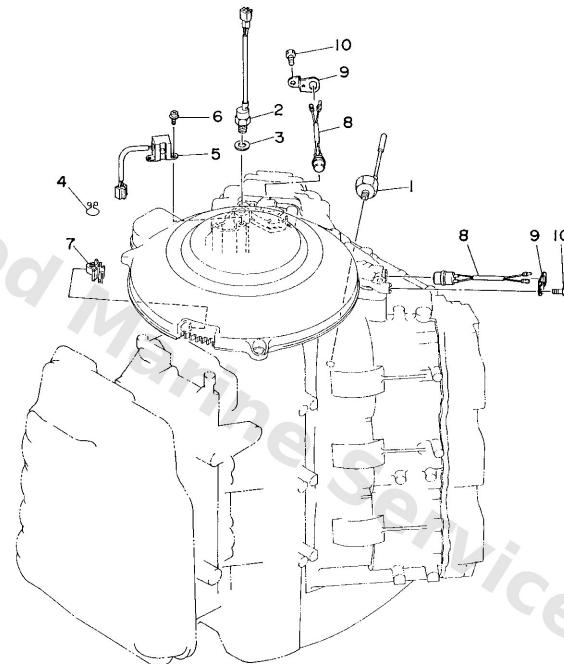


  
 65J0010-7150

E3

Ref	Part	
1	<a href="#">61A-85780-00</a> Sensor, knock	<a href="#">Buy now</a>
2	<a href="#">61A-85790-00</a> Thermosensor assembly	<a href="#">Buy now</a>
3	<a href="#">92990-10600</a> Washer, plate	<a href="#">Buy now</a>
4	<a href="#">90464-12M48</a> Clamp	<a href="#">Buy now</a>
5	<a href="#">61A-85895-00</a> Crank position sender	<a href="#">Buy now</a>
6	<a href="#">97885-05012</a> Screw,pan head (646)	<a href="#">Buy now</a>
7	<a href="#">90464-09M47</a> Clamp(65j)	<a href="#">Buy now</a>
8	<a href="#">61A-82560-00</a> Thermo switch assembly	<a href="#">Buy now</a>
9	<a href="#">61A-8252U-00</a> Cover	<a href="#">Buy now</a>
10	<a href="#">97080-06012</a> Bolt(gh1)	<a href="#">Buy now</a>


# Fuel 1

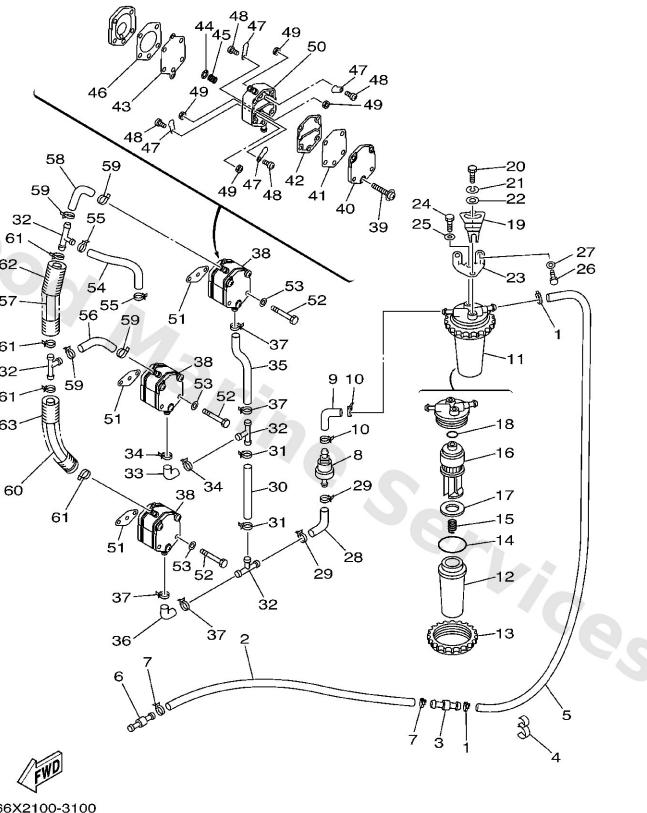

**C6**

Ref	Part	
1	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
2	<a href="#">90445-13M17</a> Hose(l2700)	<a href="#">Buy now</a>
3	<a href="#">6R3-24377-00</a> Pipe, joint 3	<a href="#">Buy now</a>
4	<a href="#">90464-13M34</a> Clamp(6r3)	<a href="#">Buy now</a>
5	<a href="#">61A-24313-00</a> Pipe 3	<a href="#">Buy now</a>
8	<a href="#">6R5-24408-00</a> Fuel feed assembly	<a href="#">Buy now</a>
9	<a href="#">61A-24311-00</a> Pipe, fuel 1	<a href="#">Buy now</a>
11	<a href="#">65L-24560-00</a> Filter assembly	<a href="#">Buy now</a>
12	<a href="#">61A-24521-00</a> Cup, filter	<a href="#">Buy now</a>
13	<a href="#">65L-24531-01</a> Nut	<a href="#">Buy now</a>
14	<a href="#">61A-24564-00</a> O-ring	<a href="#">Buy now</a>
15	<a href="#">65L-24577-00</a> Spring	<a href="#">Buy now</a>
16	<a href="#">65L-24563-00</a> Element, filter	<a href="#">Buy now</a>
17	<a href="#">61A-24469-00</a> Float, water level	<a href="#">Buy now</a>
18	<a href="#">65L-24564-00</a> Gasket	<a href="#">Buy now</a>

# Fuel 1

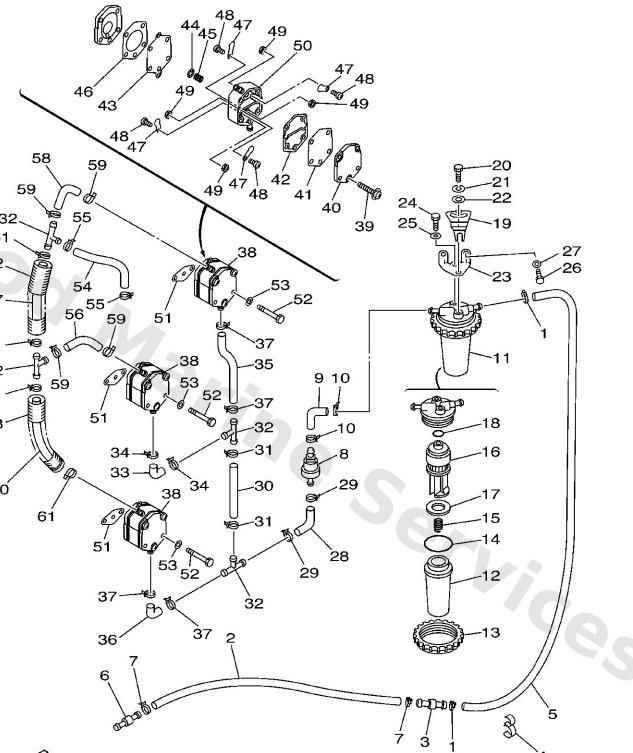


66X2100-3100

**C6**

Ref	Part	
19	<a href="#">65L-24558-00</a> Holder, filter	<a href="#">Buy now</a>
20	<a href="#">97095-06016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
21	<a href="#">92995-06100</a> Washer(6a1)	<a href="#">Buy now</a>
22	<a href="#">90201-06068</a> Washer,plate (6k8)	<a href="#">Buy now</a>
23	<a href="#">61A-24566-00</a> Bracket, filter	<a href="#">Buy now</a>
24	<a href="#">97095-06014</a> Bolt(gj3)	<a href="#">Buy now</a>
25	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
30	<a href="#">6G5-24317-01</a> Pipe 7	<a href="#">Buy now</a>
32	<a href="#">6E5-24378-00</a> Pipe, joint 3	<a href="#">Buy now</a>
33	<a href="#">6E5-24315-00</a> Pipe 5	<a href="#">Buy now</a>
35	<a href="#">6G5-24315-00</a> Pipe 5	<a href="#">Buy now</a>
38	<a href="#">6E5-24410-03</a> Fuel pump assembly	<a href="#">Buy now</a>
39	<a href="#">6E5-24444-00</a> Screw	<a href="#">Buy now</a>
40	<a href="#">6E5-24413-00</a> Body 2	<a href="#">Buy now</a>
41	<a href="#">6E5-24471-00</a> Diaphragm	<a href="#">Buy now</a>


# Fuel 1

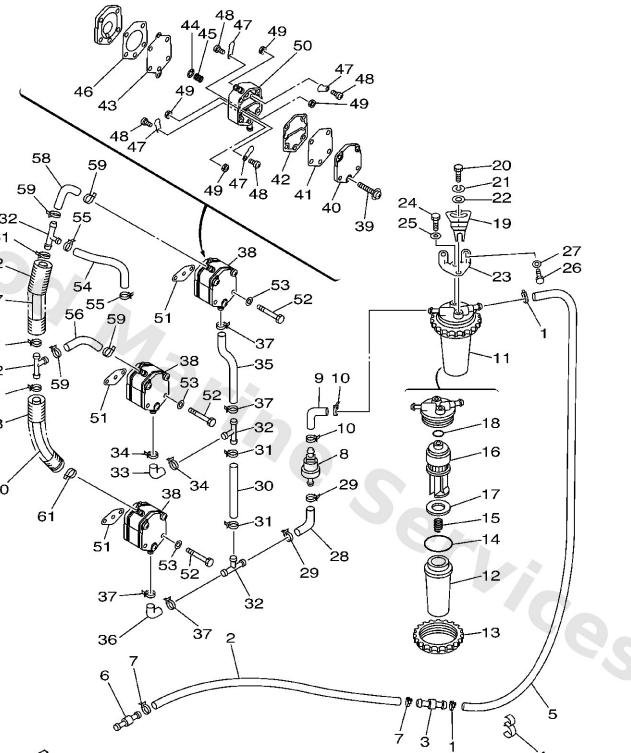

C6

Ref	Part	
42	<a href="#">6E5-24435-00</a> Gasket, body 2	<a href="#">Buy now</a>
43	<a href="#">6E5-24411-00</a> Diaphragm	<a href="#">Buy now</a>
44	<a href="#">648-24424-00</a> Seat,spring	<a href="#">Buy now</a>
45	<a href="#">6E5-24423-00</a> Spring, diaphragm	<a href="#">Buy now</a>
46	<a href="#">6E5-24434-02</a> Gasket, body	<a href="#">Buy now</a>
47	<a href="#">6A0-24421-01</a> Valve, check	<a href="#">Buy now</a>
48	<a href="#">6A0-14325-00</a> Screw, pan head	<a href="#">Buy now</a>
49	<a href="#">95380-03600</a> Nut (6g8)	<a href="#">Buy now</a>
50	<a href="#">6E5-24412-10</a> Body 1	<a href="#">Buy now</a>
51	<a href="#">650-24431-A0</a> Gasket,fuel pump	<a href="#">Buy now</a>
52	<a href="#">97095-06050</a> Bolt(jf7)	<a href="#">Buy now</a>
54	<a href="#">65L-24311-00</a> Pipe, Fuel 1	<a href="#">Buy now</a>
56	<a href="#">6G5-24316-10</a> Pipe 6	<a href="#">Buy now</a>
57	<a href="#">90445-13M14</a> Hose (l90)	<a href="#">Buy now</a>
60	<a href="#">6E5-24313-00</a> Pipe 3	<a href="#">Buy now</a>

# Fuel 1

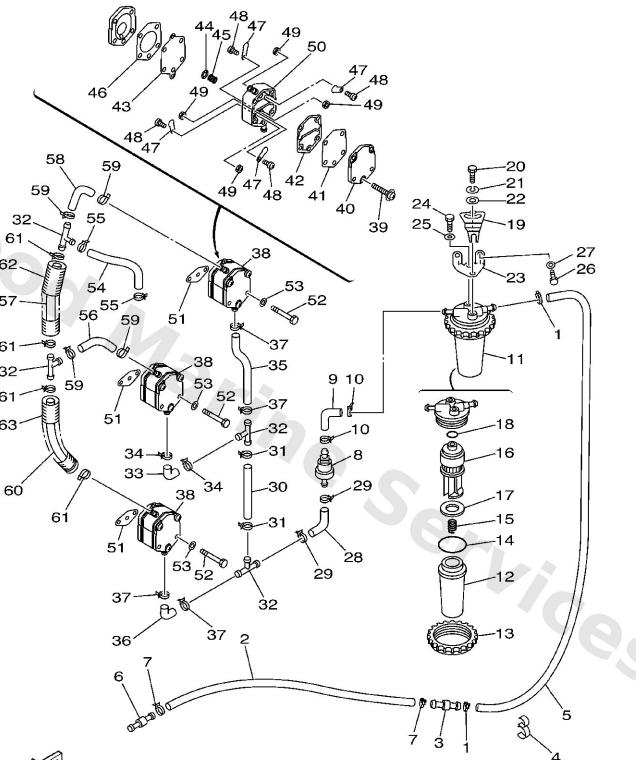


66X2100-3100

**C6**

Ref	Part	
62	<a href="#">6E9-83557-70</a> Tube	<a href="#">Buy now</a>
63	<a href="#">65L-83557-00</a> Tube	<a href="#">Buy now</a>

## Fuel 2


Ref	Part	
1	<a href="#">6YK-24307-42</a> Fuel pipe comp. 2 AP	<a href="#">Buy now</a>
2	<a href="#">90450-10M07</a> Hose, clamp AP	<a href="#">Buy now</a>

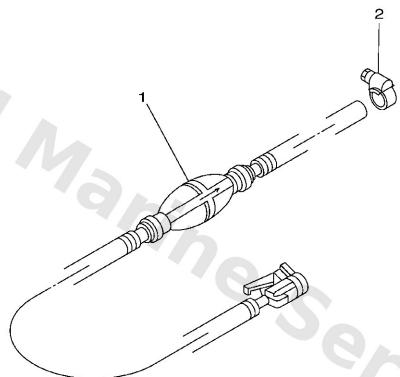

68J1100-2140

**D2**


# Fuel Injection Nozzle

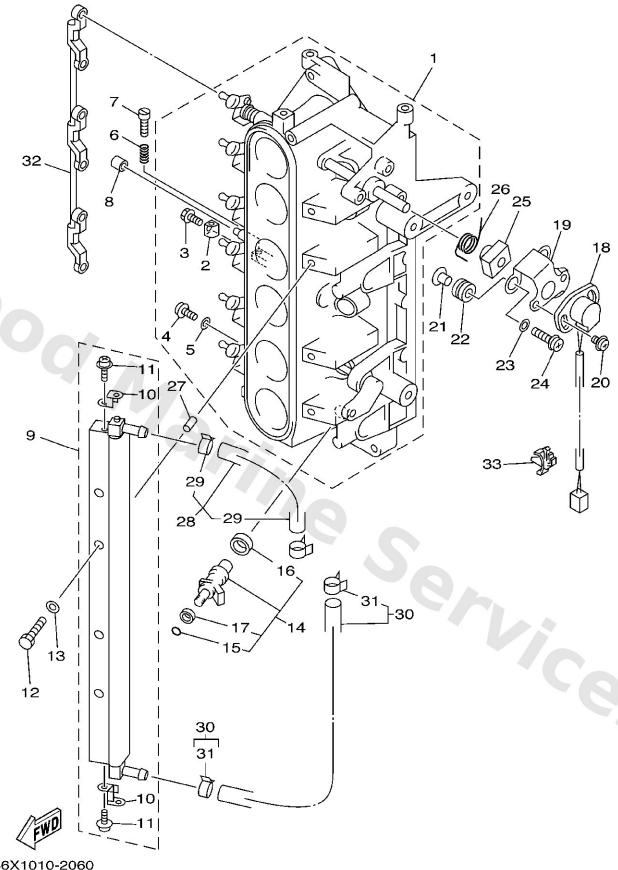

**B7**

Ref	Part	
1	<a href="#">67H-13751-00</a> Body, throttle 1	<a href="#">Buy now</a>
2	<a href="#">65L-14527-00</a> Plate	<a href="#">Buy now</a>
3	<a href="#">65L-14565-00</a> Screw	<a href="#">Buy now</a>
4	<a href="#">6K5-14592-00</a> Screw	<a href="#">Buy now</a>
5	<a href="#">90201-05552</a> Washer, plate(65j)	<a href="#">Buy now</a>
6	<a href="#">65L-14334-00</a> Spring, air adjusting	<a href="#">Buy now</a>
7	<a href="#">65L-14523-00</a> Screw, stop	<a href="#">Buy now</a>
8	<a href="#">65L-14578-00</a> Collar	<a href="#">Buy now</a>
9	<a href="#">67H-13938-00</a> Pipe	<a href="#">Buy now</a>
10	<a href="#">67H-13898-00</a> Holder	<a href="#">Buy now</a>
12	<a href="#">65L-13573-00</a> Bolt 1	<a href="#">Buy now</a>
13	<a href="#">65L-13995-00</a> Washer	<a href="#">Buy now</a>
14	<a href="#">65L-13761-00</a> Injector assembly	<a href="#">Buy now</a>
15	<a href="#">65L-13769-00</a> O-ring	<a href="#">Buy now</a>
16	<a href="#">65L-13764-00</a> Gasket	<a href="#">Buy now</a>

# Fuel Injection Nozzle

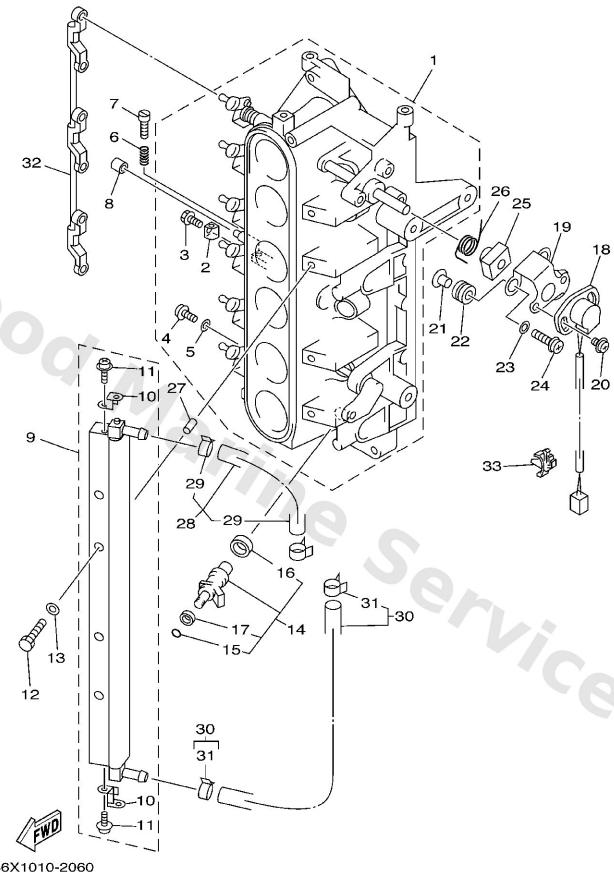


**B7**

Ref	Part	
17	<a href="#">65L-13766-00</a> Rubber, injector	<a href="#">Buy now</a>
18	<a href="#">61A-85885-00</a> Throttle sensor assembly	<a href="#">Buy now</a>
19	<a href="#">6K7-85886-00</a> Bracket	<a href="#">Buy now</a>
20	<a href="#">97985-05212</a> Screw, with washer(6g7)	<a href="#">Buy now</a>
21	<a href="#">90387-05M00</a> Collar(6k7)	<a href="#">Buy now</a>
22	<a href="#">90480-10M23</a> Grommet(6k7)	<a href="#">Buy now</a>
23	<a href="#">65L-14596-00</a> Washer	<a href="#">Buy now</a>
24	<a href="#">97985-05330</a> Screw, with washer(61b)	<a href="#">Buy now</a>
25	<a href="#">65L-14573-00</a> Lever	<a href="#">Buy now</a>
26	<a href="#">65L-14579-00</a> Spring	<a href="#">Buy now</a>
27	<a href="#">65L-13996-00</a> Insert	<a href="#">Buy now</a>
28	<a href="#">66K-13971-00</a> Pipe, fuel 1	<a href="#">Buy now</a>
29	<a href="#">65L-24387-00</a> Clip	<a href="#">Buy now</a>
30	<a href="#">67H-13972-00</a> Pipe, fuel 2	<a href="#">Buy now</a>
32	<a href="#">65L-41217-00</a> Rod, accel. lever	<a href="#">Buy now</a>


# Fuel Injection Nozzle

Ref	Part	
33	<a href="#">90464-04M12</a> Clamp (6h3)	<a href="#">Buy now</a>

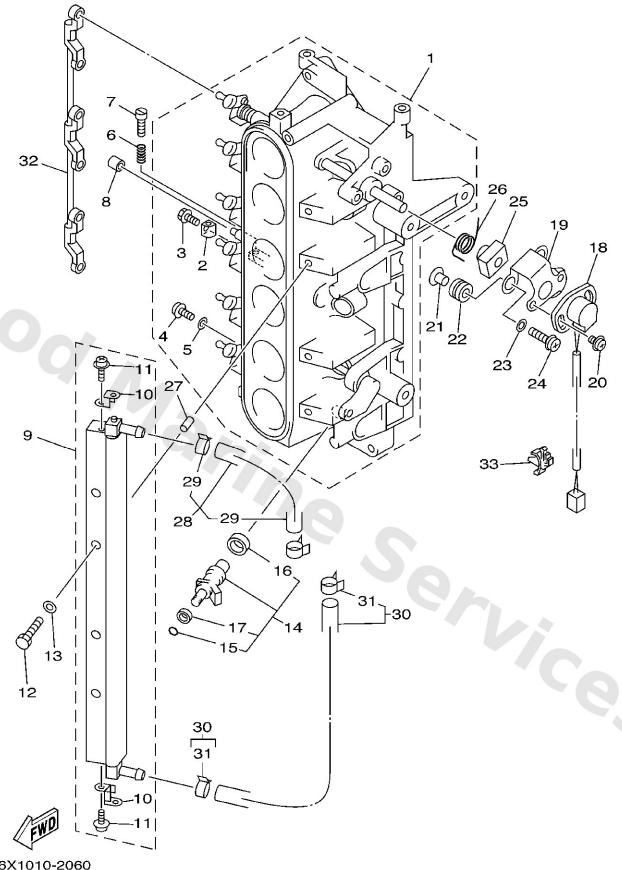

**B7**


## Fuel Injection Pump

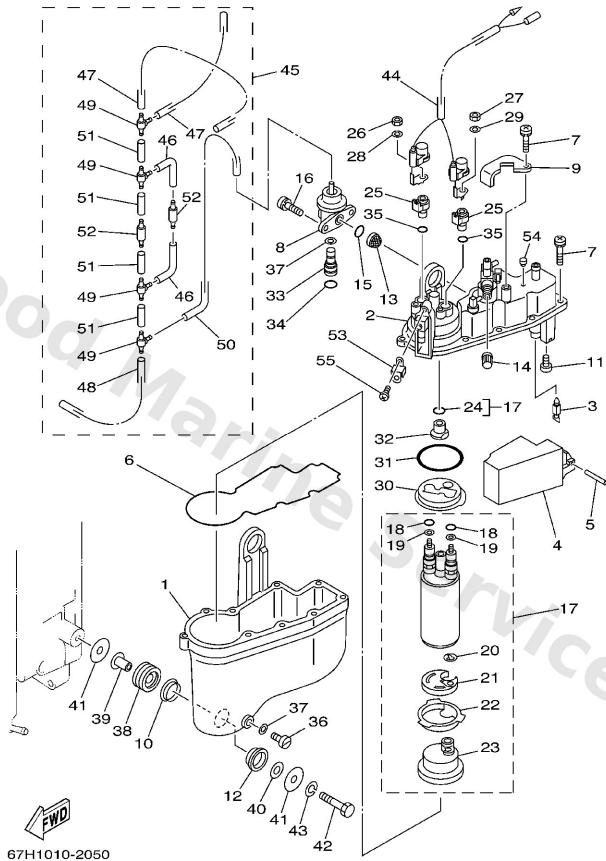

B4

Ref	Part	
1	<a href="#">66K-14980-00</a> Body, float chamber	<a href="#">Buy now</a>
2	<a href="#">67H-14182-00</a> Cover, float chamber	<a href="#">Buy now</a>
3	<a href="#">65L-14546-00</a> Valve, needle	<a href="#">Buy now</a>
4	<a href="#">66K-14985-00</a> Float	<a href="#">Buy now</a>
5	<a href="#">66K-14548-01</a> Pin, float arm	<a href="#">Buy now</a>
6	<a href="#">66K-14984-00</a> Gasket, float chamber	<a href="#">Buy now</a>
7	<a href="#">65L-14125-00</a> Screw	<a href="#">Buy now</a>
8	<a href="#">66K-13906-00</a> Regulator, pressure	<a href="#">Buy now</a>
9	<a href="#">66K-14255-00</a> Plate	<a href="#">Buy now</a>
10	<a href="#">66K-14239-00</a> Seal	<a href="#">Buy now</a>
11	<a href="#">66K-14325-01</a> Screw, pan head	<a href="#">Buy now</a>
12	<a href="#">66K-14163-00</a> Spacer	<a href="#">Buy now</a>
13	<a href="#">65L-13905-00</a> Filter comp	<a href="#">Buy now</a>
14	<a href="#">65L-14966-00</a> Cap	<a href="#">Buy now</a>
15	<a href="#">65L-24486-00</a> O-ring	<a href="#">Buy now</a>


# Fuel Injection Pump

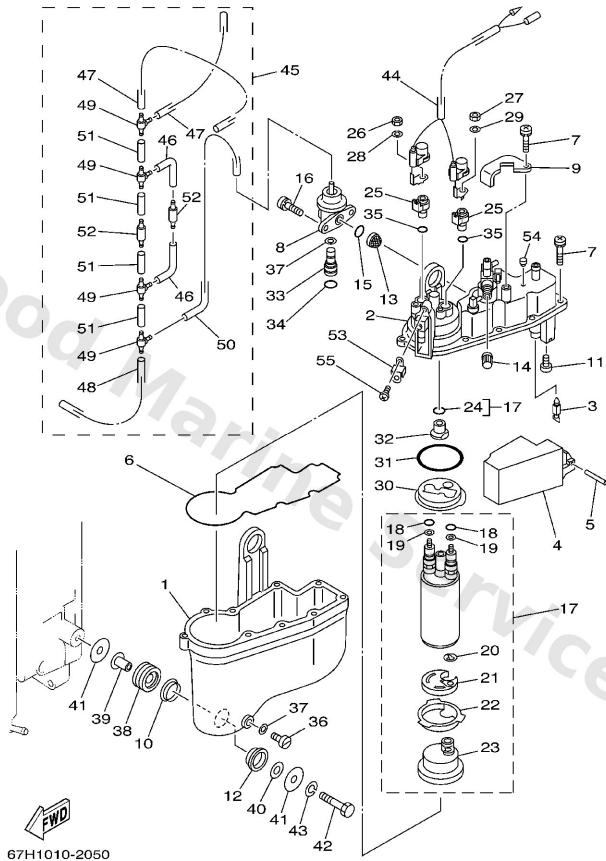

**B4**

Ref	Part	
16	<a href="#">66K-14245-00</a> Screw, guide	<a href="#">Buy now</a>
17	<a href="#">67H-13907-00</a> Fuel pump comp.	<a href="#">Buy now</a>
18	<a href="#">65L-14227-00</a> Washer	<a href="#">Buy now</a>
19	<a href="#">65L-14194-00</a> Washer	<a href="#">Buy now</a>
20	<a href="#">65L-14159-00</a> Clip	<a href="#">Buy now</a>
21	<a href="#">66K-13781-00</a> Damper, pump	<a href="#">Buy now</a>
22	<a href="#">66K-13844-00</a> Plate 2	<a href="#">Buy now</a>
23	<a href="#">66K-13915-00</a> Filter	<a href="#">Buy now</a>
24	<a href="#">65L-1416A-00</a> O-ring	<a href="#">Buy now</a>
25	<a href="#">66K-14271-00</a> Insulator	<a href="#">Buy now</a>
26	<a href="#">65L-8182A-00</a> Nut	<a href="#">Buy now</a>
27	<a href="#">65L-8182K-00</a> Nut	<a href="#">Buy now</a>
28	<a href="#">65L-8182E-00</a> Washer	<a href="#">Buy now</a>
29	<a href="#">65L-8182F-00</a> Washer	<a href="#">Buy now</a>
30	<a href="#">66K-13843-00</a> Plate 1	<a href="#">Buy now</a>


## Fuel Injection Pump

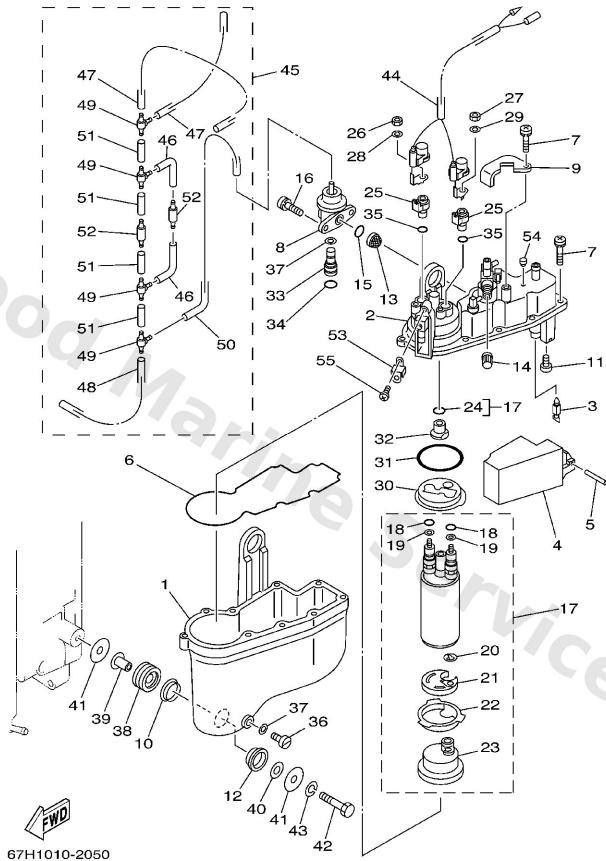

B4

Ref	Part	
31	<a href="#">65L-14147-00</a> O-ring	<a href="#">Buy now</a>
32	<a href="#">65L-14274-00</a> Connector	<a href="#">Buy now</a>
33	<a href="#">66K-24376-00</a> Pipe, joint 1	<a href="#">Buy now</a>
34	<a href="#">66K-24489-00</a> O-ring	<a href="#">Buy now</a>
35	<a href="#">65L-14397-00</a> O-ring	<a href="#">Buy now</a>
36	<a href="#">65L-14992-00</a> Screw, drain	<a href="#">Buy now</a>
37	<a href="#">65L-14997-00</a> Seal	<a href="#">Buy now</a>
38	<a href="#">65L-24375-00</a> Grommet	<a href="#">Buy now</a>
39	<a href="#">65L-24397-00</a> Collar	<a href="#">Buy now</a>
40	<a href="#">65L-24576-00</a> Washer	<a href="#">Buy now</a>
41	<a href="#">66K-24579-00</a> Washer 2	<a href="#">Buy now</a>
42	<a href="#">65L-24592-00</a> Bolt	<a href="#">Buy now</a>
43	<a href="#">65L-24169-00</a> Washer, lock	<a href="#">Buy now</a>
44	<a href="#">67H-82507-00</a> Wire, Lead	<a href="#">Buy now</a>
45	<a href="#">67H-13490-00</a> Relief valve assembly	<a href="#">Buy now</a>

# Fuel Injection Pump

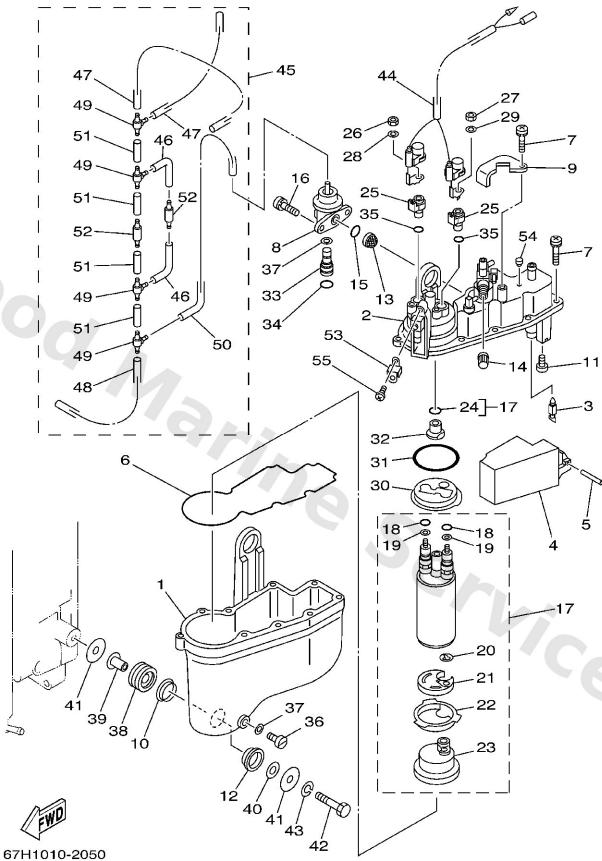


67H1010-2050

**B4**

Ref	Part	
46	<a href="#">66K-13542-00</a> Hose, vacuum sensing 1	<a href="#">Buy now</a>
47	<a href="#">67H-13544-00</a> Hose, Vacuum Sensing 2	<a href="#">Buy now</a>
48	<a href="#">67H-13532-00</a> Hose, Vacuum Sensing 3	<a href="#">Buy now</a>
49	<a href="#">65L-24461-00</a> Pipe.joint 4	<a href="#">Buy now</a>
50	<a href="#">67H-13533-00</a> Hose, Vacuum Sensing 4	<a href="#">Buy now</a>
51	<a href="#">67H-13534-00</a> Hose, Vacuum Sensing 5	<a href="#">Buy now</a>
52	<a href="#">67H-13183-00</a> Valve, Check	<a href="#">Buy now</a>
53	<a href="#">66K-13898-00</a> Holder	<a href="#">Buy now</a>
54	<a href="#">67H-14225-00</a> Cap	<a href="#">Buy now</a>
55	<a href="#">65L-14565-00</a> Screw	<a href="#">Buy now</a>


# Generator

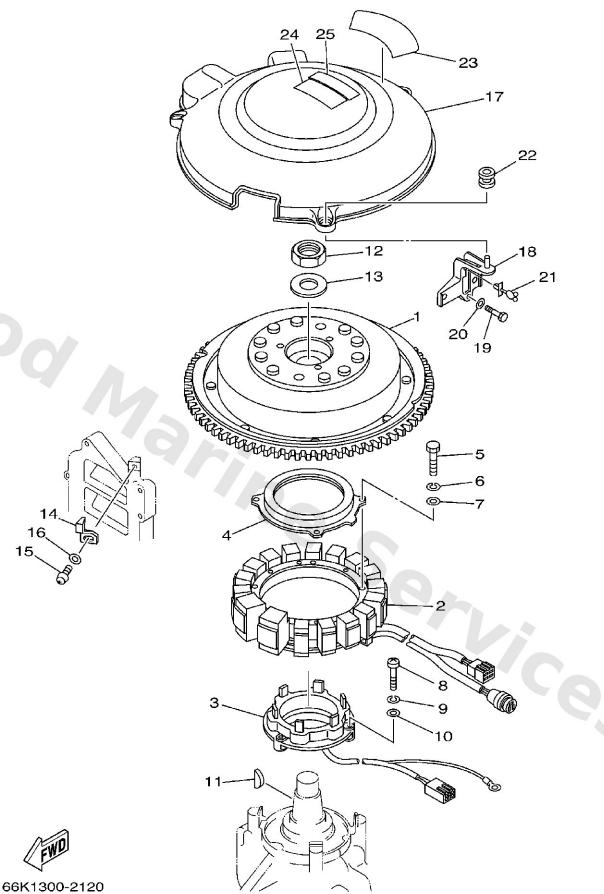

D3

Ref	Part	
1	<a href="#">61A-85550-01</a> Rotor assembly	<a href="#">Buy now</a>
2	<a href="#">65L-85510-10</a> Stator assembly	<a href="#">Buy now</a>
3	<a href="#">61A-85580-01</a> Coil, pulser	<a href="#">Buy now</a>
4	<a href="#">61A-83721-00</a> Cover	<a href="#">Buy now</a>
5	<a href="#">97013-06035</a> Bolt(3rv)	<a href="#">Buy now</a>
6	<a href="#">92903-06100</a> Washer(6a1)	<a href="#">Buy now</a>
7	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
8	<a href="#">97885-05030</a> Ybs86-530 screw,panhead	<a href="#">Buy now</a>
9	<a href="#">92995-05100</a> Ybs67-5 washer, spring	<a href="#">Buy now</a>
10	<a href="#">92995-05600</a> Washer, plain (646)	<a href="#">Buy now</a>
11	<a href="#">90280-05015</a> Key, woodruff	<a href="#">Buy now</a>
12	<a href="#">90170-24M22</a> Nut(61a)	<a href="#">Buy now</a>
13	<a href="#">90201-25M02</a> Washer, plate(61a)	<a href="#">Buy now</a>
14	<a href="#">6E5-81332-00</a> Plate, timing	<a href="#">Buy now</a>
15	<a href="#">97885-06010</a> Screw pan head	<a href="#">Buy now</a>


# Generator

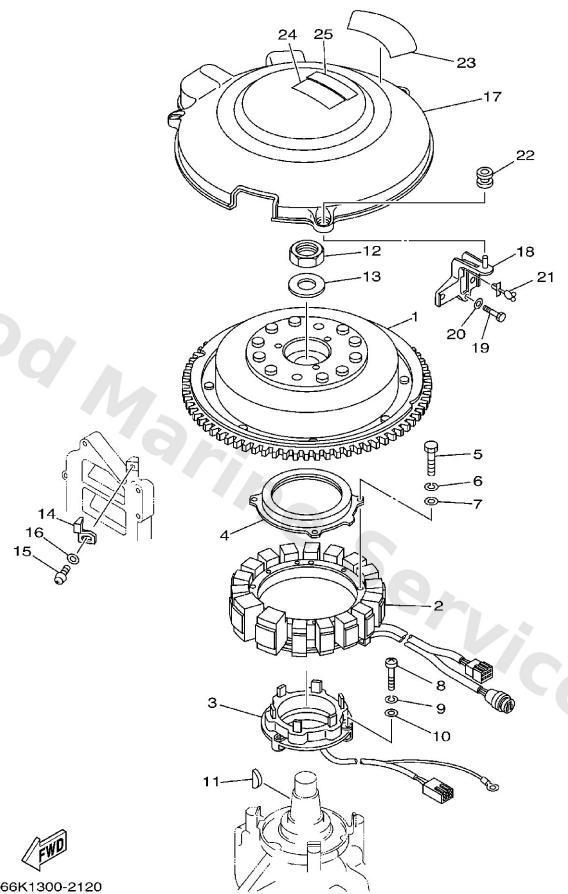

D3

Ref	Part	
16	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
17	<a href="#">61A-81337-01</a> Cover, flywheel	<a href="#">Buy now</a>
18	<a href="#">65L-81338-00-1S</a> Clamp, Lead	<a href="#">Buy now</a>
19	<a href="#">97013-06025</a> Bolt(62y)	<a href="#">Buy now</a>
21	<a href="#">90464-18M46</a> Clamp(65j)	<a href="#">Buy now</a>
22	<a href="#">663-82317-01</a> Damper, ignition coil	<a href="#">Buy now</a>
23	<a href="#">65L-14488-00</a> Label, Caution	<a href="#">Buy now</a>
24	<a href="#">6A1-83625-51</a> Mark 5	<a href="#">Buy now</a>
25	<a href="#">6A1-83625-41</a> Mark 5	<a href="#">Buy now</a>


# Intake

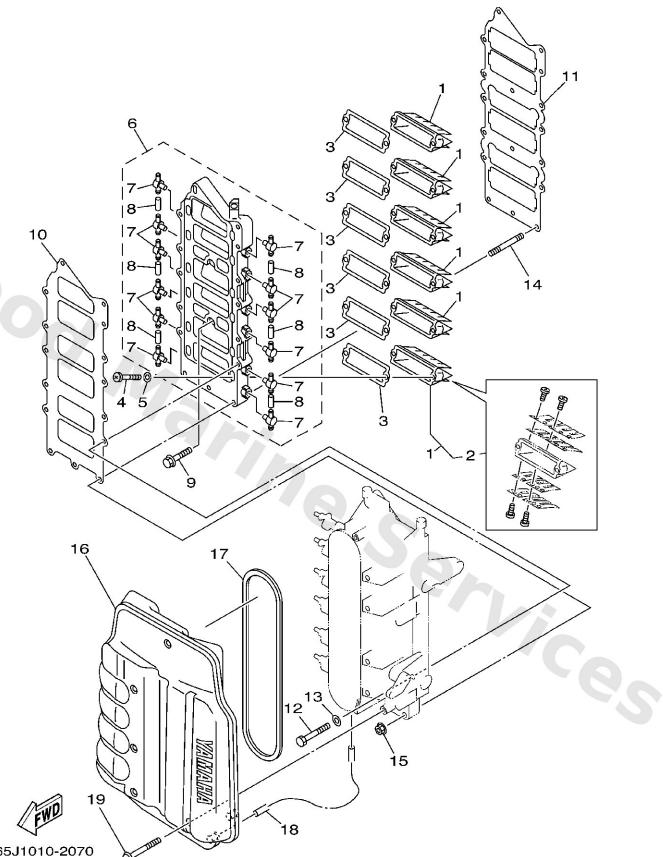

**C2**

Ref	Part	
1	<a href="#">65L-13610-01</a> Reed valve assembly	<a href="#">Buy now</a>
2	<a href="#">65J-W0004-01</a> Reed set	<a href="#">Buy now</a>
3	<a href="#">61A-13621-A0</a> Gasket, valve seat	<a href="#">Buy now</a>
4	<a href="#">97880-05016</a> Screw, pan head(6b0)	<a href="#">Buy now</a>
5	<a href="#">92990-05600</a> Washer, plain (646)	<a href="#">Buy now</a>
6	<a href="#">65L-13624-01-1S</a> Plate, Reed Valve	<a href="#">Buy now</a>
7	<a href="#">6F6-11372-00</a> Nipple, hose	<a href="#">Buy now</a>
8	<a href="#">90445-07M03</a> Hose (I200)	<a href="#">Buy now</a>
9	<a href="#">90105-06028</a> Bolt, washer based	<a href="#">Buy now</a>
10	<a href="#">65L-13646-00</a> Gasket, manifold 2	<a href="#">Buy now</a>
11	<a href="#">65L-13645-00</a> Gasket, manifold 1	<a href="#">Buy now</a>
12	<a href="#">97013-06060</a> Bolt, hexagon	<a href="#">Buy now</a>
13	<a href="#">92903-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
14	<a href="#">95670-06655</a> Bolt, Stud	<a href="#">Buy now</a>
15	<a href="#">90179-06M24</a> Nut(6j8)	<a href="#">Buy now</a>


## Intake

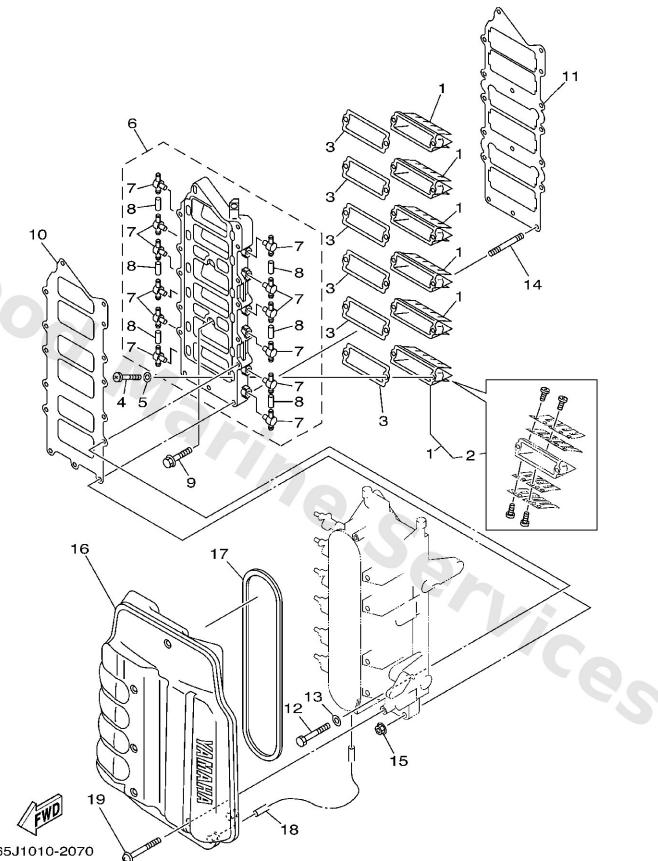

**C2**


Ref	Part	
16	<a href="#">65L-14440-00</a> Silencer assembly, intake	<a href="#">Buy now</a>
17	<a href="#">65L-14483-00</a> Gasket	<a href="#">Buy now</a>
18	<a href="#">90445-07M44</a> Hose (I390)	<a href="#">Buy now</a>
19	<a href="#">90159-06M16</a> Screw, with washer(61a)	<a href="#">Buy now</a>

# Lower Casing. Drive 1

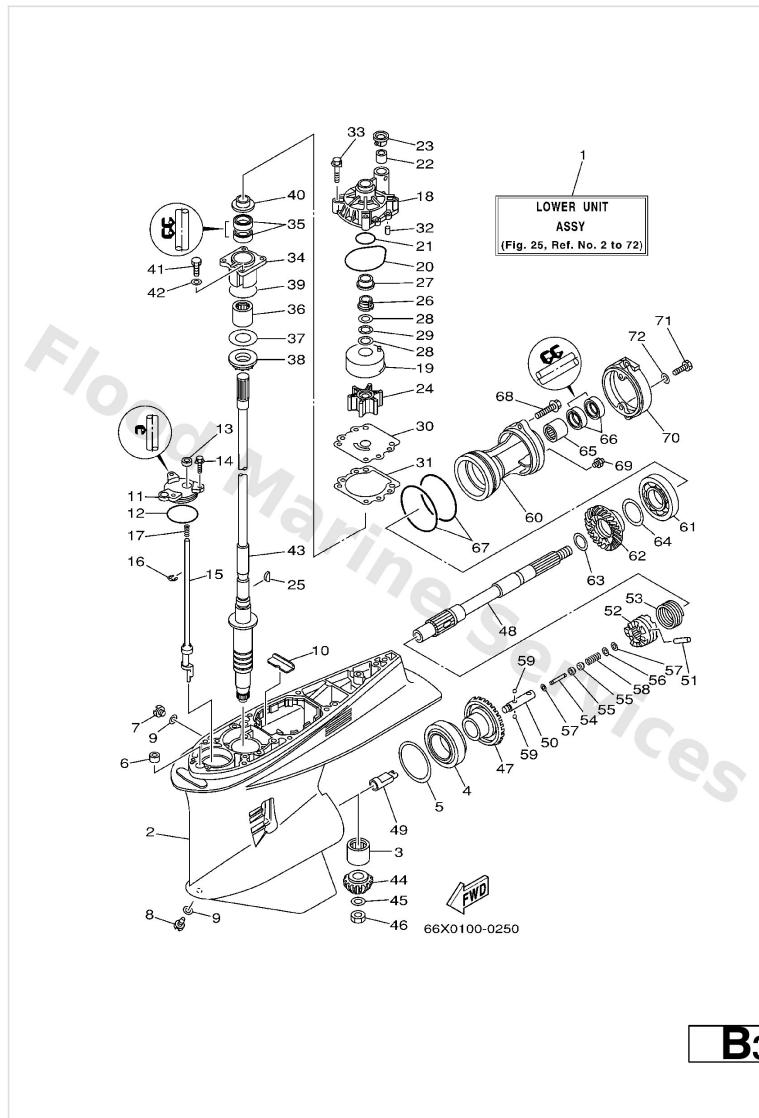

Ref	Part	
1	<a href="#">66K-45300-11-NA</a> Lower unit assembly	<a href="#">Buy now</a>
2	<a href="#">61A-45301-10-NA</a> Casing, Lower	<a href="#">Buy now</a>
3	<a href="#">93311-83280</a> Ball bearing	<a href="#">Buy now</a>
4	<a href="#">93332-000W1</a> Bearing(61a)	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-10</a> Shim (t:0.10mm) UR	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-12</a> Shim (t:0.12mm) UR	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-15</a> Shim (t:0.15mm) UR	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-18</a> Shim (t:0.18mm) UR	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-30</a> Shim (t:0.30mm) UR	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-40</a> Shim (t:0.40mm) UR	<a href="#">Buy now</a>
5	<a href="#">61A-45567-00-50</a> Shim (t:0.50mm) UR	<a href="#">Buy now</a>
6	<a href="#">663-44366-00</a> Damper, water seal 2	<a href="#">Buy now</a>
7	<a href="#">90340-08002</a> Plug, straight screw	<a href="#">Buy now</a>
8	<a href="#">688-45341-10</a> Plug, drain	<a href="#">Buy now</a>
9	<a href="#">90430-08020</a> Gasket	<a href="#">Buy now</a>


# Lower Casing. Drive 1

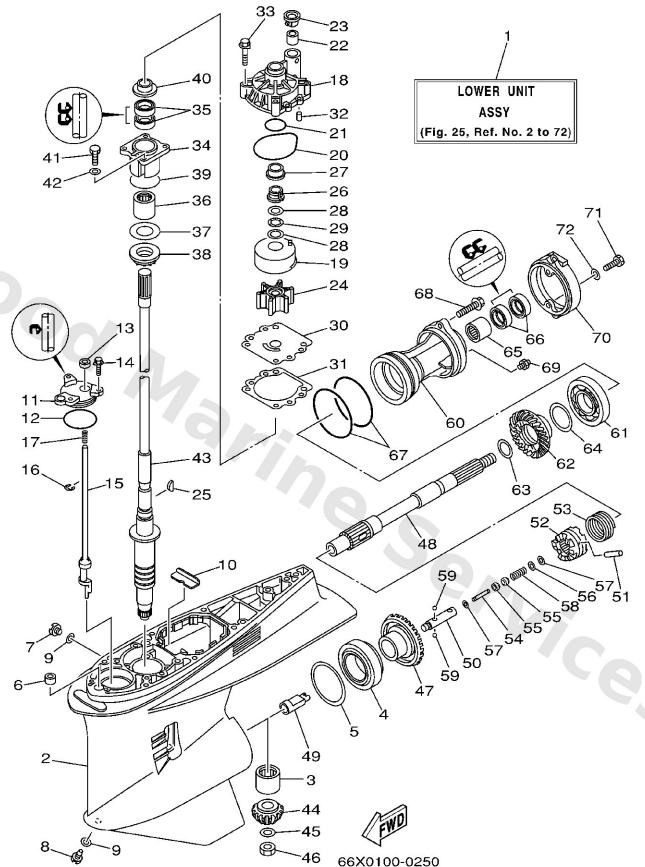

**B3**

Ref	Part	
10	<a href="#">61A-45376-00-94</a> Guide, seal damper	<a href="#">Buy now</a>
11	<a href="#">61A-45321-01</a> Plate	<a href="#">Buy now</a>
12	<a href="#">93210-64488</a> 93210-64488	<a href="#">Buy now</a>
13	<a href="#">93106-09014</a> Oil seal	<a href="#">Buy now</a>
14	<a href="#">90119-06M10</a> Bolt, with washer	<a href="#">Buy now</a>
15	<a href="#">60V-44150-00</a> Shift cam assembly	<a href="#">Buy now</a>
16	<a href="#">99001-08600</a> Circlip(2r6)	<a href="#">Buy now</a>
17	<a href="#">90501-11M10</a> Spring, compression (663)	<a href="#">Buy now</a>
18	<a href="#">61A-44311-01</a> Housing, water pump	<a href="#">Buy now</a>
19	<a href="#">61A-44322-02</a> Insert, cartridge	<a href="#">Buy now</a>
20	<a href="#">93210-86M38</a> O-ring (6e5)	<a href="#">Buy now</a>
21	<a href="#">93210-37160</a> O-ring (6g8)	<a href="#">Buy now</a>
22	<a href="#">6E5-44365-00</a> Damper, water seal 1	<a href="#">Buy now</a>
23	<a href="#">6E5-44312-00</a> Cover, water pump housing	<a href="#">Buy now</a>
24	<a href="#">6E5-44352-01</a> Impeller	<a href="#">Buy now</a>


# Lower Casing. Drive 1

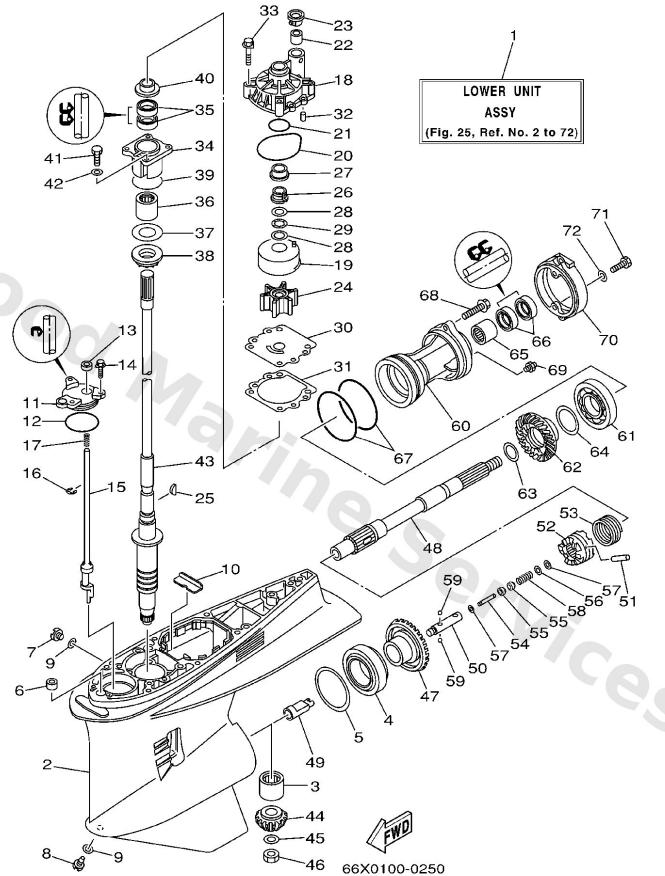

B3

Ref	Part	
25	<a href="#">90280-04M05</a> Key, woodruff (6e5)	<a href="#">Buy now</a>
26	<a href="#">61A-45538-00</a> Spacer, 1	<a href="#">Buy now</a>
27	<a href="#">61A-45527-00</a> Collar, drive shaft	<a href="#">Buy now</a>
28	<a href="#">90201-22M01</a> Washer, plate(61a)	<a href="#">Buy now</a>
29	<a href="#">90206-22M19</a> Washer, wave(61a)	<a href="#">Buy now</a>
30	<a href="#">6G5-44323-00</a> Outer plate, cartridge	<a href="#">Buy now</a>
31	<a href="#">6E5-44315-A0</a> Gasket,water pump	<a href="#">Buy now</a>
32	<a href="#">93606-12019</a> Pin, dowel (614)	<a href="#">Buy now</a>
33	<a href="#">90119-08M14</a> Bolt, with washer	<a href="#">Buy now</a>
34	<a href="#">61A-45331-00-94</a> Housing, bearing	<a href="#">Buy now</a>
35	<a href="#">93101-28M16</a> Oil seal (6e5)	<a href="#">Buy now</a>
36	<a href="#">93317-330U2</a> Bearing, cylindrical(6k0)	<a href="#">Buy now</a>
37	<a href="#">61A-45587-00-10</a> Shim (t:0.10mm) UR	<a href="#">Buy now</a>
37	<a href="#">61A-45587-00-12</a> Shim (t:0.12mm) UR	<a href="#">Buy now</a>
37	<a href="#">61A-45587-00-15</a> Shim (t:0.15mm)	<a href="#">Buy now</a>


# Lower Casing. Drive 1

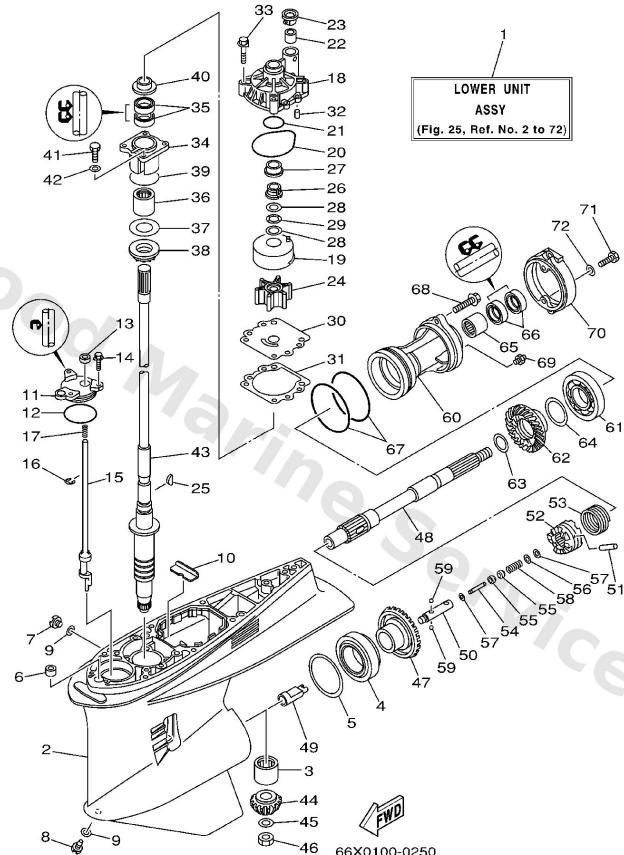

B3

Ref	Part	
37	<a href="#">61A-45587-00-18</a> Shim (t:0.18mm) UR	<a href="#">Buy now</a>
37	<a href="#">61A-45587-00-30</a> Shim (t:0.30mm) UR	<a href="#">Buy now</a>
37	<a href="#">61A-45587-00-40</a> Shim (t:0.40mm) UR	<a href="#">Buy now</a>
37	<a href="#">61A-45587-00-50</a> Shim (t:0.50mm) UR	<a href="#">Buy now</a>
38	<a href="#">93341-930U9</a> Bearing	<a href="#">Buy now</a>
39	<a href="#">93210-55M14</a> O-ring (70e)	<a href="#">Buy now</a>
40	<a href="#">6E5-45344-00</a> Cover, oil seal	<a href="#">Buy now</a>
41	<a href="#">97095-08025</a> Bolt (62g)	<a href="#">Buy now</a>
42	<a href="#">92995-08600</a> Washer, plain (663)	<a href="#">Buy now</a>
43	<a href="#">66K-45501-00</a> Drive shaft comp.	<a href="#">Buy now</a>
44	<a href="#">61A-45551-03</a> Pinion	<a href="#">Buy now</a>
45	<a href="#">90201-16M00</a> Washer, plate(6t5)	<a href="#">Buy now</a>
46	<a href="#">90170-16M19</a> Nut(6t5)	<a href="#">Buy now</a>
47	<a href="#">61A-45560-03</a> Gear	<a href="#">Buy now</a>
48	<a href="#">69J-45611-00</a> Shaft, propeller	<a href="#">Buy now</a>


# Lower Casing. Drive 1

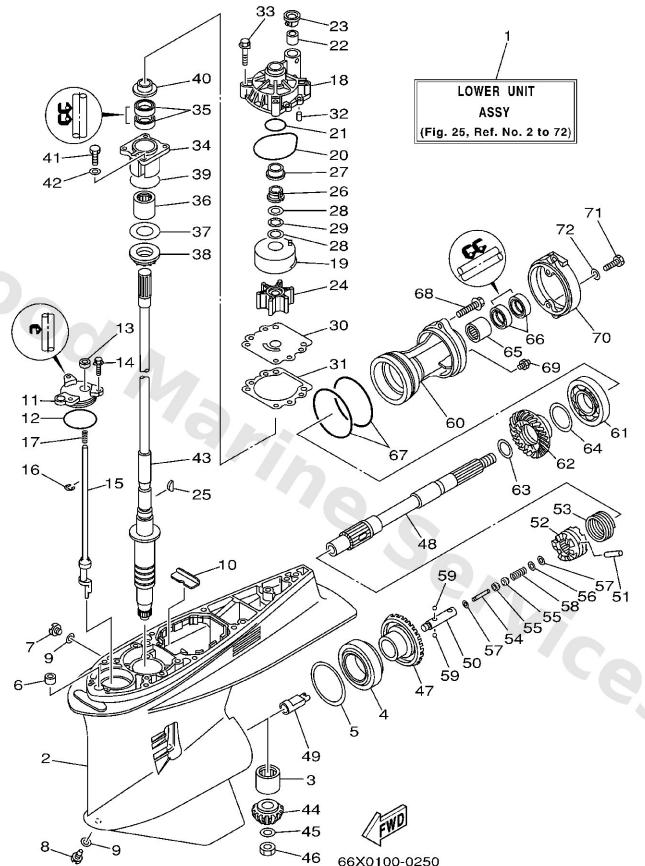

**B3**

Ref	Part	
49	<a href="#">61A-45641-02</a> Shifter	<a href="#">Buy now</a>
50	<a href="#">61A-45634-01</a> Slide, shift	<a href="#">Buy now</a>
51	<a href="#">61A-45632-00</a> Pin, cross	<a href="#">Buy now</a>
52	<a href="#">61A-45631-03</a> Clutch, dog	<a href="#">Buy now</a>
53	<a href="#">61A-45633-00</a> Ring, cross pin	<a href="#">Buy now</a>
54	<a href="#">6H1-45668-00</a> Shaft, free 1	<a href="#">Buy now</a>
55	<a href="#">61A-45635-00</a> Plunger, shift	<a href="#">Buy now</a>
56	<a href="#">90201-02M00</a> Washer, plate(61a)	<a href="#">Buy now</a>
57	<a href="#">90183-02M03</a> Nut, spring (6h1)	<a href="#">Buy now</a>
58	<a href="#">90501-10M77</a> Spring, compression(61a)	<a href="#">Buy now</a>
59	<a href="#">93501-04011</a> Ball	<a href="#">Buy now</a>
60	<a href="#">61A-45332-02-94</a> Housing, bearing	<a href="#">Buy now</a>
61	<a href="#">93306-210U0</a> Bearing(61a)	<a href="#">Buy now</a>
62	<a href="#">61A-45571-00</a> Gear	<a href="#">Buy now</a>
63	<a href="#">90201-31M00</a> Washer, plate(61a)	<a href="#">Buy now</a>


# Lower Casing. Drive 1

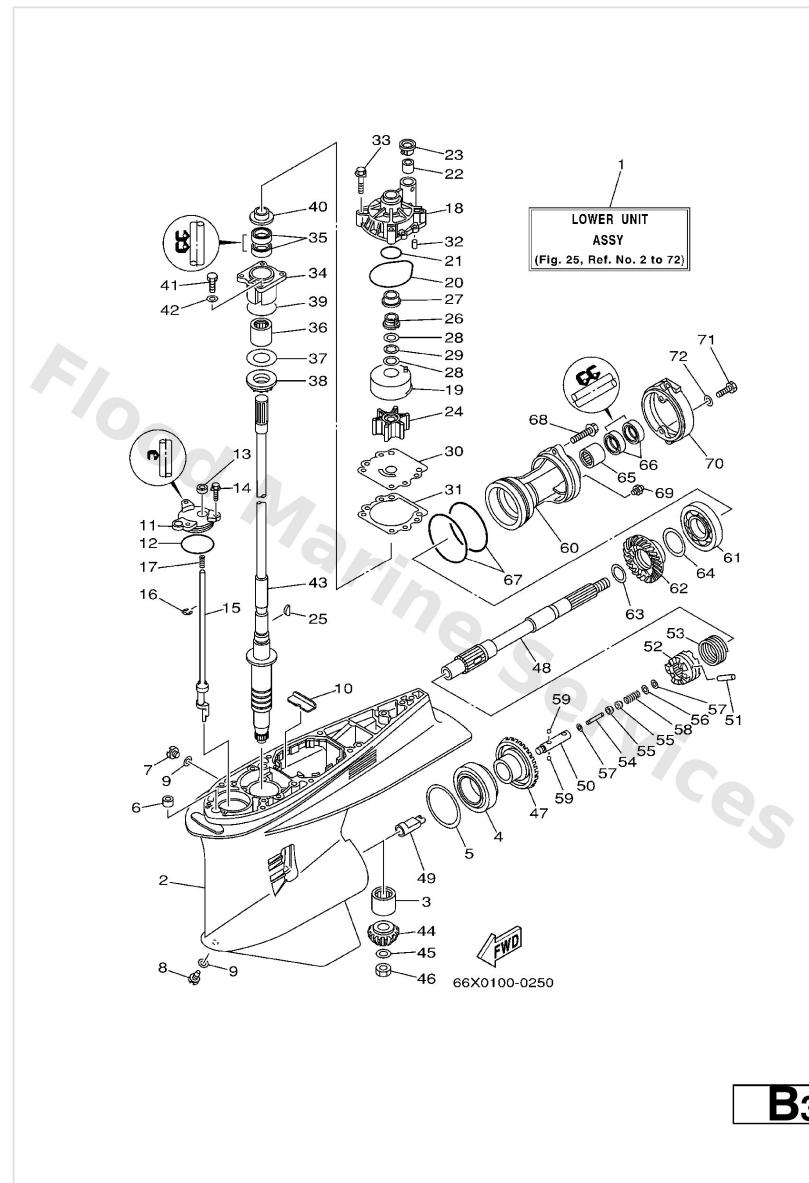

B3

Ref	Part	
64	<a href="#">61A-45577-00-10</a> Shim (t:0.10mm) UR	<a href="#">Buy now</a>
64	<a href="#">61A-45577-00-12</a> Shim (t:0.12mm) UR	<a href="#">Buy now</a>
64	<a href="#">61A-45577-00-15</a> Shim (t:0.15mm) UR	<a href="#">Buy now</a>
64	<a href="#">61A-45577-00-18</a> Shim (t:0.18mm) UR	<a href="#">Buy now</a>
64	<a href="#">61A-45577-00-30</a> Shim (t:0.30mm) UR	<a href="#">Buy now</a>
64	<a href="#">61A-45577-00-40</a> Shim (t:0.40mm) UR	<a href="#">Buy now</a>
64	<a href="#">61A-45577-00-50</a> Shim (t:0.50mm) UR	<a href="#">Buy now</a>
65	<a href="#">93317-330U5</a> Bearing	<a href="#">Buy now</a>
66	<a href="#">93101-30M17</a> Oil seal (6e5)	<a href="#">Buy now</a>
67	<a href="#">93211-04384</a> O-ring (705)	<a href="#">Buy now</a>
68	<a href="#">90105-08M48</a> Bolt, Flange	<a href="#">Buy now</a>
69	<a href="#">93700-09M00</a> Nipple, grease(6t4)	<a href="#">Buy now</a>
70	<a href="#">61A-45361-01-5B</a> Cap, lower casing	<a href="#">Buy now</a>
71	<a href="#">97095-08020</a> Bolt, hexagon	<a href="#">Buy now</a>


## Lower Casing. Drive 2

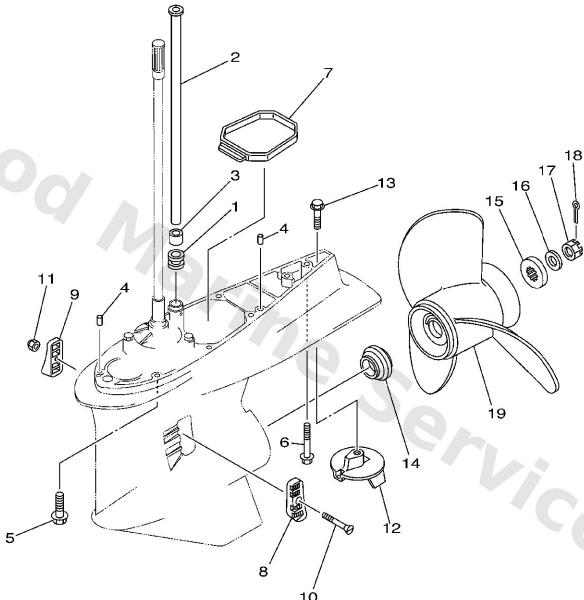

**B7**

Ref	Part	
1	<a href="#">6E5-44366-00</a> Damper, water seal 2	<a href="#">Buy now</a>
2	<a href="#">66K-44361-00</a> Tube, water	<a href="#">Buy now</a>
3	<a href="#">6E5-44365-00</a> Damper, water seal 1	<a href="#">Buy now</a>
4	<a href="#">93608-12M05</a> Pin, dowel b (6e5)	<a href="#">Buy now</a>
5	<a href="#">90101-10M70</a> Bolt(6j9)	<a href="#">Buy now</a>
6	<a href="#">90119-10MA2</a> Bolt, with washer	<a href="#">Buy now</a>
7	<a href="#">61A-45375-00</a> Damper, seal	<a href="#">Buy now</a>
8	<a href="#">61A-45214-10</a> Cover, water inlet 1	<a href="#">Buy now</a>
9	<a href="#">61A-45215-10</a> Cover, water inlet 2	<a href="#">Buy now</a>
10	<a href="#">90152-05003</a> Screw, countersunk	<a href="#">Buy now</a>
11	<a href="#">90185-05002</a> Nut nylon (sus)(ex4)	<a href="#">Buy now</a>
12	<a href="#">69L-45371-00</a> Tab-trim	<a href="#">Buy now</a>
13	<a href="#">90105-10M00</a> Bolt, hexagon (663)	<a href="#">Buy now</a>
14	<a href="#">6E5-45987-01</a> Spacer 1	<a href="#">Buy now</a>
15	<a href="#">688-45997-01</a> Spacer 2	<a href="#">Buy now</a>

## Lower Casing. Drive 2

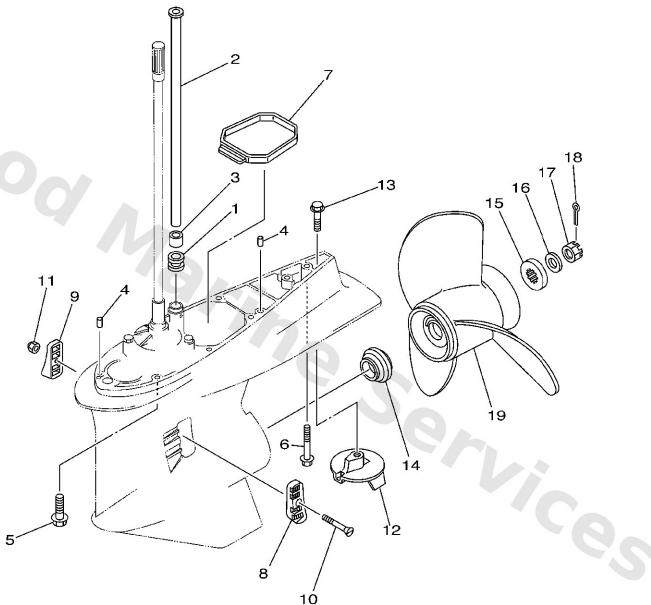


66X2100-3250

**B7**


Ref	Part	
16	<a href="#">92990-18200</a> Washer (6e5)	<a href="#">Buy now</a>
17	<a href="#">90171-18M04</a> Nut, castle (6e5)	<a href="#">Buy now</a>
18	<a href="#">91490-40030</a> Pin, cotter (663)	<a href="#">Buy now</a>
19	<a href="#">66K-45970-B0</a> Propeller (3X14-1/2"x27") UR	<a href="#">Buy now</a>
19	<a href="#">66K-45972-B0</a> Prop (3X14-1/2"X25"-M2) UR	<a href="#">Buy now</a>

# Meter

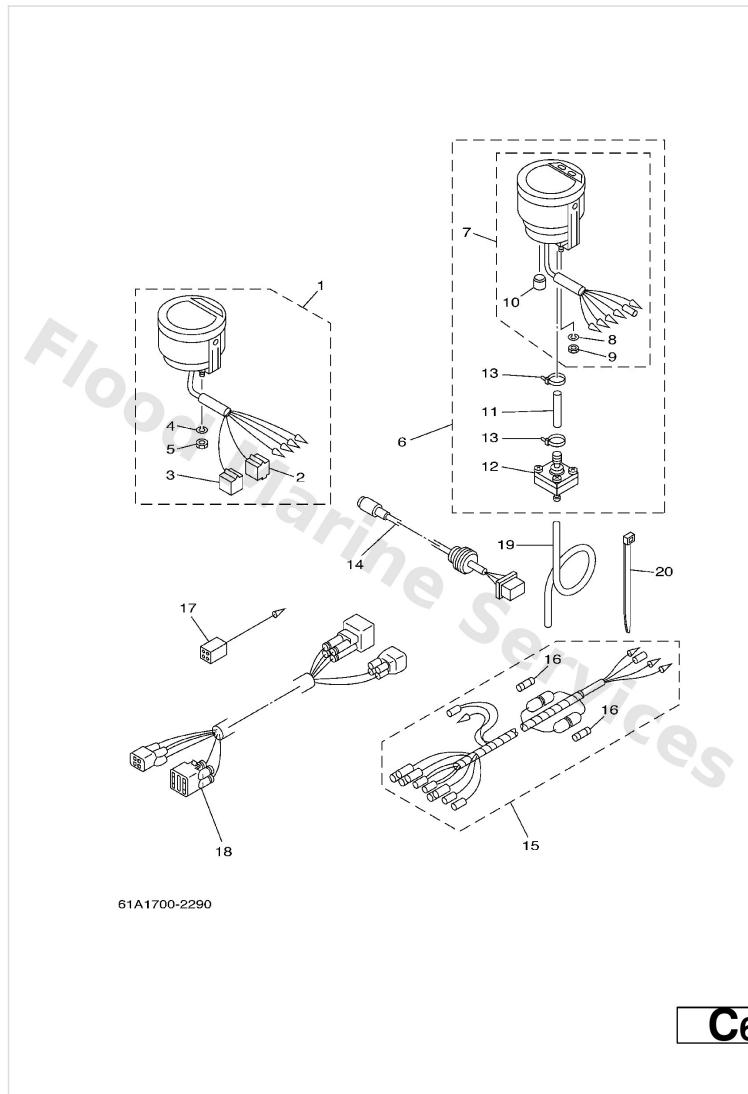

Ref	Part	
1	<a href="#">6Y5-8350T-02</a> Digital tachometer assembly AP	<a href="#">Buy now</a>
2	<a href="#">9E450-04433</a> Housing, connector (m-4-w) M-4-W	<a href="#">Buy now</a>
3	<a href="#">9E450-04533</a> Housing, f-4-w(5pcs) F-4-W	<a href="#">Buy now</a>
4	<a href="#">92990-04100</a> Ybs67-4 washer, spring	<a href="#">Buy now</a>
5	<a href="#">95380-04600</a> Nut,hex	<a href="#">Buy now</a>
6	<a href="#">6Y5-83500-S5</a> Meter assembly AP	<a href="#">Buy now</a>
7	<a href="#">6Y5-83570-S5</a> Speedometer assembly	<a href="#">Buy now</a>
10	<a href="#">6Y5-83533-T2</a> Grommet	<a href="#">Buy now</a>
11	<a href="#">6Y5-83557-31</a> Tube	<a href="#">Buy now</a>
12	<a href="#">6Y5-83728-00</a> Connector assembly	<a href="#">Buy now</a>
20	<a href="#">90465-11M10</a> Clamp AP	<a href="#">Buy now</a>
14	<a href="#">6Y5-87122-S0</a> Cord assembly 1 AP	<a href="#">Buy now</a>
15	<a href="#">6Y5-83553-M0</a> Wire, lead (l=2.5m) AP	<a href="#">Buy now</a>
16	<a href="#">1E6-82151-00</a> Fuse (10a)	<a href="#">Buy now</a>
17	<a href="#">6Y5-82117-00</a> Wire, lead AP	<a href="#">Buy now</a>

# Meter

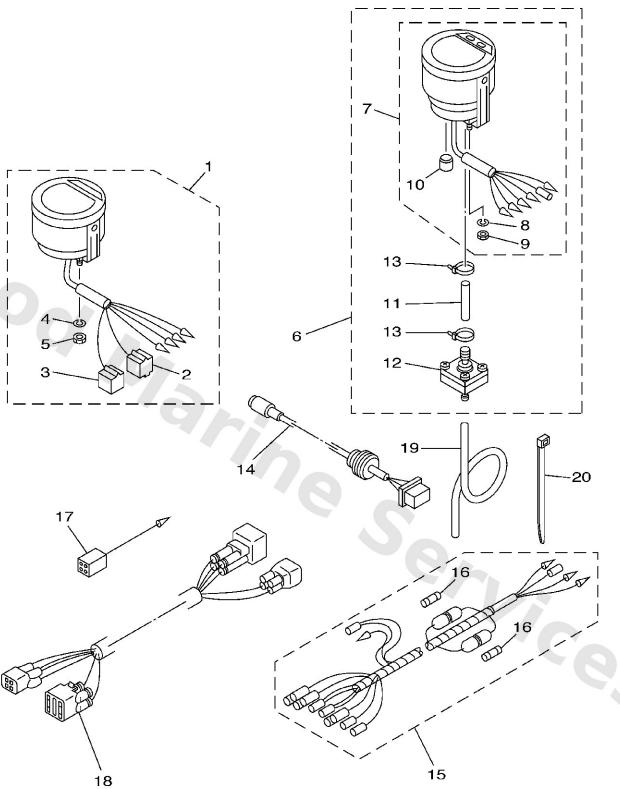


61A1700-2290

C6

Ref	Part	
18	<a href="#">68F-82553-80</a> Extension, wire lead (8m) AP	<a href="#">Buy now</a>
19	<a href="#">6Y5-83557-10</a> Tube (8m) AP	<a href="#">Buy now</a>

# Oil Pump

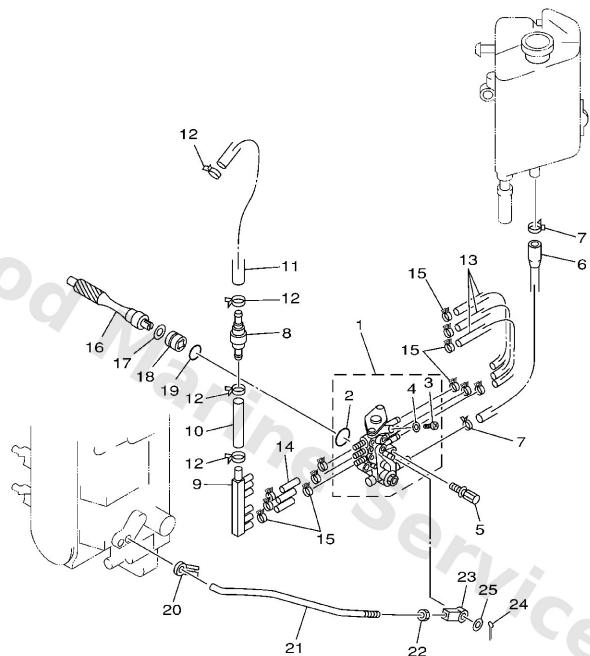


 65J0010-7080

**C3**

Ref	Part	
1	<a href="#">65L-13200-00</a> Oil injection pump assembly	<a href="#">Buy now</a>
2	<a href="#">93210-19M82</a> O-ring(6j8)	<a href="#">Buy now</a>
3	<a href="#">6R3-13471-00</a> Screw	<a href="#">Buy now</a>
4	<a href="#">6L2-13475-00</a> Gasket, breather bolt	<a href="#">Buy now</a>
5	<a href="#">90109-06M40</a> Bolt(6h0)	<a href="#">Buy now</a>
6	<a href="#">61A-13416-00</a> Pipe Oil 1	<a href="#">Buy now</a>
7	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
8	<a href="#">65L-13183-00</a> Valve, check	<a href="#">Buy now</a>
9	<a href="#">65L-24378-00</a> Pipe, joint 4	<a href="#">Buy now</a>
10	<a href="#">90445-09220</a> Hose (l1500)	<a href="#">Buy now</a>
11	<a href="#">90446-09M69</a> Hose(65j)	<a href="#">Buy now</a>
13	<a href="#">90445-07M02</a> Hose (l200)	<a href="#">Buy now</a>
14	<a href="#">90445-07M03</a> Hose (l200)	<a href="#">Buy now</a>
15	<a href="#">90468-07M02</a> Clip (6e5)	<a href="#">Buy now</a>
16	<a href="#">61A-11537-00</a> Gear, driven	<a href="#">Buy now</a>

# Oil Pump

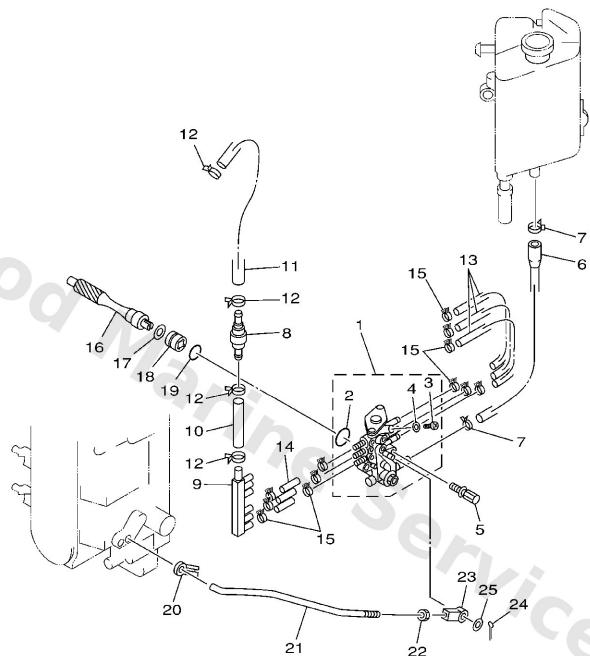


 65J0010-7080

Ref	Part	
17	<a href="#">90201-09M01</a> Washer, plate(61b)	<a href="#">Buy now</a>
18	<a href="#">61A-13117-00</a> Collar, distance	<a href="#">Buy now</a>
19	<a href="#">93210-18MA9</a> O-ring(61a)	<a href="#">Buy now</a>
20	<a href="#">6R5-41237-00</a> Joint, link	<a href="#">Buy now</a>
21	<a href="#">65L-41241-00</a> Rod, Link	<a href="#">Buy now</a>
22	<a href="#">95380-05600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
23	<a href="#">6H1-41237-00</a> Joint, link	<a href="#">Buy now</a>
24	<a href="#">91490-12012</a> Pin, cotter (6g8)	<a href="#">Buy now</a>
25	<a href="#">90202-05088</a> Washer, plate (666)	<a href="#">Buy now</a>

**C3**


# Oil Tank

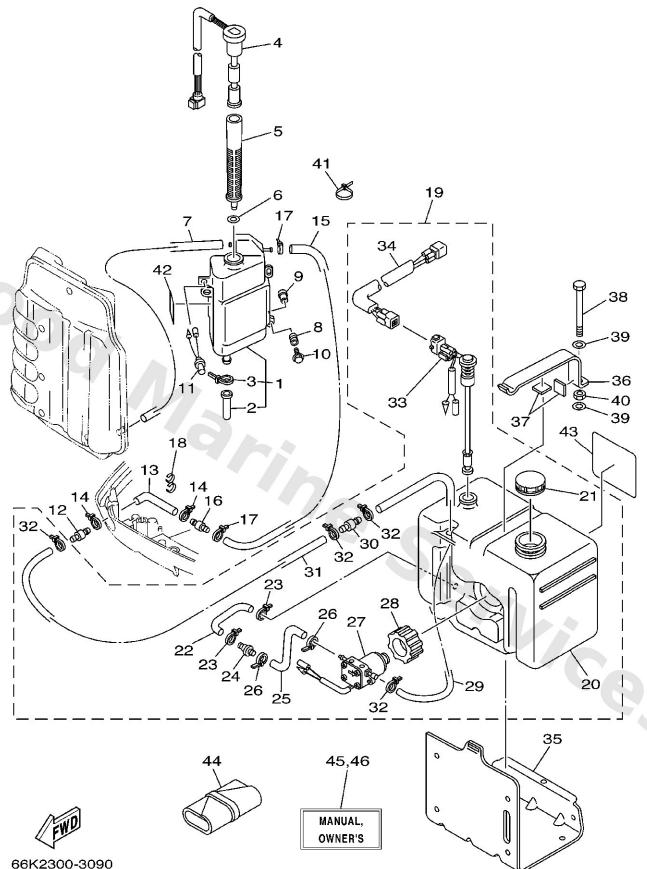

**C4**

Ref	Part	
1	<a href="#">61A-21750-00</a> Oil tank assembly	<a href="#">Buy now</a>
2	<a href="#">6E5-13448-00</a> Cap, oil tank	<a href="#">Buy now</a>
3	<a href="#">90465-13M11</a> Clamp (6e5)	<a href="#">Buy now</a>
4	<a href="#">61A-85730-01</a> Oil level gauge assembly	<a href="#">Buy now</a>
5	<a href="#">61A-13411-00</a> Strainer, oil	<a href="#">Buy now</a>
6	<a href="#">6E5-13414-00</a> Gasket, strainer cover	<a href="#">Buy now</a>
7	<a href="#">90445-05M07</a> Hose (I700)	<a href="#">Buy now</a>
8	<a href="#">6A0-82317-00</a> Damper, ignition coil	<a href="#">Buy now</a>
9	<a href="#">624-42542-00</a> Collar	<a href="#">Buy now</a>
10	<a href="#">90119-06M65</a> Bolt, with washer	<a href="#">Buy now</a>
11	<a href="#">6R3-8259E-00</a> Switch assembly	<a href="#">Buy now</a>
12	<a href="#">6E5-24379-00</a> Pipe, joint 4	<a href="#">Buy now</a>
13	<a href="#">90445-12M04</a> Hose (I3000)	<a href="#">Buy now</a>
14	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
15	<a href="#">6E5-24323-00</a> Pipe 12	<a href="#">Buy now</a>


# Oil Tank

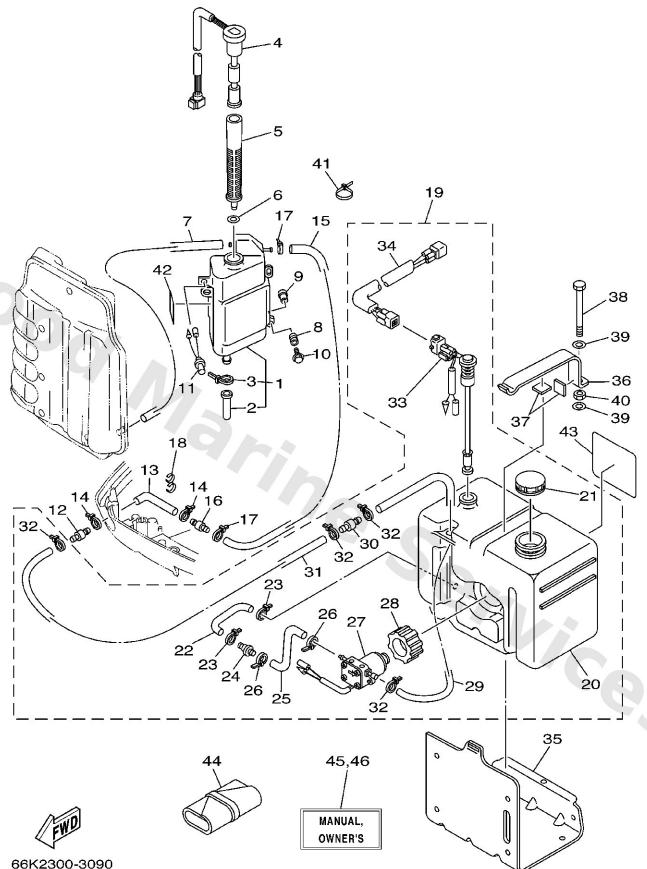

**C4**

Ref	Part	
18	<a href="#">90464-13M34</a> Clamp(6r3)	<a href="#">Buy now</a>
19	<a href="#">61A-21708-20</a> Sub oil tank assembly.	<a href="#">Buy now</a>
20	<a href="#">6E5-21733-20</a> Sub tank, oil (10.5l)	<a href="#">Buy now</a>
21	<a href="#">6E5-21770-03</a> Oil tank cap assembly	<a href="#">Buy now</a>
22	<a href="#">6E5-24322-00</a> Pipe 11	<a href="#">Buy now</a>
24	<a href="#">646-24251-02</a> Strainer 1	<a href="#">Buy now</a>
25	<a href="#">6E5-24319-01</a> Pipe, oil	<a href="#">Buy now</a>
27	<a href="#">6E5-81900-01</a> Oil feed pump assembly	<a href="#">Buy now</a>
28	<a href="#">6E5-81922-00</a> Grommet	<a href="#">Buy now</a>
29	<a href="#">6E5-24321-01</a> Pipe 10	<a href="#">Buy now</a>
31	<a href="#">90445-11M26</a> Hose (l8000)	<a href="#">Buy now</a>
33	<a href="#">6E5-85720-04</a> Oil level gauge assembly	<a href="#">Buy now</a>
34	<a href="#">6R3-85721-80</a> Wire, lead	<a href="#">Buy now</a>
35	<a href="#">6E5-21734-01-33</a> Holder, oil sub tank	<a href="#">Buy now</a>
36	<a href="#">6E5-21798-01-33</a> Bracket, damper	<a href="#">Buy now</a>


# Oil Tank

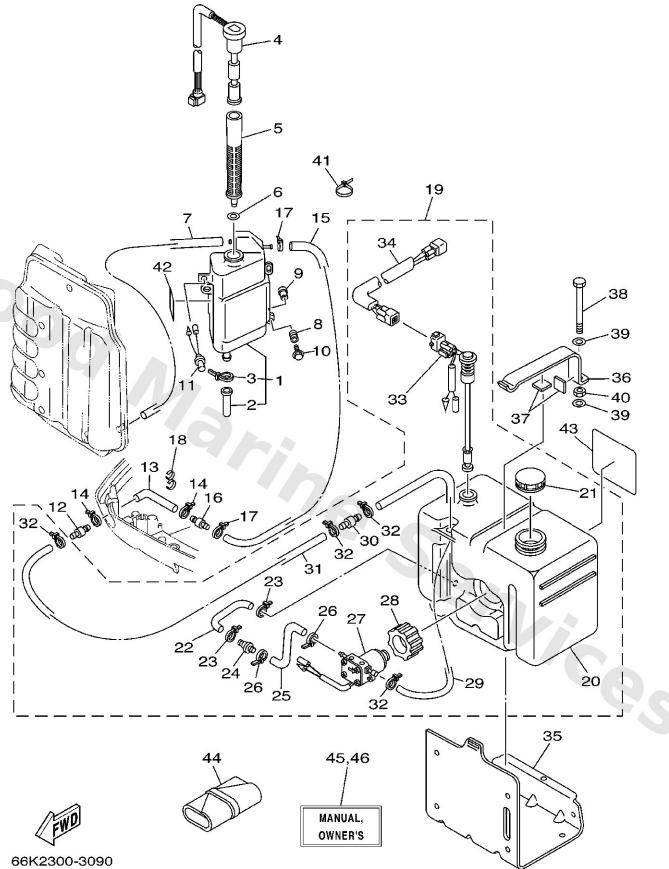

Ref	Part	
37	<a href="#">6E5-21746-00</a> Damper	<a href="#">Buy now</a>
38	<a href="#">97080-06100</a> Bolt, hexagon	<a href="#">Buy now</a>
39	<a href="#">92990-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
40	<a href="#">95380-06600</a> Nut(661)	<a href="#">Buy now</a>
42	<a href="#">6E5-85711-60</a> Mark Caution	<a href="#">Buy now</a>
43	<a href="#">6E5-13437-62</a> Mark Caution	<a href="#">Buy now</a>
44	<a href="#">656-W2810-02</a> Tool kit	<a href="#">Buy now</a>
45	<a href="#">66K-28199-74-A0</a> O/m 225geto(66k2) '03 e, f, s UR (E,F,S)	<a href="#">Buy now</a>
45	<a href="#">66K-28199-74-B0</a> O/m 225geto(66k2) '03 g, d, i UR (D,NL,I)	<a href="#">Buy now</a>
46	<a href="#">66K-28199-84-A0</a> O/m 225geto(66k2) '03 d,p,g UR (DK,P,GR)	<a href="#">Buy now</a>
46	<a href="#">66K-28199-84-B0</a> O/m 225geto(66k2) '03 n,s,f UR (N,S,SS)	<a href="#">Buy now</a>

C4


# Power Trim & Tilt Assy 1

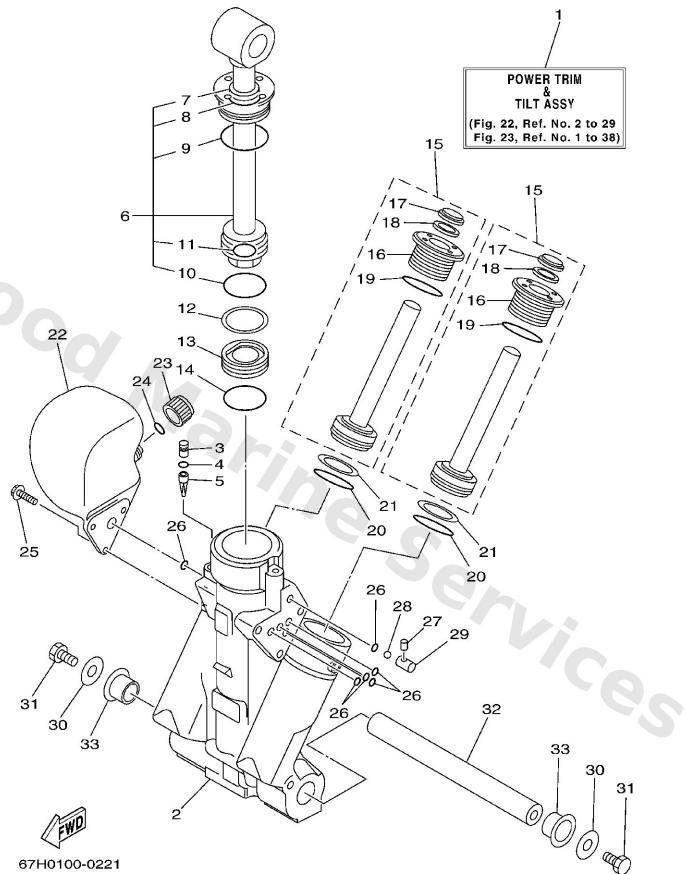

A4

Ref	Part	
1	<a href="#">68F-43800-01-4D</a> Power trim & tilt assembly	<a href="#">Buy now</a>
2	<a href="#">64E-43825-01</a> Housing Trim & Tilt	<a href="#">Buy now</a>
3	<a href="#">64E-4388J-00</a> Plug 2	<a href="#">Buy now</a>
4	<a href="#">93210-10M74</a> O-ring	<a href="#">Buy now</a>
5	<a href="#">64E-43817-00</a> Filter 2	<a href="#">Buy now</a>
6	<a href="#">64E-43810-00</a> Tilt piston sub assembly	<a href="#">Buy now</a>
7	<a href="#">64E-43898-00</a> Seal, dust 2	<a href="#">Buy now</a>
8	<a href="#">64E-43867-00</a> O-ring 7	<a href="#">Buy now</a>
9	<a href="#">64E-43866-00</a> O-ring 6	<a href="#">Buy now</a>
10	<a href="#">6E5-43862-00</a> O-ring 2	<a href="#">Buy now</a>
11	<a href="#">64E-43883-00</a> O-ring 10	<a href="#">Buy now</a>
12	<a href="#">6E5-43872-00</a> Ring, back-up 2	<a href="#">Buy now</a>
13	<a href="#">6E5-43814-02</a> Piston, free	<a href="#">Buy now</a>
15	<a href="#">64E-43820-00</a> Trim piston sub assembly	<a href="#">Buy now</a>
16	<a href="#">64E-43821-00</a> Screw, trim cylinder end	<a href="#">Buy now</a>

# Power Trim & Tilt Assy 1

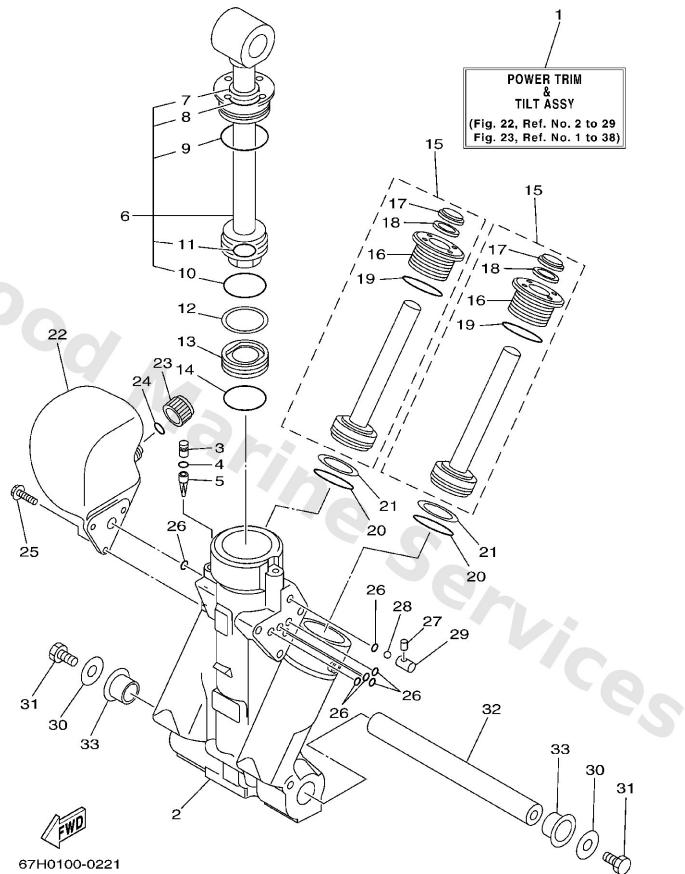


A4

Ref	Part	
17	<a href="#">64E-43822-00</a> Seal, trim dust	<a href="#">Buy now</a>
18	<a href="#">64E-4384J-00</a> Seal, trim down	<a href="#">Buy now</a>
19	<a href="#">6G5-43864-00</a> O-ring 4	<a href="#">Buy now</a>
20	<a href="#">6E5-43864-00</a> O-ring 4	<a href="#">Buy now</a>
21	<a href="#">6E5-43874-01</a> Ring, back-up 4	<a href="#">Buy now</a>
22	<a href="#">64E-43828-00</a> Body, reservoir	<a href="#">Buy now</a>
23	<a href="#">64E-43829-00</a> Plug, reservoir	<a href="#">Buy now</a>
24	<a href="#">64E-43897-00</a> O-ring	<a href="#">Buy now</a>
25	<a href="#">64E-4388E-00</a> Bolt ,screw (l:14mm)	<a href="#">Buy now</a>
26	<a href="#">64E-43869-00</a> O-ring 9	<a href="#">Buy now</a>
27	<a href="#">64E-4381G-00</a> Pin 1	<a href="#">Buy now</a>
28	<a href="#">6E5-43858-00</a> Ball 1	<a href="#">Buy now</a>
29	<a href="#">64E-4382G-00</a> Valve seat	<a href="#">Buy now</a>
30	<a href="#">90201-08M14</a> Washer, plate	<a href="#">Buy now</a>
31	<a href="#">97080-08016</a> Bolt	<a href="#">Buy now</a>


# Power Trim & Tilt Assy 1

Ref	Part	
32	<a href="#">64E-43818-01</a> Lower shock mount pin set	<a href="#">Buy now</a>
33	<a href="#">90386-22M98</a> Bush(61u)	<a href="#">Buy now</a>

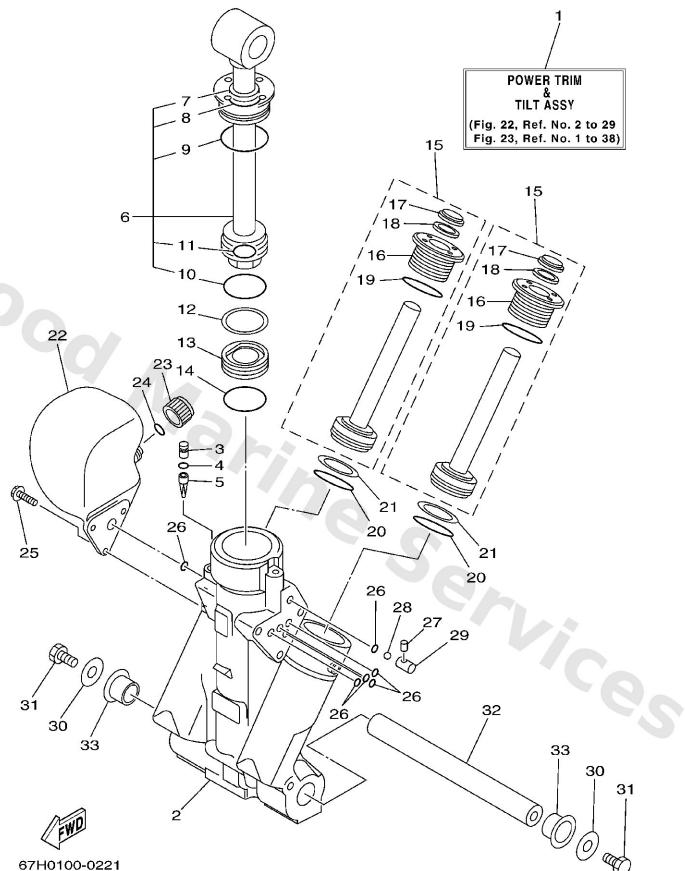

A4


## Power Trim & Tilt Assy 2

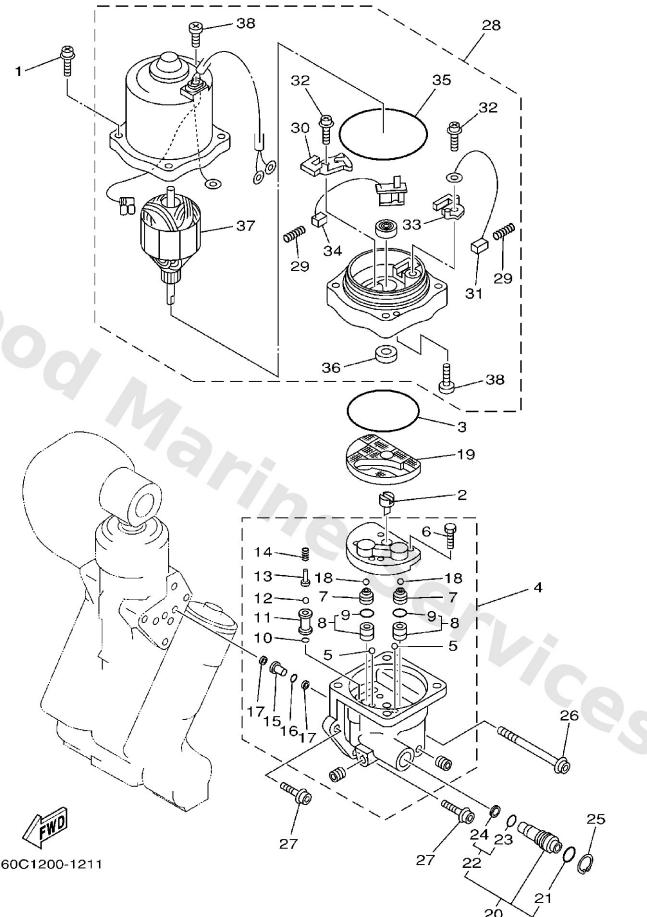

A6

Ref	Part	
1	<a href="#">64E-4388E-10</a> Bolt ,screw (l:34.7mm)	<a href="#">Buy now</a>
2	<a href="#">64E-43831-00</a> Connector, shaft	<a href="#">Buy now</a>
3	<a href="#">64E-43868-00</a> O-ring 8	<a href="#">Buy now</a>
4	<a href="#">64E-43830-00</a> Gear pump assembly	<a href="#">Buy now</a>
5	<a href="#">72X-43858-00</a> Ball	<a href="#">Buy now</a>
6	<a href="#">64E-43843-00</a> Screw, valve lock	<a href="#">Buy now</a>
7	<a href="#">64E-43841-00</a> Piston, shuttle	<a href="#">Buy now</a>
8	<a href="#">64E-43802-00</a> Valve sub assembly	<a href="#">Buy now</a>
9	<a href="#">6E5-43896-00</a> O-ring	<a href="#">Buy now</a>
10	<a href="#">6G5-43863-00</a> O-ring 3	<a href="#">Buy now</a>
11	<a href="#">64E-43851-00</a> Seat, Relief Valve	<a href="#">Buy now</a>
12	<a href="#">64E-43858-00</a> Ball	<a href="#">Buy now</a>
13	<a href="#">64E-43859-00</a> Pin, Valve Support	<a href="#">Buy now</a>
14	<a href="#">64E-43855-00</a> Spring, up relief	<a href="#">Buy now</a>
15	<a href="#">64E-43850-00</a> Valve sub assembly	<a href="#">Buy now</a>


## Power Trim & Tilt Assy 2

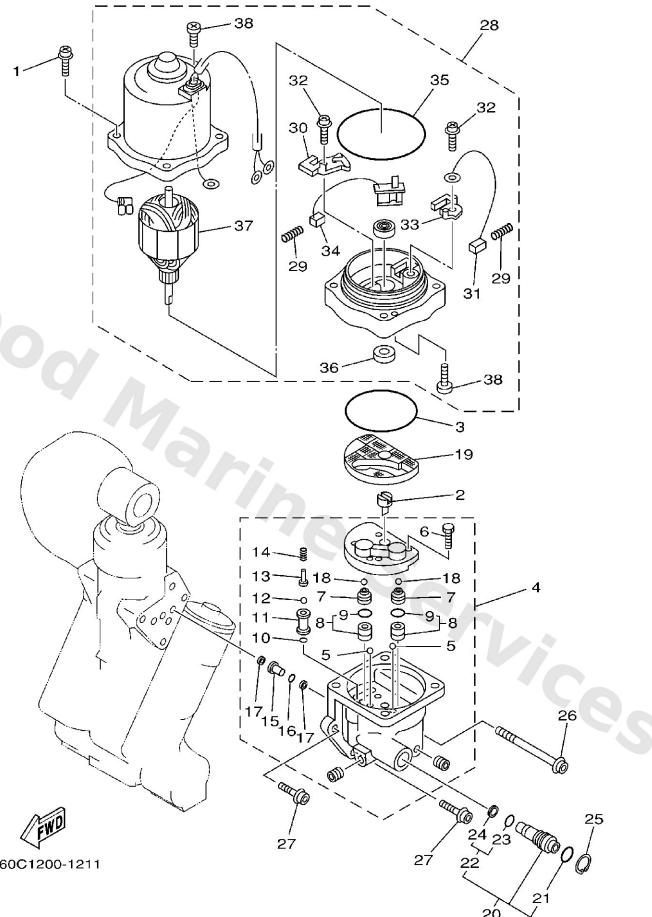

**A6**

Ref	Part	
16	<a href="#">64E-43865-00</a> O-ring 10	<a href="#">Buy now</a>
17	<a href="#">64E-43816-00</a> Filter 1	<a href="#">Buy now</a>
19	<a href="#">64E-43817-10</a> Filter 2	<a href="#">Buy now</a>
20	<a href="#">64E-43860-00</a> Manual valve sub-assembly	<a href="#">Buy now</a>
21	<a href="#">72X-85075-L0</a> O-ring (nsd161)	<a href="#">Buy now</a>
22	<a href="#">64E-43827-00</a> Ring set	<a href="#">Buy now</a>
23	<a href="#">64E-4387A-00</a> O-ring	<a href="#">Buy now</a>
24	<a href="#">64E-43873-00</a> Ring, back up	<a href="#">Buy now</a>
25	<a href="#">64E-43875-00</a> Ring, snap	<a href="#">Buy now</a>
26	<a href="#">64E-43879-10</a> Screw, with washer	<a href="#">Buy now</a>
27	<a href="#">64E-43879-00</a> Screw, with washer	<a href="#">Buy now</a>
28	<a href="#">67H-43880-01</a> Motor assembly	<a href="#">Buy now</a>
29	<a href="#">6H1-4386K-10</a> Spring, brush	<a href="#">Buy now</a>
30	<a href="#">64E-4380J-00</a> Holder Brush	<a href="#">Buy now</a>
31	<a href="#">64E-43891-00</a> Brush 1	<a href="#">Buy now</a>


## Power Trim & Tilt Assy 2

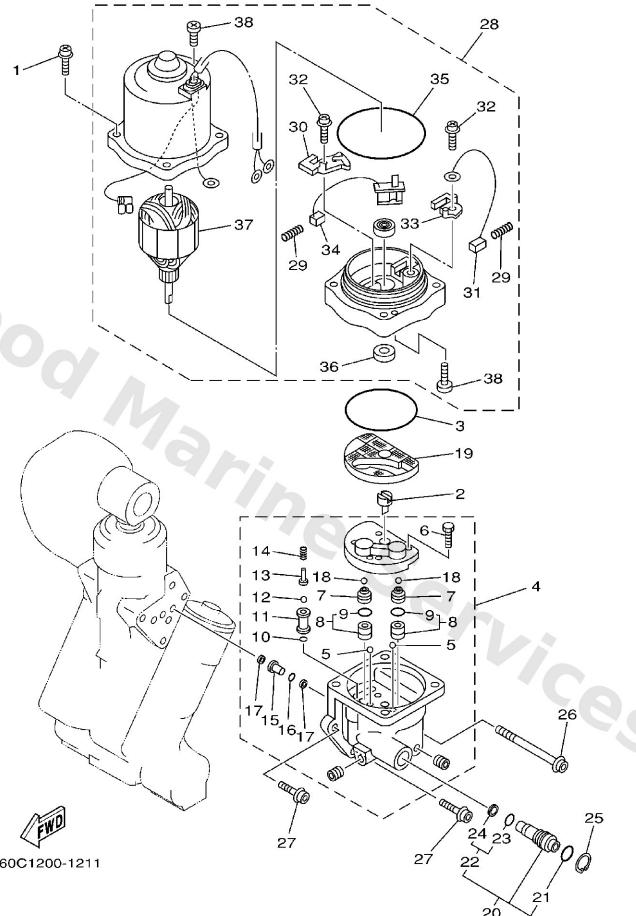

A6

Ref	Part	
32	<a href="#">97607-04310</a> Screw, pan head(6g8)	<a href="#">Buy now</a>
33	<a href="#">64E-4380F-00</a> Holder, brush 2	<a href="#">Buy now</a>
34	<a href="#">64E-43892-00</a> Breaker comp. (brush 2)	<a href="#">Buy now</a>
35	<a href="#">6G5-43865-00</a> O-ring	<a href="#">Buy now</a>
36	<a href="#">93102-08M43</a> Oil seal(6b0)	<a href="#">Buy now</a>
37	<a href="#">64E-43805-00</a> Armature assembly	<a href="#">Buy now</a>
38	<a href="#">64E-43843-10</a> Screw valve lock	<a href="#">Buy now</a>


## Remote Control Assy

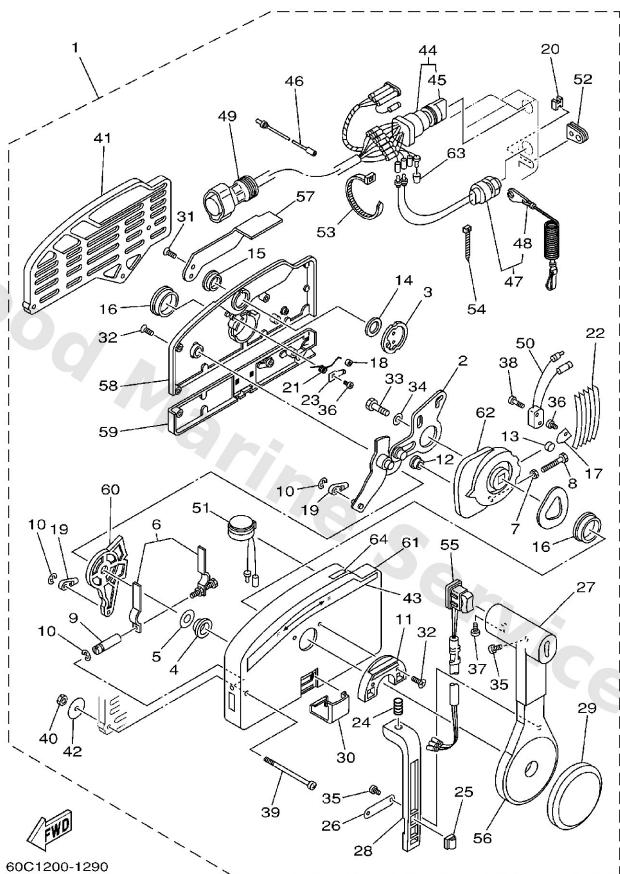

C3

Ref	Part	
1	<a href="#">703-48205-A4</a> Remote control assembly (10p, ptt) <b>AP WITH PT/T SW.</b>	<a href="#">Buy now</a>
2	<a href="#">703-48261-01</a> Arm, throttle	<a href="#">Buy now</a>
3	<a href="#">703-48153-00</a> Shaft, free accel.	<a href="#">Buy now</a>
4	<a href="#">703-48235-00</a> Bushing	<a href="#">Buy now</a>
5	<a href="#">703-48268-00</a> Spacer 3	<a href="#">Buy now</a>
6	<a href="#">703-48264-00</a> Throttle, friction	<a href="#">Buy now</a>
7	<a href="#">95380-05600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
8	<a href="#">97380-05025</a> Bolt	<a href="#">Buy now</a>
9	<a href="#">703-48265-00</a> Shaft Friction	<a href="#">Buy now</a>
10	<a href="#">93430-06024</a> Circlip (701)	<a href="#">Buy now</a>
11	<a href="#">703-48245-00</a> Plate, lock	<a href="#">Buy now</a>
12	<a href="#">703-48252-00</a> Roller, cam	<a href="#">Buy now</a>
13	<a href="#">701-48248-00</a> Roller, free accel	<a href="#">Buy now</a>
14	<a href="#">703-48198-00</a> Washer, wave 3	<a href="#">Buy now</a>
15	<a href="#">703-48243-00</a> Bushing 3	<a href="#">Buy now</a>


# Remote Control Assy

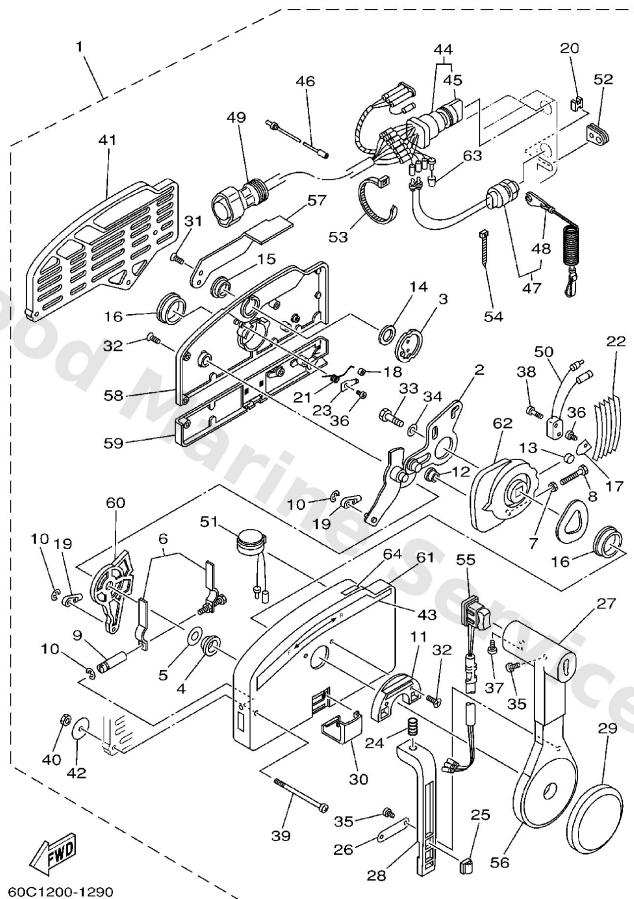

C3

Ref	Part	
16	<a href="#">703-48236-00</a> Bushing	<a href="#">Buy now</a>
17	<a href="#">703-48189-00</a> Retainer	<a href="#">Buy now</a>
18	<a href="#">703-48234-00</a> Roller, detent	<a href="#">Buy now</a>
19	<a href="#">703-48345-01</a> Cable end, remote control 2	<a href="#">Buy now</a>
20	<a href="#">703-48358-00</a> Anchor, cable	<a href="#">Buy now</a>
21	<a href="#">703-48244-00</a> Spring, free accel.	<a href="#">Buy now</a>
22	<a href="#">703-48238-00</a> Spring, detent	<a href="#">Buy now</a>
23	<a href="#">703-48246-00</a> Spacer 1	<a href="#">Buy now</a>
24	<a href="#">703-48227-00</a> Spring, neutral lock	<a href="#">Buy now</a>
25	<a href="#">703-82594-00</a> Clamp <b>WITH PT/T SW.</b>	<a href="#">Buy now</a>
26	<a href="#">703-48226-00</a> Plate, stopper	<a href="#">Buy now</a>
27	<a href="#">703-48222-00</a> Grip, control lever <b>SINGLE</b>	<a href="#">Buy now</a>
28	<a href="#">703-48223-00</a> Lock, neutral	<a href="#">Buy now</a>
29	<a href="#">703-48225-00</a> Cover	<a href="#">Buy now</a>
30	<a href="#">703-48219-00</a> Cover, lead	<a href="#">Buy now</a>


# Remote Control Assy

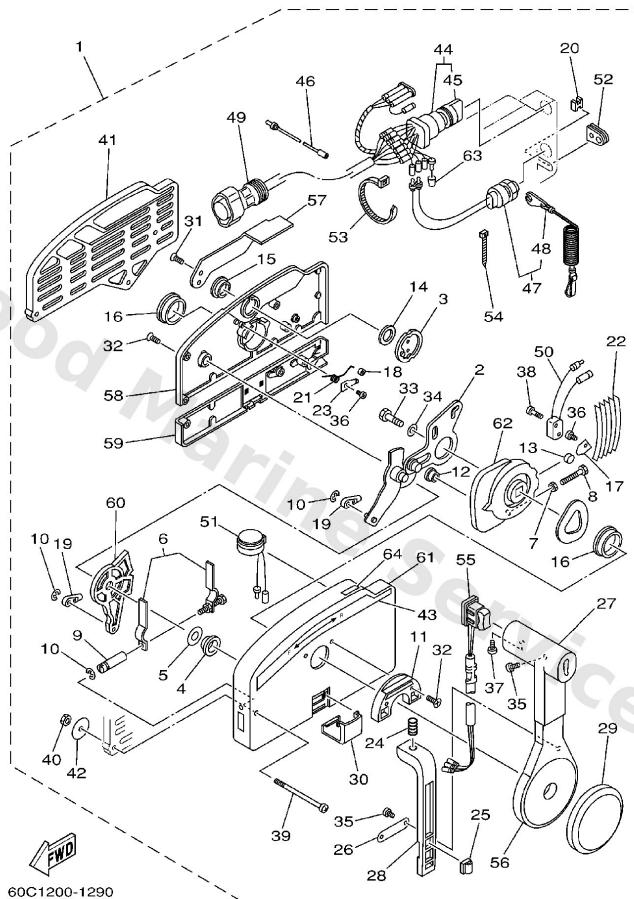

C3

Ref	Part	
31	<a href="#">703-48281-00</a> Screw, flat head	<a href="#">Buy now</a>
32	<a href="#">703-48282-00</a> Screw	<a href="#">Buy now</a>
33	<a href="#">97380-08030</a> Bolt, hexagon (fj1)	<a href="#">Buy now</a>
34	<a href="#">92990-08600</a> Washer, plain (663)	<a href="#">Buy now</a>
35	<a href="#">98580-04010</a> Screw, pan head (e56)	<a href="#">Buy now</a>
36	<a href="#">98580-04006</a> Screw, pan head (7h3)	<a href="#">Buy now</a>
37	<a href="#">98580-05010</a> Screw, pan head(62x)	<a href="#">Buy now</a>
38	<a href="#">98580-03015</a> Screw, pan head (n151)	<a href="#">Buy now</a>
39	<a href="#">703-48291-10</a> Screw	<a href="#">Buy now</a>
40	<a href="#">95380-06600</a> Nut(661)	<a href="#">Buy now</a>
41	<a href="#">703-48293-10</a> Spacer, remote control <b>SINGLE</b>	<a href="#">Buy now</a>
42	<a href="#">701-48287-00</a> Washer 1	<a href="#">Buy now</a>
43	<a href="#">703-48215-00</a> Graphic	<a href="#">Buy now</a>
44	<a href="#">703-82510-12</a> Main switch assembly <b>FOR PRIME START</b>	<a href="#">Buy now</a>
45	<a href="#">676-82577-00</a> Cap, key	<a href="#">Buy now</a>


## Remote Control Assy

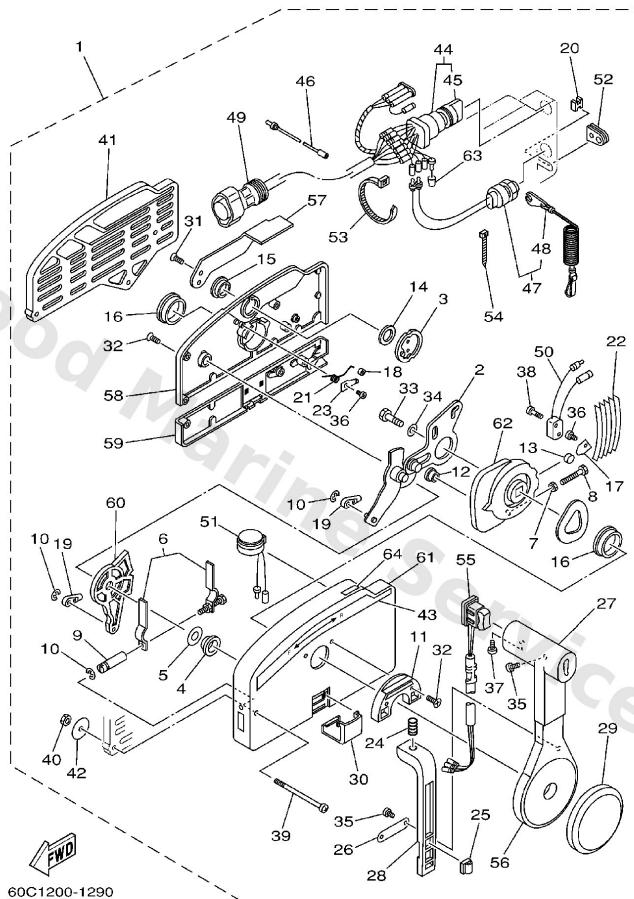

C3

Ref	Part	
46	<a href="#">703-82531-00</a> Wire, lead	<a href="#">Buy now</a>
47	<a href="#">688-82575-01</a> Engine stop switch assembly	<a href="#">Buy now</a>
48	<a href="#">682-82556-00</a> Lanyard, stop switch	<a href="#">Buy now</a>
49	<a href="#">688-8258A-20</a> 10p main harness mec 2m (6ft) <b>L)5M (10P)</b>	<a href="#">Buy now</a>
50	<a href="#">703-82540-00</a> Neutral switch assembly	<a href="#">Buy now</a>
51	<a href="#">703-83383-A0</a> Buzzer	<a href="#">Buy now</a>
52	<a href="#">703-48284-00</a> Grommet	<a href="#">Buy now</a>
53	<a href="#">703-82591-00</a> Band	<a href="#">Buy now</a>
54	<a href="#">703-82592-00</a> Band	<a href="#">Buy now</a>
55	<a href="#">703-82563-02</a> Trim & tilt switch assembly <b>WITH PT/T SW.</b>	<a href="#">Buy now</a>
56	<a href="#">703-48221-00</a> Grip	<a href="#">Buy now</a>
57	<a href="#">703-48152-00</a> Knob, free accel	<a href="#">Buy now</a>
58	<a href="#">703-48212-00</a> Rear housing	<a href="#">Buy now</a>
59	<a href="#">703-48213-00</a> Back, panel	<a href="#">Buy now</a>
60	<a href="#">703-48271-00</a> Arm, shift	<a href="#">Buy now</a>


## Remote Control Assy

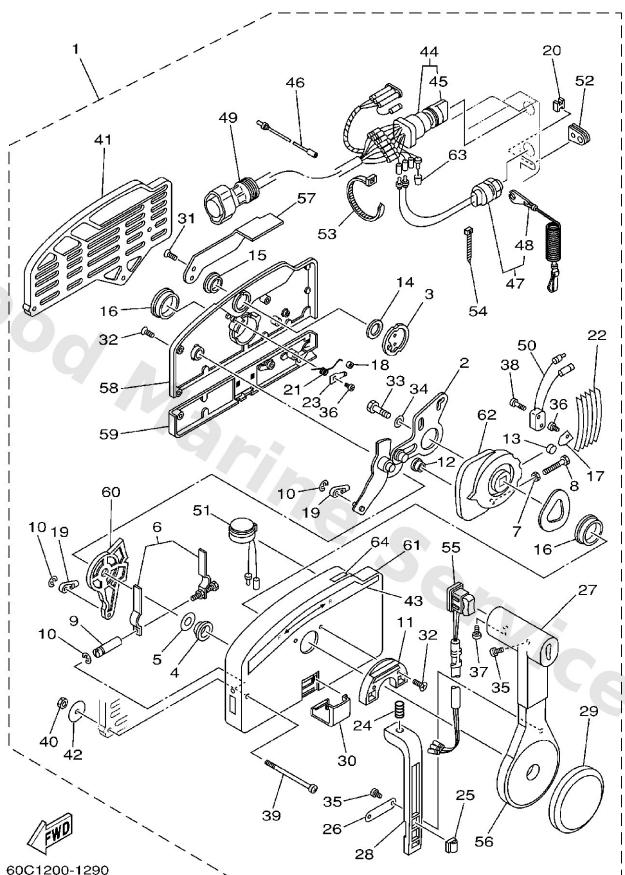

**C3**

Ref	Part	
61	<a href="#">703-48211-01</a> Housing,1	<a href="#">Buy now</a>
62	<a href="#">703-48232-00</a> Drive gear	<a href="#">Buy now</a>
63	<a href="#">703-82542-00</a> Cap	<a href="#">Buy now</a>
64	<a href="#">703-48218-00</a> Graphic	<a href="#">Buy now</a>

## Remote Control Box

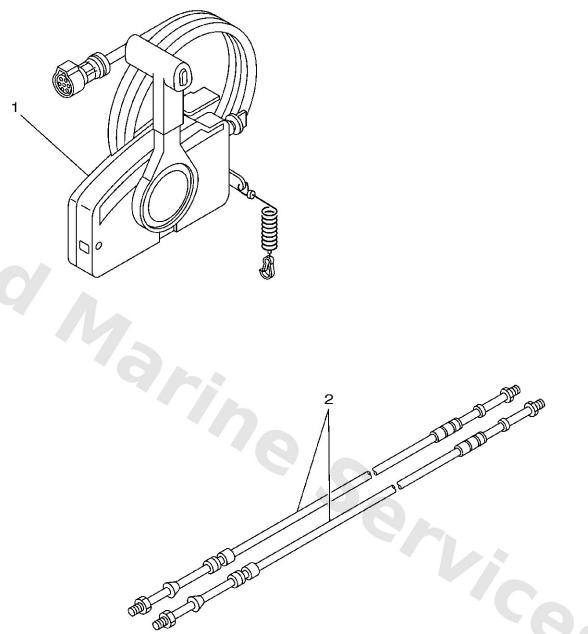


67M0100-8280

**C2**

Ref	Part	
1	<a href="#">703-48205-A4</a> Remote control assembly (10p, ptt) AP WITH PT/T SW.	<a href="#">Buy now</a>
2	<a href="#">701-48320-50</a> Cable, Remote Control L=15F UR	<a href="#">Buy now</a>
2	<a href="#">701-48320-60</a> Cable, Remote Control L=16F UR	<a href="#">Buy now</a>
2	<a href="#">701-48320-80</a> Cable, Remote Control L=17F UR	<a href="#">Buy now</a>
2	<a href="#">701-48350-00</a> Cable, Remote Control L=21F UR	<a href="#">Buy now</a>
2	<a href="#">701-48350-20</a> Cable, Remote Control L=23F UR	<a href="#">Buy now</a>


# Repair Kit 1

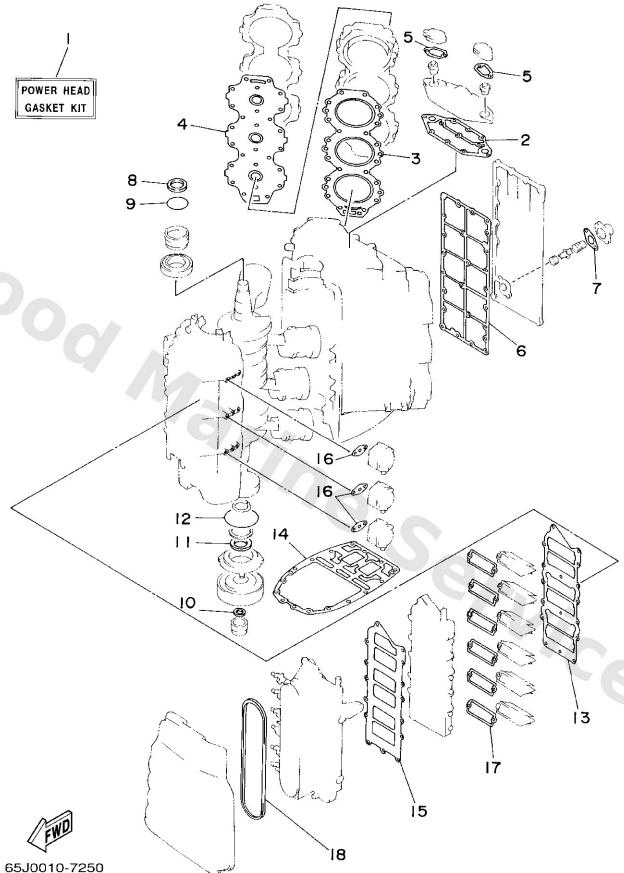

**C7**

Ref	Part	
1	<a href="#">65L-W0001-02</a> Power head gasket kit	<a href="#">Buy now</a>
2	<a href="#">61A-11381-A0</a> Gasket 1	<a href="#">Buy now</a>
3	<a href="#">69L-11181-00</a> Gasket, cylinder head 1	<a href="#">Buy now</a>
4	<a href="#">61A-11193-A1</a> Gasket, head cover 1	<a href="#">Buy now</a>
5	<a href="#">61A-12414-A0</a> Gasket, cover	<a href="#">Buy now</a>
6	<a href="#">61A-41112-A0</a> Gasket, exhaust inner cover	<a href="#">Buy now</a>
7	<a href="#">6G5-11382-A1</a> Gasket 2	<a href="#">Buy now</a>
8	<a href="#">93102-40M38</a> Oil seal(61a)	<a href="#">Buy now</a>
9	<a href="#">93210-54M54</a> O-ring (6g1)	<a href="#">Buy now</a>
10	<a href="#">93104-22M07</a> Oil seal(61a)	<a href="#">Buy now</a>
11	<a href="#">93102-40M36</a> Oil seal	<a href="#">Buy now</a>
12	<a href="#">93210-81MA6</a> O-ring(61a)	<a href="#">Buy now</a>
13	<a href="#">65L-13645-00</a> Gasket, manifold 1	<a href="#">Buy now</a>
14	<a href="#">61A-45113-A0</a> Gasket, upper casing	<a href="#">Buy now</a>
15	<a href="#">65L-13646-00</a> Gasket, manifold 2	<a href="#">Buy now</a>


# Repair Kit 1

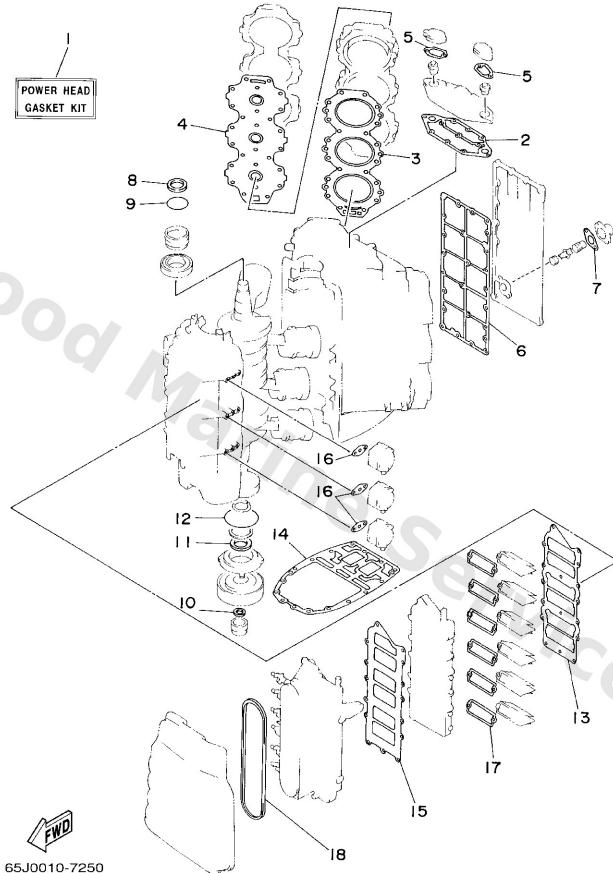

Ref	Part	
16	<a href="#">650-24431-A0</a> Gasket,fuel pump	<a href="#">Buy now</a>
17	<a href="#">61A-13621-A0</a> Gasket, valve seat	<a href="#">Buy now</a>
18	<a href="#">65L-14483-00</a> Gasket	<a href="#">Buy now</a>

**C7**


## Repair Kit 2

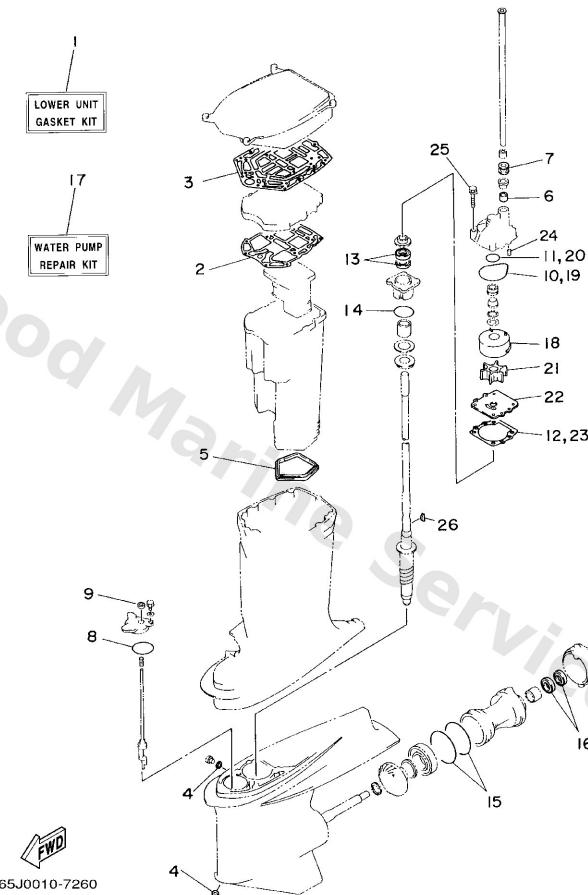

D1

Ref	Part	
1	<a href="#">66K-W0001-20</a> Lower unit gasket kit	<a href="#">Buy now</a>
2	<a href="#">61A-41134-A0</a> Gasket, exhaust manifold	<a href="#">Buy now</a>
3	<a href="#">61A-45114-A0</a> Gasket, upper casing	<a href="#">Buy now</a>
4	<a href="#">90430-08020</a> Gasket	<a href="#">Buy now</a>
5	<a href="#">66K-45123-00</a> Gasket, muffler	<a href="#">Buy now</a>
6	<a href="#">6E5-44365-00</a> Damper, water seal 1	<a href="#">Buy now</a>
7	<a href="#">6E5-44366-00</a> Damper, water seal 2	<a href="#">Buy now</a>
8	<a href="#">93210-64488</a> 93210-64488	<a href="#">Buy now</a>
9	<a href="#">93106-09014</a> Oil seal	<a href="#">Buy now</a>
10	<a href="#">93210-86M38</a> O-ring (6e5)	<a href="#">Buy now</a>
11	<a href="#">93210-37160</a> O-ring (6g8)	<a href="#">Buy now</a>
12	<a href="#">6E5-44315-A0</a> Gasket, water pump	<a href="#">Buy now</a>
13	<a href="#">93101-28M16</a> Oil seal (6e5)	<a href="#">Buy now</a>
14	<a href="#">93210-55M14</a> O-ring (70e)	<a href="#">Buy now</a>
15	<a href="#">93211-04384</a> O-ring (705)	<a href="#">Buy now</a>


## Repair Kit 2

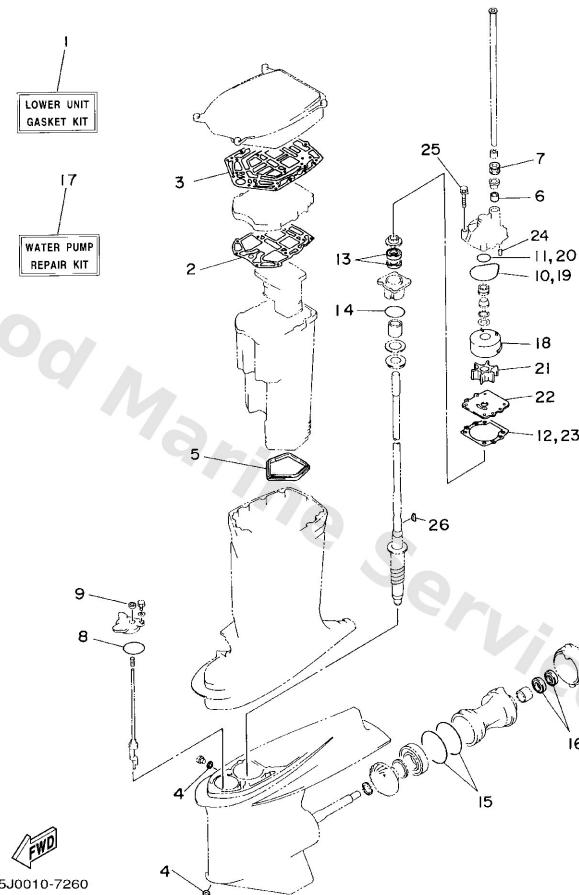

D1

Ref	Part	
16	<a href="#">93101-30M17</a> Oil seal (6e5)	<a href="#">Buy now</a>
17	<a href="#">61A-W0078-A3</a> Water pump repair kit	<a href="#">Buy now</a>
18	<a href="#">61A-44322-02</a> Insert, cartridge	<a href="#">Buy now</a>
21	<a href="#">6E5-44352-01</a> Impeller	<a href="#">Buy now</a>
22	<a href="#">6G5-44323-00</a> Outer plate, cartridge	<a href="#">Buy now</a>
24	<a href="#">93606-12019</a> Pin, dowel (614)	<a href="#">Buy now</a>
25	<a href="#">90119-08M14</a> Bolt, with washer	<a href="#">Buy now</a>
26	<a href="#">90280-04M05</a> Key, woodruff (6e5)	<a href="#">Buy now</a>

## Starting Motor

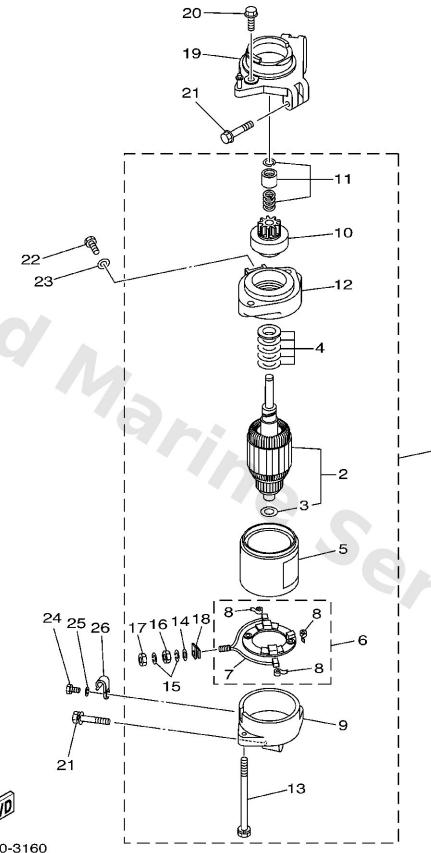


66X2100-3160

E4

Ref	Part	
1	<a href="#">69L-81800-00</a> Starting motor assembly	<a href="#">Buy now</a>
2	<a href="#">61A-81850-01</a> Armature assembly	<a href="#">Buy now</a>
3	<a href="#">61A-81824-00</a> Washer 2	<a href="#">Buy now</a>
4	<a href="#">61A-81809-00</a> Washer kit	<a href="#">Buy now</a>
5	<a href="#">6K7-81810-00</a> Stator assembly	<a href="#">Buy now</a>
6	<a href="#">61A-81840-00</a> Brush holder assembly	<a href="#">Buy now</a>
7	<a href="#">6K7-81801-10</a> Brush Set	<a href="#">Buy now</a>
8	<a href="#">6E5-81813-10</a> Spring Brush	<a href="#">Buy now</a>
9	<a href="#">61A-81820-00</a> Rear Bracket assembly	<a href="#">Buy now</a>
10	<a href="#">61A-81807-00</a> Gear assembly Starting Motor	<a href="#">Buy now</a>
11	<a href="#">61H-81857-00</a> Retainer	<a href="#">Buy now</a>
12	<a href="#">61A-81830-00</a> Front Bracket assembly	<a href="#">Buy now</a>
13	<a href="#">6K7-81826-10</a> Bolt	<a href="#">Buy now</a>
14	<a href="#">6E5-8182E-10</a> Washer, spring	<a href="#">Buy now</a>
15	<a href="#">6E5-8182F-10</a> Washer,plain	<a href="#">Buy now</a>


# Starting Motor

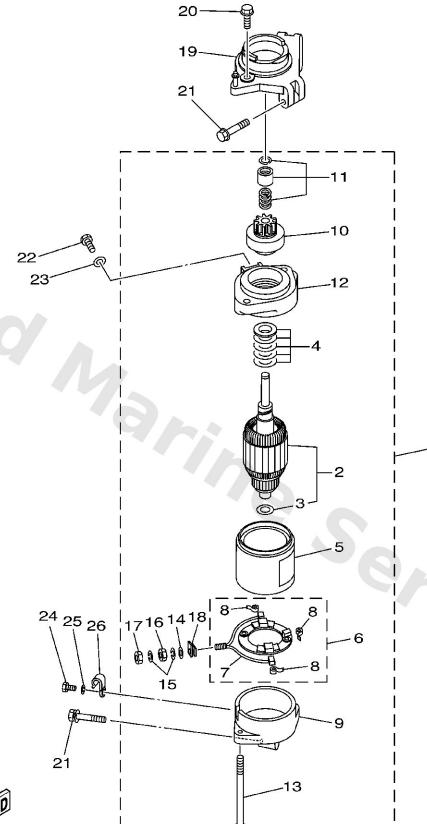

Ref	Part	
16	<a href="#">6E5-8182A-10</a> Nut	<a href="#">Buy now</a>
17	<a href="#">6E5-8182K-10</a> Nut	<a href="#">Buy now</a>
18	<a href="#">6K7-8182G-10</a> Bush, terminal	<a href="#">Buy now</a>
19	<a href="#">61A-81822-00-94</a> Bracket, starting motor	<a href="#">Buy now</a>
20	<a href="#">90119-08M76</a> Bolt, with washer(6e5)	<a href="#">Buy now</a>
21	<a href="#">90119-08M77</a> Bolt, with washer(6e5)	<a href="#">Buy now</a>
22	<a href="#">97095-08016</a> Bolt, hexagon deep recess	<a href="#">Buy now</a>
23	<a href="#">92995-08600</a> Washer, plain (663)	<a href="#">Buy now</a>
24	<a href="#">97095-06012</a> Bolt(gh1)	<a href="#">Buy now</a>
25	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
26	<a href="#">90465-06M86</a> Clamp	<a href="#">Buy now</a>

E4

# Steering Guide

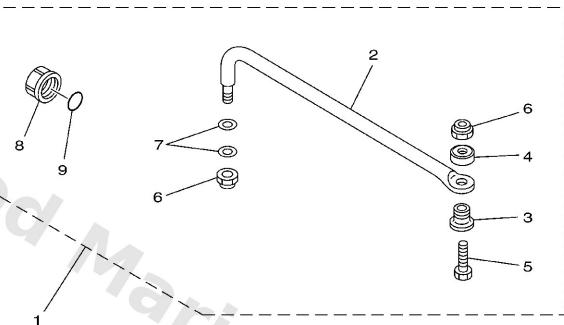


67H0100-9290

**C1**

Ref	Part	
1	<a href="#">6E5-61350-02</a> Steering guide attachment kit AP	<a href="#">Buy now</a>
2	<a href="#">6E5-61351-01</a> Rod, steering link	<a href="#">Buy now</a>
3	<a href="#">90387-10M61</a> Collar (6e5)	<a href="#">Buy now</a>
4	<a href="#">90560-12M01</a> Spacer (6e5)	<a href="#">Buy now</a>
5	<a href="#">6E5-61355-00</a> Bolt	<a href="#">Buy now</a>
6	<a href="#">90185-09M01</a> Nut, nylon (663)	<a href="#">Buy now</a>
7	<a href="#">90201-10M20</a> Washer, plate (663)	<a href="#">Buy now</a>
8	<a href="#">6E5-43145-01</a> Cap, clamp bracket	<a href="#">Buy now</a>
9	<a href="#">93210-16275</a> O-ring	<a href="#">Buy now</a>


# Top Cowling

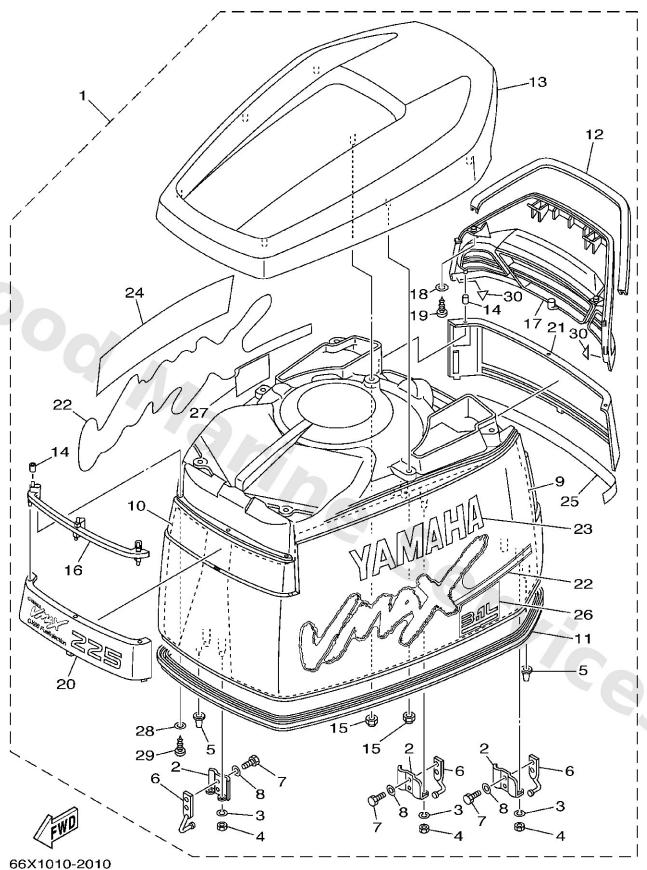

A4

Ref	Part	
2	<a href="#">6R3-42647-00</a> Holder, clamp band	<a href="#">Buy now</a>
3	<a href="#">92990-06100</a> Washer(6a1)	<a href="#">Buy now</a>
4	<a href="#">95380-06600</a> Nut(661)	<a href="#">Buy now</a>
5	<a href="#">6R3-42662-00</a> Damper	<a href="#">Buy now</a>
6	<a href="#">6R3-42814-00</a> Hook, clamp	<a href="#">Buy now</a>
7	<a href="#">97095-06012</a> Bolt(gh1)	<a href="#">Buy now</a>
8	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
9	<a href="#">61A-42619-02</a> Damper, Form	<a href="#">Buy now</a>
10	<a href="#">61A-42627-02</a> Damper Form	<a href="#">Buy now</a>
11	<a href="#">61A-42615-01</a> Seal	<a href="#">Buy now</a>
12	<a href="#">66K-42662-00</a> Damper	<a href="#">Buy now</a>
14	<a href="#">90385-04M05</a> Bush(6r2)	<a href="#">Buy now</a>
15	<a href="#">90179-06M24</a> Nut(6j8)	<a href="#">Buy now</a>
16	<a href="#">61A-42626-00</a> Louver, 1	<a href="#">Buy now</a>
18	<a href="#">92990-05200</a> Ybs66-5 washer, plain	<a href="#">Buy now</a>


# Top Cowling

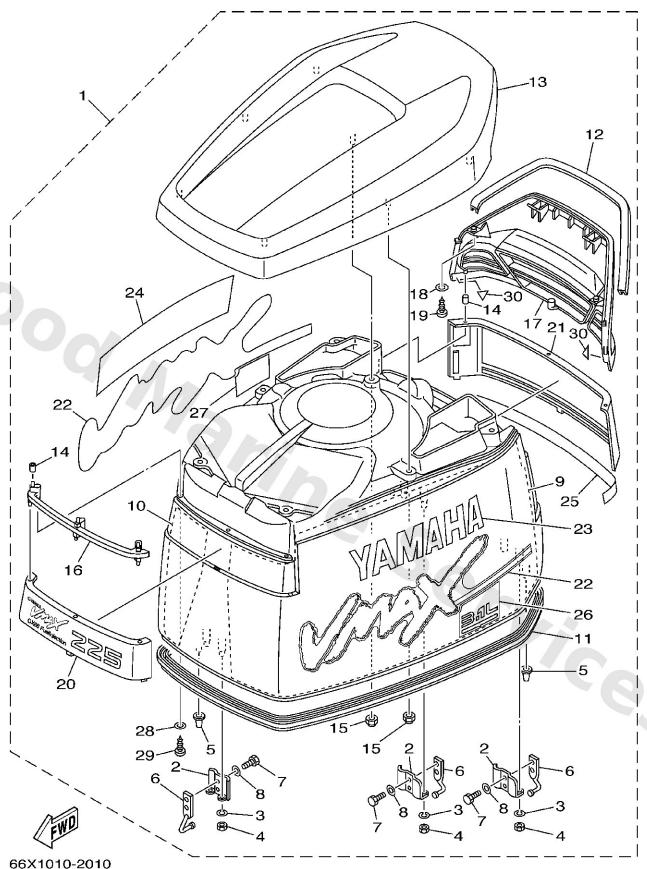

Ref	Part	
19	<a href="#">97780-50616</a> Screw, pan head tapping (ak5)	<a href="#">Buy now</a>
20	<a href="#">66K-42686-P0</a> Emblem, Front	<a href="#">Buy now</a>
21	<a href="#">66K-42687-N0</a> Emblem, Rear	<a href="#">Buy now</a>
22	<a href="#">66K-W0070-N0</a> Graphic set	<a href="#">Buy now</a>
23	<a href="#">66K-42681-N0</a> Mark, cowling	<a href="#">Buy now</a>
24	<a href="#">66K-42682-N0</a> Mark Cowling	<a href="#">Buy now</a>
25	<a href="#">66K-4267A-N0</a> Graphic, Rear 2	<a href="#">Buy now</a>
26	<a href="#">66K-42683-N1</a> Mark, Cowling	<a href="#">Buy now</a>
27	<a href="#">66K-42684-N1</a> Mark, Cowling	<a href="#">Buy now</a>
28	<a href="#">92990-04600</a> Washer, plain (646)	<a href="#">Buy now</a>
29	<a href="#">97780-40520</a> Ybs83-420 screw,panh,tapping	<a href="#">Buy now</a>
30	<a href="#">66K-42628-00</a> Seal	<a href="#">Buy now</a>

A4

# Upper Casing

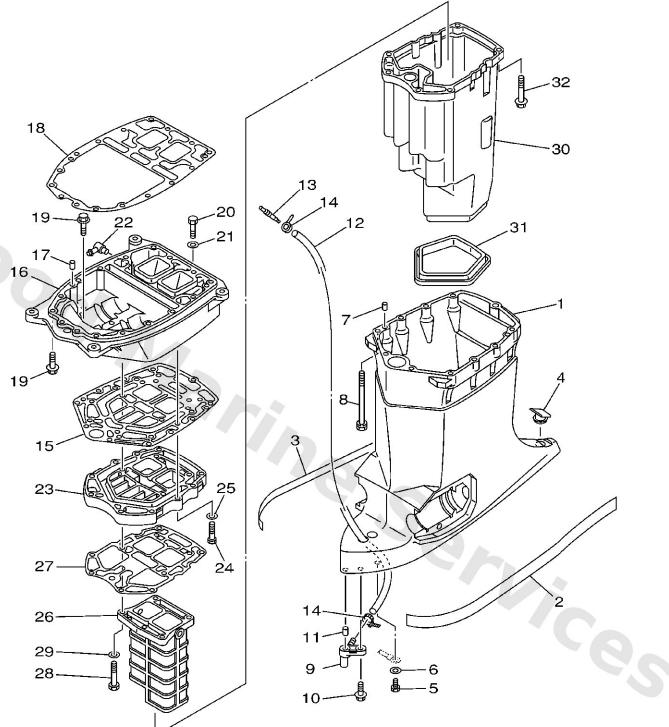


66X0010-9231

**B1**

Ref	Part	
1	<a href="#">66K-45111-00-8D</a> Casing, Upper	<a href="#">Buy now</a>
2	<a href="#">6N9-42791-40</a> Mark 1	<a href="#">Buy now</a>
3	<a href="#">6N9-42792-40</a> Mark 2	<a href="#">Buy now</a>
4	<a href="#">61A-45155-00</a> Cap	<a href="#">Buy now</a>
5	<a href="#">97095-06010</a> Bolt	<a href="#">Buy now</a>
6	<a href="#">92995-06600</a> Washer, plain (646)	<a href="#">Buy now</a>
7	<a href="#">93608-12M05</a> Pin, dowel b (6e5)	<a href="#">Buy now</a>
8	<a href="#">90119-08M78</a> Bolt, with washer	<a href="#">Buy now</a>
9	<a href="#">66K-45378-00</a> Nipple, hose	<a href="#">Buy now</a>
10	<a href="#">90119-06M17</a> Bolt, with washer	<a href="#">Buy now</a>
11	<a href="#">93606-12019</a> Pin, dowel (614)	<a href="#">Buy now</a>
12	<a href="#">90445-07MF0</a> Hose (l1160)	<a href="#">Buy now</a>
13	<a href="#">6E5-83558-00</a> End, nipple	<a href="#">Buy now</a>
14	<a href="#">90465-11M10</a> Clamp	<a href="#">Buy now</a>
15	<a href="#">61A-45114-A0</a> Gasket, upper casing	<a href="#">Buy now</a>

# Upper Casing

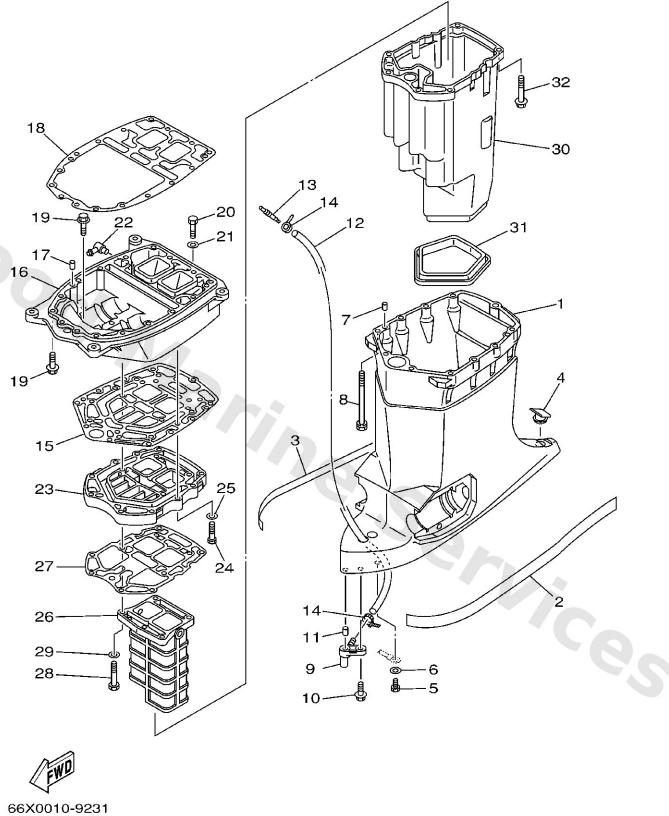

**B1**

Ref	Part	
16	<a href="#">61A-41137-13-94</a> Guide, exhaust <b>FLUSHING KIT</b>	<a href="#">Buy now</a>
18	<a href="#">61A-45113-A0</a> Gasket, upper casing	<a href="#">Buy now</a>
19	<a href="#">90119-08M79</a> Bolt, hexagon (fj1)	<a href="#">Buy now</a>
20	<a href="#">97095-08035</a> Bolt(70w)	<a href="#">Buy now</a>
21	<a href="#">92995-08600</a> Washer, plain (663)	<a href="#">Buy now</a>
22	<a href="#">6H1-11372-00</a> Nipple, hose <b>FLUSHING KIT</b>	<a href="#">Buy now</a>
23	<a href="#">61A-41131-00-5B</a> Manifold, ext. 1	<a href="#">Buy now</a>
26	<a href="#">61A-41132-01-5B</a> Manifold, exhaust	<a href="#">Buy now</a>
27	<a href="#">61A-41134-A0</a> Gasket, exhaust manifold	<a href="#">Buy now</a>
28	<a href="#">97095-08050</a> Bolt (62k)	<a href="#">Buy now</a>
30	<a href="#">66K-14711-00-5B</a> Muffler 1	<a href="#">Buy now</a>
31	<a href="#">66K-45123-00</a> Gasket, muffler	<a href="#">Buy now</a>
32	<a href="#">90119-08M74</a> Bolt, with washer(61a)	<a href="#">Buy now</a>

# Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.