



Yamaha 5MHB 2003

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539

 
Authorised Yamaha Dealers



Contents

BOTTOM COWLING	3
CONTROL	7
CYLINDER. CRANKCASE	10
ELECTRICAL	14
GENERATOR	15
INTAKE	17
LOWER CASING. DRIVE	21
REPAIR KIT	26
STARTER	30
TOP COWLING	33
UPPER CASING . BRACKET	34


Bottom Cowling

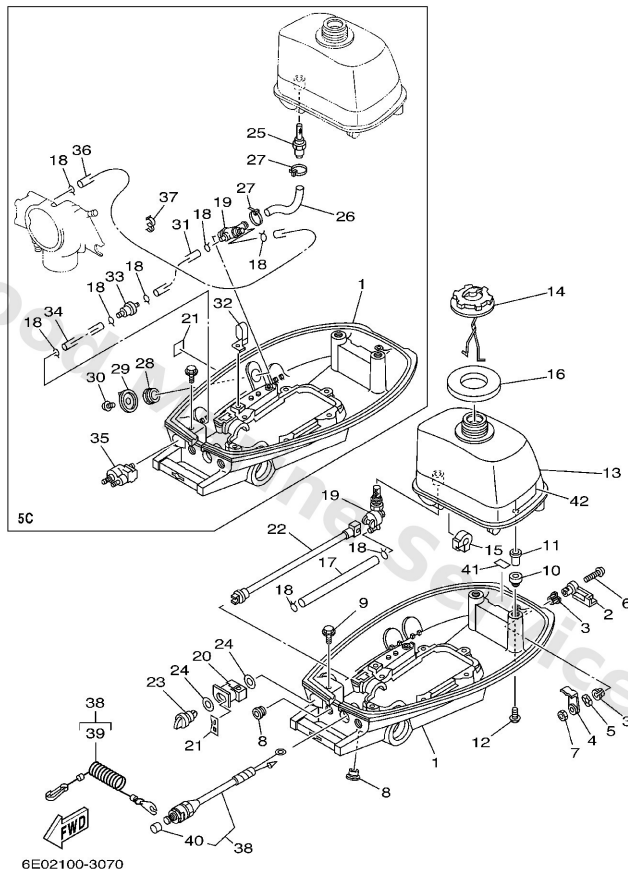

B7

Ref	Part	
1	6E0-42711-05-4D Cowling, bottom	Buy now
1	6E0-42711-10-4D Cowling bottom	Buy now
2	6E0-42815-00-4D Lever, clamp	Buy now
3	90386-12069 Bush(666)	Buy now
4	6E0-42816-00 Lever, clamp	Buy now
5	90206-12052 Washer, wave (666)	Buy now
6	97885-06030 Screw, pan head(6e0)	Buy now
7	95380-06700 Nut	Buy now
8	90480-14M14 Grommet (6e0)	Buy now
9	95895-06020 Bolt, flange(jk3)	Buy now
10	6E0-24182-00 Damper, locating 2	Buy now
10	6E3-24182-00 Damper, locating 2	Buy now
11	6E0-42542-00 Pipe 1	Buy now
12	95895-06025 Bolt, flange deep recess	Buy now
13	6E0-24110-01-4D Fuel Tank Comp	Buy now

 
Bottom Cowling

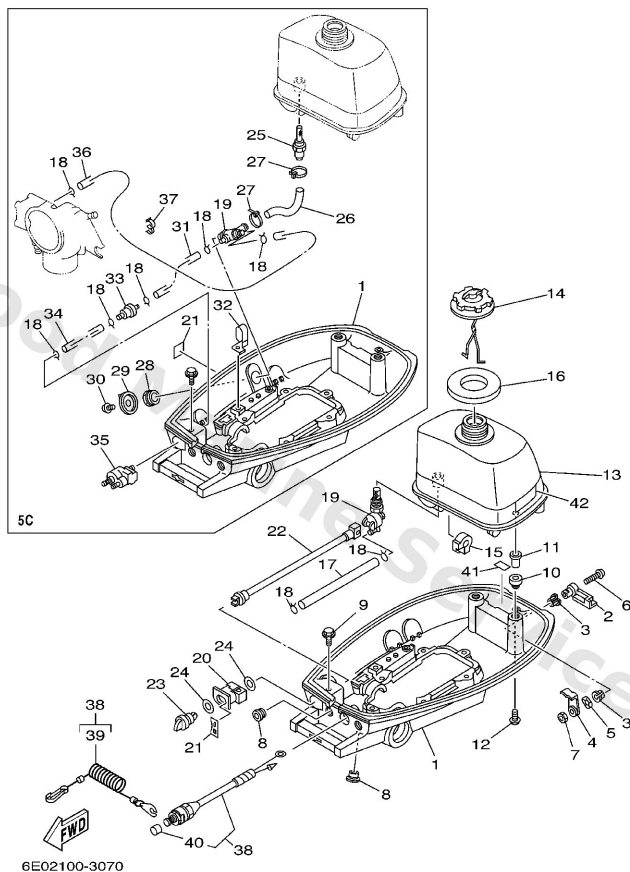

B7

Ref	Part	
14	6E0-24610-02 Cap assembly	Buy now
15	6E0-24181-00 Damper, locating 1	Buy now
16	6E0-24641-00 Gasket, cap	Buy now
16	6E3-24641-00 Gasket, cap	Buy now
17	90445-09M37 Hose (11500)	Buy now
18	90467-08004 Clip, pipe 6162435600	Buy now
19	6E0-24500-00 Fuel cock assembly 1	Buy now
19	6E0-24500-10 Fuel cock assembly 1	Buy now
20	6E0-24571-00 Bushing	Buy now
21	6E0-24591-00 Graphic	Buy now
21	6E0-24591-10 Emblem, fuel cock	Buy now
22	6E0-24572-00 Shaft, fuel change	Buy now
23	6E0-24575-01 Lever, fuel change	Buy now
24	90202-12M17 Washer, plate (6e0)	Buy now
25	6E0-24335-00 Pipe, suction 1	Buy now

 
Bottom Cowling

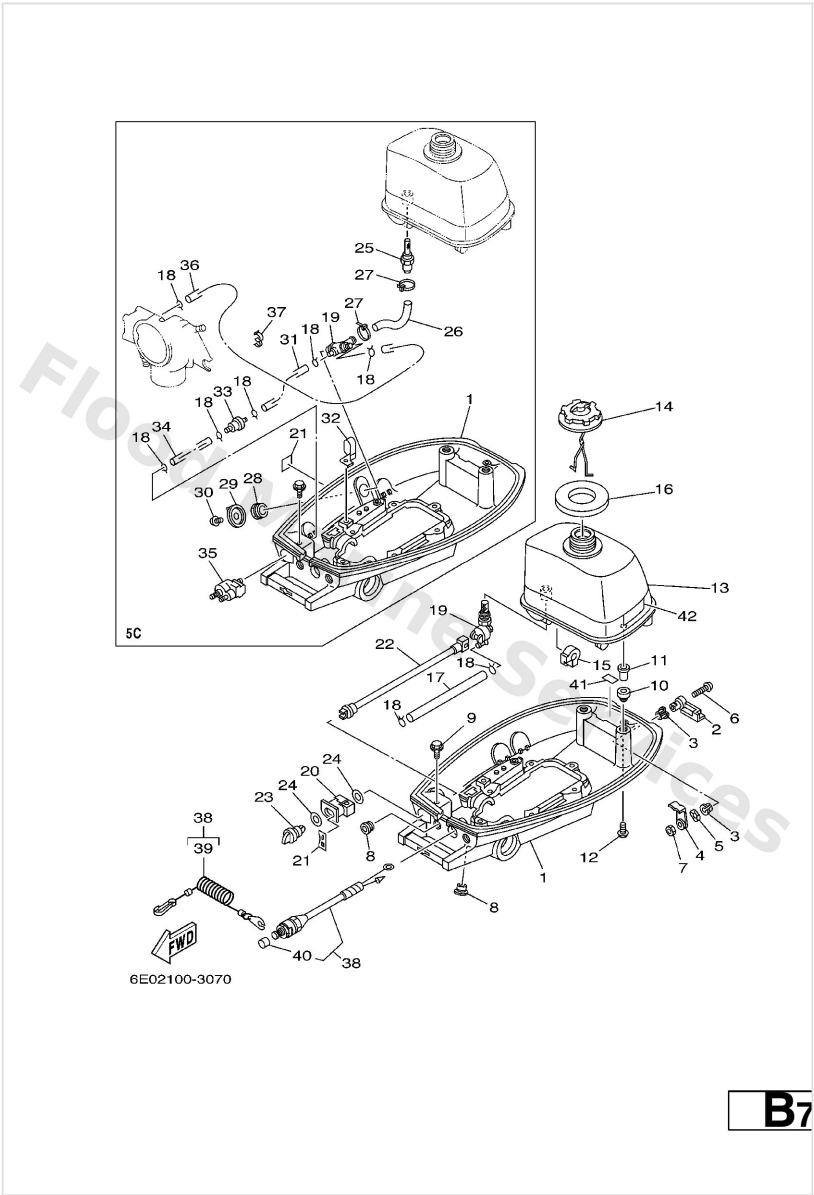

B7

Ref	Part	
26	6E0-24311-00 Pipe, fuel 1	Buy now
27	90465-13M11 Clamp (6e5)	Buy now
28	90170-16M35 Nut(6e0)	Buy now
29	6J1-24524-00 Lever, cock	Buy now
30	90159-04M24 Screw, pan head (e56)	Buy now
31	90445-09M27 Hose (l180)	Buy now
32	90465-08M62 Clamp(6e0)	Buy now
33	646-24251-02 Strainer 1	Buy now
34	90445-09057 Hose (l180)	Buy now
35	6G1-24304-02 Fuel pipe joint comp. 1	Buy now
36	6E0-24312-00 Pipe 2	Buy now
37	90464-09M21 Clamp(6j8)	Buy now
38	6E0-82575-00 Engine stop switch assembly	Buy now
39	682-82556-00 Lanyard, stop switch	Buy now
40	689-8257Y-00 Cap	Buy now

 
Bottom Cowling

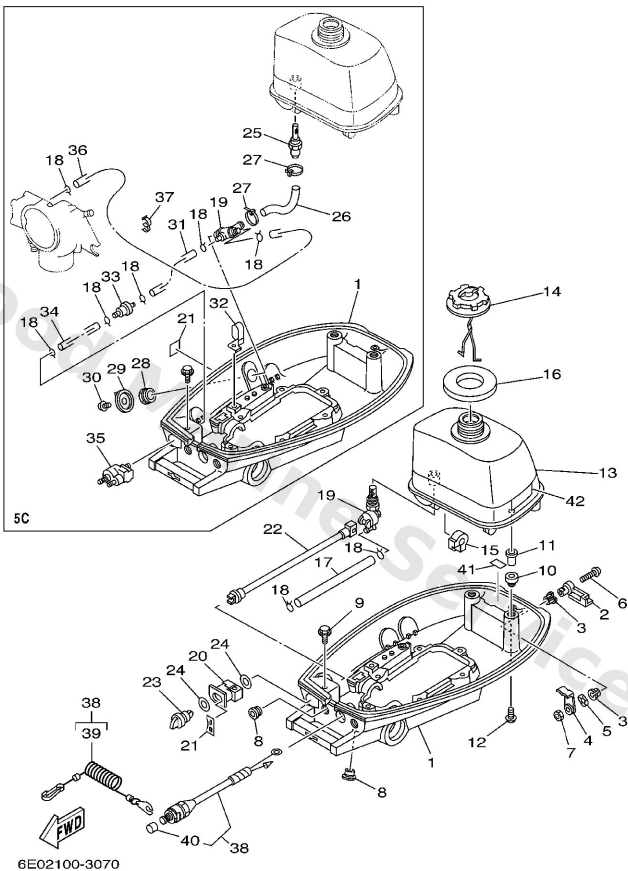

B7

Ref	Part	
41	664-42791-00 Mark 1 FOR USA	Buy now
41	664-42791-10 Mark 1 FOR OCEANIA	Buy now
42	6A1-83625-41 Mark 5	Buy now

 Control

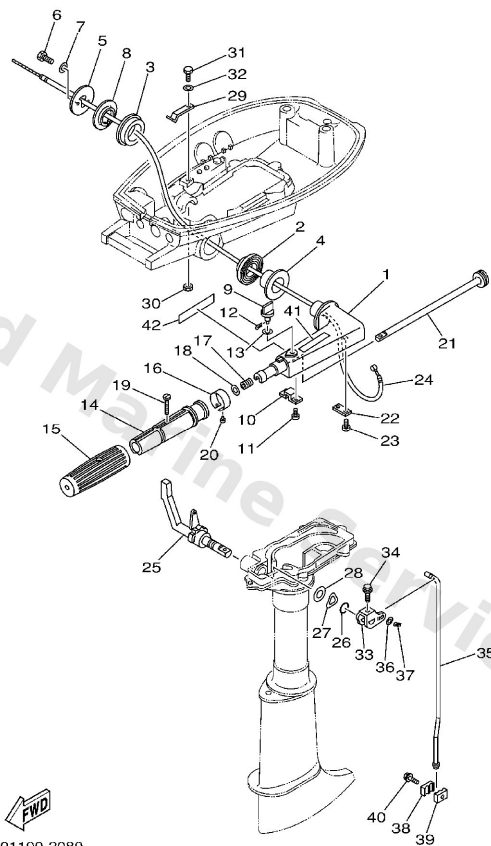


6E01100-2080

C2

Ref	Part	
1	6E0-42111-02-4D Handle, steering	Buy now
2	6E0-42129-02 Bushing, rubber	Buy now
3	6E4-42129-00 Bushing, rubber	Buy now
4	90386-26M30 Bushing (6e0)	Buy now
5	6E0-42131-02-94 Cover, handle steering	Buy now
6	97013-05020 Bolt, hexagon	Buy now
7	92903-05600 Washer, plain (646)	Buy now
8	90386-26M33 Bushing (6e0)	Buy now
9	6E0-42125-00 Bolt, friction adjust	Buy now
10	6E0-42134-02 Cover, throttle lever	Buy now
11	97885-05012 Screw,pan head (646)	Buy now
12	91490-12010 Pin, cotter (6g8)	Buy now
13	90202-07M22 Washer (6e0)	Buy now
14	6E0-42119-00 Grip, steering handle	Buy now
15	6E0-42177-00 Rubber, handle	Buy now

 Control

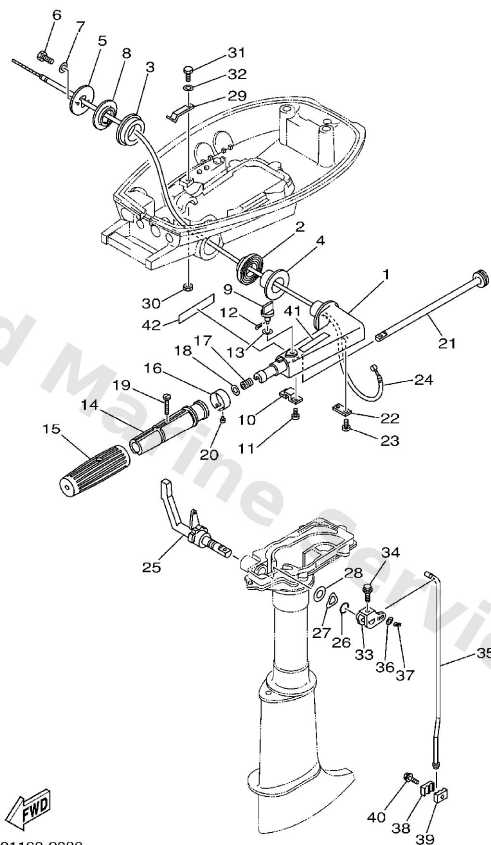


6E01100-2080

C2


Ref	Part	
16	6E0-42137-10 Indicator, throttle	Buy now
17	90501-23215 Spring (655)	Buy now
18	90201-10119 Washer, plain(735)	Buy now
19	90149-05M13 Screw, countersunk	Buy now
20	90269-02M09 Rivet(615)	Buy now
21	6E0-42138-01 Lever, throttle	Buy now
22	6E0-42159-02 Stay	Buy now
24	6E0-26301-01 Throttle wire assembly	Buy now
25	6E4-44111-72-4D Handle, gear shift	Buy now
26	93210-12327 O-ring(3ld)	Buy now
27	90206-16M06 Washer, wave (6e0)	Buy now
28	90202-16061 Washer, plate(663)	Buy now
29	6E0-44116-00 Spring	Buy now
30	95380-06700 Nut	Buy now
31	97095-06012 Bolt(gh1)	Buy now

 Control

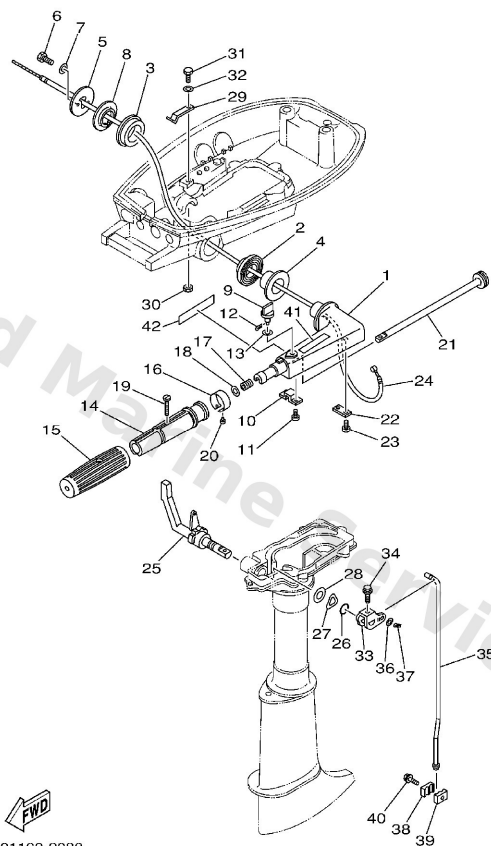

Ref	Part	
32	92995-06600 Washer, plain (646)	Buy now
33	6E0-44121-00 Lever, shift rod 1	Buy now
34	95895-06025 Bolt, flange deep recess	Buy now
35	6E0-44143-00 Rod, shift 1 S	Buy now
35	6E0-44143-10 Rod, shift 1 L	Buy now
36	92990-05600 Washer, plain (646)	Buy now
37	91490-16010 Pin, cotter	Buy now
38	6E0-44145-00 Connector, shift rod 1	Buy now
39	6E0-44146-00 Connector, shift rod 2	Buy now
40	95895-06020 Bolt, flange(jk3)	Buy now
41	6E0-83627-41 Label, caution 7	Buy now
42	6A1-2415A-41 Label, caution	Buy now

 
Cylinder. Crankcase

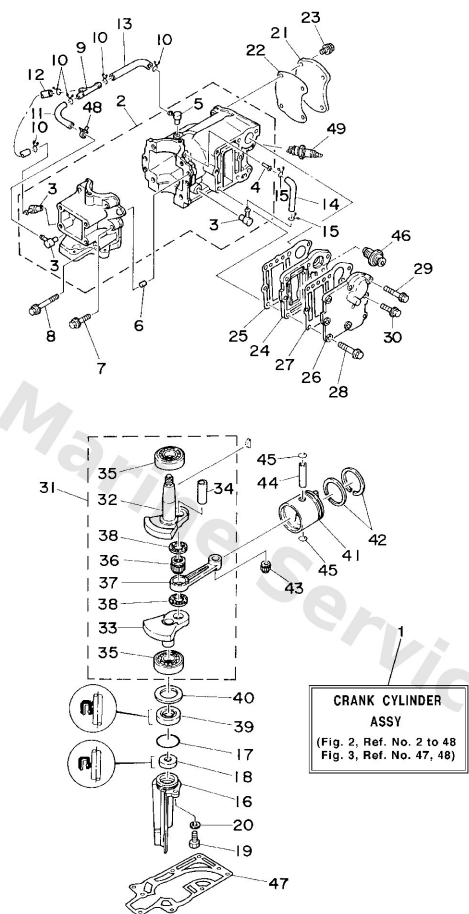

A5

Ref	Part	
2	6E0-15100-01-1S Crankcase assembly	Buy now
2	6E3-15100-02-1S Crankcase assembly	Buy now
3	650-11370-01 Check valve assembly	Buy now
4	624-14485-00 Pipe, joint	Buy now
5	6E5-11372-01 Nipple, hose	Buy now
6	93606-12019 Pin, dowel (614)	Buy now
7	90105-06M16 Bolt (6e0)	Buy now
8	90105-06M17 Bolt (6e0)	Buy now
9	6E0-24378-00 Pipe, joint	Buy now
10	90467-06016 Clip (655)	Buy now
11	90445-07M00 Hose (I200)	Buy now
12	90445-07M28 Hose (I200)	Buy now
13	90445-07M32 Hose (I200)	Buy now
16	6E0-15396-03-5B Housing, oil seal	Buy now
17	93210-31MJ5 O-ring	Buy now

 
Cylinder. Crankcase

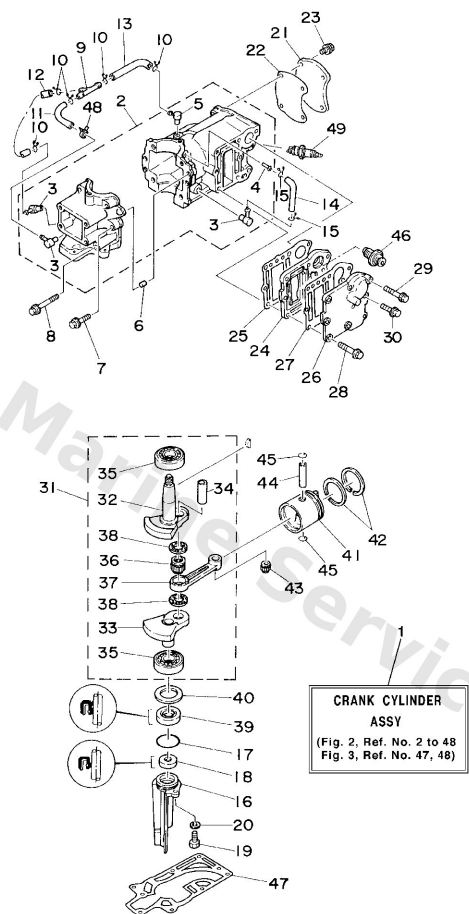

A5


Ref	Part	
18	93101-10M25 Oil seal(6e0)	Buy now
19	97095-06016 Bolt, hexagon deep recess	Buy now
20	92995-06600 Washer, plain (646)	Buy now
21	6E0-11191-01-1S Cover, cylinder head 1	Buy now
21	6E3-11191-01-1S Cover, cylinder head 1	Buy now
22	6E0-11193-A1 Gasket,head cover	Buy now
22	6E3-11193-A1 Gasket,head cover	Buy now
23	90105-06039 Bolt, flange	Buy now
24	6E0-41111-01-1S Inner cover, exhaust	Buy now
24	6E3-41111-01-1S Inner cover, exhaust	Buy now
25	6E0-41112-A1 Gasket,inner cover exhaust	Buy now
25	6E3-41112-A1 Gasket,inner cover exhaust	Buy now
26	6E0-41113-01-1S Outer cover, exhaust	Buy now
26	6E3-41113-01-1S Outer cover, exhaust	Buy now
27	6E0-41114-A1 Gasket,outer cover exhaust	Buy now

 Cylinder. Crankcase

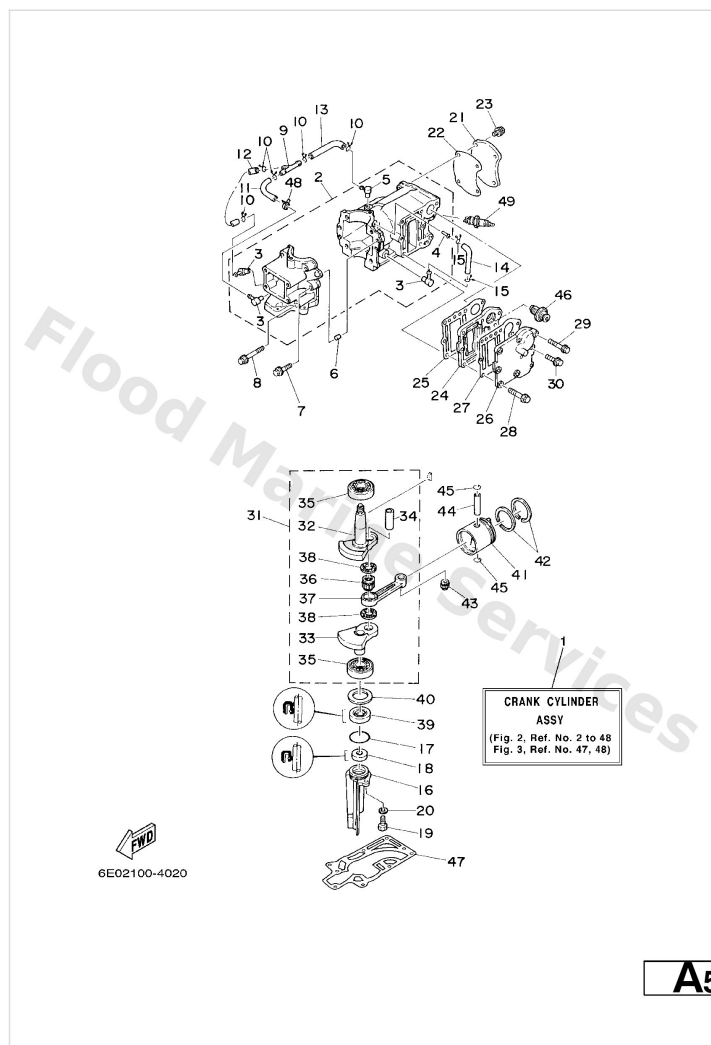

Ref	Part	
27	6E3-41114-A1 Gasket, outer cover exhaust	Buy now
28	90105-06037 Bolt, flange	Buy now
29	90105-06035 Bolt, flange	Buy now
31	6E0-11400-00 Crank assembly	Buy now
31	6E3-11400-00 Crank ass'y	Buy now
32	6E0-11412-00 Crank 1 FOR OCEANIA	Buy now
32	6E3-11412-00 Crank 1 FOR OCEANIA	Buy now
33	6E0-11422-00 Crank 2 FOR OCEANIA	Buy now
33	6E3-11422-00 Crank 2 FOR OCEANIA	Buy now
34	6G1-11681-00 Pin, crank FOR OCEANIA	Buy now
35	93306-204U0 Bearing(6e0)	Buy now
36	93310-418V1 Bearing (6e0) FOR OCEANIA	Buy now
37	6E0-11651-01 Rod, connecting FOR OCEANIA	Buy now
38	90209-18112 Washer 132116850000 FOR OCEANIA	Buy now
39	93101-20M29 Oil seal(6j1)	Buy now

 
Cylinder. Crankcase

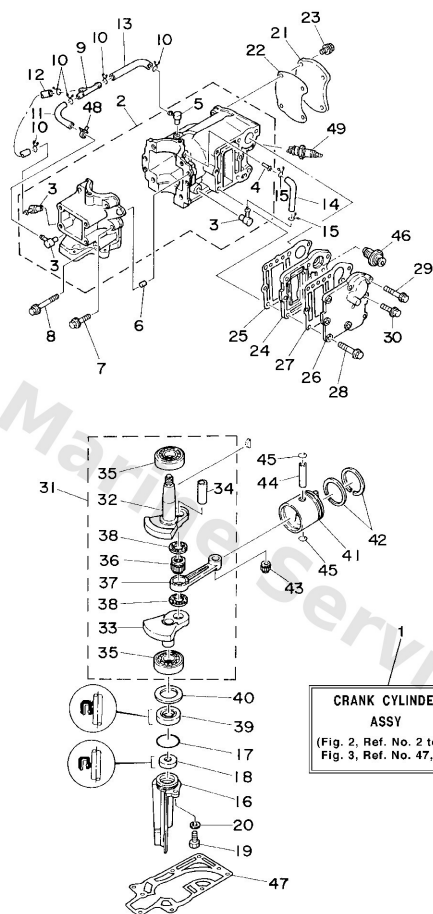

A5

Ref	Part	
40	90201-32M48 Shim (t:0.90mm)	Buy now
41	6E0-11631-00-98 Piston	Buy now
41	6E3-11631-00-98 Piston	Buy now
42	6G1-11610-00 Piston ring set (std)	Buy now
42	6J1-11610-00 Piston ring set (std)	Buy now
43	93310-112V0 Bearing (6e0)	Buy now
44	6G1-11633-00 Pin, piston	Buy now
45	93450-13022 Circlip 132116340000	Buy now
46	6E5-12411-01 Thermostat	Buy now
47	6E0-45113-A1 Gasket,upper casing	Buy now
48	90468-07M02 Clip (6e5)	Buy now
49	94702-00040 Plug, spark (b7hs) FOR USA	Buy now
49	94702-00272 Plug, spark (br7hs) FOR OCEANIA	Buy now

 Electrical

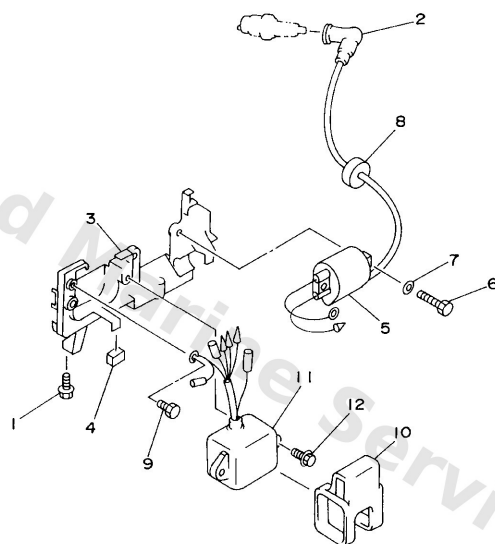


6E00010-6060

B6


Ref	Part	
1	95895-06016 Bolt, flange deep recess	Buy now
2	663-82370-01 Plug cap assembly FOR USA	Buy now
2	6E3-82370-21 Plug cap assembly FOR OCEANIA	Buy now
2	6G1-82370-21 Plug cap assembly FOR OCEANIA	Buy now
3	6E0-82316-01-94 Bracket, ignition coil	Buy now
4	6E0-82317-00 Damper	Buy now
5	6E0-85570-00 Ignition coil assembly	Buy now
6	97095-06016 Bolt, hexagon deep recess	Buy now
7	92995-06600 Washer, plain (646)	Buy now
8	90480-25161 Grommet(656)	Buy now
9	97080-06010 Bolt	Buy now
10	6E0-85548-00 Holder, wire harness	Buy now
11	6E0-85540-71 C.d.i. unit assembly	Buy now
12	95895-06020 Bolt, flange(jk3)	Buy now

 Generator

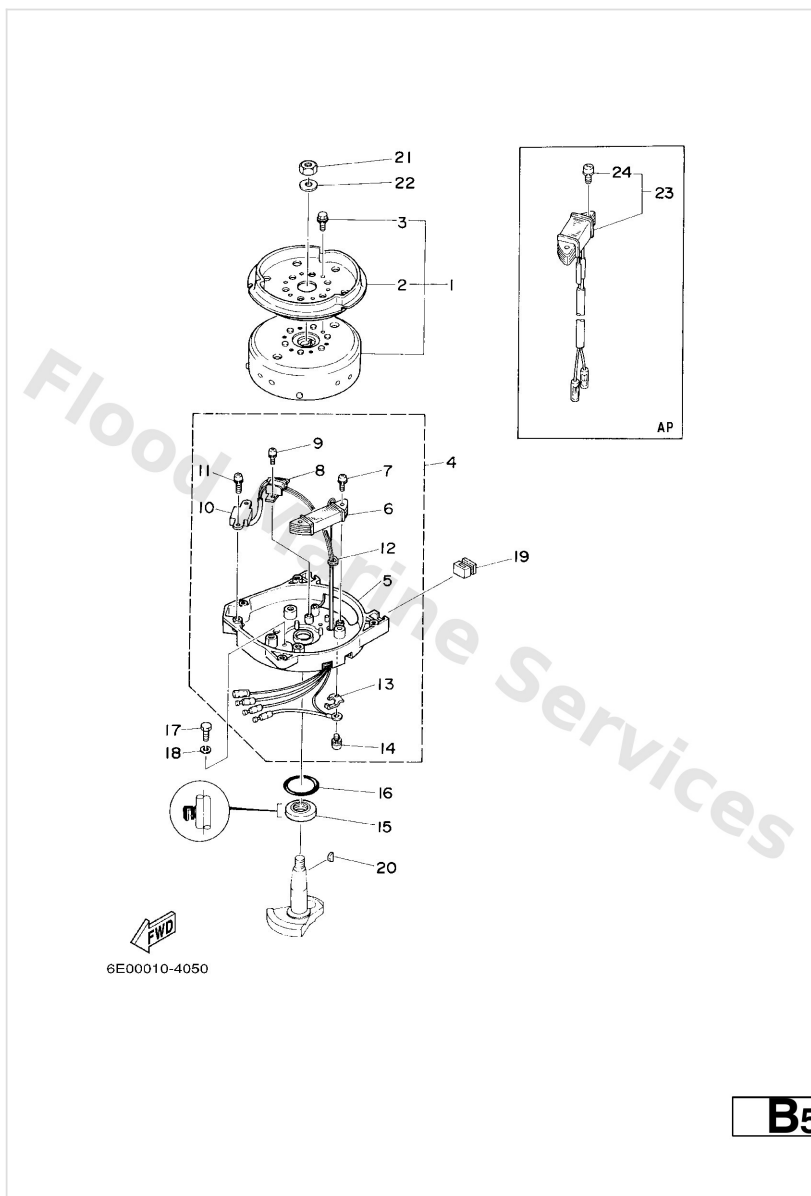


Ref	Part	
1	6E0-85550-71 Rotor assembly	Buy now
2	6E0-15723-00-94 Pulley, Starter	Buy now
3	90105-06M14 Bolt (6e0)	Buy now
4	6E0-85560-70 Base assembly	Buy now
5	6E0-15359-00-94 Housing, oil seal	Buy now
6	6E0-85520-70 Charge coil ass'y	Buy now
7	90159-05038 Screw, With Washer	Buy now
8	6E0-85595-70 Coil pulser assembly 1	Buy now
9	90159-04036 Screw, pan head(6g8)	Buy now
10	6E0-85592-70 Pulser coil assembly 2	Buy now
11	90159-05037 Screw,w/washer	Buy now
12	6E0-81336-70 Grommet	Buy now
13	6E0-81328-70 Clamp	Buy now
14	90159-04035 Screw panhead (695)	Buy now
15	93102-20M25 Oil seal (6e0)	Buy now

 Generator

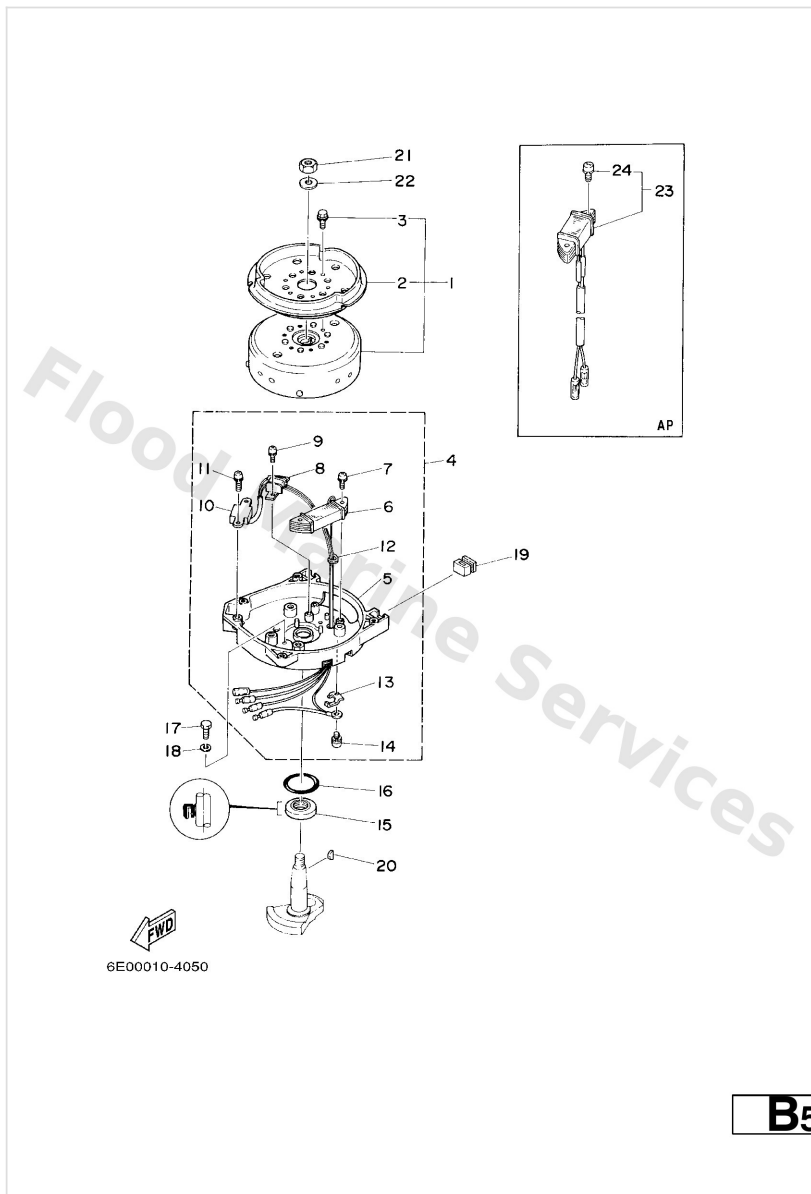

Ref	Part	
16	93210-42159 O-ring (647)	Buy now
17	97095-06016 Bolt, hexagon deep recess	Buy now
18	92995-06100 Washer(6a1)	Buy now
19	6E0-24183-00 Damper, locating 3	Buy now
20	90280-04M06 Key, woodruff(6a1)	Buy now
21	90170-10113 Nut, crank shaft (650)	Buy now
22	90201-10126 Washer, plate (26h)	Buy now
23	6E0-81303-40 Lighting coil assembly AP 40W	Buy now
23	6E0-81303-80 Lighting coil assembly AP 60W	Buy now
24	90159-05040 Screw, pan head(4my)	Buy now

 
Intake

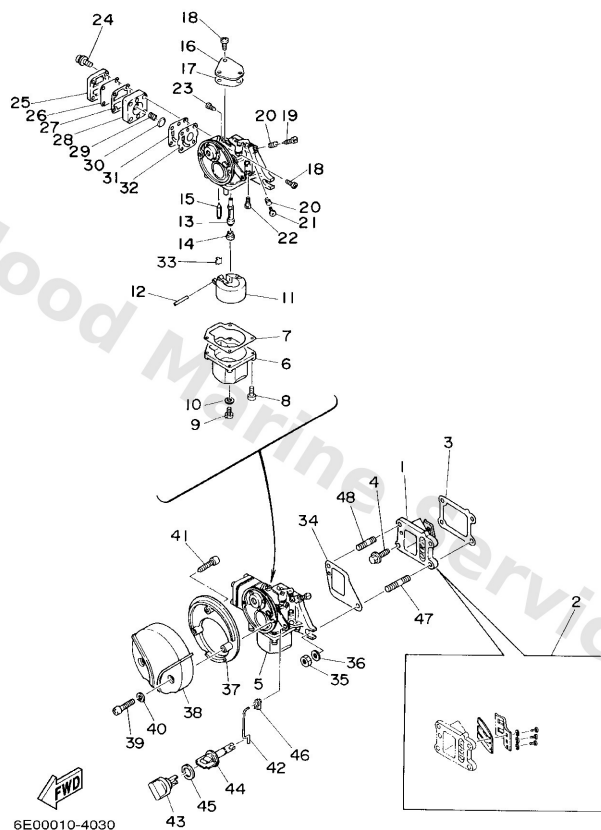

B1


Ref	Part	
1	6E0-13610-00 Reed valve assembly	Buy now
2	6E0-W0004-00 Reed set	Buy now
3	6E0-13621-A2 Gasket, valve seat	Buy now
4	95895-06016 Bolt, flange deep recess	Buy now
5	6E0-14301-05 Carburetor assembly 1	Buy now
5	6E3-14301-05 Carburetor assembly 1	Buy now
6	6E0-14381-02 Body, float chamber	Buy now
7	6E0-14384-00 Gasket, float chamber	Buy now
8	97980-04116 Screw, with washer(61b)	Buy now
9	97890-05006 Screw,panhead (eg9)	Buy now
10	646-14198-01 Gasket	Buy now
11	6E7-14385-01 Float	Buy now
12	647-14386-00 Pin, float	Buy now
13	6E0-14341-01 Nozzle, main	Buy now
13	6E3-14341-02 Nozzle, main	Buy now

 Intake

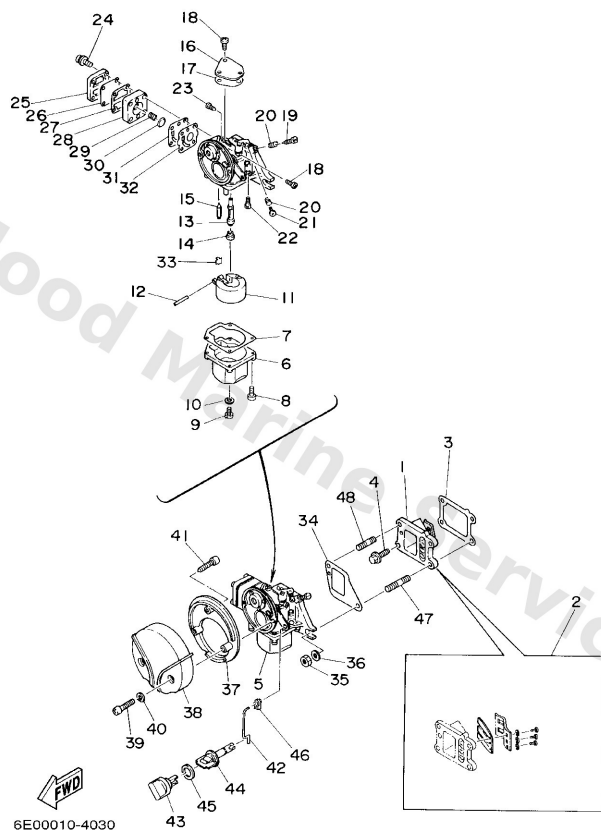

Ref	Part	
14	648-14343-40 Jet, main (#80)	Buy now
15	6F5-14392-00 Valve, needle	Buy now
16	6E0-14157-00 Cover, plate	Buy now
17	6E0-14227-00 Gasket	Buy now
18	97890-04007 Screw, pan head (7h3)	Buy now
19	647-14323-00 Screw, air adjusting	Buy now
20	646-14212-01 Spring, pilot adjusting	Buy now
21	664-14321-01 Screw, throttle	Buy now
22	648-14342-23 Jet, pilot (#46)	Buy now
22	648-14342-26 Jet, pilot (#52)	Buy now
23	647-14326-00 Screw, guide	Buy now
24	97980-04120 Screw, pan head (7h3)	Buy now
25	6E0-24413-00 Cover, pump	Buy now
26	6E0-24471-00 Diaphragm	Buy now
27	6E0-24435-00 Gasket, cover pump	Buy now

 
Intake

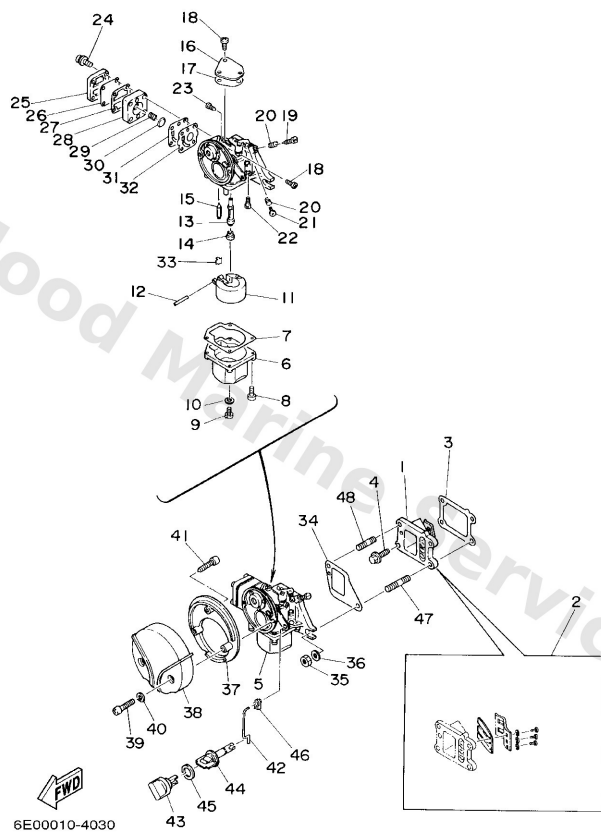

B1

Ref	Part	
28	6E0-24412-00 Body, pump	Buy now
29	6E0-24423-00 Spring	Buy now
30	6E0-14346-00 Plate	Buy now
31	6E0-24411-00 Diaphragm	Buy now
32	6E0-24434-00 Gasket, body pump	Buy now
33	6E0-14159-00 Clip	Buy now
34	6E0-14198-A0 Gasket	Buy now
35	95380-06700 Nut	Buy now
36	92995-06600 Washer, plain (646)	Buy now
37	6E0-14417-00 Cover 1	Buy now
38	6E0-14418-00 Cover 2	Buy now
39	97880-05025 Screw, panhead (a93)	Buy now
40	92990-05600 Washer, plain (646)	Buy now
41	97780-40720 Ybs81-420 screw,0.head tapping	Buy now
42	6E0-41256-00 Rod, choke link	Buy now

 
Intake

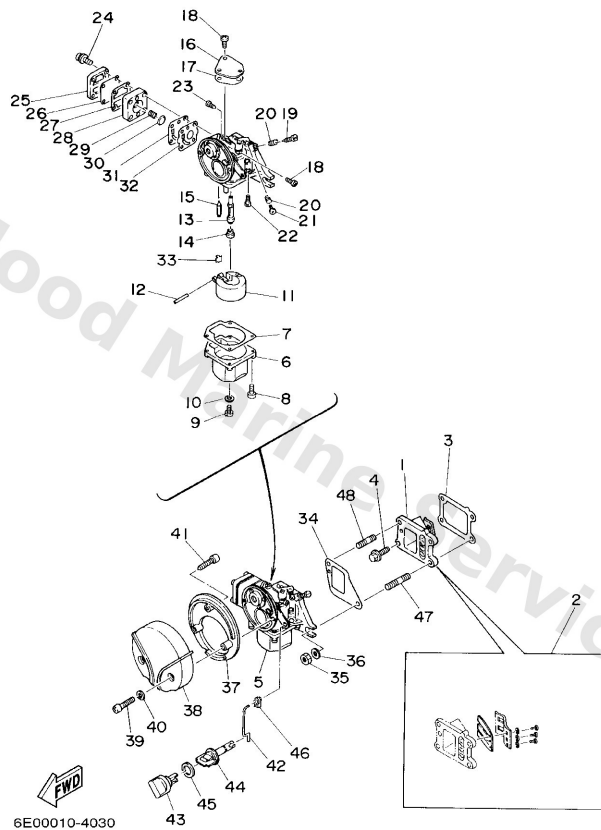

B1


Ref	Part	
43	6E0-41271-00 Knob, choke	Buy now
44	6E0-41272-00 Knob, choke 2	Buy now
45	90202-12M16 Washer, plate (6e0)	Buy now
46	661-41262-02 Joint, choke lever	Buy now
47	95627-06325 Bolt, stud(6e0)	Buy now
48	90116-06M08 Bolt, stud (689)	Buy now

 Lower Casing. Drive

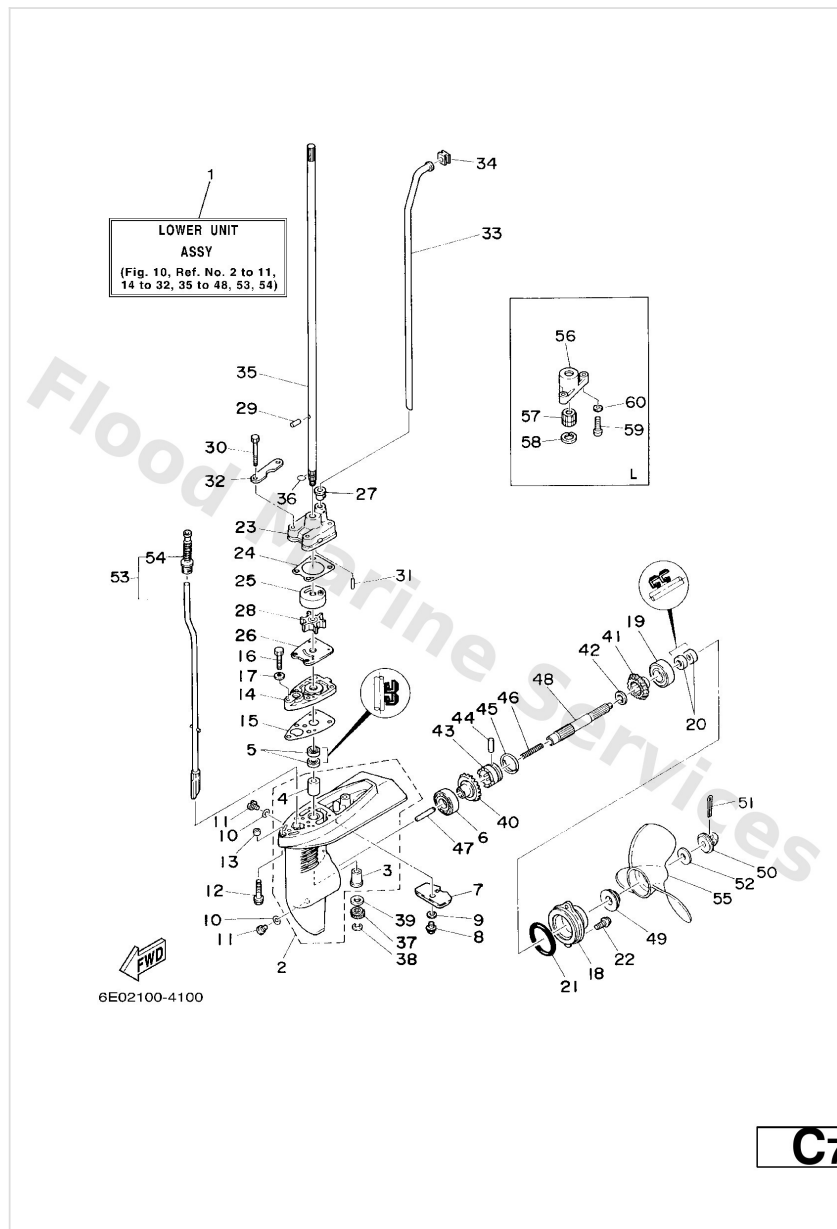


Ref	Part	
1	6E0-45300-03-4D Lower unit assembly S	Buy now
1	6E0-45300-13-4D Lower unit assembly L	Buy now
2	6E0-45311-02-4D Casing, lower	Buy now
3	6E0-45317-09 Bushing	Buy now
4	6E0-45316-09 Bushing	Buy now
5	93101-10M14 Oil seal	Buy now
6	93306-004U0 Bearing (7k2)	Buy now
7	6L5-45251-03 Anode	Buy now
8	95895-06012 Bolt, flange deep recess	Buy now
9	92990-06300 Washer, tooth	Buy now
10	90430-08020 Gasket	Buy now
11	90340-08002 Plug, straight screw	Buy now
12	90119-06M40 Bolt, with washer	Buy now
13	90387-06M14 Collar(6e0)	Buy now
14	6E0-45321-01-5B Plate	Buy now

 Lower Casing. Drive

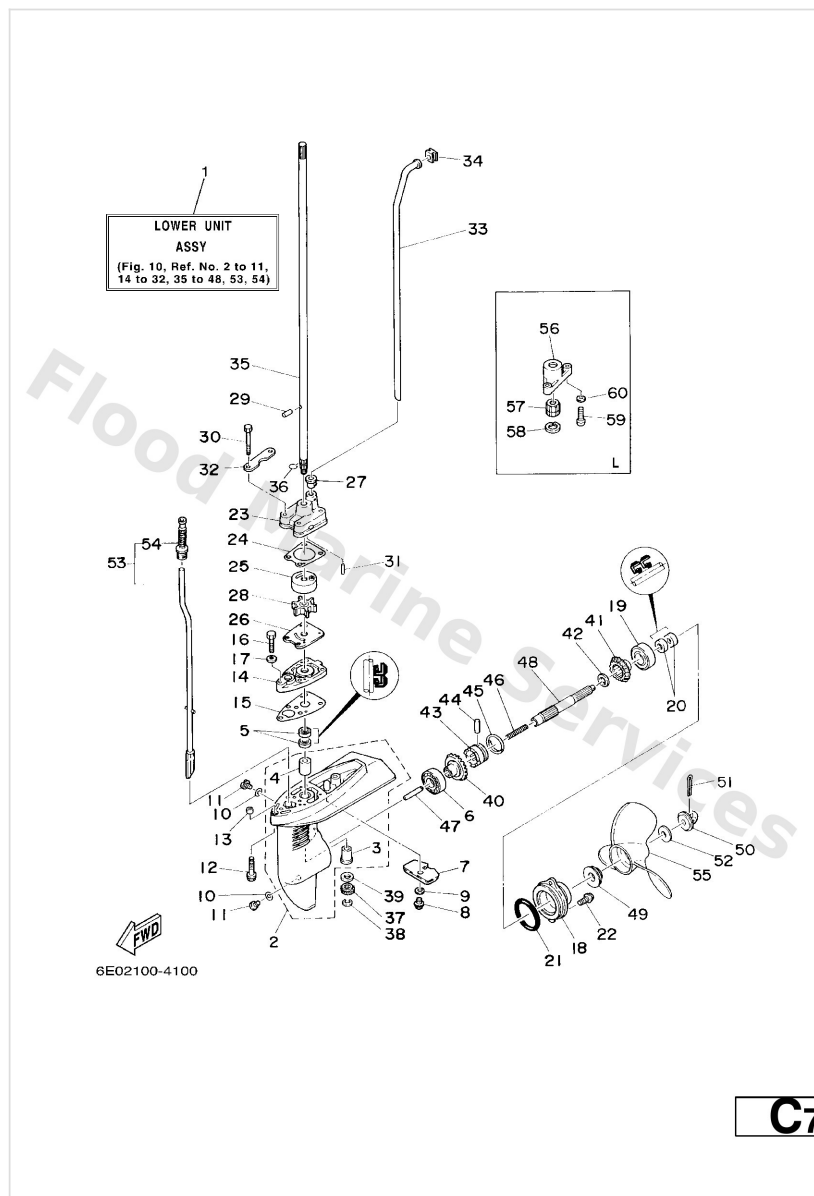


Ref	Part	
15	6E0-45315-A0 Packing, lower casing	Buy now
16	97095-06025 Bolt	Buy now
17	92995-06600 Washer, plain (646)	Buy now
18	6E0-45361-01-4D Cap, lower casing	Buy now
20	93101-13M12 Oil seal	Buy now
21	93210-48214 O-ring	Buy now
22	95895-06016 Bolt, flange deep recess	Buy now
23	6E0-44311-00 Housing, water pump	Buy now
24	6E0-44315-A0 Gasket, water pump 1	Buy now
25	6E0-44322-02 Insert, cartridge	Buy now
26	6E0-44323-00 Outer plate, cartridge	Buy now
27	6E0-44366-00 Damper, water seal 2	Buy now
28	6E0-44352-00 Impeller	Buy now
29	93604-09066 Pin, dowel	Buy now
30	97095-06045 Bolt, hexagon	Buy now

 Lower Casing. Drive

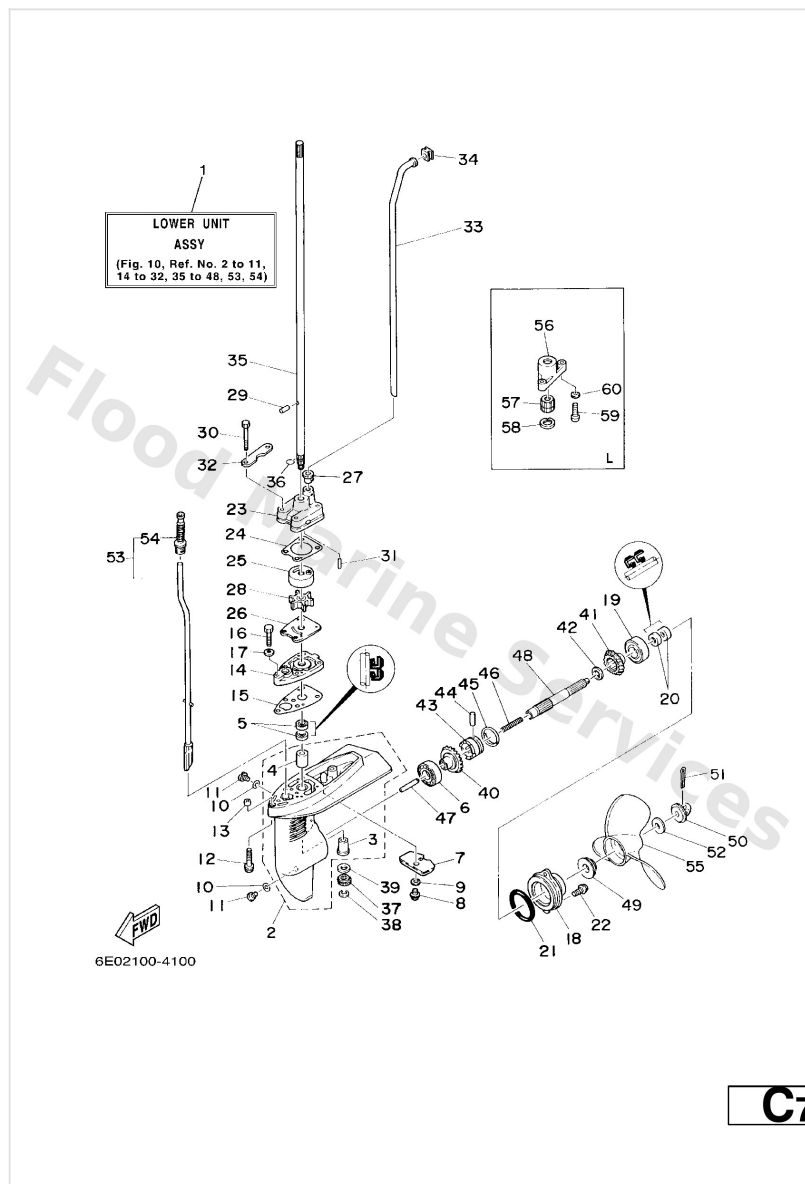


Ref	Part	
31	93604-18080 Pin. dowel. (647)	Buy now
32	6E0-44328-00 Plate	Buy now
33	6E0-44361-00 Tube, water S	Buy now
33	6E0-44361-10 Tube, water L	Buy now
34	646-44365-00 Damper, water seal 1	Buy now
35	6E0-45511-01 Shaft, drive S	Buy now
35	6E0-45511-11 Shaft, drive L	Buy now
36	90467-08M01 Clip (6e0)	Buy now
37	6E0-45551-00 Pinion (13t)	Buy now
38	99001-06600 Circlip(53l)	Buy now
39	90201-11M49 Washer, plate (6e0)	Buy now
40	6E0-45560-00 Gear 1 assembly (27t)	Buy now
41	6E0-45570-00 Gear 2 assembly (27t)	Buy now
42	90201-13M50 Washer, plate (6e0)	Buy now
43	6E0-45631-00 Clutch, dog	Buy now

 Lower Casing. Drive

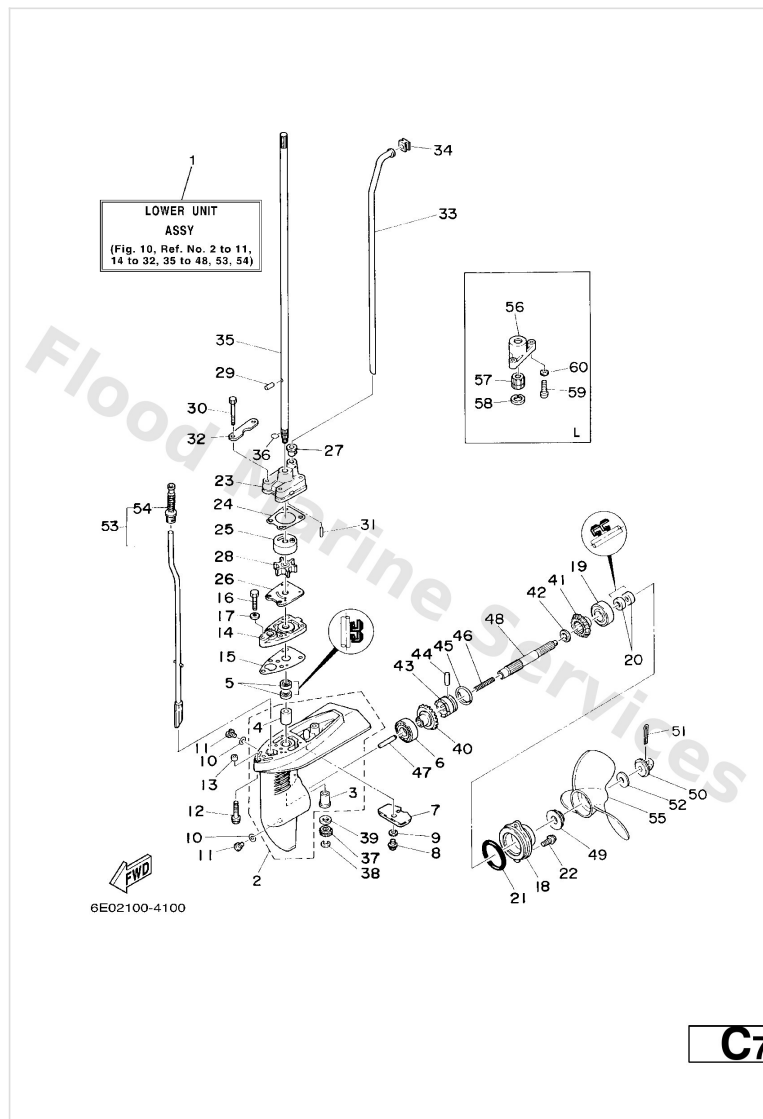


Ref	Part	
44	90250-05046 Pin, straight	Buy now
45	654-45633-00 Ring, cross pin	Buy now
46	90501-10064 Spring, compression 6164563600	Buy now
47	654-45635-00 Plunger, shift	Buy now
48	6E0-45611-01 Shaft, propeller	Buy now
49	6L5-45987-01 Spacer 1	Buy now
50	6L5-45616-00 Nut, propeller	Buy now
51	91490-25030 Pin, cotter(6L5)	Buy now
52	90201-08M54 Washer, plate (6e5)	Buy now
53	6E0-44150-00 Shift cam assembly S	Buy now
53	6E0-44150-10 Shift cam ass'y L	Buy now
54	6G1-44147-00 Boot, shift rod	Buy now
55	6E0-45941-01-EL Propeller (3x7-1/2 x8 -ba) UR	Buy now
55	6E0-45943-01-EL Propeller (3x7-1/2"x7"-ba) UR	Buy now
55	6E0-45949-00-EL Propeller (3x7-1/4 x6-1/2 -ba) UR	Buy now

 Lower Casing. Drive

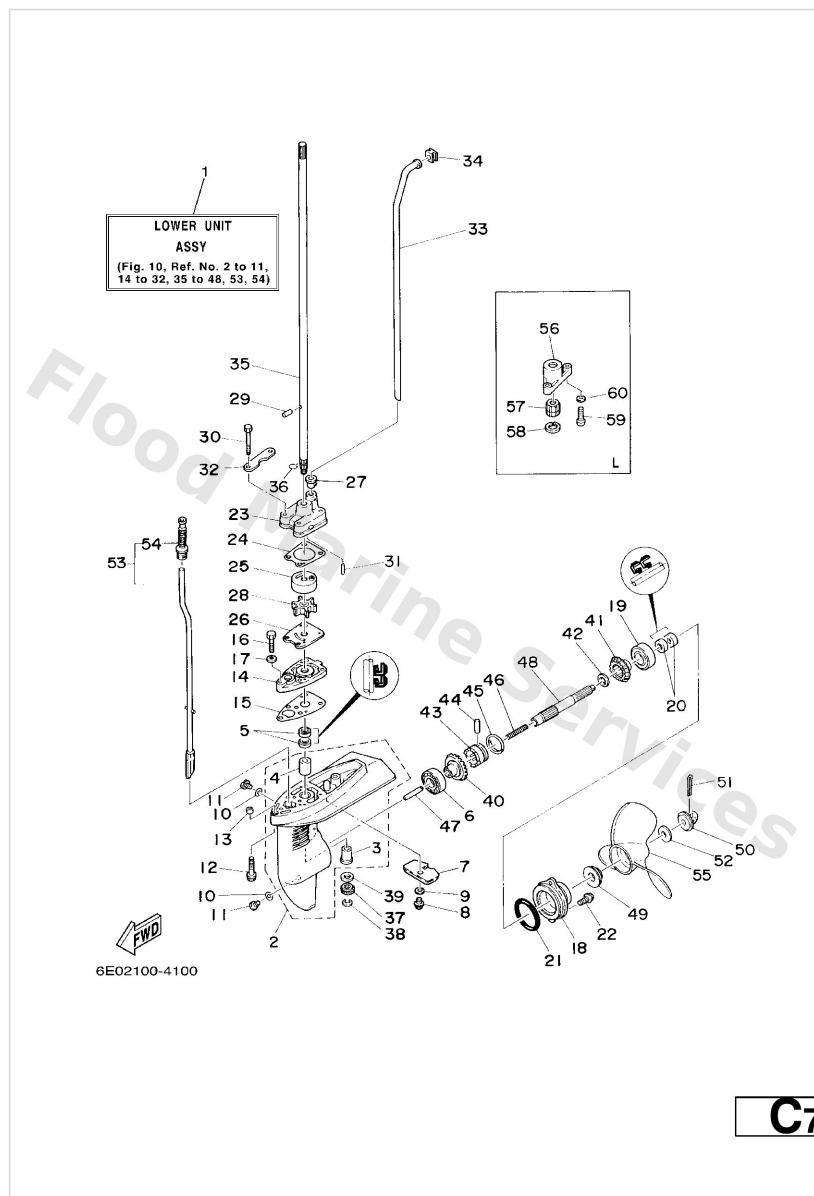

Ref	Part	
56	6E0-45331-00-5B Housing, bearing L	Buy now
57	6E0-45318-01 Bushing, drive shaft 3 L	Buy now
58	93420-22M03 Cir clip (6e0) L	Buy now
59	97880-05025 Screw, panhead (a93) L	Buy now
60	92990-05600 Washer, plain (646) L	Buy now

 
Repair Kit

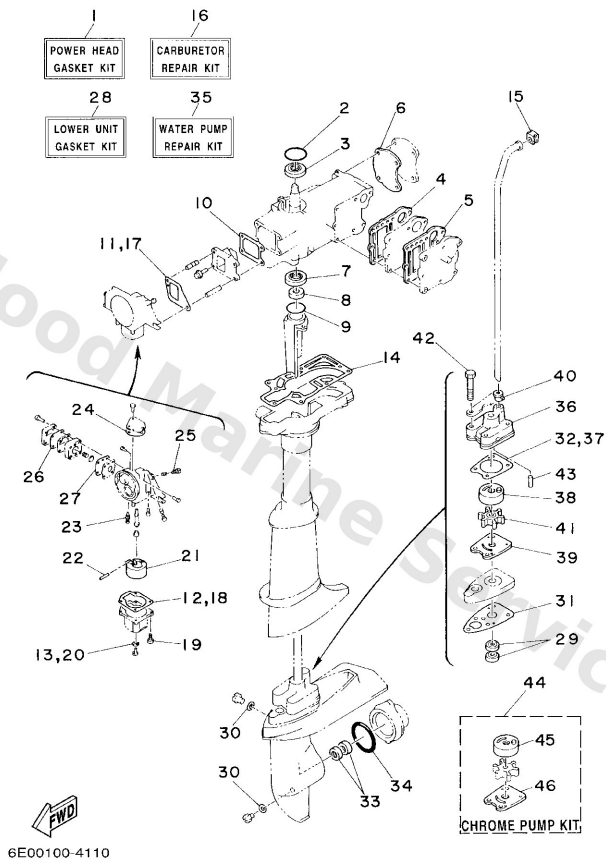

D3


Ref	Part	
1	6E0-W0001-A4 Gasket kit	Buy now
1	6E3-W0001-A4 Power head gasket kit	Buy now
2	93210-42159 O-ring (647)	Buy now
3	93102-20M25 Oil seal (6e0)	Buy now
4	6E0-41112-A1 Gasket,inner cover exhaust	Buy now
4	6E3-41112-A1 Gasket,inner cover exhaust	Buy now
5	6E0-41114-A1 Gasket,outer cover exhaust	Buy now
5	6E3-41114-A1 Gasket,outer cover exhaust	Buy now
6	6E0-11193-A1 Gasket,head cover	Buy now
6	6E3-11193-A1 Gasket,head cover	Buy now
7	93101-20M29 Oil seal(6j1)	Buy now
8	93101-10M25 Oil seal(6e0)	Buy now
9	93210-31MJ5 O-ring	Buy now
10	6E0-13621-A2 Gasket, valve seat	Buy now
11	6E0-14198-A0 Gasket	Buy now

 Repair Kit

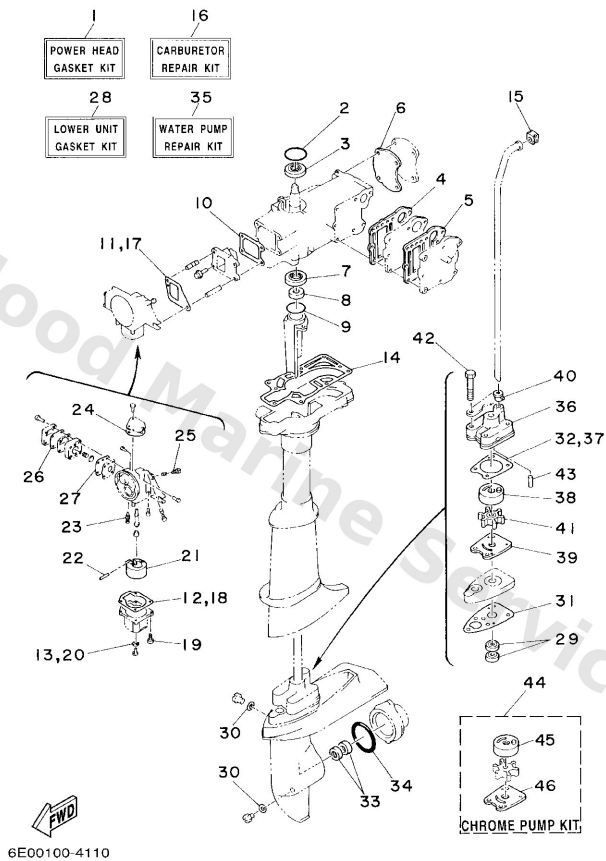

Ref	Part	
12	6E0-14384-00 Gasket, float chamber	Buy now
13	646-14198-01 Gasket	Buy now
14	6E0-45113-A1 Gasket, upper casing	Buy now
15	646-44365-00 Damper, water seal 1	Buy now
16	6E0-W0093-04 Carburetor repair kit	Buy now
19	97980-04116 Screw, with washer(61b)	Buy now
21	6E7-14385-01 Float	Buy now
22	647-14386-00 Pin, float	Buy now
23	6F5-14392-00 Valve, needle	Buy now
24	6E0-14227-00 Gasket	Buy now
25	647-14323-00 Screw, air adjusting	Buy now
26	6E0-24471-00 Diaphragm	Buy now
27	6E0-24411-00 Diaphragm	Buy now
28	6E0-W0001-C1 Lower unit gasket kit	Buy now
29	93101-10M14 Oil seal	Buy now

 
Repair Kit

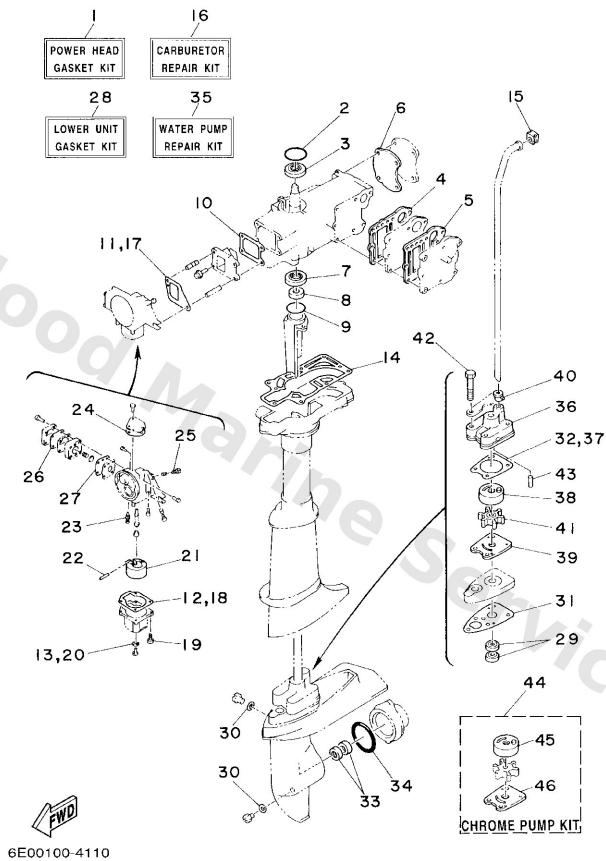

D3


Ref	Part	
30	90430-08020 Gasket	Buy now
31	6E0-45315-A0 Packing, lower casing	Buy now
32	6E0-44315-A0 Gasket, water pump 1	Buy now
33	93101-13M12 Oil seal	Buy now
34	93210-48214 O-ring	Buy now
35	6E0-W0078-A3 Water pump repair kit	Buy now
36	6E0-44311-00 Housing, water pump	Buy now
38	6E0-44322-02 Insert, cartridge	Buy now
39	6E0-44323-00 Outer plate, cartridge	Buy now
40	6E0-44366-00 Damper, water seal 2	Buy now
41	6E0-44352-00 Impeller	Buy now
42	97095-06045 Bolt, hexagon	Buy now
43	93604-18080 Pin, dowel. (647)	Buy now
44	6E0-W0078-0A 11 -	Buy now
45	6E0-44322-40 Insert, cartridge	Buy now

 Repair Kit

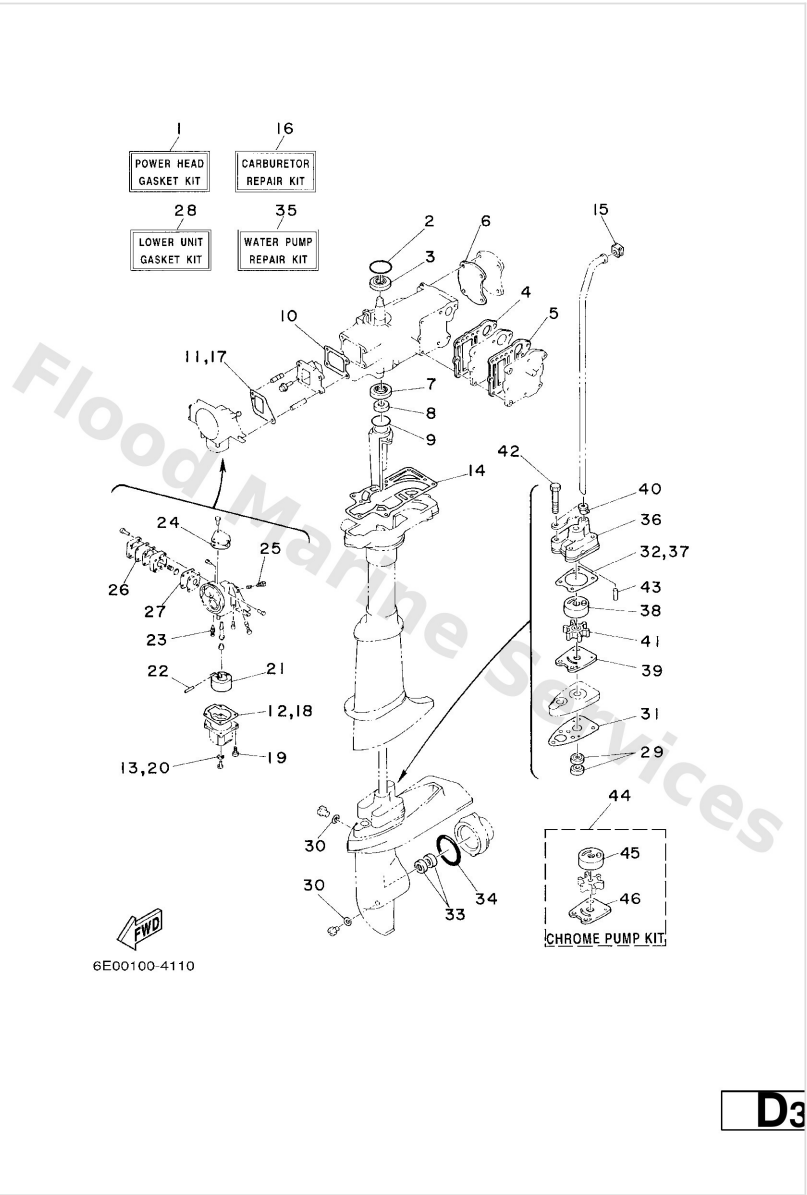


Ref	Part	
46	6E0-44323-40 Outer plate, cartridge	Buy now

 Starter

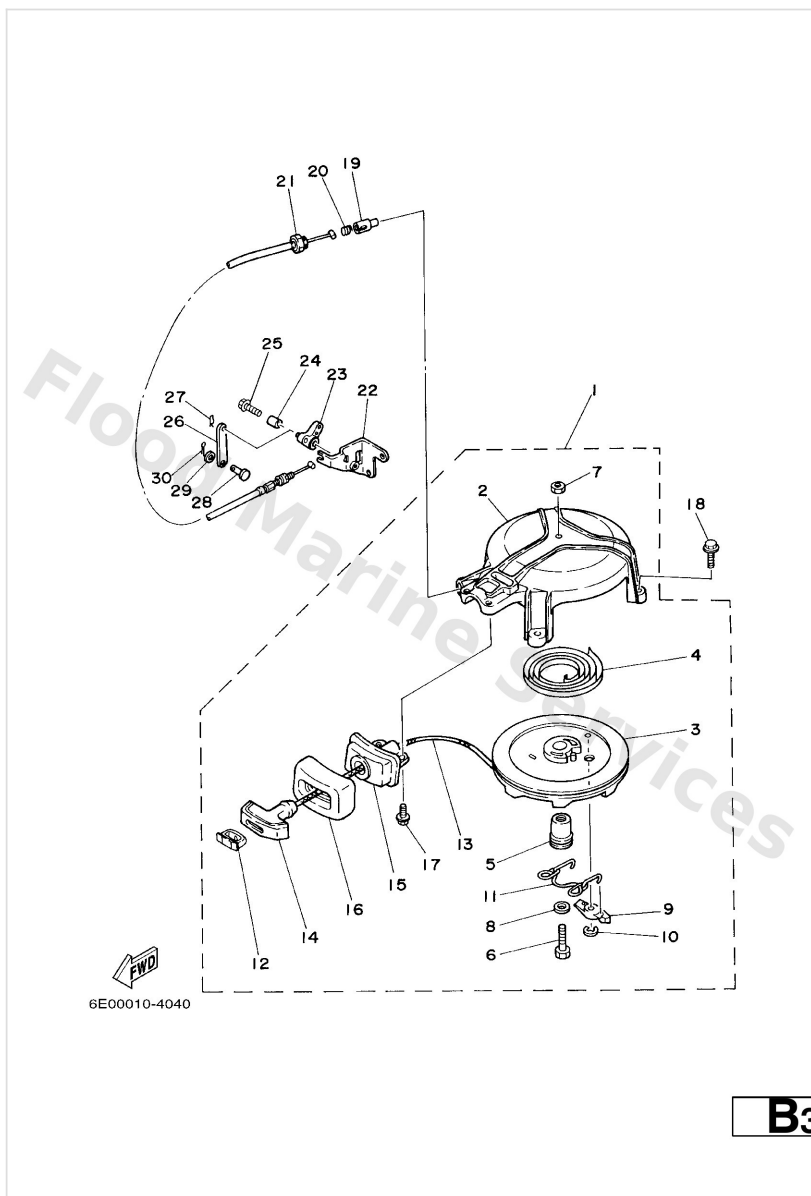


Ref	Part	
1	6E0-15710-72-94 Starter assembly	Buy now
1	6E4-15710-73-94 Starter assembly	Buy now
2	6E4-15711-71-94 Case, starter	Buy now
3	6E0-15714-01 Drum, sheave	Buy now
4	90510-08M03 Spring, spiral (6g1)	Buy now
5	6E0-15717-00 Shaft, starter	Buy now
6	97013-06035 Bolt(3rv)	Buy now
7	95303-06600 Nut(661)	Buy now
8	90201-06M30 Washer, plate (6a1)	Buy now
9	677-15741-01 Pawl, drive	Buy now
10	93430-06M02 Circlip (689)	Buy now
11	6E0-15705-00 Spring drive pawl assembly	Buy now
12	6G1-15779-00 Cover	Buy now
13	* item_description	Buy now
14	6G1-15755-00 Handle, starter	Buy now

 Starter

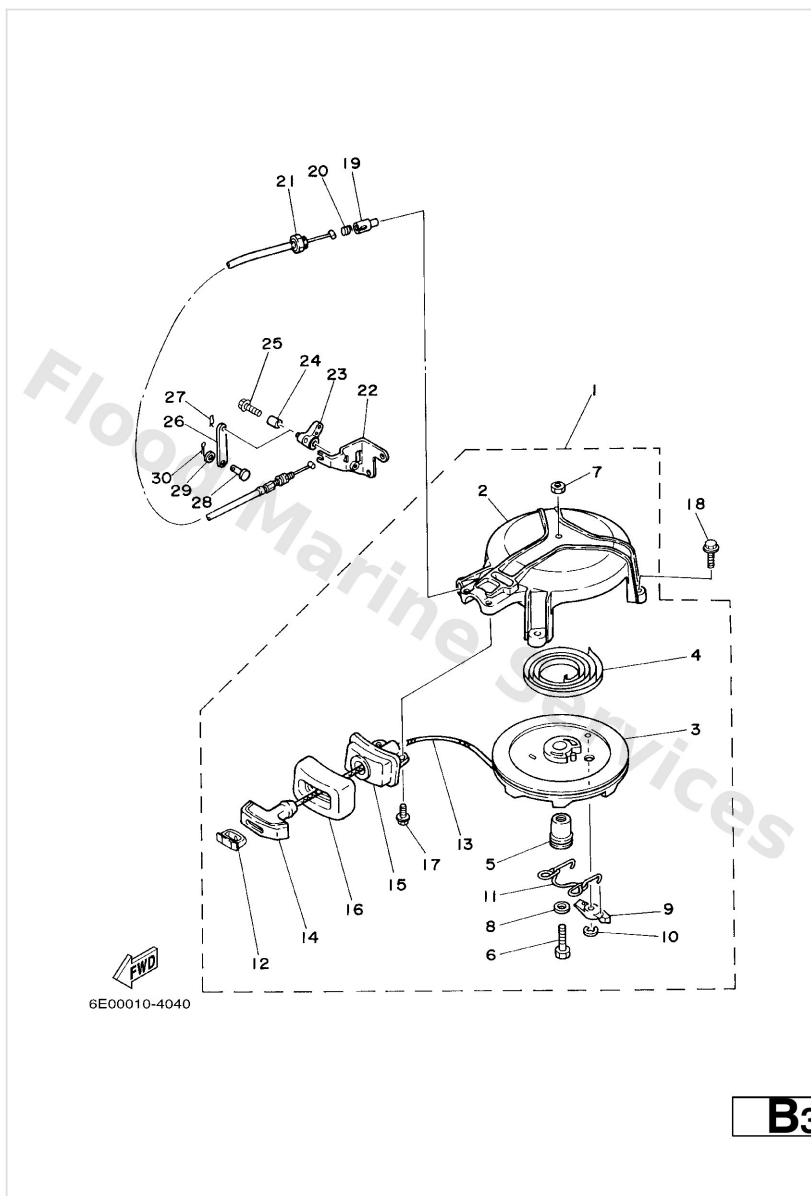


Ref	Part	
15	6E0-15758-01 Guide, wire	Buy now
15	6E3-15758-01 Guide, wire	Buy now
16	6E0-15761-00 Seal, rubber 1	Buy now
17	90105-06M14 Bolt (6e0)	Buy now
18	95895-06020 Bolt, flange(jk3)	Buy now
19	656-15748-00 Plunger, starter stop	Buy now
20	90501-10227 Spring, comprrshion(656)	Buy now
21	6E4-15770-70 Wire comp. starter stop	Buy now
22	6E0-15772-71 Stay 2	Buy now
22	6E4-15772-71 Stay 2	Buy now
23	6E4-15746-70 Arm	Buy now
24	90387-06504 Collar(650)	Buy now
25	90119-06M18 Bolt, with washer(61n)	Buy now
26	6E4-15747-70 Link	Buy now
27	90468-10005 Pin, hair 6264123500	Buy now

 Starter

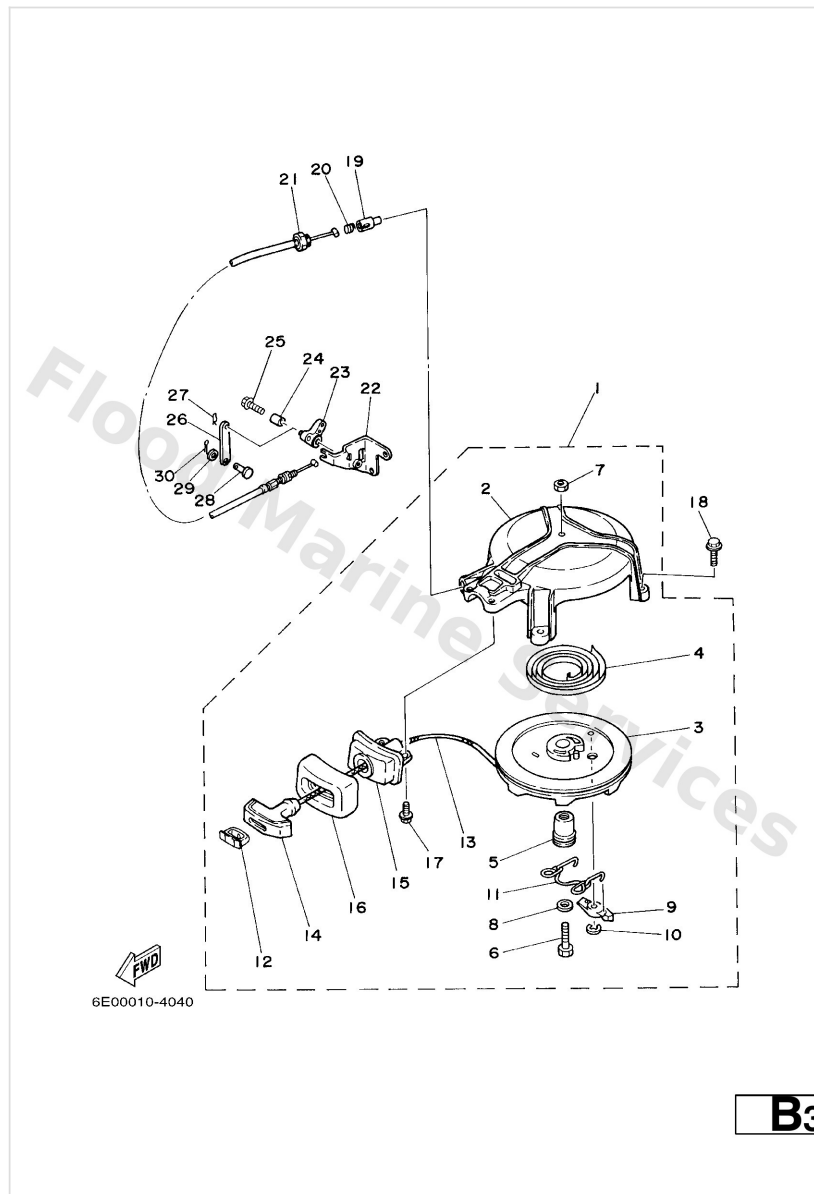

Ref	Part	
28	91790-05010 Pin (6e4)	Buy now
29	90202-05088 Washer, plate (666)	Buy now
30	91490-16010 Pin, cotter	Buy now

 Top Cowling

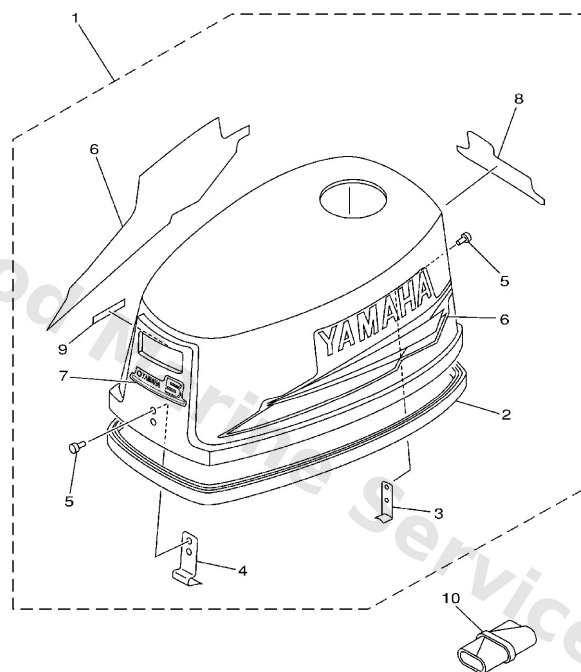


6E01010-2010

A4


Ref	Part	
1	6E0-42610-40-4D Top Cowling assembly	Buy now
1	6E3-42610-40-4D Top Cowling assembly	Buy now
2	6E0-42615-00 Seal	Buy now
3	6E0-42647-01 Holder, clamp band	Buy now
4	6E0-42651-02 Hook	Buy now
5	90266-04M00 Rivet 2 (662)	Buy now
6	6E0-W0070-14 Graphic Set	Buy now
7	6E0-42677-20 Graphic, rear	Buy now
7	6E3-42677-20 Graphic, rear	Buy now
8	6E0-42678-12 Graphic, rear	Buy now
8	6E3-42678-12 Graphic, rear	Buy now
9	6E0-44191-11 Indicator, shift	Buy now
10	656-W2810-02 Tool kit AP	Buy now

 Upper Casing . Bracket

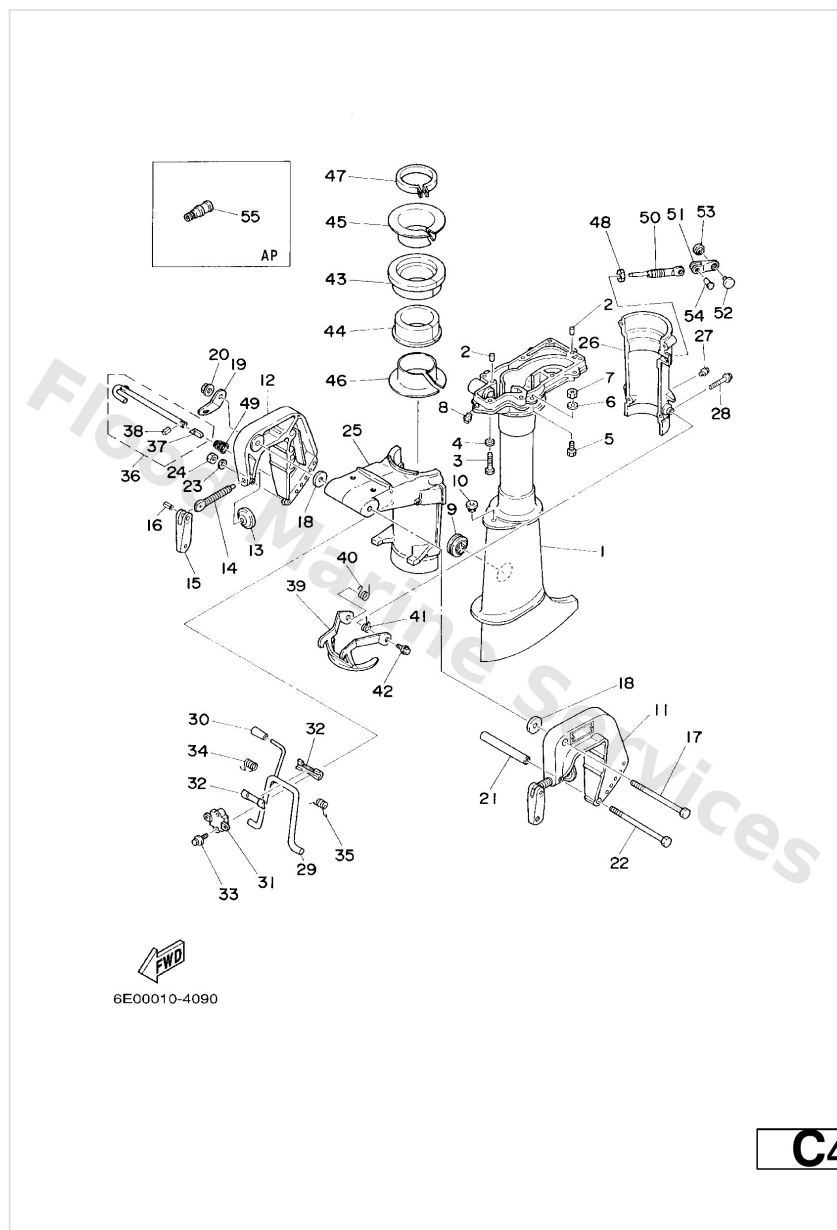


Ref	Part	
1	6E0-45111-02-4D Casing, upper S	Buy now
1	6E0-45111-12-4D Casing, upper L	Buy now
2	93606-12019 Pin, dowel (614)	Buy now
3	97095-06030 Bolt(jf7)	Buy now
4	92995-06600 Washer, plain (646)	Buy now
5	97095-06016 Bolt, hexagon deep recess	Buy now
7	95380-06700 Nut	Buy now
8	93700-06M03 Nipple, grease(6a1)	Buy now
9	647-45151-01 Cover, upper casing	Buy now
10	90480-10M13 Grommet (6e0)	Buy now
11	6E0-43111-02-4D Bracket, clamp 1	Buy now
12	6E0-43112-01-4D Bracket, clamp 2	Buy now
13	620-43114-00 Pad, transom clamp	Buy now
14	6E0-43116-01 Screw, transom clamp	Buy now
15	6E0-43118-01 Handle, transom clamp	Buy now

 Upper Casing . Bracket

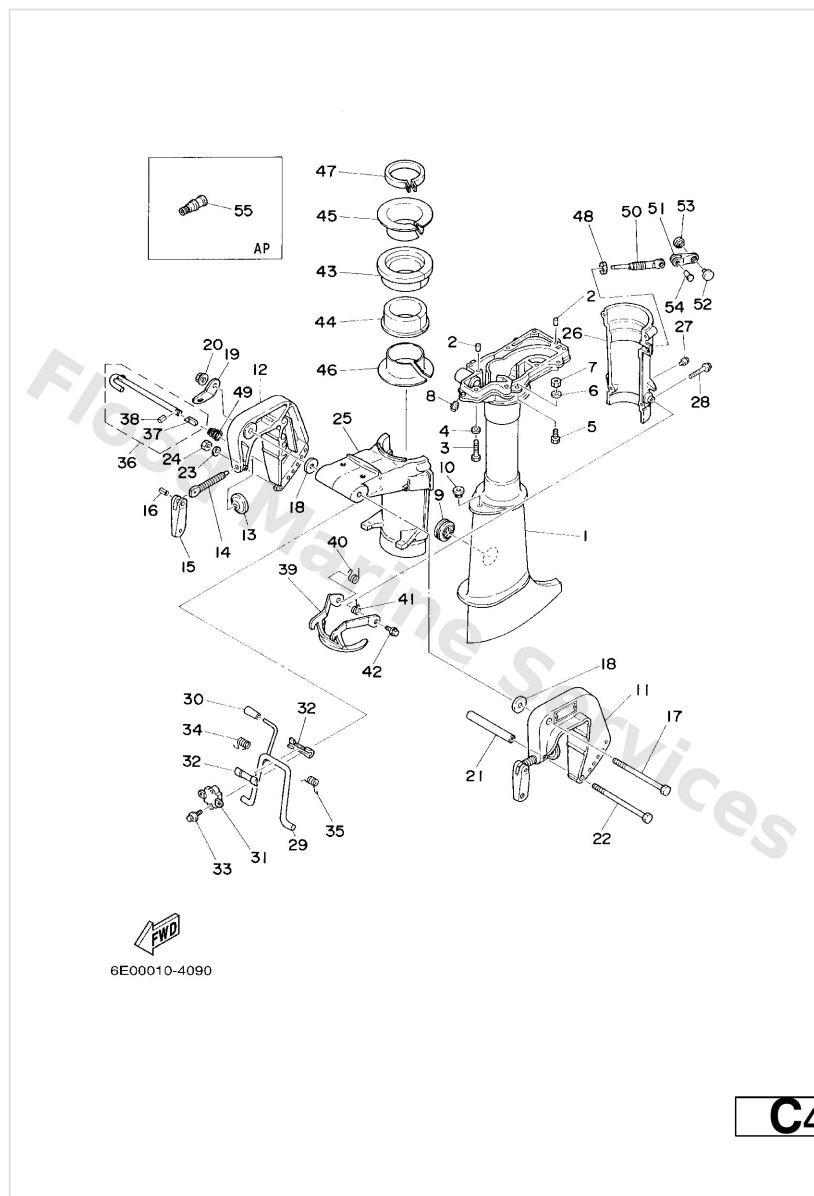


Ref	Part	
16	90243-04M01 Pin(6a1)	Buy now
17	90101-08M07 Bolt(6e0)	Buy now
18	90201-08M03 Washer, plate(6e0)	Buy now
19	6A1-43113-01 Plate, clamp bracket	Buy now
20	90185-08057 Nut, nylon (6j8)	Buy now
21	90387-06M11 Collar	Buy now
22	90101-06335 Bolt, hexagon (624)	Buy now
23	92990-06600 Washer, plain (646)	Buy now
24	95380-06600 Nut(661)	Buy now
25	6E0-43311-04-4D Bracket, swivel 1	Buy now
26	6E0-43312-02-4D Bracket, swivel 2	Buy now
28	95895-06035 Bolt, flange(4nx)	Buy now
29	6E0-43181-00 Lever, tilt stop 1	Buy now
30	6E0-43632-00 Knob, tilt	Buy now
31	6E0-43313-00-94 Bracket, swivel 3	Buy now

 Upper Casing . Bracket

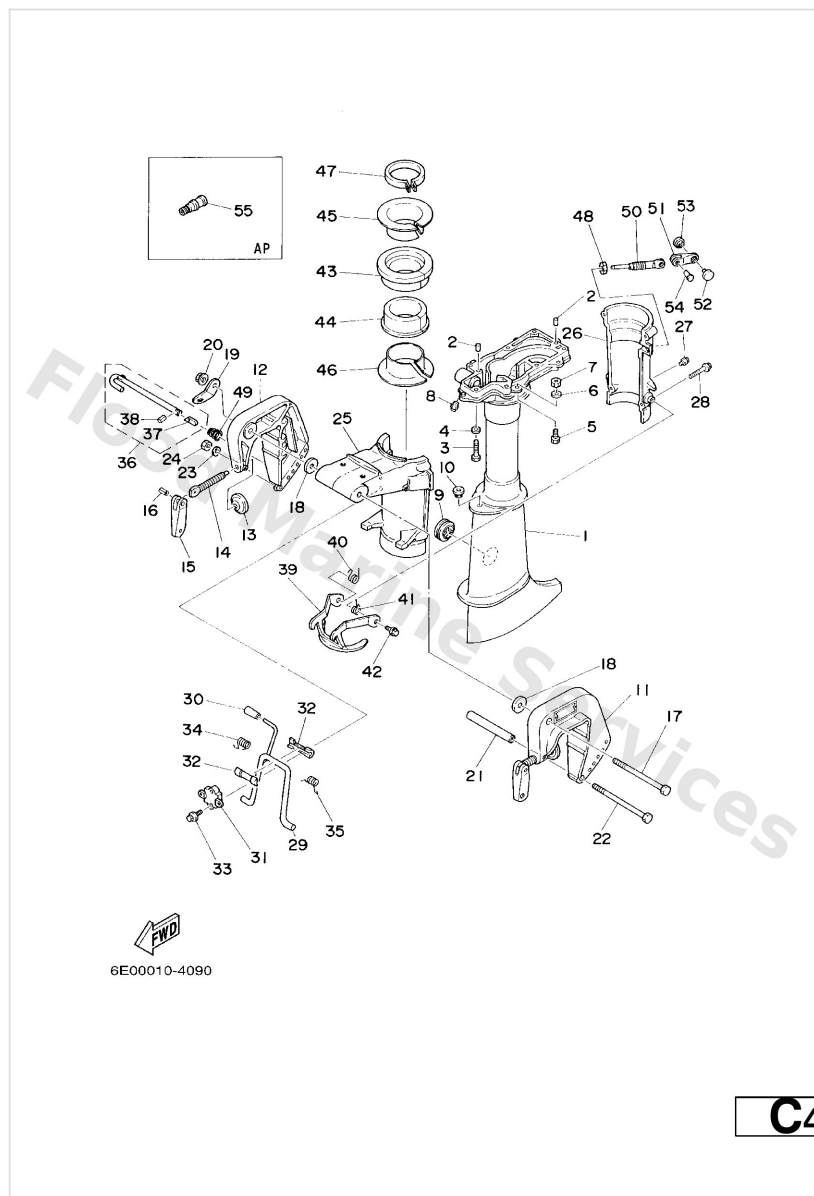

Ref	Part	
32	620-43189-00 Bushing	Buy now
33	95895-06020 Bolt, flange(jk3)	Buy now
34	90508-16020 Spring 6474319800	Buy now
35	90508-16021 Spring 6474318800	Buy now
36	6E0-43160-01 Tilt rod assembly	Buy now
37	689-43165-00 Plate, tilt lock	Buy now
38	91690-30008 Pin. spring(656)	Buy now
39	6E0-43614-00-5B Plate, tilt lock	Buy now
40	90508-14M10 Spring, torsion (6e0)	Buy now
41	90508-14M11 Spring, torsion (6e0)	Buy now
42	95895-06010 Bolt, flange(7ht)	Buy now
43	6E0-42537-02 Bushing, pivot shaft	Buy now
44	6E0-42538-02 Bushing, pivot shaft	Buy now
45	6E0-42539-00 Bushing, pivot shaft	Buy now
46	6E0-42549-00 Bushing, pivot shaft	Buy now

 Upper Casing . Bracket

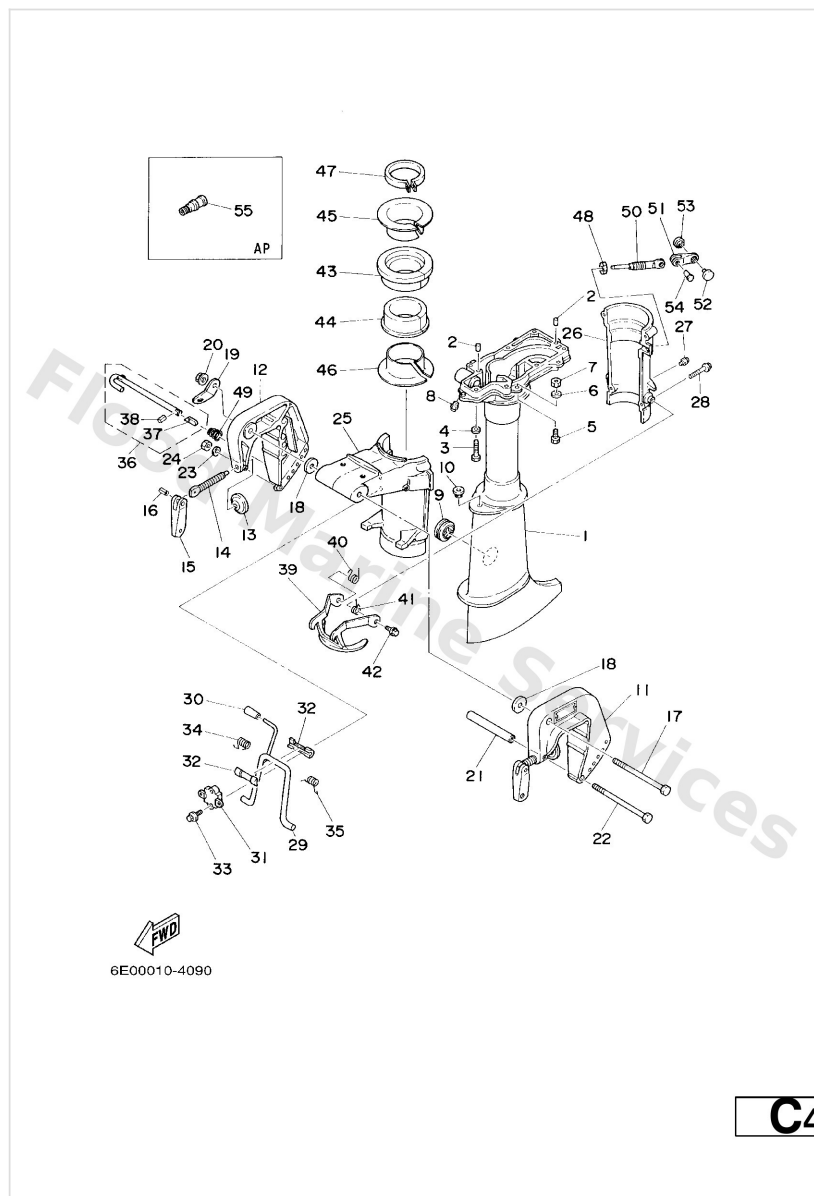

Ref	Part	
47	6E0-42528-03 Plate, friction	Buy now
48	95380-08600 Nut (661)	Buy now
49	90502-08M05 Spring, conical(6e0)	Buy now
50	6L5-42529-01 Screw, friction piece	Buy now
51	6L5-42561-00 Knob, steering lock	Buy now
52	6L5-44196-00 Indicator 3	Buy now
53	6L5-44197-00 Indicator 4	Buy now
54	90266-04M05 Rivet(6I5)	Buy now
55	626-28193-01-94 Plug, water check AP D)15MM	Buy now

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.