



Yamaha F8CMH 2004

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539


Authorised Yamaha Dealers



Contents

| | |
|-----------------------------------|----|
| BOTTOM COWLING | 3 |
| BRACKET 1 | 6 |
| BRACKET 2 | 9 |
| CARBURETOR | 11 |
| CONTROL | 13 |
| CRANKSHAFT & PISTON | 15 |
| CYLINDER & CRANKCASE 1 | 17 |
| CYLINDER & CRANKCASE 2 | 19 |
| ELECTRICAL 1 | 21 |
| ELECTRICAL 2 | 23 |
| FUEL | 24 |
| FUEL TANK | 27 |
| GENERATOR | 28 |
| INTAKE | 30 |
| LOWER CASING & DRIVE 1 | 32 |
| LOWER CASING & DRIVE 2 | 37 |
| OIL PAN | 39 |
| OIL PUMP | 41 |
| OPTIONAL PARTS | 43 |
| REPAIR KIT 1 | 46 |
| REPAIR KIT 2 | 48 |
| REPAIR KIT 3 | 49 |
| STARTER | 51 |
| STEERING | 54 |
| STEERING GUIDE | 57 |
| TOP COWLING | 58 |
| UPPER CASING | 60 |
| VALVE | 61 |


Bottom Cowling

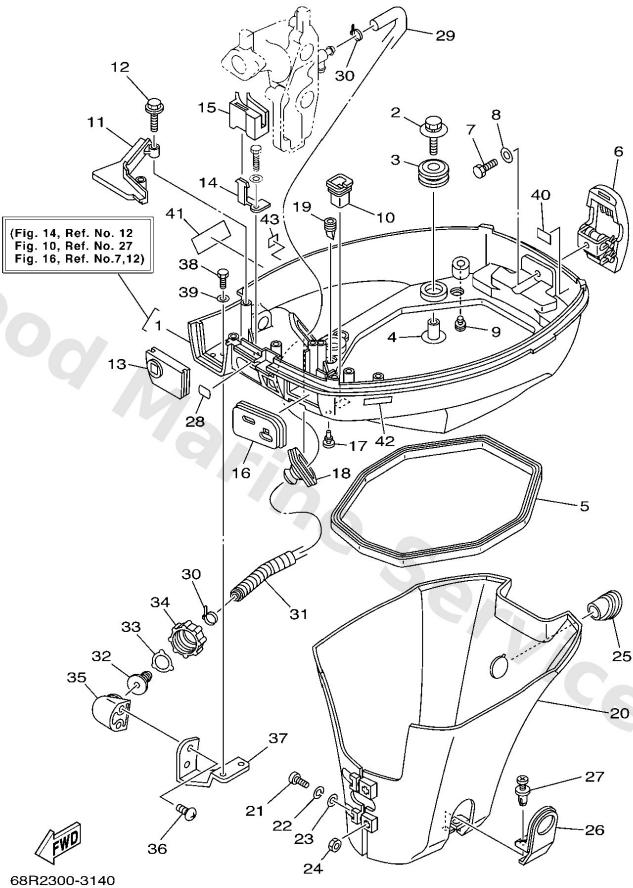

C6

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T42710004D Bottom Cowling assembly WITH TAPPING BOLT | Buy now |
| 2 | 68F8511900 Bolt | Buy now |
| 3 | 9048021M82 Grommet | Buy now |
| 4 | 9038706053 Collar | Buy now |
| 5 | 68T4271610 Rubber, seal 1 | Buy now |
| 6 | 68T4280100 Cowling clamp comp. | Buy now |
| 7 | 9709506012 Bolt(gh1) | Buy now |
| 39 | 9299506600 Washer, plain (646) FLUSHING KIT | Buy now |
| 9 | 6H34439101 Nipple, hose | Buy now |
| 10 | 6824272700 Grommet | Buy now |
| 11 | 68T42738004D Plate, fitting | Buy now |
| 12 | 9010906M81 Bolt | Buy now |
| 13 | 68T4272500 Grommet | Buy now |
| 14 | 68T2639300 Holder | Buy now |
| 15 | 68T2636700 Protector | Buy now |


Bottom Cowling

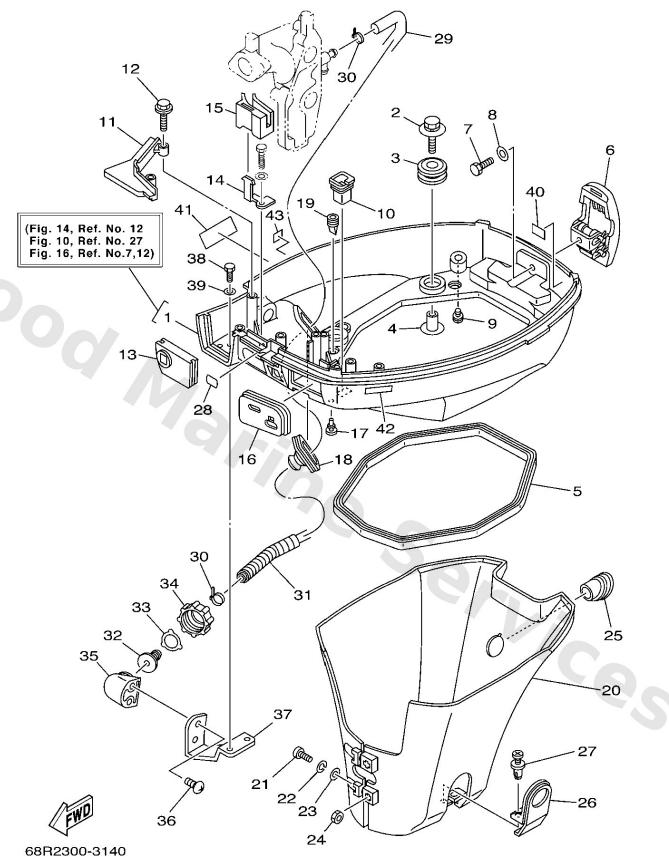

C6

| Ref | Part | |
|-----|--|-------------------------|
| 16 | 68T4272400 Grommet | Buy now |
| 17 | 9048006M19 Grommet (6e3) | Buy now |
| 18 | 6884272610 Grommet FLUSHING KIT | Buy now |
| 19 | 65W4271700 Rubber, seal 2 | Buy now |
| 20 | 68T4274100 Apron | Buy now |
| 21 | 9788506030 Screw, pan head(6e0) | Buy now |
| 22 | 9299506100 Washer(6a1) | Buy now |
| 24 | 9538006600 Nut(661) | Buy now |
| 25 | 68T4271700 Rubber, seal 2 | Buy now |
| 26 | 68T4277100 Apron | Buy now |
| 27 | 9033806M20 Plug | Buy now |
| 28 | 65W8434200 Seat, emblem | Buy now |
| 29 | 6E51248100 Pipe 1 FLUSHING KIT | Buy now |
| 30 | 9046511M10 Clamp FLUSHING KIT | Buy now |
| 31 | 9044713M00 Hose, with spring FLUSHING KIT | Buy now |


Bottom Cowling

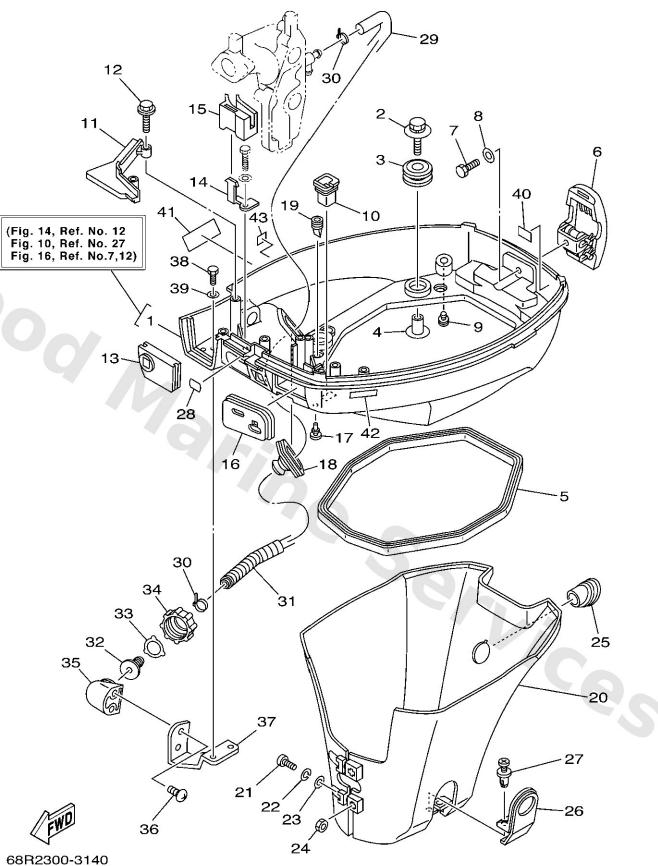

C6

| Ref | Part | |
|-----|--|-------------------------|
| 32 | <u>6R31258200</u> Joint, hose 2 FLUSHING KIT | Buy now |
| 33 | <u>6R31258300</u> Gasket, hose joint FLUSHING KIT | Buy now |
| 34 | <u>6R31258100</u> Joint, hose 1 FLUSHING KIT | Buy now |
| 35 | <u>68T1257200</u> Adapter FLUSHING KIT | Buy now |
| 36 | <u>9016706002</u> Screw, tapping FLUSHING KIT | Buy now |
| 37 | <u>68T1253500</u> Plate FLUSHING KIT | Buy now |
| 38 | <u>9709506010</u> Bolt FLUSHING KIT | Buy now |
| 40 | <u>6H84279110</u> Mark 1 | Buy now |
| 41 | <u>62Y1344450</u> Mark | Buy now |
| 42 | <u>6E38257H00</u> Plate Mark | Buy now |
| 43 | <u>6A12817600</u> Label Caution | Buy now |

Bracket 1

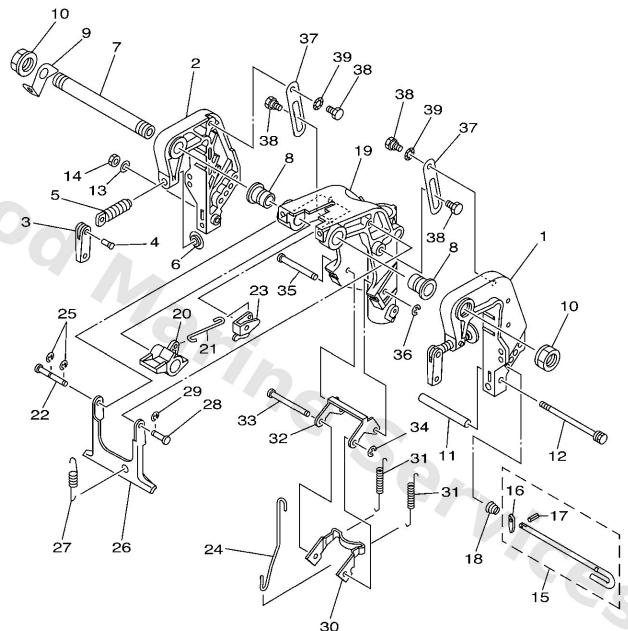


 68R3110-C200

D5


| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68T43111024D Bracket clamp + screw | Buy now |
| 2 | 68T43112024D Bracket clamp + screw | Buy now |
| 3 | 6E04311801 Handle, transom clamp | Buy now |
| 4 | 9024304M01 Pin(6a1) | Buy now |
| 5 | 6774311601 Screw, transom clamp. | Buy now |
| 6 | 6484311401 Pad, transom clamp | Buy now |
| 7 | 63V4313110 Bolt, clamp bracket FOR RIDE GUIDE | Buy now |
| 8 | 9038622MA4 Bush | Buy now |
| 9 | 66R4311300 Plate, clamp bracket | Buy now |
| 10 | 9018522043 Nut, self-locking | Buy now |
| 11 | 9038706M13 Collar(6h6) | Buy now |
| 12 | 9010106M18 Bolt(6l5) | Buy now |
| 13 | 9299006600 Washer, plain (646) | Buy now |
| 14 | 9538006700 Nut | Buy now |
| 15 | 6L24316001 Tilt rod assembly | Buy now |

Bracket 1

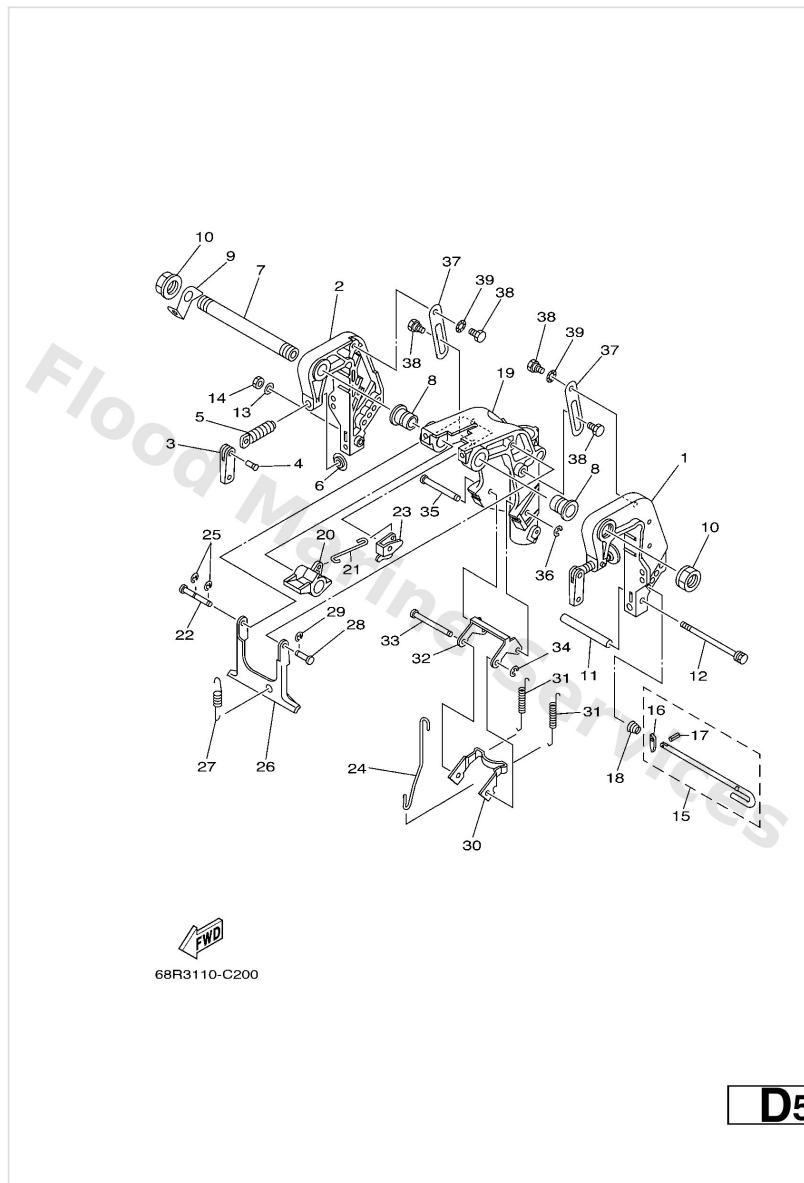

| Ref | Part | |
|-----|---|-------------------------|
| 16 | 6894316500 Plate, tilt lock | Buy now |
| 17 | 9169030008 Pin. spring(656) | Buy now |
| 18 | 9050210M07 Spring, conical(6k3) | Buy now |
| 19 | 68T43311004D Bracket, Swivel 1 S | Buy now |
| 19 | 68T43311104D Bracket swivel1 L | Buy now |
| 20 | 68T4363100 Lever Tilt | Buy now |
| 21 | 68T4361600 Rod Tilt Lock | Buy now |
| 22 | 68T4364600 Shaft, lever | Buy now |
| 23 | 68T4364100 Lever, tilt | Buy now |
| 24 | 68T4361700 Rod, tilt lock | Buy now |
| 25 | 9908005600 Circlip(22k) | Buy now |
| 26 | 68T4335000 Receiver assembly | Buy now |
| 27 | 9050618M41 Spring, tension S | Buy now |
| 27 | 9050620005 Spring, tension L | Buy now |
| 28 | 63V4319100 Shaft, stopper | Buy now |

Bracket 1

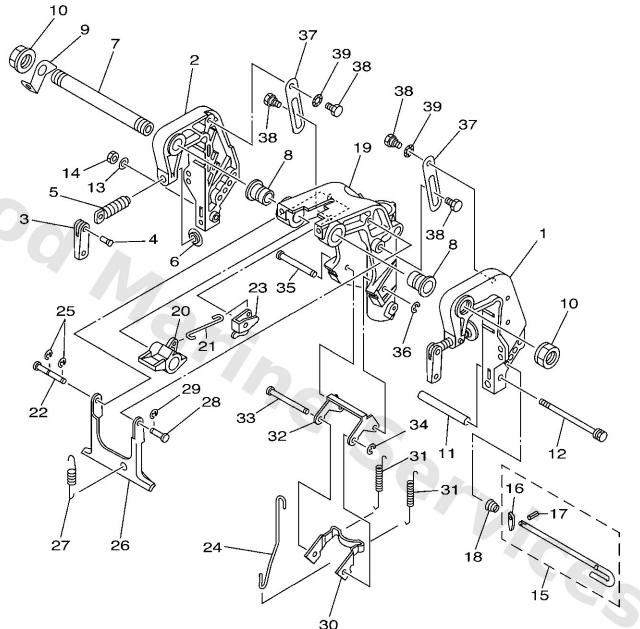


A small rectangular logo with the letters 'FWD' in white, rotated 45 degrees counter-clockwise.

68R3110-C200

| Ref | Part | |
|-----|--|-------------------------|
| 30 | 68T4361400 Plate, tilt lock | Buy now |
| 31 | 9050620M42 Spring, Tension S | Buy now |
| 31 | 9050623003 Spring, Tension L | Buy now |
| 32 | 68T4361500 Plate, tilt lock | Buy now |
| 33 | 68T4361100 Shaft, tilt lock | Buy now |
| 34 | 9343004M03 Circlip (eu0) | Buy now |
| 35 | 68T4365900 Shaft, reverse lock | Buy now |
| 37 | 68T4362700 Stopper | Buy now |
| 38 | 9010906M84 Bolt | Buy now |
| 39 | 9020610M24 Washer, wave | Buy now |

D5


Bracket 2

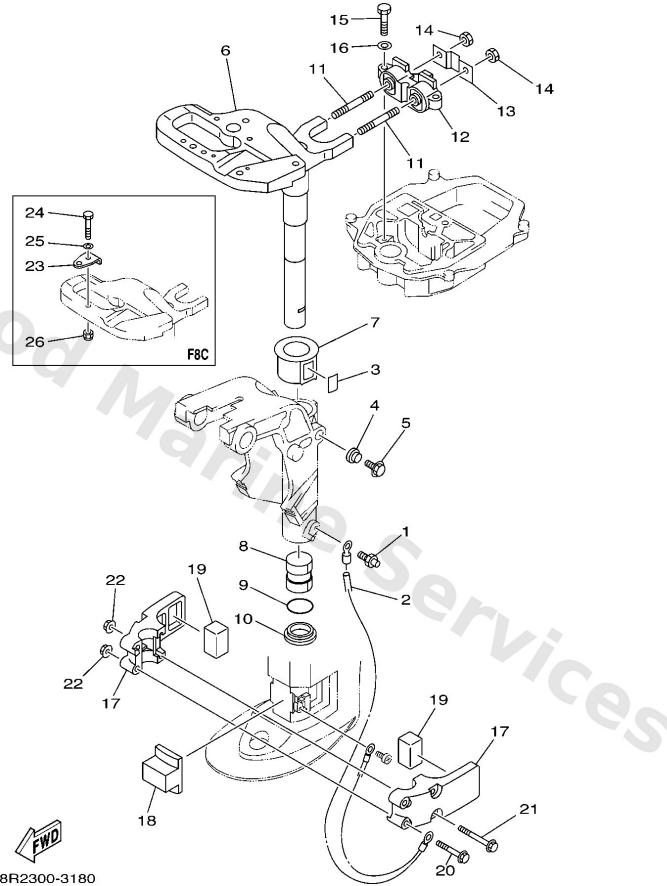

D7

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 9370006M03 Nipple, grease(6a1) | Buy now |
| 2 | 68T8212700 Wire, lead 2 | Buy now |
| 3 | 63V4252800 Plate, friction | Buy now |
| 4 | 6894337301 Seal, damper | Buy now |
| 5 | 9010506M07 Bolt (689) | Buy now |
| 6 | 68T42511014D Bracket, Steering S | Buy now |
| 6 | 68T42511114D Bracket, steering L | Buy now |
| 7 | 63V4253700 Bushing, pivot shaft | Buy now |
| 8 | 9038630048 Bush | Buy now |
| 9 | 9321029M94 O-ring(6h1) | Buy now |
| 10 | 9038630M60 Bush(6j8) | Buy now |
| 11 | 9011608M54 Bolt, stud(63v) | Buy now |
| 12 | 68T445170094 Mount rubber | Buy now |
| 13 | 68T4452600 Plate | Buy now |
| 14 | 9538008600 Nut (661) | Buy now |


Bracket 2

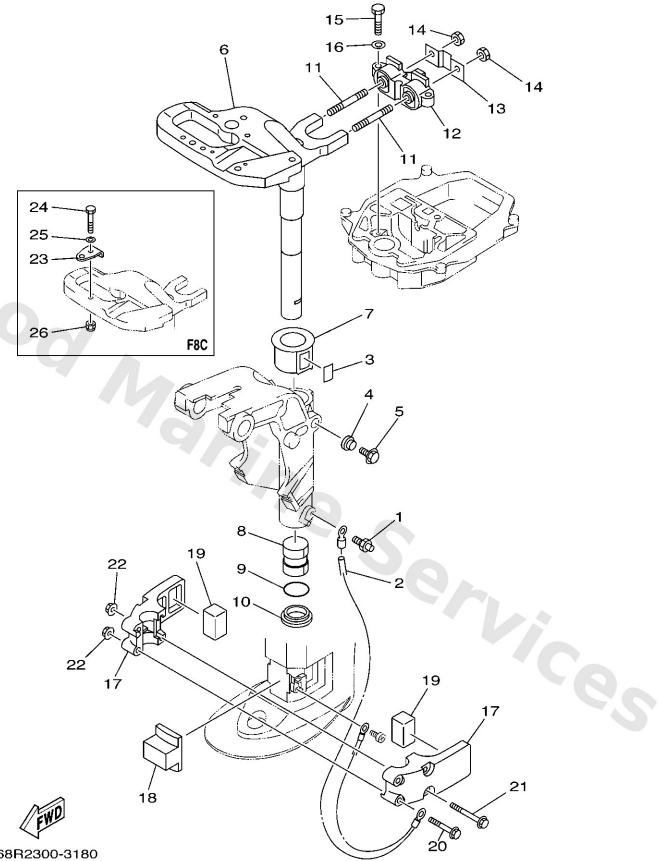

| Ref | Part | |
|-----|---|-------------------------|
| 15 | 9707506025 Bolt | Buy now |
| 16 | 9299506600 Washer, plain (646) | Buy now |
| 17 | 68T44551004D Housing, lower mount rubber 1 | Buy now |
| 18 | 68T4455700 Mount Damper Lower Front | Buy now |
| 19 | 6824455500 Mount damper, lower side | Buy now |
| 20 | 9011906012 Bolt, with washer | Buy now |
| 21 | 9011906013 Bolt, with washer | Buy now |
| 22 | 9017906M28 Nut(63v) | Buy now |
| 23 | 63V4851101 Hook, steering AP F8C | Buy now |
| 24 | 9707508035 Bolt(70w) AP F8C | Buy now |
| 25 | 9299508600 Washer, plain (663) AP F8C | Buy now |
| 26 | 9018508057 Nut, nylon (6j8) AP F8C | Buy now |

D7

Carburetor

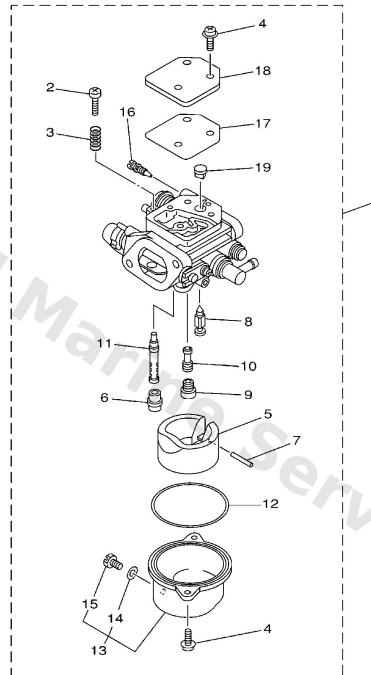


68R0010-0070

B3

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68R14301A0 Carburetor assembly 1 F6A | Buy now |
| 1 | 68R14301C0 Carburetor assembly 1 F6A | Buy now |
| 1 | 68T1430100 Carburetor & accel link 68t00 F8C | Buy now |
| 1 | 68T1430120 Carburetor & accel link 68t20 F8C | Buy now |
| 1 | 69F14301C0 Carburetor assembly 1 F6B | Buy now |
| 2 | 6E51432100 Screw, throttle | Buy now |
| 3 | 6J81433400 Spring, throttle | Buy now |
| 4 | 9798004112 Screw, pan head (686) | Buy now |
| 5 | 68T1438500 Float | Buy now |
| 6 | 67D1496600 Rubber cap | Buy now |
| 7 | 67D1438600 Pin, float | Buy now |
| 8 | 68T1454600 Valve, needle | Buy now |
| 9 | 68R1492E2H Jet, Main (#55) F6A,F6B | Buy now |
| 9 | 68T1492E37 Jet, main (#74) F8C | Buy now |
| 10 | 68R1492F18 Jet, air slow F6A,F6B | Buy now |

Carburetor

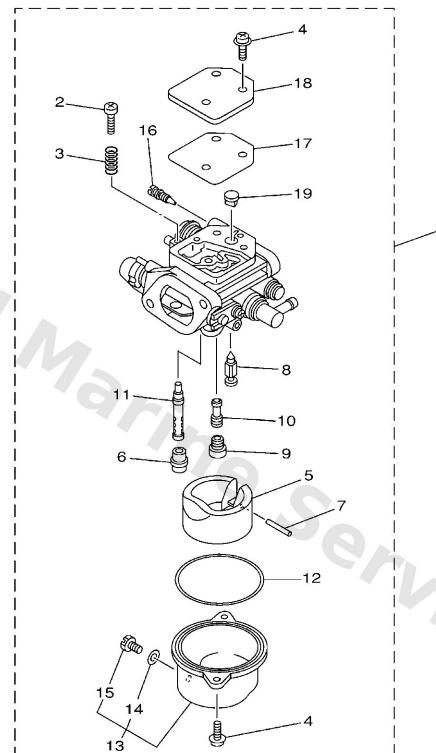


68R0010-0070

B3

| Ref | Part | |
|-----|--|-------------------------|
| 10 | 68T1492F1K Jet, air slow (#39) F8C | Buy now |
| 11 | 68T1492A00 Nozzle, main | Buy now |
| 12 | 67D1498400 Gasket, float chamber | Buy now |
| 13 | 68T1498100 Body, float chamber | Buy now |
| 14 | 6J81495900 Gasket, drin screw | Buy now |
| 15 | 66T1499100 Plug, drain | Buy now |
| 16 | 67D1432300 Screw, air adjusting | Buy now |
| 16 | 68T1432320 Screw Air Adjusting | Buy now |
| 17 | 67D1453600 Gasket | Buy now |
| 18 | 67D1452700 Plate | Buy now |
| 19 | 68T1412600 Plug | Buy now |


Flood Marine Services

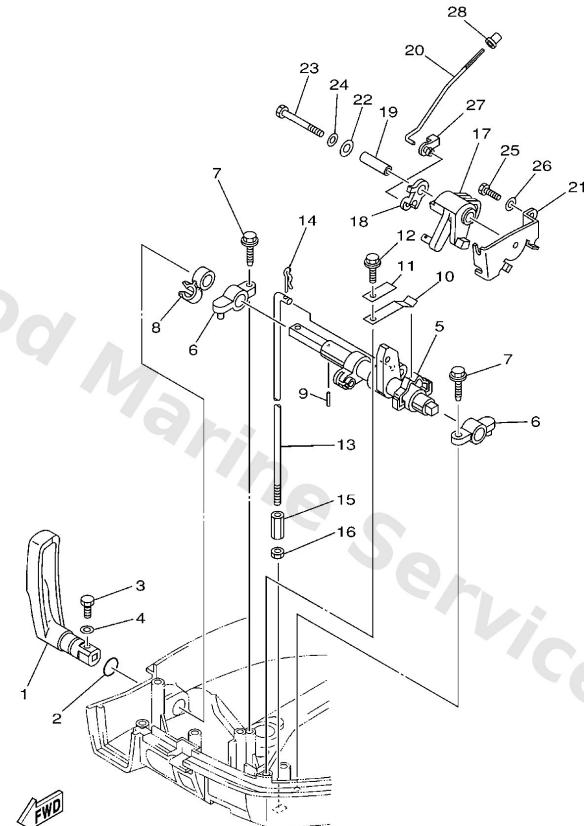

68R0010-0180

D3


| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T4411100 Handle, gear shift | Buy now |
| 2 | 9321012327 O-ring(3ld) | Buy now |
| 3 | 9709505016 Bolt(6a1) | Buy now |
| 4 | 9299505600 Washer, plain (646) | Buy now |
| 5 | 68T4412101 Lever, shift rod | Buy now |
| 6 | 6G1416620194 Bracket | Buy now |
| 7 | 9010906M81 Bolt | Buy now |
| 8 | 9046410M60 Clamp | Buy now |
| 9 | 9169030014 Pin, spring (647) | Buy now |
| 10 | 65W4411600 Spring | Buy now |
| 11 | 66R4411400 Stopper | Buy now |
| 12 | 9010906M86 Bolt | Buy now |
| 13 | 68T4414300 Rod, shift 1 S | Buy now |
| 13 | 68T4414310 Rod, shift 1 L | Buy now |
| 14 | 9046818001 Clip | Buy now |

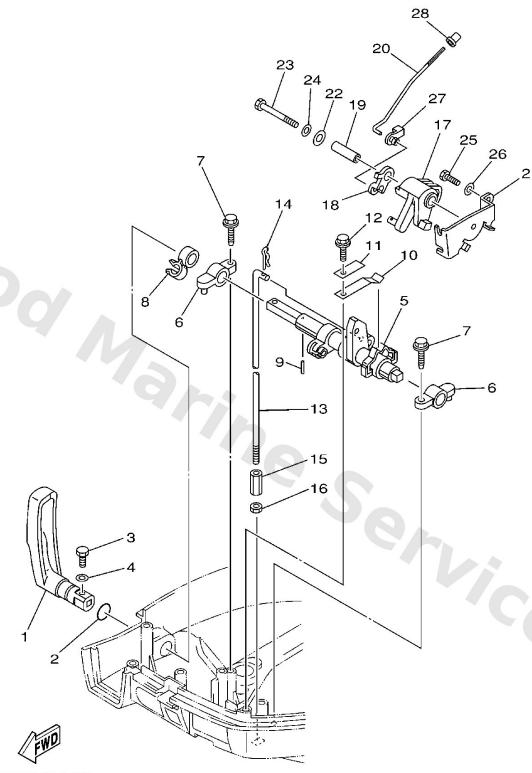

D3

| Ref | Part | |
|-----|--|-------------------------|
| 15 | 9017006015 Connector, shift rod | Buy now |
| 16 | 9538006700 Nut | Buy now |
| 17 | 68T4163800 Pulley | Buy now |
| 18 | 68R4128300 Lever Free Accel. F6B | Buy now |
| 18 | 68T4128300 Lever, free accel. F6A,F8C | Buy now |
| 19 | 9038706M59 Collar (6h3) | Buy now |
| 20 | 68T4121100 Link, accel. F6A,F8C | Buy now |
| 20 | 69F4121100 Link, Accel. F6B | Buy now |
| 21 | 68T1449700 Stay, throttle wire | Buy now |
| 22 | 9020106M62 Washer, plate (6e5) | Buy now |
| 23 | 9709506045 Bolt, hexagon | Buy now |
| 24 | 9299506600 Washer, plain (646) | Buy now |
| 25 | 9709506012 Bolt(gh1) | Buy now |
| 27 | 6614126202 Joint, choke lever | Buy now |
| 28 | 6471439560 Cap,over flow pipe | Buy now |


Crankshaft & Piston

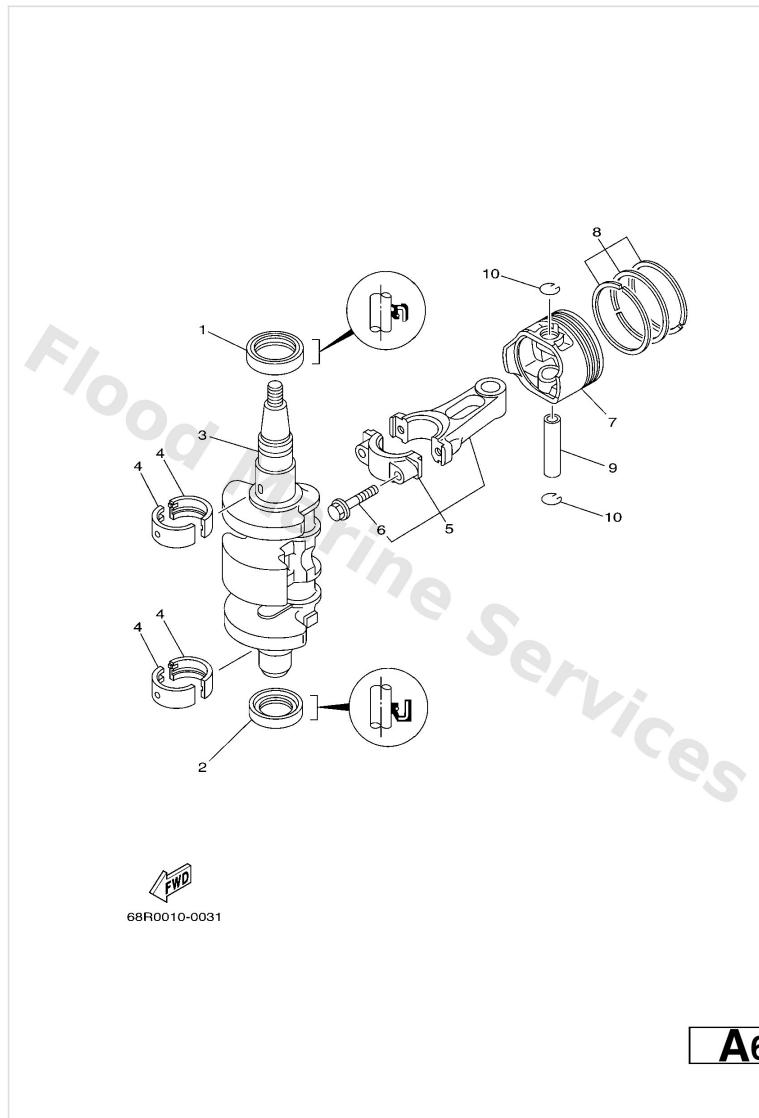

| Ref | Part | |
|-----|--|-------------------------|
| 1 | 9310230M22 Oil seal (6g8) | Buy now |
| 2 | 9310125M69 Oil seal | Buy now |
| 3 | 68T1141100 Crankshaft | Buy now |
| 4 | 68T1141600 Plane bearing, crankshaft 1 UR BROWN | Buy now |
| 4 | 68T1141610 Plane bearing, crankshaft 1 UR BLACK | Buy now |
| 4 | 68T1141620 Plane bearing, crankshaft 1 UR BLUE | Buy now |
| 5 | 68T1165000 Connecting rod kit | Buy now |
| 6 | 67D1165400 Bolt, connecting rod | Buy now |
| 7 | 68T116310096 Piston (std) | Buy now |
| 7 | 68T1163500 Piston (0.25mm o/s) AP | Buy now |
| 7 | 68T1163600 Piston (0.50mm o/s) AP | Buy now |
| 8 | 68T1160301 Piston ring set (std) | Buy now |
| 8 | 68T1160401 Piston ring set (0.25mm o/s) AP | Buy now |
| 8 | 68T1160501 Piston ring set (0.50mm o/s) AP | Buy now |
| 9 | 68T1163300 Pin, piston | Buy now |

Crankshaft & Piston


| Ref | Part | |
|-----|--|-------------------------|
| 10 | 9345015023 Circlip 131116340000 | Buy now |

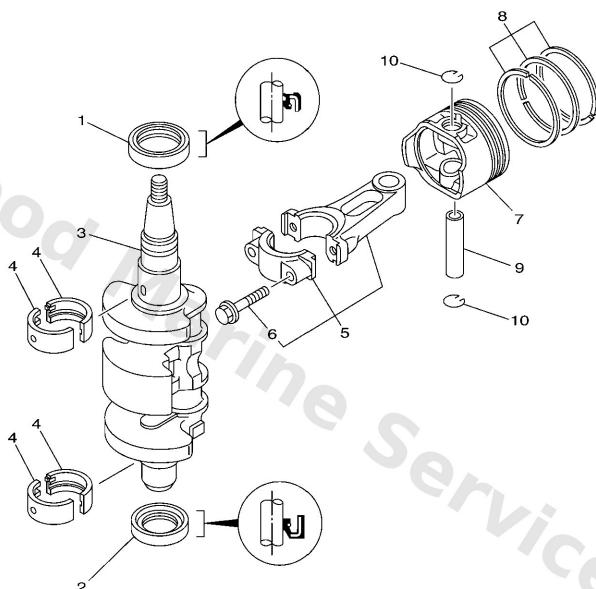

68R0010-0031

A6

Cylinder & Crankcase 1

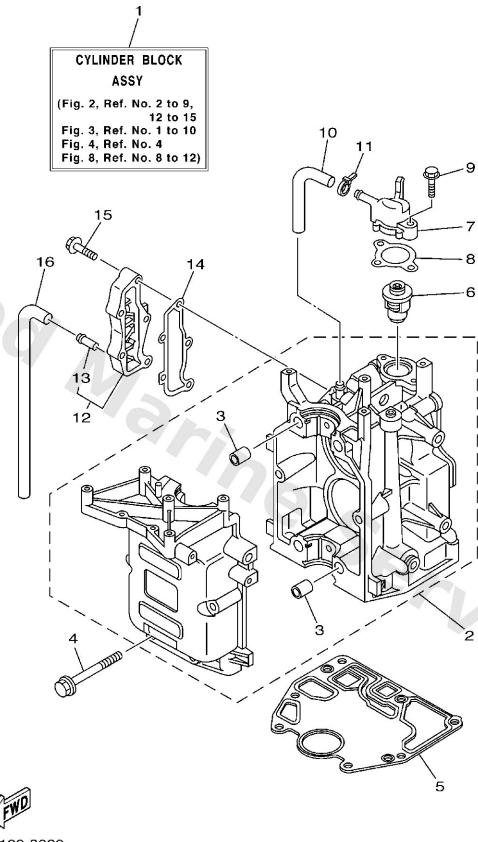


A5

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68TW009B101S Cylinder block ass'y | Buy now |
| 2 | 68T15100101S Crank case assembly | Buy now |
| 3 | 9953012016 Pin, dowel | Buy now |
| 4 | 9011908M29 Bolt, with washer | Buy now |
| 5 | 68T1135100 Gasket, cylinder | Buy now |
| 6 | 66M1241100 Thermostat | Buy now |
| 7 | 68T12413001S Cover, thermostat | Buy now |
| 8 | 6G812414A0 Gasket, cover | Buy now |
| 9 | 9011906MA2 Bolt, with washer | Buy now |
| 10 | 68T1248100 Pipe 1 | Buy now |
| 11 | 9046511M10 Clamp | Buy now |
| 12 | 68T41113001S Outer cover, exhaust | Buy now |
| 13 | 6E92437800 Pipe, Joint 4 | Buy now |
| 14 | 68T41114A0 Gasket, exhaust outer cover | Buy now |
| 15 | 9011906MA3 Bolt, with washer | Buy now |

Cylinder & Crankcase 1


| Ref | Part | |
|-----|--------------------------------------|-------------------------|
| 16 | 68T1248200 Pipe 2 | Buy now |

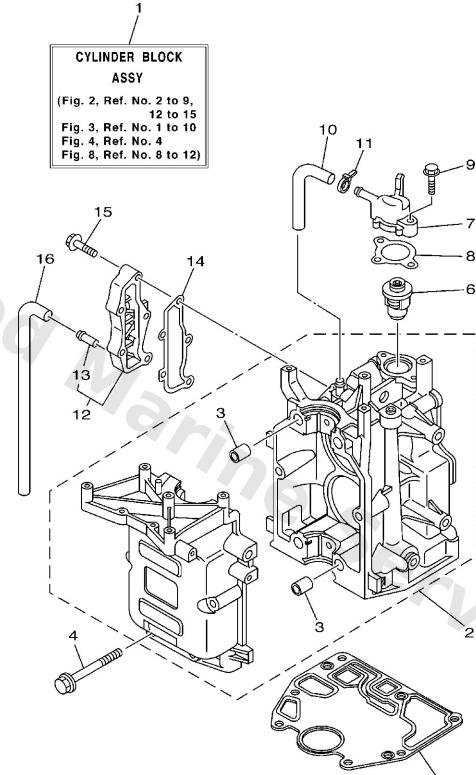

68R2100-3020

A5


Cylinder & Crankcase 2

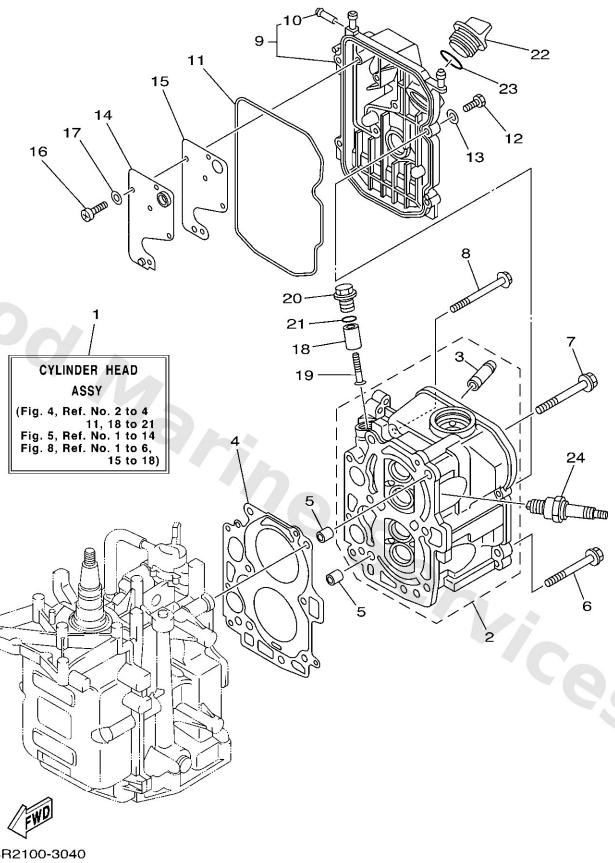

A7

| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68TW009A021S Cylinder head assembly | Buy now |
| 2 | 68T1111101S Head, cylinder 1 | Buy now |
| 3 | 67D1113310 Guide, valve 1 | Buy now |
| 4 | 68T1118100 Gasket, cylinder head 1 | Buy now |
| 5 | 9951010114 Pin, dowel(3vd) | Buy now |
| 6 | 9010508M36 Bolt (6g8) | Buy now |
| 7 | 9010508M78 Bolt, washer based | Buy now |
| 8 | 9011906049 Bolt, with washer | Buy now |
| 9 | 68T11191001S Cover, cylinder head 1 | Buy now |
| 10 | 6502437800 Pipe, joint 2 | Buy now |
| 11 | 68T1135600 Seal, cylinder 2 | Buy now |
| 12 | 9709506020 Bolt(7u8) | Buy now |
| 13 | 9299506600 Washer, plain (646) | Buy now |
| 14 | 68T1116800 Cover, breather | Buy now |
| 15 | 68T11169A0 Gasket, breather cover | Buy now |


Cylinder & Crankcase 2

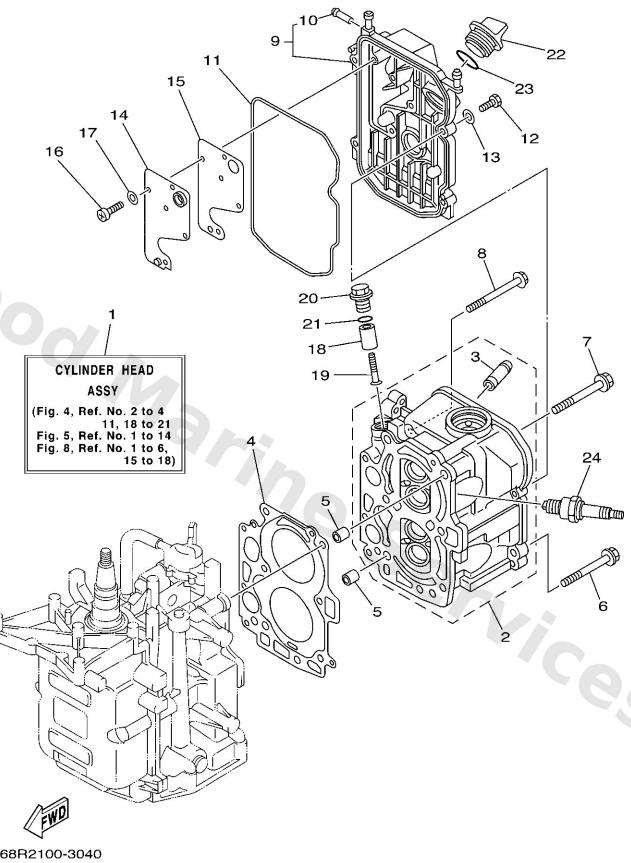

| Ref | Part | |
|-----|--|-------------------------|
| 16 | 9850704010 Screw, pan head(6g8) | Buy now |
| 17 | 9290704600 Washer(jf2) | Buy now |
| 18 | 6G81132500 Anode | Buy now |
| 19 | 9788005025 Screw, panhead (a93) | Buy now |
| 20 | 6G81119701 Plug, blind | Buy now |
| 21 | 9321013M63 O-ring (6g8) | Buy now |
| 22 | 6G81536300 Plug, oil | Buy now |
| 23 | 9321024M79 O-ring | Buy now |
| 24 | 9470200274 Plug, spark (br6hs-10) | Buy now |


A7

Electrical 1

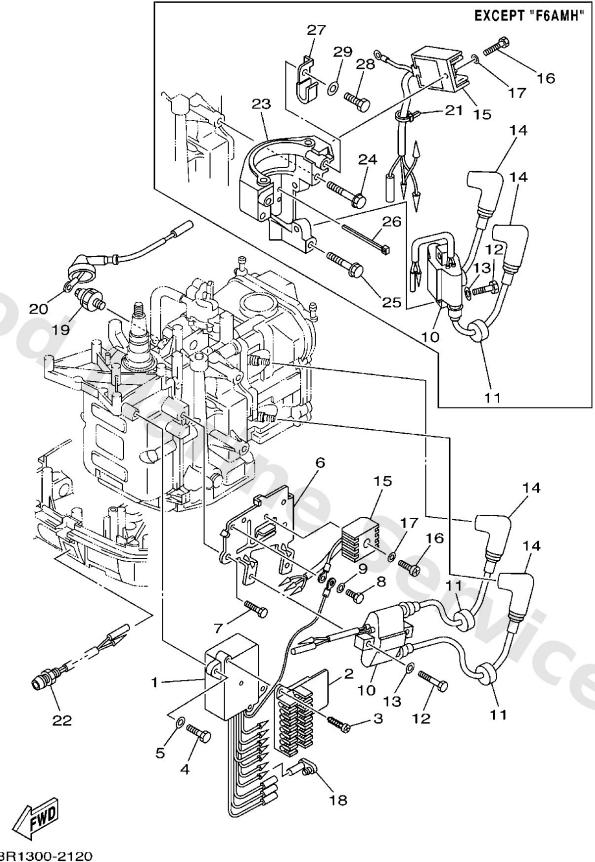


C3

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T8554000 C.d.i. unit assembly F6A,F8C | Buy now |
| 1 | 69F8554000 - F6B | Buy now |
| 2 | 68T8252200 Clamp, coupler | Buy now |
| 3 | 9778040512 Screw, pan head tapping | Buy now |
| 4 | 9709506020 Bolt(7u8) | Buy now |
| 5 | 9299506600 Washer, plain (646) | Buy now |
| 6 | 68T8554200 Bracket | Buy now |
| 7 | 9709508012 Bolt, hexagon deep recess | Buy now |
| 8 | 9709506012 Bolt(gh1) | Buy now |
| 10 | 6808557000 Ignition coil assembly | Buy now |
| 11 | 9048025161 Grommet(656) | Buy now |
| 12 | 9709506025 Bolt | Buy now |
| 14 | 6E38237021 Plug cap assembly | Buy now |
| 15 | 6648197061 Rectifier assembly | Buy now |
| 15 | 68T8196000 Rectifier & regulator assembly | Buy now |

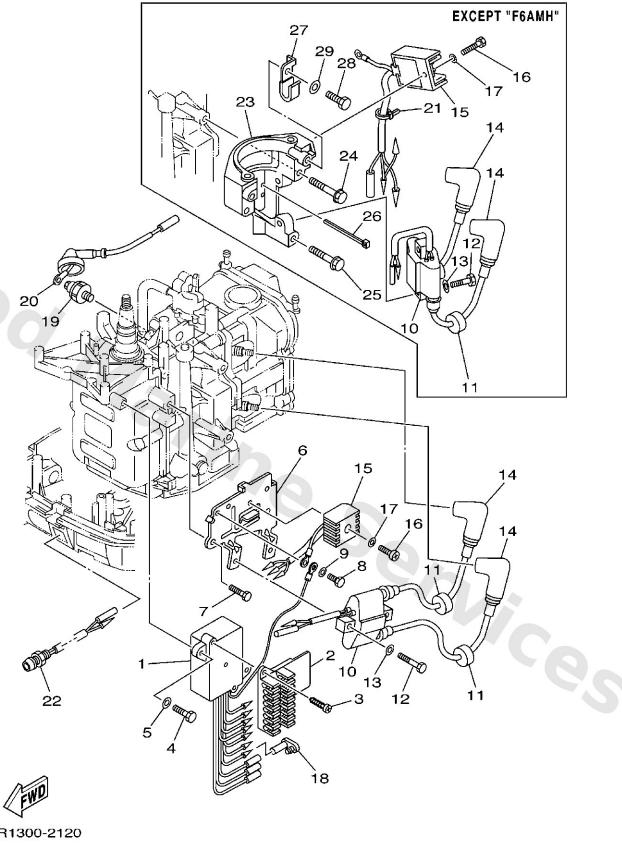

| Ref | Part | |
|-----|---|-------------------------|
| 16 | 9788005025 Screw, panhead (a93) | Buy now |
| 17 | 9299005600 Washer, plain (646) | Buy now |
| 18 | 6A08211900 Cover, lead wire | Buy now |
| 19 | 67F8250400 Oil pressure switch assembly | Buy now |
| 20 | 68T8212710 Wire, lead 2 | Buy now |
| 21 | 9046511M10 Clamp | Buy now |
| 22 | 68T8541000 Emergency signal light assembly | Buy now |
| 23 | 68T818220094 Bracket, starting motor | Buy now |
| 24 | 9011908046 Bolt, with washer | Buy now |
| 25 | 9011908020 Bolt, with washer | Buy now |
| 27 | 9046508M99 Clamp | Buy now |


C3

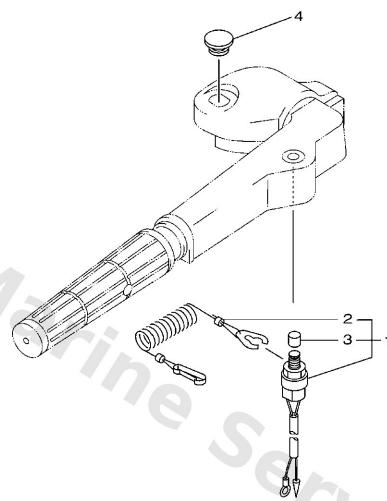

68R0300-0140


C5

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 65W8257501 Engine stop switch assembly | Buy now |
| 2 | 6828255600 Lanyard, stop switch | Buy now |
| 3 | 6898257Y00 Cap | Buy now |
| 4 | 6G14272500 Grommet | Buy now |

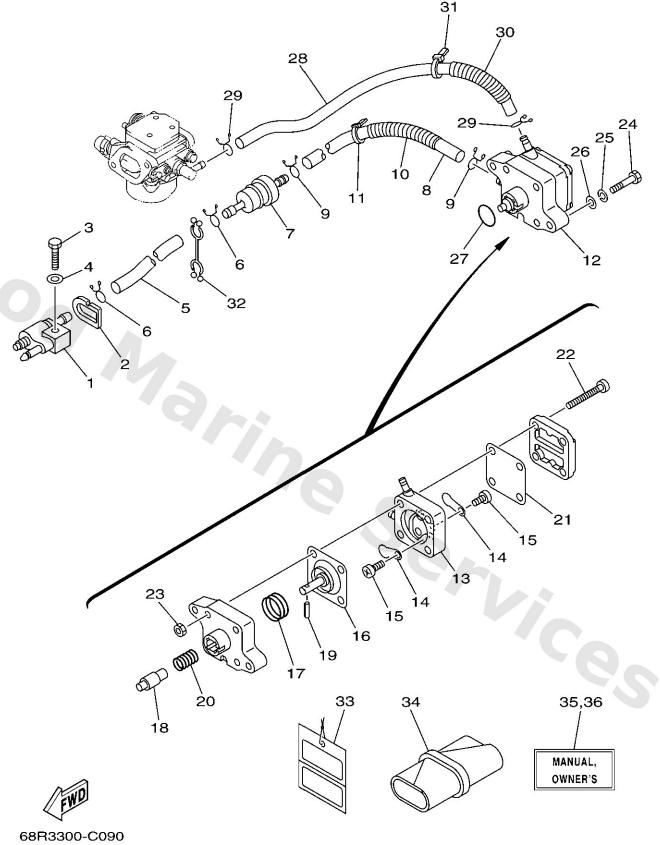

B5


| Ref | Part | |
|-----|---|-------------------------|
| 1 | 6G12430402 Fuel pipe joint comp. 1 | Buy now |
| 2 | 61N2432900 Seal | Buy now |
| 3 | 9709506025 Bolt | Buy now |
| 4 | 9299506600 Washer, plain (646) | Buy now |
| 5 | 9044510M18 Hose (l400) | Buy now |
| 6 | 9046709M09 Clip(6k8) | Buy now |
| 7 | 68T2425100 Strainer 1 | Buy now |
| 8 | 9044510M50 Hose (l400) | Buy now |
| 10 | 9044614M66 Hose(64x) | Buy now |
| 11 | 9046511M10 Clamp | Buy now |
| 12 | 68T2441000 Fuel pump assembly | Buy now |
| 13 | 66M2441301 Body 2 | Buy now |
| 14 | 6A02442101 Valve, check | Buy now |
| 15 | 6E71432500 Screw, pan head | Buy now |
| 16 | 66M2441100 Diaphragm | Buy now |

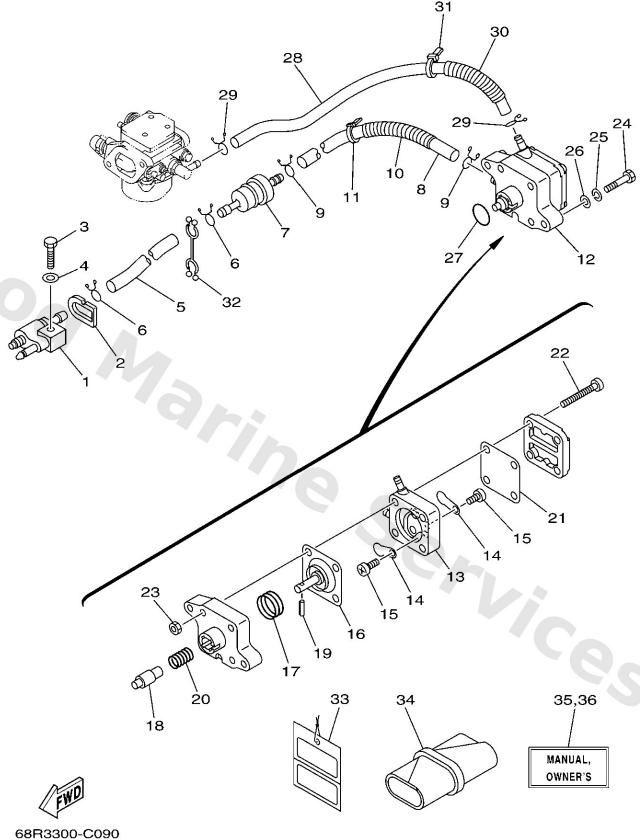

B5

| Ref | Part | |
|-----|--|-------------------------|
| 17 | 66M2442300 Spring, diaphragm | Buy now |
| 18 | 66M1313100 Plunger | Buy now |
| 19 | 66M2437400 Pin | Buy now |
| 20 | 66M2445400 Spring | Buy now |
| 21 | 66M2447100 Diaphragm | Buy now |
| 22 | 66M2444400 Screw | Buy now |
| 23 | 9538005600 Nut, hexagon (663) | Buy now |
| 24 | 9709506030 Bolt(jf7) | Buy now |
| 25 | 9299506100 Washer(6a1) | Buy now |
| 27 | 9321020M65 O-ring | Buy now |
| 28 | 9044510016 Hose (I280) | Buy now |
| 32 | 9046410M53 Clamp | Buy now |
| 33 | 61H2819R31 Tag Warning | Buy now |
| 34 | 68T2810000 Tool kit | Buy now |
| 35 | 68T2819973A0 Om f6amh,f6a '04 UR (E,F,S) | Buy now |


Fuel

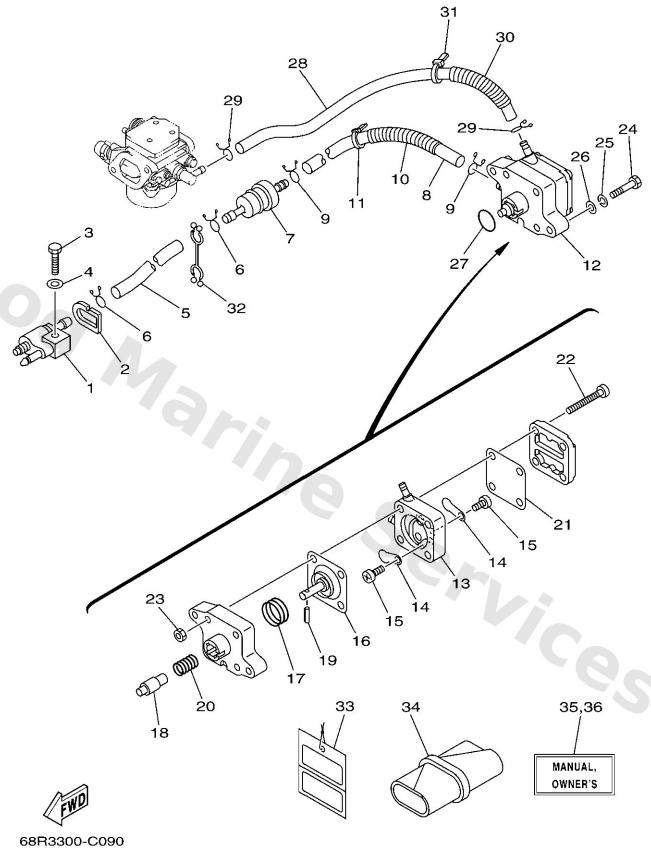

B5

| Ref | Part | |
|-----|--|-------------------------|
| 35 | 68T2819973B0 Om f6amh,f6a '04 UR (D,NL,I) | Buy now |
| 36 | 68T2819983A0 Om f6amh,f6a '04 UR (DK,P,GR) | Buy now |
| 36 | 68T2819983B0 Om f6amh,f6a '04 UR (N,S,SS) | Buy now |


Fuel Tank

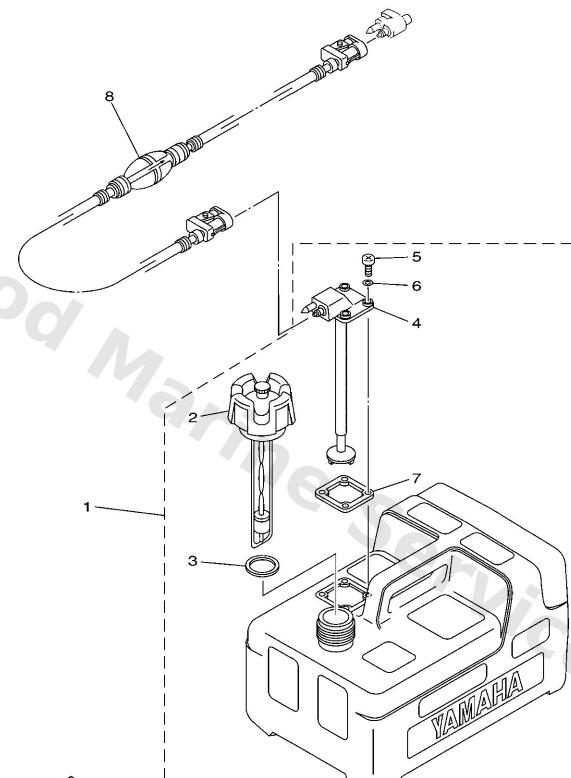

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 6YL2420102 Fuel Tank assembly AP | Buy now |
| 2 | 6YL2461000 Cap Assembly | Buy now |
| 3 | 6YL2464100 Gasket, cap 1 | Buy now |
| 4 | 6YL2426001 Fuel meter assembly | Buy now |
| 5 | 9015705M16 Screw, pan head | Buy now |
| 6 | 6YL2432900 Seal | Buy now |
| 7 | 6YL2426801 Gasket, fuel meter | Buy now |
| 8 | 6YL2430653 Fuel pipe comp. 1 AP | Buy now |

E7


Generator

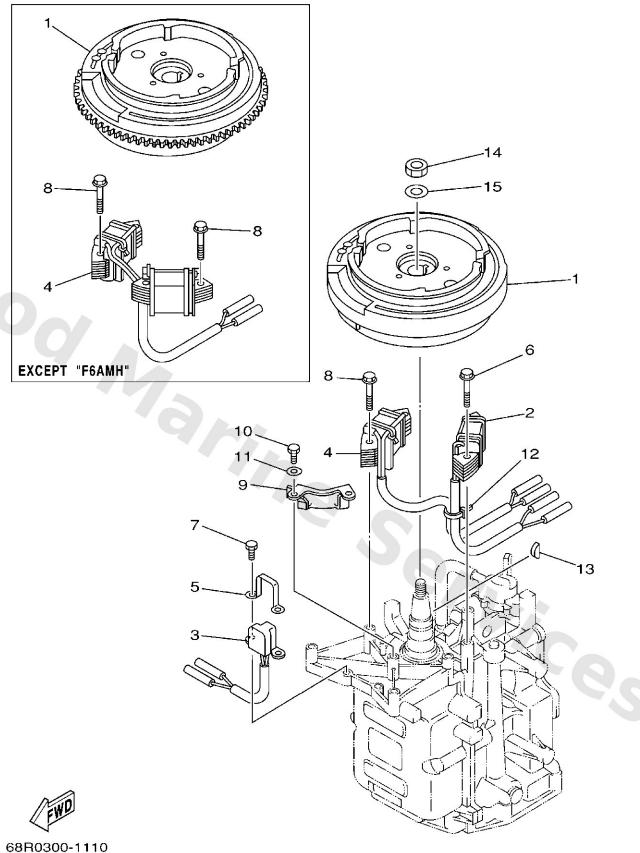

C2

| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68T8555001 Rotor assembly | Buy now |
| 1 | 68T8555011 Rotor assembly | Buy now |
| 2 | 68T8552000 Coil, charge | Buy now |
| 3 | 68T8558001 Coil, pulser | Buy now |
| 4 | 68T8553300 Coil, lighting | Buy now |
| 4 | 68T8553310 Coil, lighting | Buy now |
| 5 | 6H28558200 Attachment, pulser | Buy now |
| 6 | 9011906014 Bolt, with washer(61b) | Buy now |
| 7 | 9709505010 Bolt (682) | Buy now |
| 8 | 9011906MA1 Bolt, with washer(63m) | Buy now |
| 9 | 68T8132800 Clamp | Buy now |
| 10 | 9701306012 Bolt(gh1) | Buy now |
| 11 | 9290306600 Washer, plain (646) | Buy now |
| 12 | 9046511M10 Clamp | Buy now |
| 13 | 9028004M06 Key, woodruff(6a1) | Buy now |


Generator

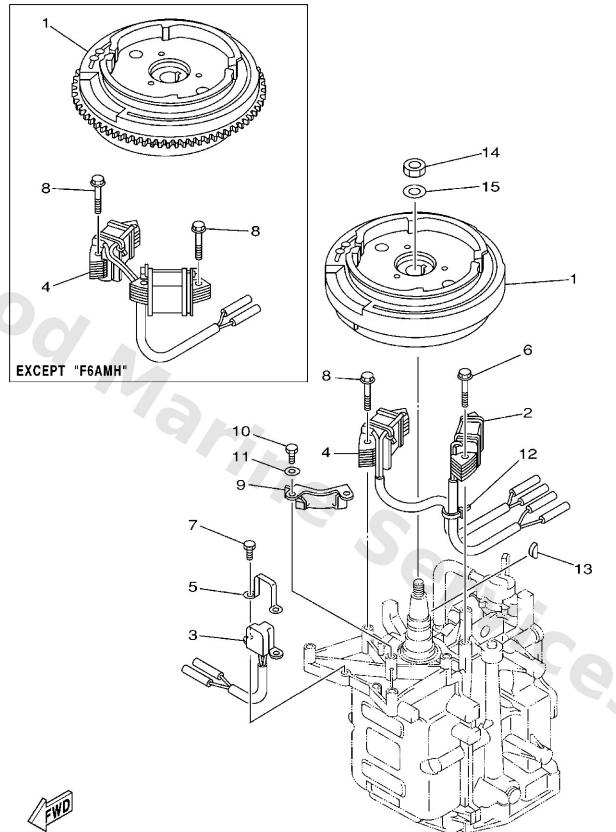

| Ref | Part | |
|-----|---|-------------------------|
| 14 | 9017012066 Nut, hexagon 6481155500 | Buy now |
| 15 | 9020112472 Washer, plate (4n0) | Buy now |

C2


Intake

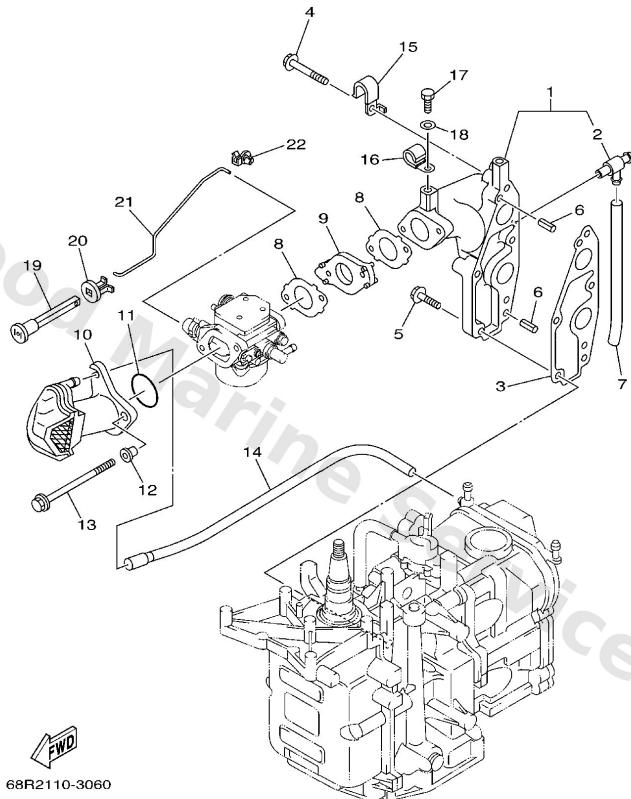

B2

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T13641201S Manifold 1 FLUSHING KIT | Buy now |
| 2 | 67F1248200 Pipe 2 | Buy now |
| 3 | 68T1364500 Gasket, manifold 1 | Buy now |
| 4 | 9011906MA5 Bolt, with washer | Buy now |
| 5 | 9011906MA3 Bolt, with washer | Buy now |
| 6 | 9169050014 Pin, spring (647) | Buy now |
| 7 | 9044509M20 Hose (L95) FLUSHING KIT | Buy now |
| 8 | 68T13646A0 Gasket, manifold 2 | Buy now |
| 9 | 68T1427100 Insulator | Buy now |
| 10 | 68T1444000 Silencer assembly, intake | Buy now |
| 11 | 9321031MJ5 O-ring | Buy now |
| 12 | 9038706M70 Collar (6h5) | Buy now |
| 13 | 9759506585 Bolt, flange | Buy now |
| 14 | 68T1248300 Pipe 3 | Buy now |
| 15 | 9046508M99 Clamp | Buy now |


Intake

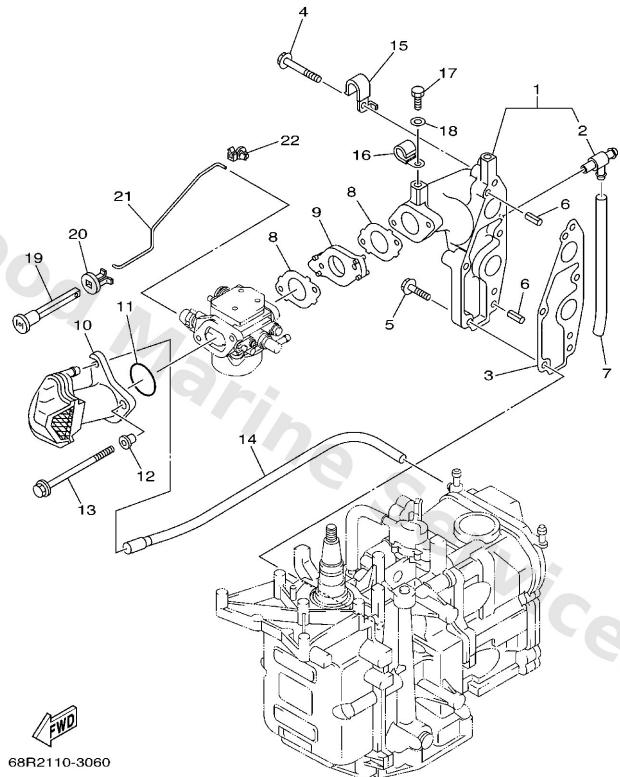

B2

| Ref | Part | |
|-----|--|-------------------------|
| 16 | 9046508M83 Clamp FLUSHING KIT | Buy now |
| 17 | 9709506010 Bolt FLUSHING KIT | Buy now |
| 18 | 9299506600 Washer, plain (646) FLUSHING KIT | Buy now |
| 19 | 6H44127101 Knob, choke | Buy now |
| 20 | 6894127300 Grommet | Buy now |
| 21 | 68T4125600 Rod, choke 1 | Buy now |
| 22 | 6J84126200 Joint, choke lever | Buy now |


Lower Casing & Drive 1

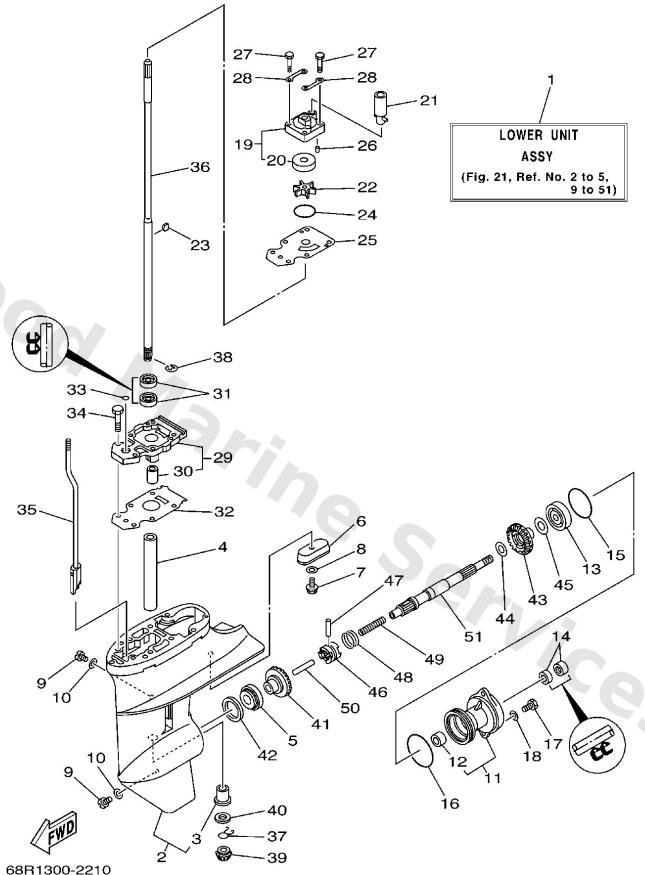

E3

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T45300004D Lower unit assembly S | Buy now |
| 1 | 68T45300104D Lower unit assembly L | Buy now |
| 2 | 68T45311004D Casing, lower | Buy now |
| 3 | 6G14531709 Bushing, drive shaft 2 | Buy now |
| 4 | 9038714M49 Collar (6g1) | Buy now |
| 5 | 93306004U0 Bearing (7k2) | Buy now |
| 6 | 68T4525100 Anode | Buy now |
| 7 | 9589506016 Bolt, flange deep recess | Buy now |
| 8 | 9299006300 Washer, tooth | Buy now |
| 9 | 9034008002 Plug, straight screw | Buy now |
| 10 | 9043008020 Gasket | Buy now |
| 11 | 6G145361014D Cap, lower casing | Buy now |
| 12 | 6G14536209 Bushing, lower casing cap | Buy now |
| 14 | 9310115074 Oil seal (655) | Buy now |
| 15 | 9321049046 O-ring (620) | Buy now |


Lower Casing & Drive 1

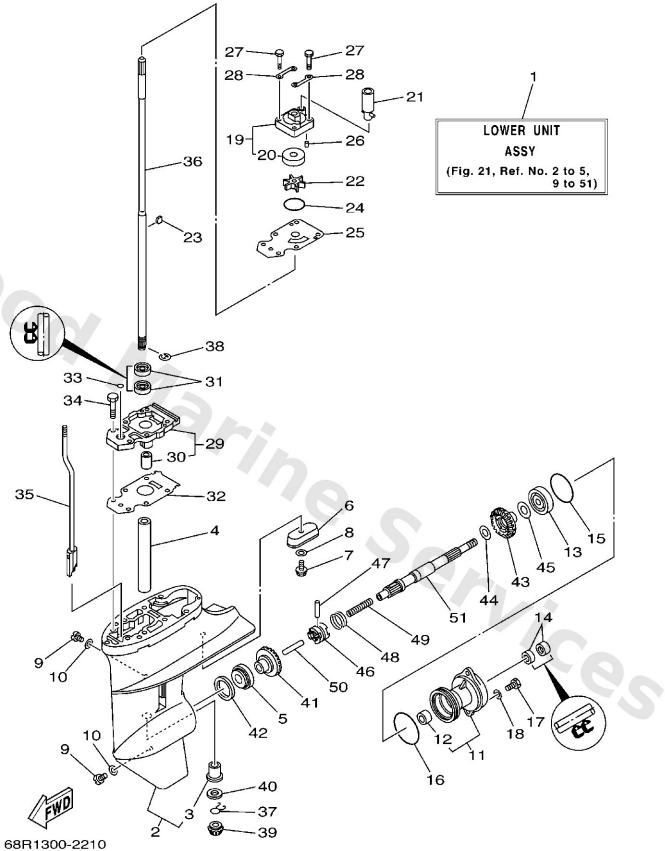

E3

| Ref | Part | |
|-----|---|-------------------------|
| 16 | 9321053M08 O-ring(50m) | Buy now |
| 17 | 9709506016 Bolt, hexagon deep recess | Buy now |
| 18 | 9299506600 Washer, plain (646) | Buy now |
| 19 | 63V4430100 Water pump housing comp. | Buy now |
| 20 | 63V4432200 Insert, cartridge | Buy now |
| 21 | 68T4436600 Damper, water seal 2 | Buy now |
| 22 | 68T4435200 Impeller | Buy now |
| 23 | 6644433800 Key, woodruff | Buy now |
| 24 | 9321044398 O-ring(55x) | Buy now |
| 25 | 68T4432300 Outer plate, cartridge | Buy now |
| 26 | 9360412M07 Pin, dowel (688) | Buy now |
| 27 | 9708008045 Bolt, hexagon | Buy now |
| 28 | 63V4432800 Plate | Buy now |
| 29 | 68T45331005B Housing, bearing | Buy now |
| 30 | 6G14531609 Bushing, drive shaft 1 | Buy now |


Lower Casing & Drive 1

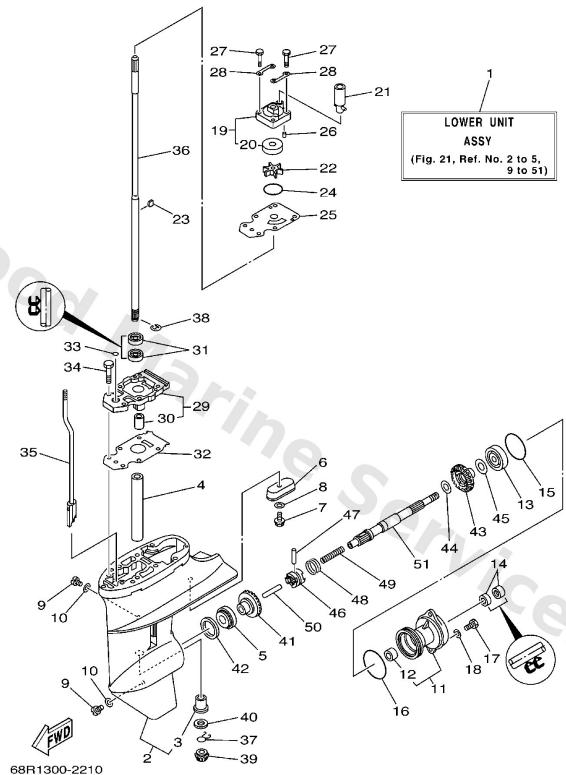

E3

| Ref | Part | |
|-----|---|-------------------------|
| 31 | 9310111M23 Oil seal (6g1) | Buy now |
| 32 | 68T45315A0 Packing, lower casing | Buy now |
| 33 | 9321006ME6 O-ring | Buy now |
| 34 | 9708008025 Screw, bind(j36) | Buy now |
| 35 | 68T4415000 Shift cam assembly | Buy now |
| 36 | 68T4551100 Shaft, drive S | Buy now |
| 36 | 68T4551110 Shaft, drive L | Buy now |
| 37 | 9046709M05 Clip (6g1) | Buy now |
| 38 | 9900107600 Circlip(6l2) | Buy now |
| 39 | 68T4555100 Pinion | Buy now |
| 40 | 6G1455330019 Shim (t:1.9mm) UR | Buy now |
| 40 | 6G1455330020 Shim (t:2.0mm) UR | Buy now |
| 40 | 6G1455330021 Shim (t:2.1mm) UR | Buy now |
| 40 | 6G1455330022 Shim (t:2.2mm) UR | Buy now |
| 41 | 68T4556000 Gear | Buy now |

Lower Casing & Drive 1

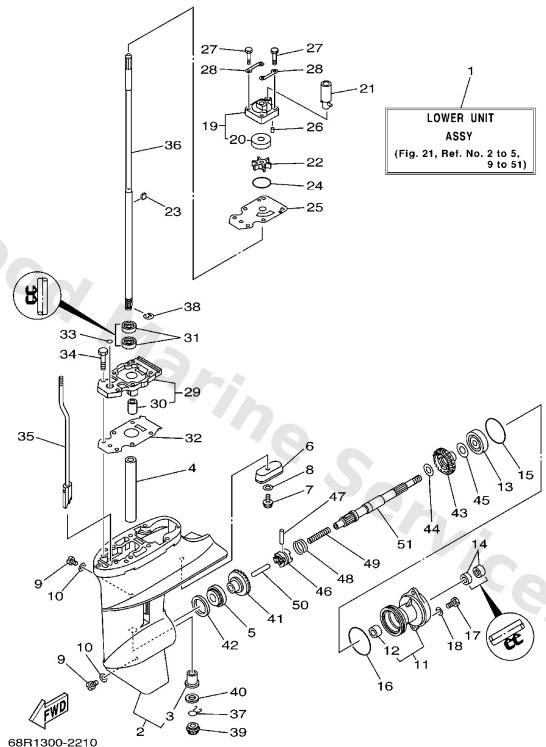


E3


| Ref | Part | |
|-----|---|-------------------------|
| 42 | 664455870110 Shim (t:0.10mm) UR | Buy now |
| 42 | 664455870112 Shim (t:0.12mm) UR | Buy now |
| 42 | 664455870115 Shim (t:0.15mm) UR | Buy now |
| 42 | 664455870118 Shim (t:0.18mm) UR | Buy now |
| 42 | 664455870130 Shim (t:0.30mm) UR | Buy now |
| 42 | 664455870140 Shim (t:0.40mm) UR | Buy now |
| 42 | 664455870150 Shim (t:0.50mm) UR | Buy now |
| 43 | 68T4557100 Gear | Buy now |
| 44 | 9020115M89 Washer, plate (6g1) | Buy now |
| 45 | 6474556700 Shim, gear adjust UN | Buy now |
| 46 | 68T4563100 Clutch, dog | Buy now |
| 47 | 6G14563200 Cross, pin | Buy now |
| 48 | 6544563300 Ring, cross pin | Buy now |
| 49 | 9050112M05 Spring, compression | Buy now |
| 50 | 6G14563500 Plunger, shift | Buy now |

Lower Casing & Drive 1

| Ref | Part | |
|-----|--|-------------------------|
| 51 | 68T4561100 Shaft, propeller | Buy now |

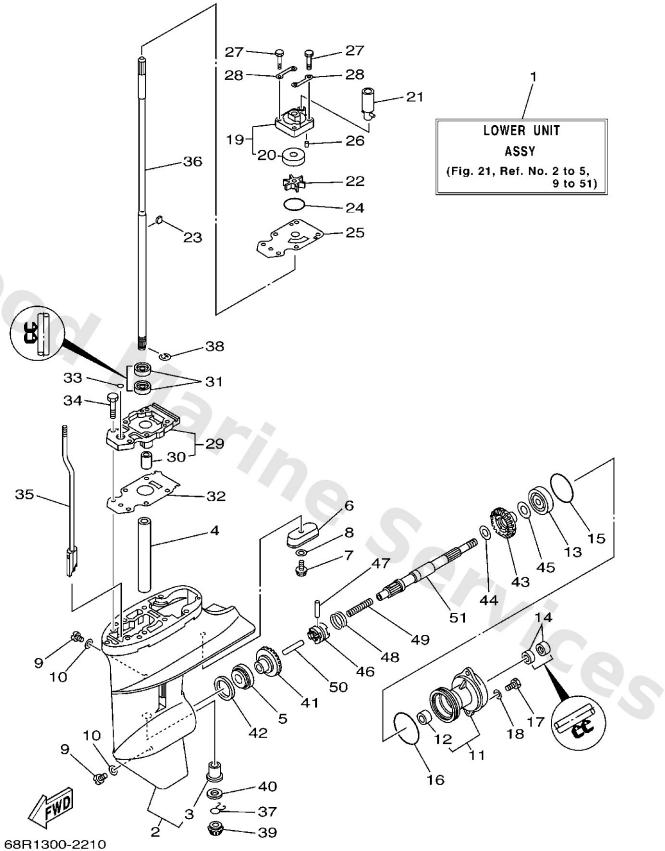


Lower Casing & Drive 2

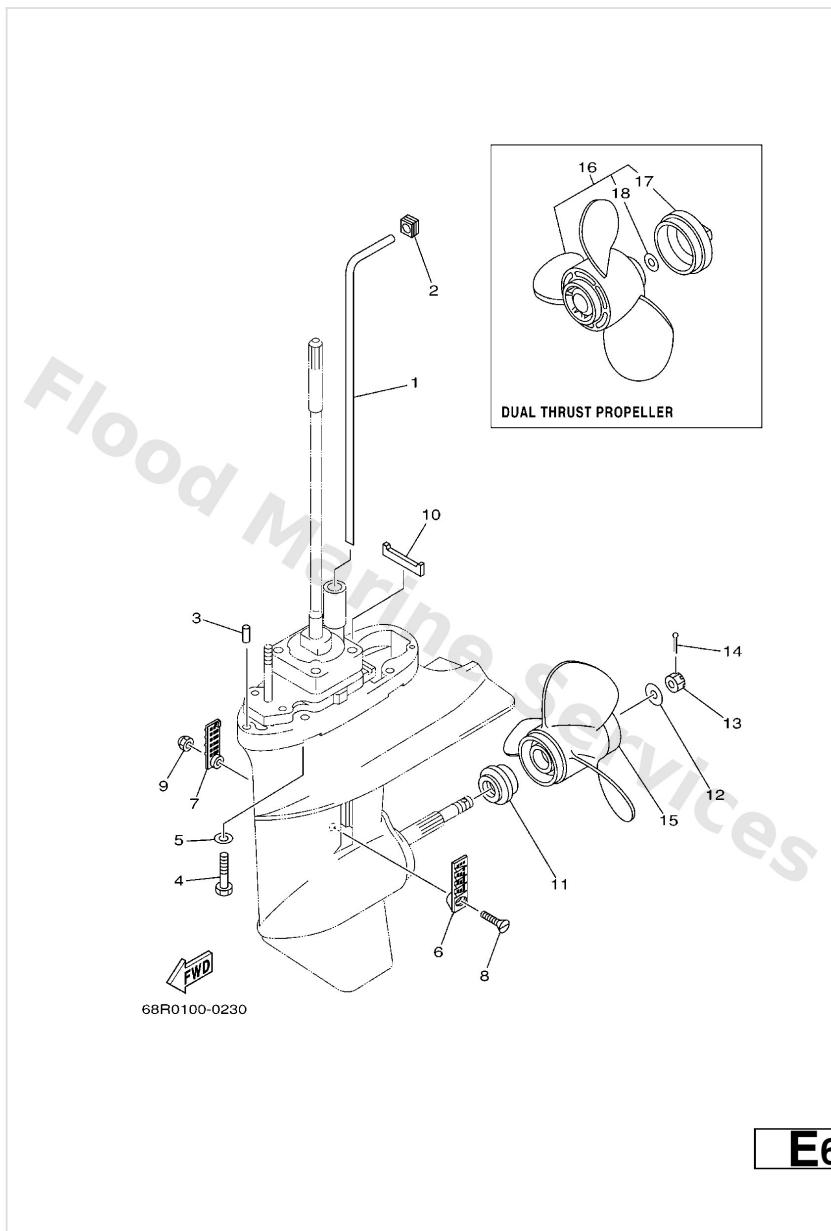

| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68T4436100 Tube, water 1 S | Buy now |
| 1 | 68T4436110 Tube, water 1 L | Buy now |
| 2 | 63V4436510 Damper, water seal 1 | Buy now |
| 3 | 9360412M07 Pin, dowel (688) | Buy now |
| 4 | 9707508035 Bolt(70w) | Buy now |
| 5 | 9299508600 Washer, plain (663) | Buy now |
| 6 | 6G14521400 Cover, water inlet | Buy now |
| 7 | 6G14521500 Cover, water inlet | Buy now |
| 8 | 9015205M03 Screw, countersunk | Buy now |
| 9 | 9018505002 Nut nylon (sus)(ex4) | Buy now |
| 10 | 63V4537500 Damper, seal | Buy now |
| 11 | 6G14598702 Spacer | Buy now |
| 12 | 9020110M01 Washer, plate(6m7) | Buy now |
| 13 | 9017110M01 Nut castle (683) | Buy now |
| 14 | 9149030020 Pin cotter | Buy now |


Lower Casing & Drive 2

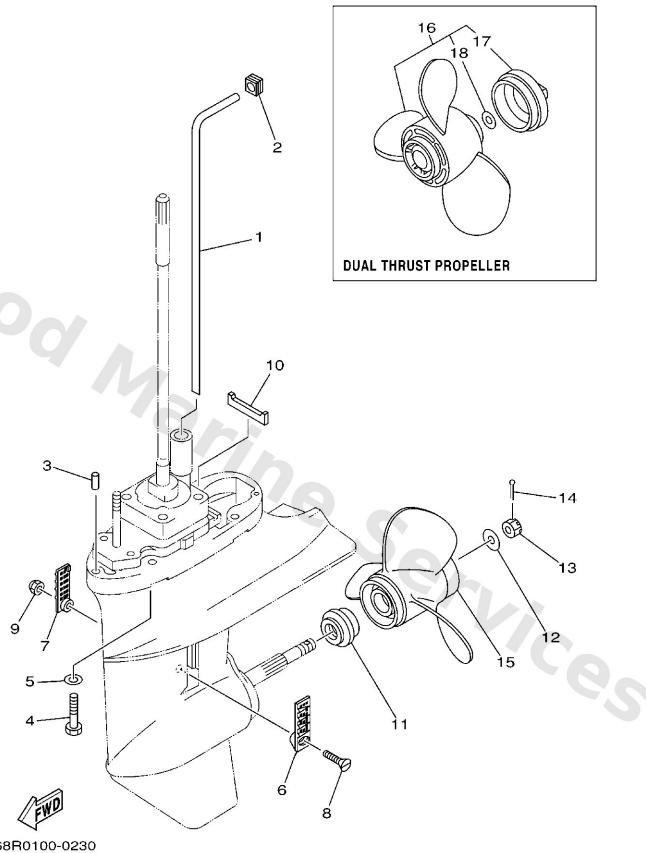

E6

| Ref | Part | |
|-----|---|-------------------------|
| 15 | 6G14594100EL Propeller (3x8-1/2"x8-1/2"-n) UR | Buy now |
| 15 | 6G14594300EL Propeller (3x8-1/2 x7-1/2 -n) | Buy now |
| 15 | 6G14594700EL Propeller (3x8-1/2"x6-1/2"-n) UR | Buy now |
| 15 | 6G14595200EL Propeller (3x8-1/2 x8 -n) UR | Buy now |
| 16 | 6G1W459101EL Propeller (3x9 x7 -n) UR | Buy now |
| 16 | 6G1W459200EL Propeller (3x9 x5 -n) | Buy now |
| 17 | 6G14561601 Nut, propeller | Buy now |
| 18 | 9020110M02 Washer, plate(6g9) | Buy now |


Oil Pan

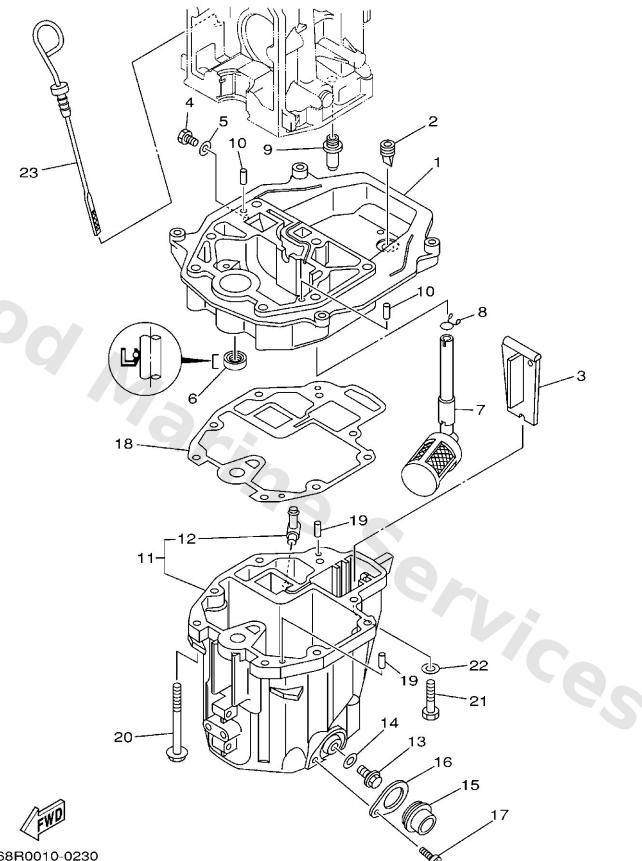

E2

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T411370094 Guide, exhaust | Buy now |
| 2 | 65W4271700 Rubber, seal 2 | Buy now |
| 3 | 68T4518100 Plate | Buy now |
| 4 | 9709508014 Bolt, hexagon deep recess | Buy now |
| 5 | 9043008143 Gasket (256-11198-00) | Buy now |
| 6 | 9310112M70 Oil seal | Buy now |
| 7 | 68T1342101 Strainer 2 | Buy now |
| 8 | 9046711M08 Clip(72x) | Buy now |
| 9 | 6G81157500 Relief valve ass'y | Buy now |
| 10 | 9360619M23 Pin, dowel | Buy now |
| 11 | 68T15311005B Oil pan | Buy now |
| 12 | 6H11137200 Nipple, hose | Buy now |
| 13 | 9034010M10 Plug, straight screw | Buy now |
| 14 | 9043010M11 Gasket | Buy now |
| 15 | 68T1531600 Damper, engine mount 1 | Buy now |


Oil Pan

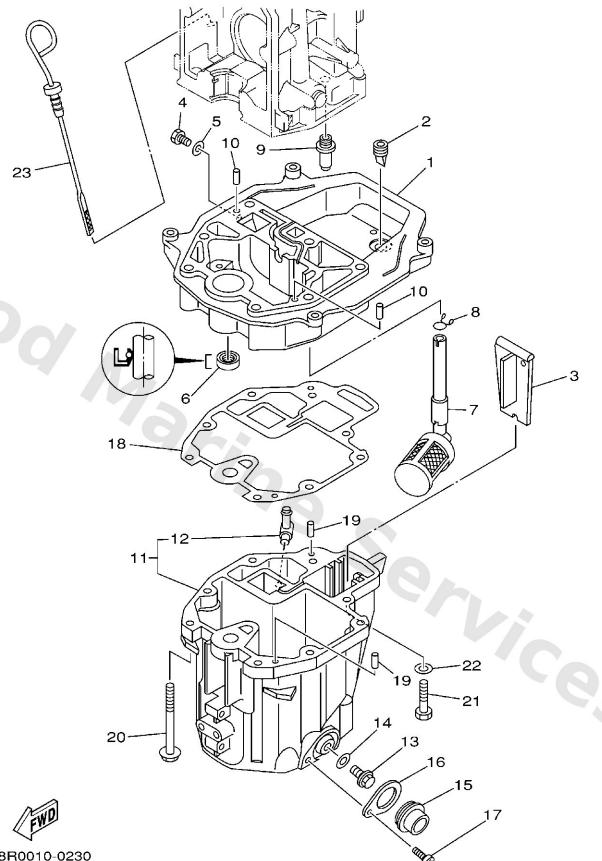

E2

| Ref | Part | |
|-----|--|-------------------------|
| 16 | 68T1531700 Spacer, engine mount | Buy now |
| 17 | 9788505008 Screw, pan head | Buy now |
| 18 | 68T1347500 Gasket | Buy now |
| 19 | 9360412M07 Pin, dowel (688) | Buy now |
| 20 | 9011908005 Bolt, with washer | Buy now |
| 21 | 9707508030 Bolt, hexagon (fj1) | Buy now |
| 22 | 9299508600 Washer, plain (663) | Buy now |
| 23 | 68T1536200 Plug, oil level | Buy now |

Oil Pump

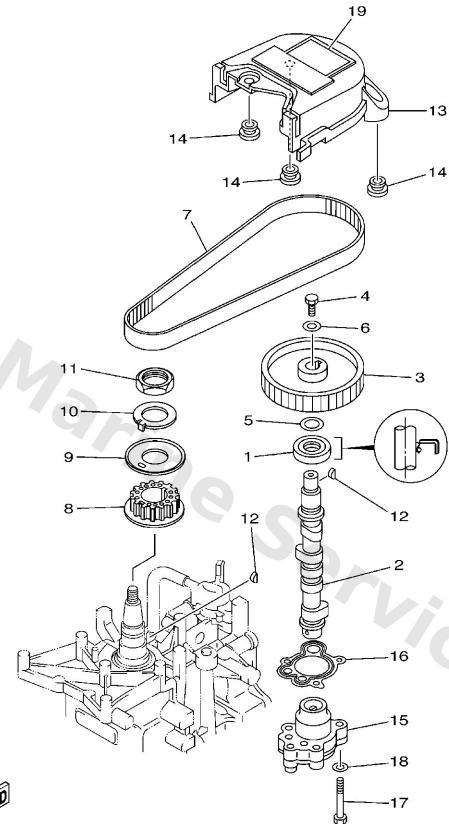


68R1300-2080

B4

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 9310218M21 Oil seal (6g8) | Buy now |
| 2 | 68T1217100 Camshaft 1 | Buy now |
| 3 | 66M115370094 Gear, driven | Buy now |
| 4 | 9701306016 Bolt, hexagon deep recess | Buy now |
| 5 | 9020113201 Washer 6474283300 | Buy now |
| 6 | 9020106M94 Washer (6g8) | Buy now |
| 7 | 68T4624100 Belt | Buy now |
| 8 | 68T1153600 Gear, drive | Buy now |
| 9 | 68T1155700 Washer 1 | Buy now |
| 10 | 6G81158701 Washer, lock | Buy now |
| 11 | 9017024M09 Nut (6g8) | Buy now |
| 12 | 9028003M01 Key woodruff 146115450000 | Buy now |
| 13 | 68T4629700 Cover, dust | Buy now |
| 14 | 9048010627 Grommet | Buy now |
| 15 | 68T1330000 Oil pump assembly | Buy now |


Oil Pump

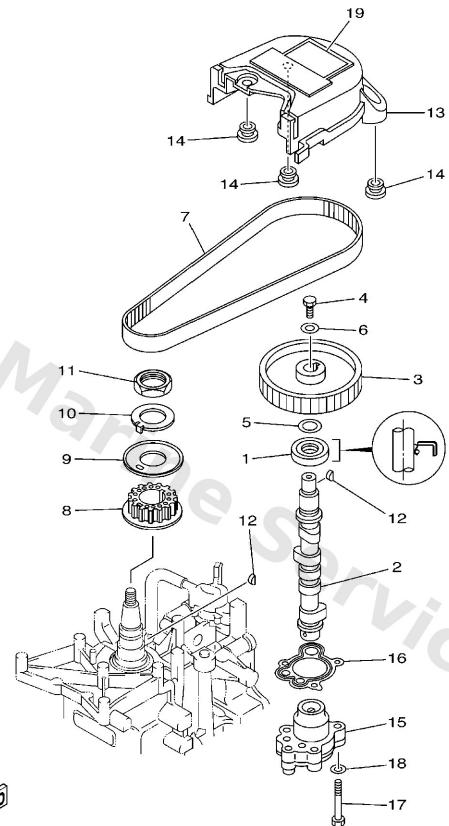

| Ref | Part | |
|-----|---|-------------------------|
| 16 | 68T1332900 Gasket, pump cover | Buy now |
| 17 | 9709506030 Bolt(jf7) | Buy now |
| 18 | 9299506600 Washer, plain (646) | Buy now |
| 19 | 6G91213860 Mark Caution | Buy now |

B4


Optional Parts

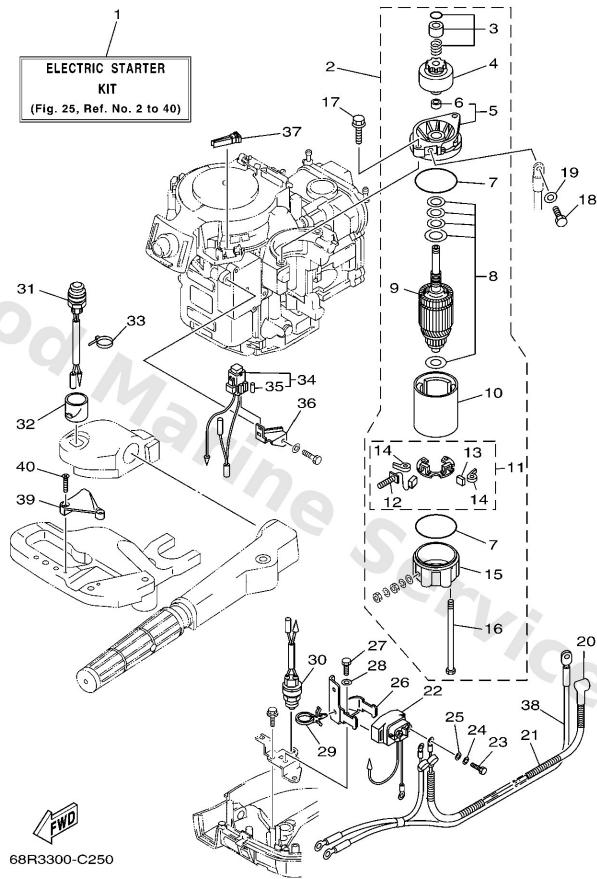

F2


| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68RW818000 Electric starter kit AP | Buy now |
| 2 | 68T8180000 Starting motor assembly | Buy now |
| 3 | 68T8185700 Pinion stopper set | Buy now |
| 4 | 6898180712 Pinion assembly | Buy now |
| 5 | 6F58183010 Front cover assembly | Buy now |
| 6 | 6898183100 Metal, front | Buy now |
| 7 | 6898184711 O-ring | Buy now |
| 8 | 6898180911 Washer kit | Buy now |
| 9 | 6898185011 Armature assembly | Buy now |
| 10 | 6898181011 Stator ass'y | Buy now |
| 11 | 6898184011 Brush holder assembly | Buy now |
| 12 | 6898181111 Brush 1 | Buy now |
| 13 | 6898181211 Brush 2 | Buy now |
| 14 | 6898181310 Spring, brush | Buy now |
| 15 | 6898182011 Rear cover ass'y | Buy now |

Optional Parts

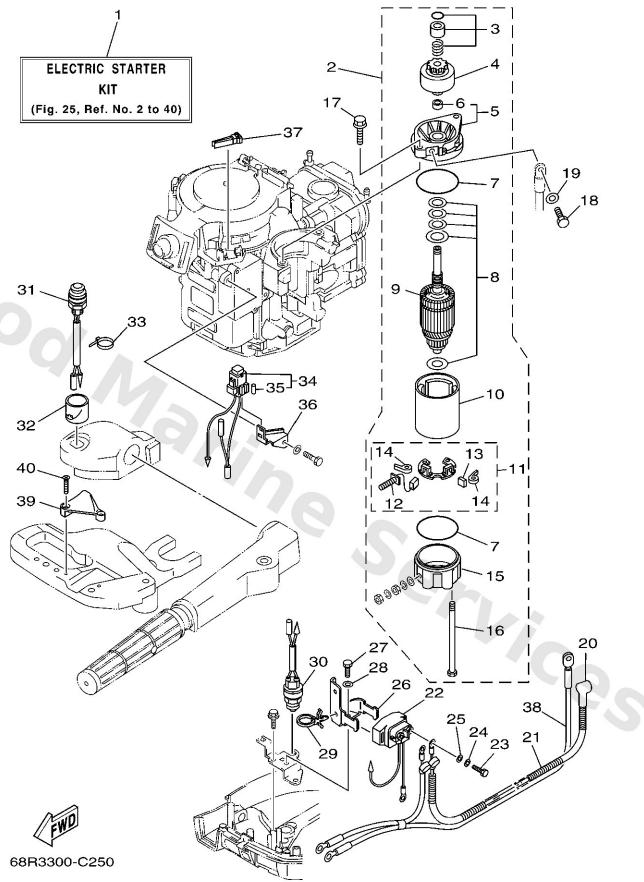

| Ref | Part | |
|-----|---|-------------------------|
| 16 | 6898182610 Bolt | Buy now |
| 17 | 9011908M76 Bolt, with washer(6e5) | Buy now |
| 18 | 9709508016 Bolt, hexagon deep recess | Buy now |
| 19 | 9299508600 Washer, plain (663) | Buy now |
| 20 | 6G88211700 Wire, lead | Buy now |
| 21 | 9044610M86 Hose | Buy now |
| 22 | 68T8194000 Starter relay assembly | Buy now |
| 23 | 9709506010 Bolt | Buy now |
| 24 | 9299506100 Washer(6a1) | Buy now |
| 25 | 9299506600 Washer, plain (646) | Buy now |
| 26 | 68T8194500 Plate, switch fitting | Buy now |
| 27 | 9709506012 Bolt(gh1) | Buy now |
| 29 | 9046512M56 Clamp(62t) | Buy now |
| 30 | 6F58254000 Neutral switch assembly | Buy now |
| 31 | 68T8187000 Starting switch assembly | Buy now |


Optional Parts

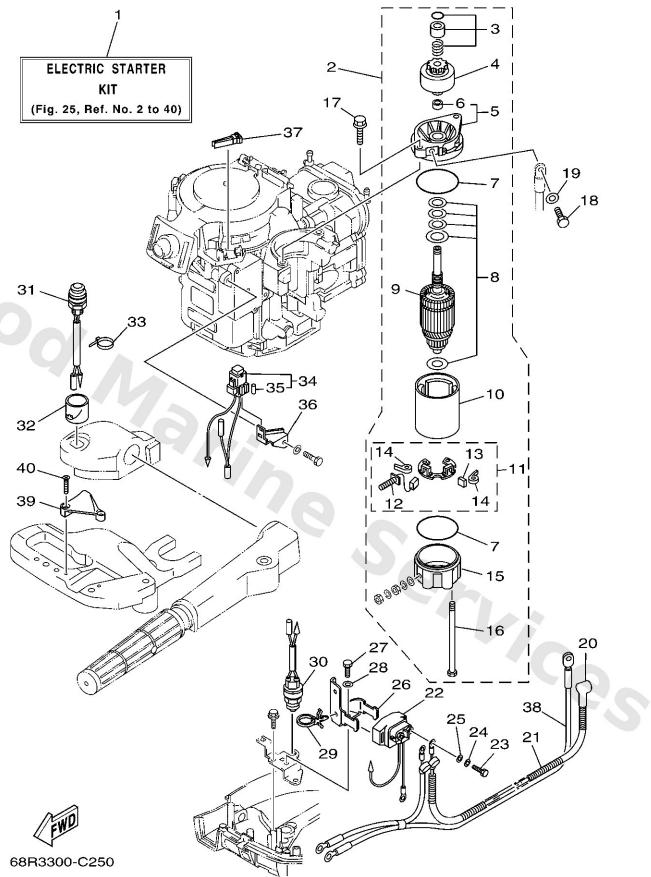

F2

| Ref | Part | |
|-----|---|-------------------------|
| 32 | 68T8182100 Cover, switch | Buy now |
| 33 | 9046511M10 Clamp | Buy now |
| 34 | 68T8215000 Fuse holder assembly | Buy now |
| 35 | 66V8215100 Fuse (10a) | Buy now |
| 36 | 68T8217100 Stay, fuse box | Buy now |
| 37 | 67F2812A00 Puller, fuse | Buy now |
| 38 | 68T8210500 Battery cable (l: 3.0m) | Buy now |
| 39 | 68T8259400 Clamp | Buy now |
| 40 | 9015105003 Screw, countersunk | Buy now |


Repair Kit 1

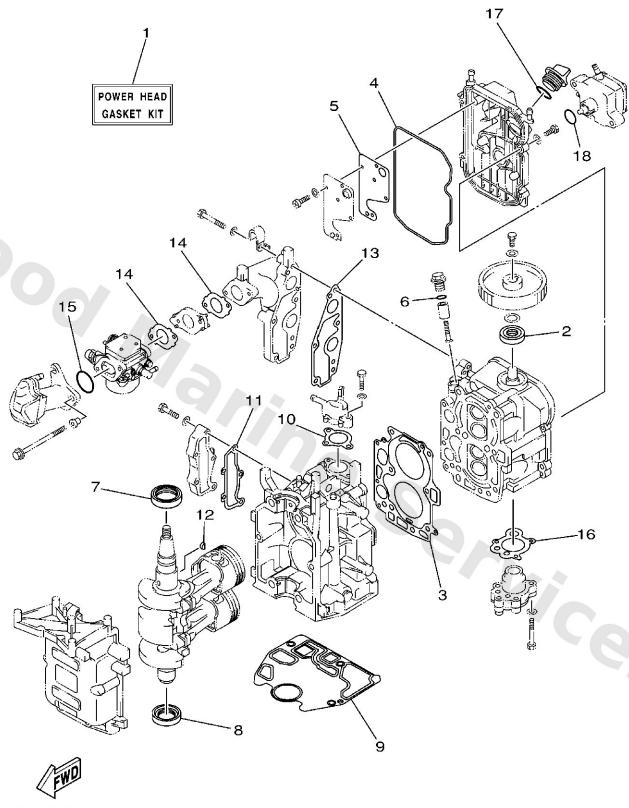

F4

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68TW000100 Power head gasket kit | Buy now |
| 2 | 9310218M21 Oil seal (6g8) | Buy now |
| 3 | 68T1118100 Gasket, cylinder head 1 | Buy now |
| 4 | 68T1135600 Seal, cylinder 2 | Buy now |
| 5 | 68T11169A0 Gasket, breather cover | Buy now |
| 6 | 9321013M63 O-ring (6g8) | Buy now |
| 7 | 9310230M22 Oil seal (6g8) | Buy now |
| 8 | 9310125M69 Oil seal | Buy now |
| 9 | 68T1135100 Gasket, cylinder | Buy now |
| 10 | 6G812414A0 Gasket, cover | Buy now |
| 11 | 68T41114A0 Gasket, exhaust outer cover | Buy now |
| 12 | 9028003M01 Key woodruff 146115450000 | Buy now |
| 13 | 68T1364500 Gasket, manifold 1 | Buy now |
| 14 | 68T13646A0 Gasket, manifold 2 | Buy now |
| 15 | 9321031MJ5 O-ring | Buy now |


Repair Kit 1

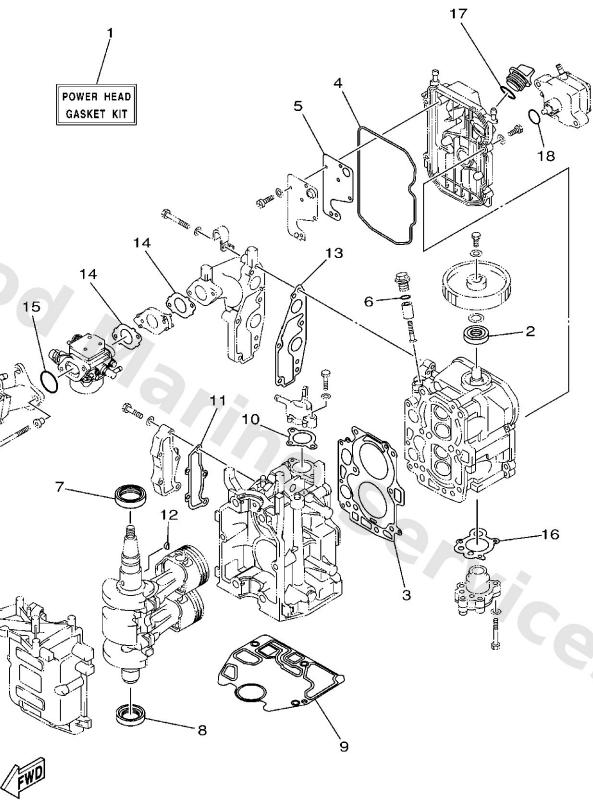

F4

| Ref | Part | |
|-----|--|-------------------------|
| 16 | 68T1332900 Gasket, pump cover | Buy now |
| 17 | 9321024M79 O-ring | Buy now |
| 18 | 9321020M65 O-ring | Buy now |


Repair Kit 2

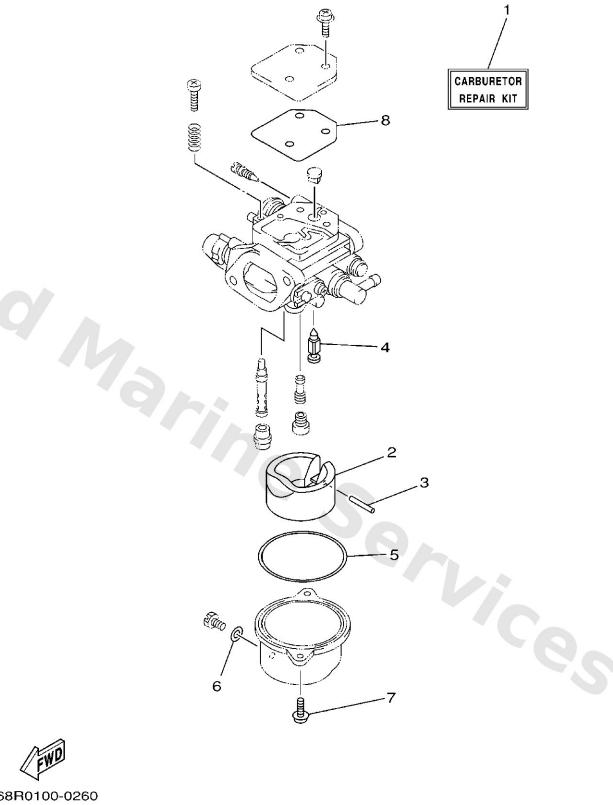

F5

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68TW009300 Carburetor repair kit | Buy now |
| 2 | 68T1438500 Float | Buy now |
| 3 | 67D1438600 Pin, float | Buy now |
| 4 | 68T1454600 Valve, needle | Buy now |
| 5 | 67D1498400 Gasket, float chamber | Buy now |
| 6 | 6J81495900 Gasket, drin screw | Buy now |
| 7 | 9798004112 Screw, pan head (686) | Buy now |
| 8 | 67D1453600 Gasket | Buy now |


Repair Kit 3

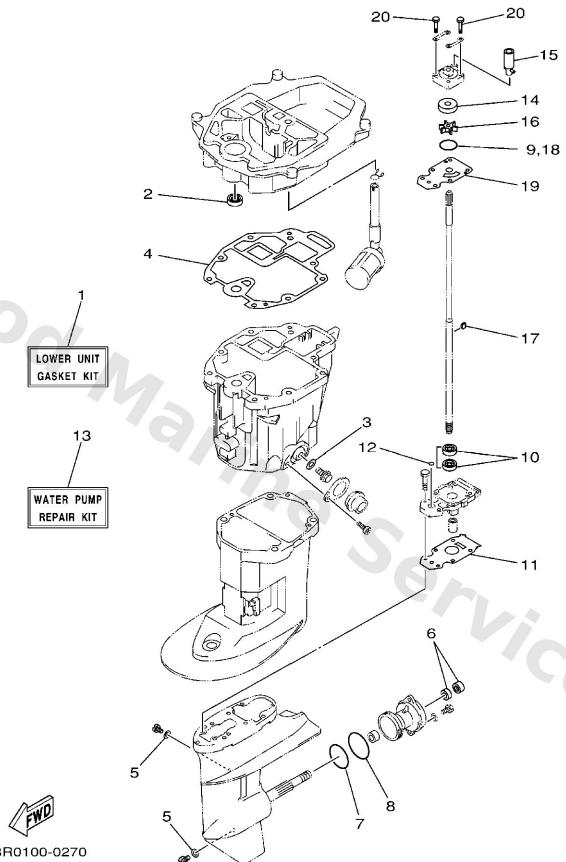

F6

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68TW000120 Lower unit gasket kit | Buy now |
| 2 | 9310112M70 Oil seal | Buy now |
| 3 | 9043010M11 Gasket | Buy now |
| 4 | 68T1347500 Gasket | Buy now |
| 5 | 9043008020 Gasket | Buy now |
| 6 | 9310115074 Oil seal (655) | Buy now |
| 7 | 9321049046 O-ring (620) | Buy now |
| 8 | 9321053M08 O-ring(50m) | Buy now |
| 9 | 9321044398 O-ring(55x) | Buy now |
| 10 | 9310111M23 Oil seal (6g1) | Buy now |
| 11 | 68T45315A0 Packing, lower casing | Buy now |
| 12 | 9321006ME6 O-ring | Buy now |
| 13 | 68TW007800 Water pump repair kit | Buy now |
| 14 | 63V4432200 Insert, cartridge | Buy now |
| 15 | 68T4436600 Damper, water seal 2 | Buy now |


Repair Kit 3

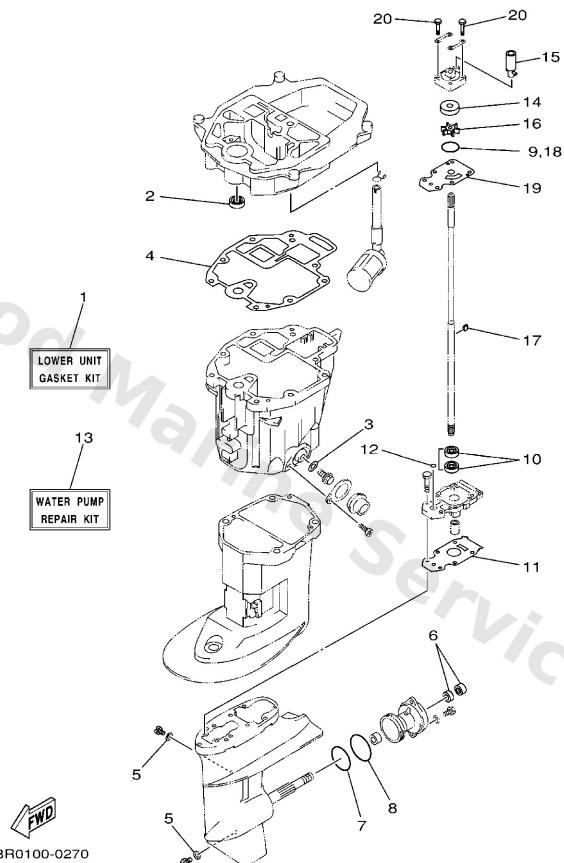

F6

| Ref | Part | |
|-----|--|-------------------------|
| 16 | 68T4435200 Impeller | Buy now |
| 17 | 6644433800 Key, woodruff | Buy now |
| 19 | 68T4432300 Outer plate, cartridge | Buy now |
| 20 | 9708008045 Bolt, hexagon | Buy now |


Starter

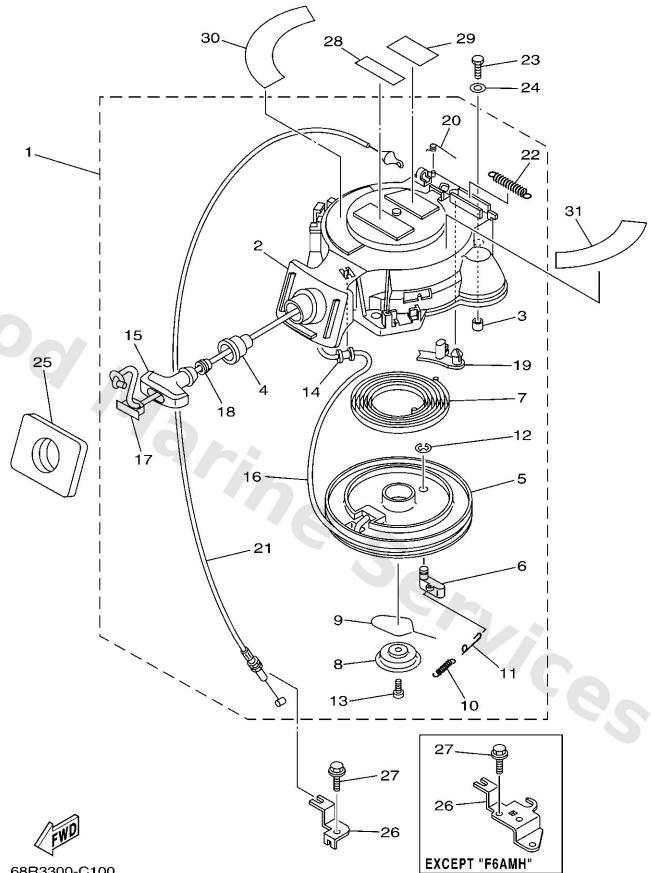

B7

| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68T1571001 Starter assembly | Buy now |
| 2 | 68T1571101 Case, Starter | Buy now |
| 3 | 67D1576400 Collar 1 | Buy now |
| 4 | 68T1579500 Guide, rope | Buy now |
| 5 | 63V1571400 Drum, sheave | Buy now |
| 6 | 63V1574100 Pawl, drive | Buy now |
| 7 | 63V1571300 Spring, starter | Buy now |
| 8 | 68T1571600 Plate, drive | Buy now |
| 9 | 63V1570501 Spring, drive pawl | Buy now |
| 10 | 63V1576701 Spring | Buy now |
| 11 | 68T1578400 Spring, return | Buy now |
| 12 | 63V1574400 Circlip | Buy now |
| 13 | 68T1579300 Screw | Buy now |
| 14 | 68T1576400 Collar 1 | Buy now |
| 15 | 6G11575500 Handle, starter | Buy now |


Starter

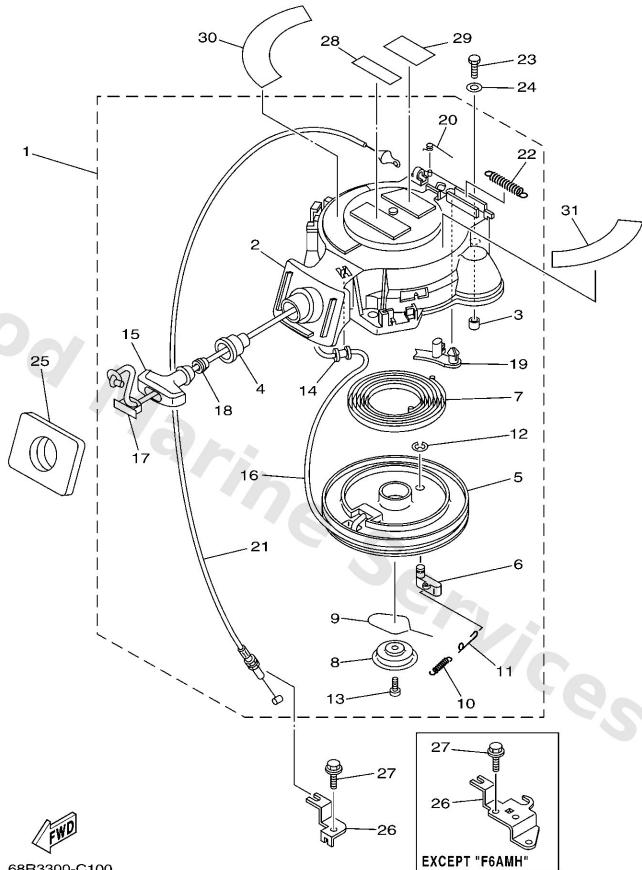

B7

| Ref | Part | |
|-----|---|-------------------------|
| 16 | * item_description *1 | Buy now |
| 17 | 6G11577900 Cover | Buy now |
| 18 | 6A01578900 Damper | Buy now |
| 19 | 66T1579400 Stopper | Buy now |
| 20 | 66T1573400 Spring, return | Buy now |
| 21 | 68T1577000 Cable comp., starter stop | Buy now |
| 22 | 66T1573100 Retainer, spring | Buy now |
| 23 | 9709506020 Bolt(7u8) | Buy now |
| 24 | 9299506600 Washer, plain (646) | Buy now |
| 25 | 68T1576200 Seal, rubber 2 | Buy now |
| 26 | 68T1577400 Stay 4 | Buy now |
| 26 | 68T1577410 Stay 4 | Buy now |
| 27 | 9010906M86 Bolt | Buy now |
| 28 | 6A18362541 Mark 5 | Buy now |
| 29 | 6A18362551 Mark 5 | Buy now |


Starter

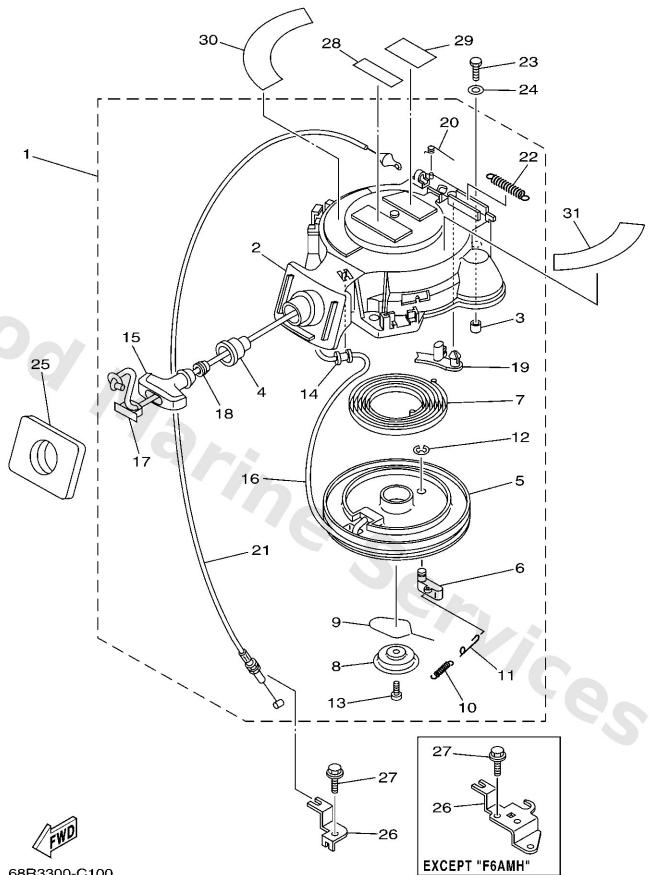

B7

| Ref | Part | |
|-----|---|-------------------------|
| 30 | 68T1343761 Mark, Caution | Buy now |
| 31 | 68T8571160 Mark, caution | Buy now |


Steering

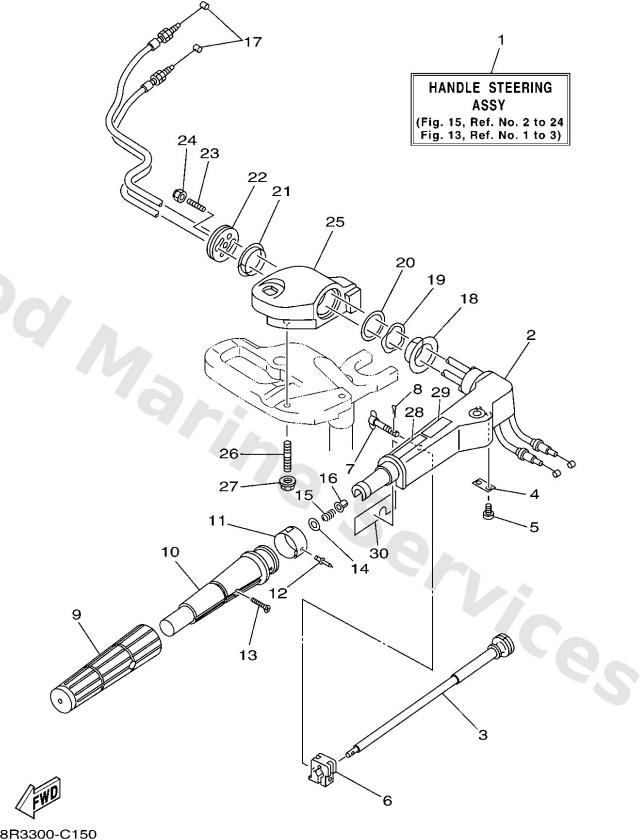

D1

| Ref | Part | |
|-----|--|-------------------------|
| 1 | 68TW0084014D Handle steering assembly | Buy now |
| 2 | 63V42111014D Handle, steering | Buy now |
| 3 | 6G14213801 Lever, throttle | Buy now |
| 4 | 6E04215902 Stay | Buy now |
| 5 | 9788505012 Screw,pan head (646) | Buy now |
| 6 | 6G14212600 Piece, friction | Buy now |
| 7 | 6G14212501 Bolt, friction adjusting | Buy now |
| 8 | 9149016010 Pin, cotter | Buy now |
| 9 | 67D4217700 Rubber, handle | Buy now |
| 10 | 67D4211900 Grip, steering handle | Buy now |
| 11 | 68R4213710 Indicator, Throttle F6A | Buy now |
| 11 | 68T4213700 Indicator, throttle F8C | Buy now |
| 11 | 69F4213710 Indicator, Throttle F6B | Buy now |
| 12 | 9026902M09 Rivet(6l5) | Buy now |
| 13 | 9014905M13 Screw, countersunk | Buy now |


Steering

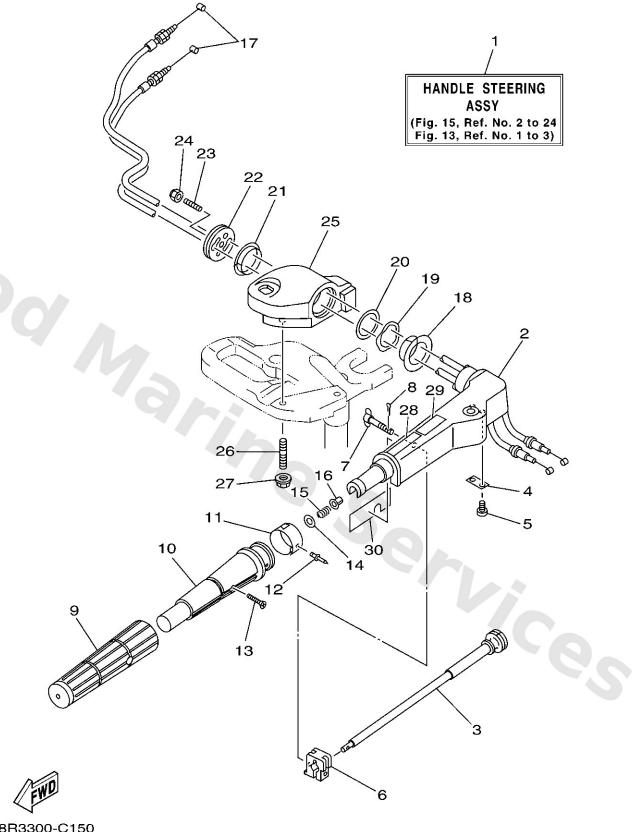

D1

| Ref | Part | |
|-----|---|-------------------------|
| 14 | 9290310600 Washer, plate | Buy now |
| 15 | 9050123215 Spring (655) | Buy now |
| 16 | 9038608032 Bushing (650) | Buy now |
| 17 | 68T2630101 Throttle cable assembly | Buy now |
| 18 | 9038634M97 Bush(63v) | Buy now |
| 19 | 9020636M21 Washer, wave(63v) | Buy now |
| 20 | 9020236M55 Washer, plate(63v) | Buy now |
| 21 | 9038633M96 Bush(63v) | Buy now |
| 22 | 68T4213101 Cover, handle steering | Buy now |
| 23 | 9011608015 Bolt, stud | Buy now |
| 24 | 9018508057 Nut, nylon (6j8) | Buy now |
| 25 | 68T42121004D Bracket & washer set | Buy now |
| 26 | 9011610019 Bolt Stud | Buy now |
| 27 | 9017910M33 Nut | Buy now |
| 28 | 6E08362741 Label, caution 7 | Buy now |


Steering

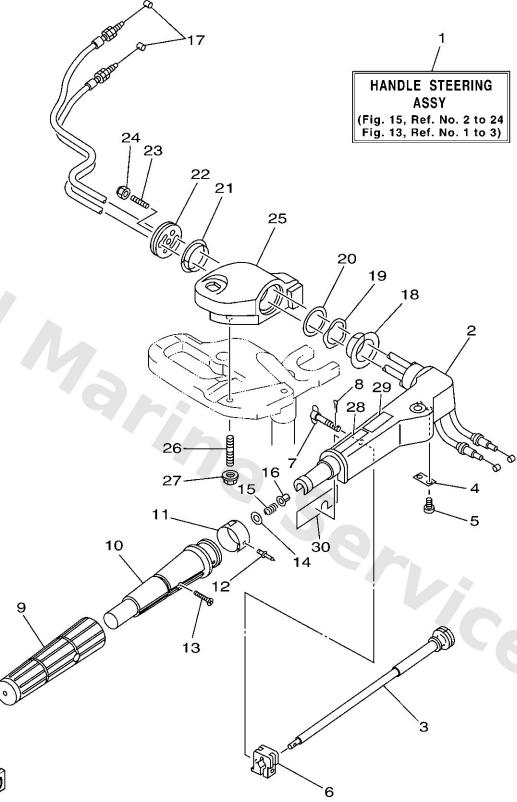

D1

| Ref | Part | |
|-----|---|-------------------------|
| 29 | 6E08362751 - | Buy now |
| 30 | 68T1571Y60 Mark, Caution | Buy now |

Steering Guide

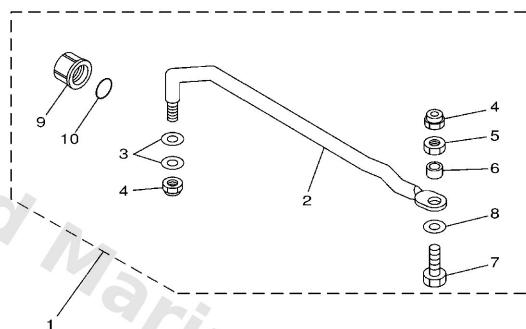


68R0300-0290

F1

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T6135000 Steering guide attachment kit AP F8C | Buy now |
| 2 | 68T6135100 Rod Steering Link | Buy now |
| 3 | 9020110M20 Washer, plate (663) | Buy now |
| 4 | 9018509M01 Nut, nylon (663) | Buy now |
| 5 | 9017009M03 Nut (689) | Buy now |
| 6 | 9038710M42 Coller (688) | Buy now |
| 7 | 6E56135500 Bolt | Buy now |
| 8 | 9020110M63 Washer, plate | Buy now |
| 9 | 6E54314501 Cap, clamp bracket | Buy now |
| 10 | 9321016275 O-ring | Buy now |


Top Cowling

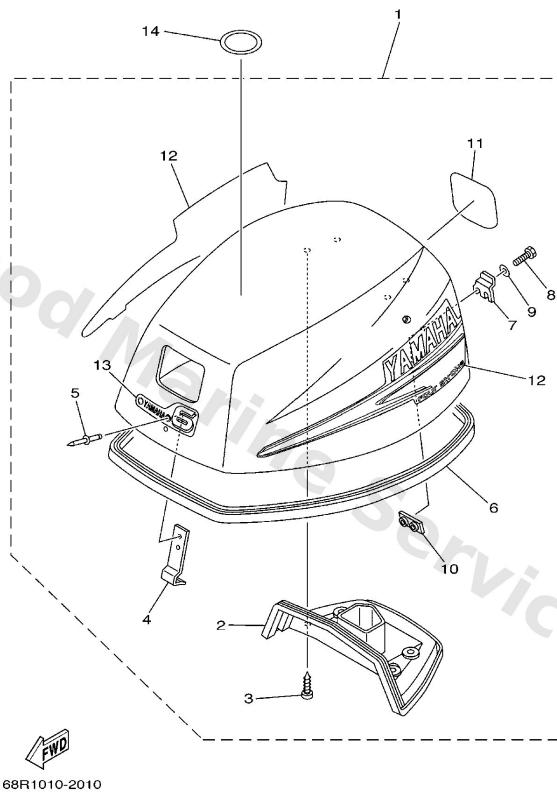

A4

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68R42610604D Top Cowling assembly F6A,F6B | Buy now |
| 1 | 68T42610604D Top Cowling assembly F8C | Buy now |
| 2 | 68T4261300 Molding Air Duct | Buy now |
| 3 | 9778060516 Screw, panhead tapping (j20) | Buy now |
| 4 | 6G14265102 Hook | Buy now |
| 5 | 9026604M04 Rivet(6e7) | Buy now |
| 6 | 68T4261500 Seal | Buy now |
| 7 | 68T4265200 Hook | Buy now |
| 8 | 9709505016 Bolt(6a1) | Buy now |
| 9 | 9299505600 Washer, plain (646) | Buy now |
| 10 | 68T4264900 Holder, clamp band | Buy now |
| 11 | 68R4267820 Graphic, rear F6A,F6B | Buy now |
| 11 | 68T4267820 Graphic, rear F8C | Buy now |
| 12 | 68TW007060 Graphic set | Buy now |
| 13 | 68R4267700 Graphic, Front F6A,F6B | Buy now |


Top Cowling

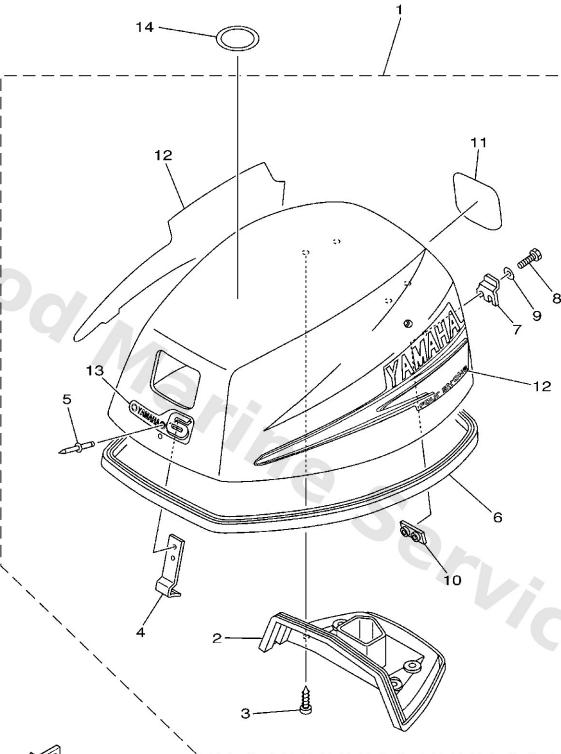

| Ref | Part | |
|-----|--|-------------------------|
| 13 | 68T4267700 Graphic, front F8C | Buy now |
| 14 | 67F1343402 Label, Caution | Buy now |

A4


Upper Casing

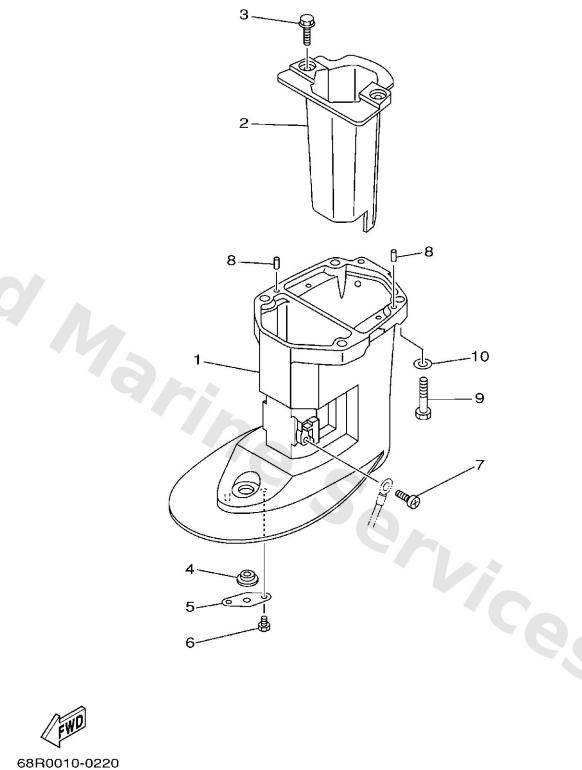

E1

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 68T45111004D Casing upper S | Buy now |
| 1 | 68T4511104D Casing, upper L | Buy now |
| 2 | 68T14711005B Muffler 1 | Buy now |
| 3 | 9757506514 Bolt, hexagon w/w deep recess | Buy now |
| 4 | 9048014M54 Grommet | Buy now |
| 5 | 68T4532100 Plate | Buy now |
| 6 | 9709506008 Bolt (fj1) | Buy now |
| 7 | 9788505008 Screw, pan head | Buy now |
| 8 | 9360412M07 Pin, dowel (688) | Buy now |
| 9 | 9707508035 Bolt(70w) | Buy now |
| 10 | 9299508600 Washer, plain (663) | Buy now |

Valve

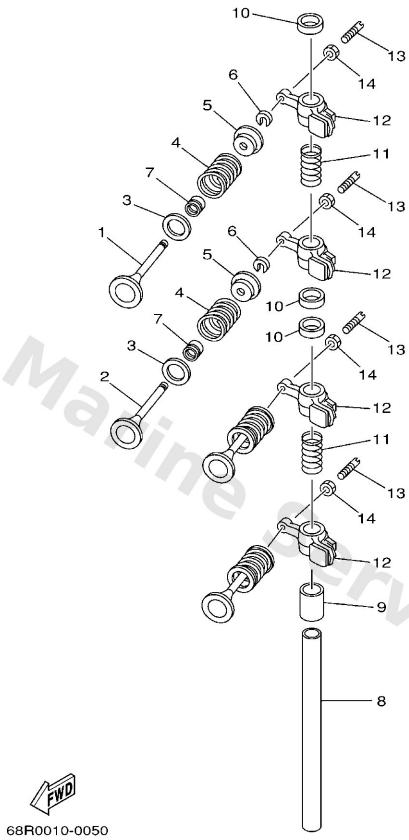

B1

| Ref | Part | |
|-----|---|-------------------------|
| 1 | 67D1211100 Valve, intake | Buy now |
| 2 | 67D1212100 Valve, exhaust | Buy now |
| 3 | 68T1211600 Seat, valve spring | Buy now |
| 4 | 68T1211300 Spring, valve inne | Buy now |
| 5 | 7NJ1211700 Retainer, valve spring | Buy now |
| 6 | 7NJ1211800 Cotter, valve | Buy now |
| 7 | 51Y1211900 Seal, valve stem | Buy now |
| 8 | 68T1214600 Shaft, rocker | Buy now |
| 9 | 9038713M56 Collar (6g8) | Buy now |
| 10 | 9038714M03 Collar | Buy now |
| 11 | 9050112M40 Spring, compression (6g8) | Buy now |
| 12 | 68T1215100 Arm, valve rocker | Buy now |
| 13 | 6G81215900 Screw, valve adjusting | Buy now |
| 14 | 6G81215800 Nut, lock | Buy now |

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.