



Yamaha Z200NETO 2002

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539

 
Authorised Yamaha Dealers



Contents


BOTTOM COWLING	3
BRACKET 1	8
BRACKET 2	11
CONTROL	14
CRANKSHAFT. PISTON	17
CYLINDER. CRANKCASE 1	20
CYLINDER. CRANKCASE 2	23
ELECTRICAL 1	26
ELECTRICAL 2	29
ELECTRICAL 3	32
ELECTRICAL 4	37
FUEL 1	38
FUEL 2	42
FUEL INJECTION NOZZLE	43
FUEL INJECTION PUMP	45
FUEL PUMP DRIVE GEAR	49
GENERATOR	51
INTAKE	53
LOWER CASING. DRIVE 1	55
LOWER CASING. DRIVE 2	62
LOWER CASING. DRIVE 3	65
LOWER CASING. DRIVE 4	72
METER	74
OIL PUMP	76
OIL TANK	80
POWER TRIM & TILT ASSY 1	83
POWER TRIM & TILT ASSY 2	86
REMOTE CONTROL ASSY 1	89
REMOTE CONTROL ASSY 2	94
REMOTE CONTROL BOX	100
REPAIR KIT 1	101
REPAIR KIT 2	103
STARTING MOTOR	105
STEERING GUIDE ATTACHMENT 1	108
STEERING GUIDE ATTACHMENT 2	109
SWITCH. PANEL	110
TOP COWLING	112
UPPER CASING	114
VAPOR SEPARATOR 1	117
VAPOR SEPARATOR 2	121

Bottom Cowling

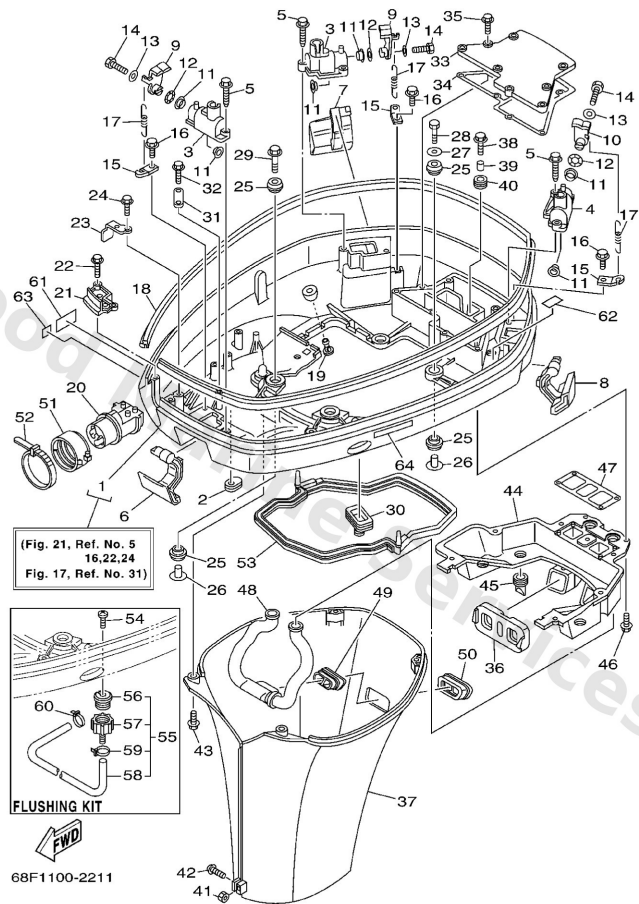


Ref	Part	
1	68F42710008D -	Buy now
2	61A--42727--00 Grommet	Buy now
3	68F428280094 Plate, clamp	Buy now
4	68F428281094 Plate, clamp	Buy now
5	90109--06M82 Bolt	Buy now
6	68F42815008D Lever, clamp	Buy now
7	68F42816008D Lever, clamp	Buy now
8	68F42817008D Lever, clamp	Buy now
9	68F4281800 Lever, clamp	Buy now
10	67F4281800 Lever, clamp	Buy now
11	90386--15M73 Bush(6I2)	Buy now
12	90206--15M18 Washer, wave(6I2)	Buy now
13	90201--06068 Washer,plate (6k8)	Buy now
14	97095--06016 Bolt, hexagon deep recess	Buy now
15	64D--43144--00 Hook, spring	Buy now

 Bottom Cowling

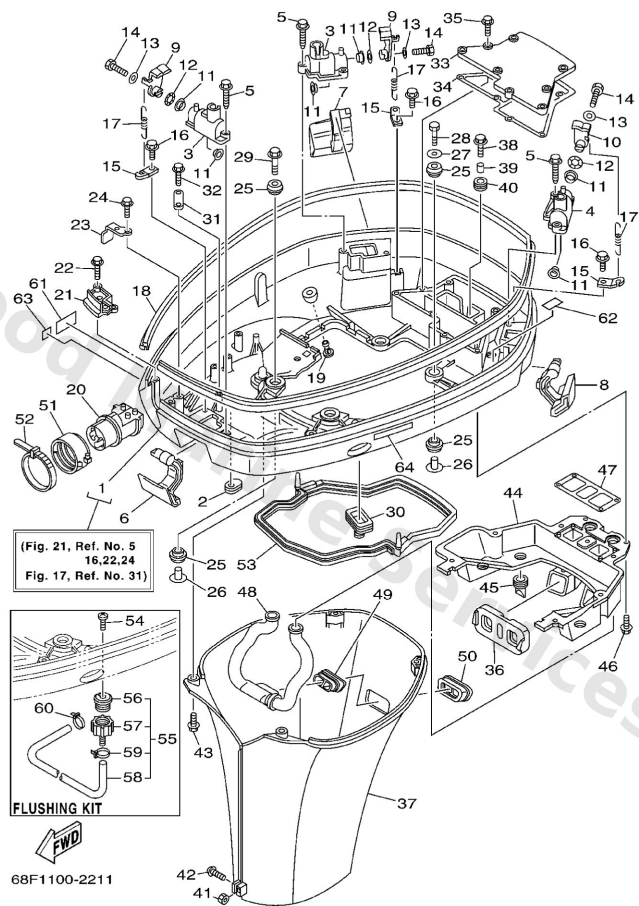


Ref	Part	
16	90109--06M80 Bolt	Buy now
17	90506--16M34 Spring, tension(64d)	Buy now
18	68F4261500 Seal	Buy now
19	6E5--44391--00 Nipple, hose	Buy now
20	68F4272501 Grommet	Buy now
21	68F42738005B Plate, fitting	Buy now
22	90109--06M86 Bolt	Buy now
23	64D--42738--10--5B Plate, fitting	Buy now
25	90480--22M81 Grommet	Buy now
26	90387--08M37 Collar (6e5)	Buy now
27	90201--08M54 Washer, plate (6e5)	Buy now
28	97075--08035 Bolt(70w)	Buy now
29	90119--08M22 Bolt, with washer	Buy now
30	688--42726--10 Grommet	Buy now
31	6E5--82588--00 Plate	Buy now

 Bottom Cowling

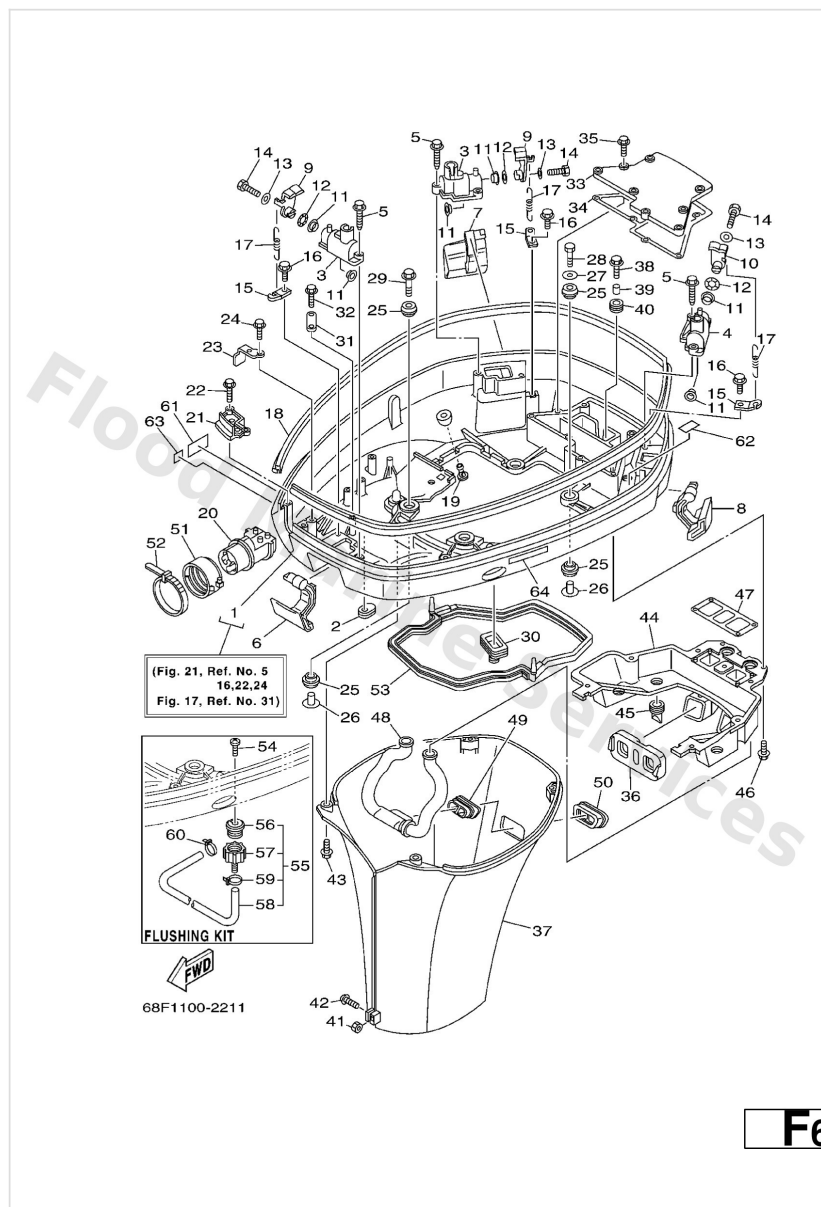


Ref	Part	
32	95895--06020 Bolt, flange(jk3)	Buy now
33	68F427230094 Cover, bottom	Buy now
34	68F4272100 Gasket 1	Buy now
36	68F4276900 Seal Rubber	Buy now
37	68F42741004D Apron L	Buy now
37	68F42741104D Apron X	Buy now
39	90387--06M43 Coller (6e9)	Buy now
40	90480--13M24 Grommet (6e9)	Buy now
41	95380--06600 Nut(661)	Buy now
42	90159--06M03 Screw (6g5)	Buy now
43	95895--06016 Bolt, flange deep recess	Buy now
44	68F4277100 Apron	Buy now
45	61A--42717--00 Rubber, seal 2	Buy now
47	68F4272200 Gasket 2	Buy now
48	68F1257700 Hose 2 L	Buy now

 Bottom Cowling

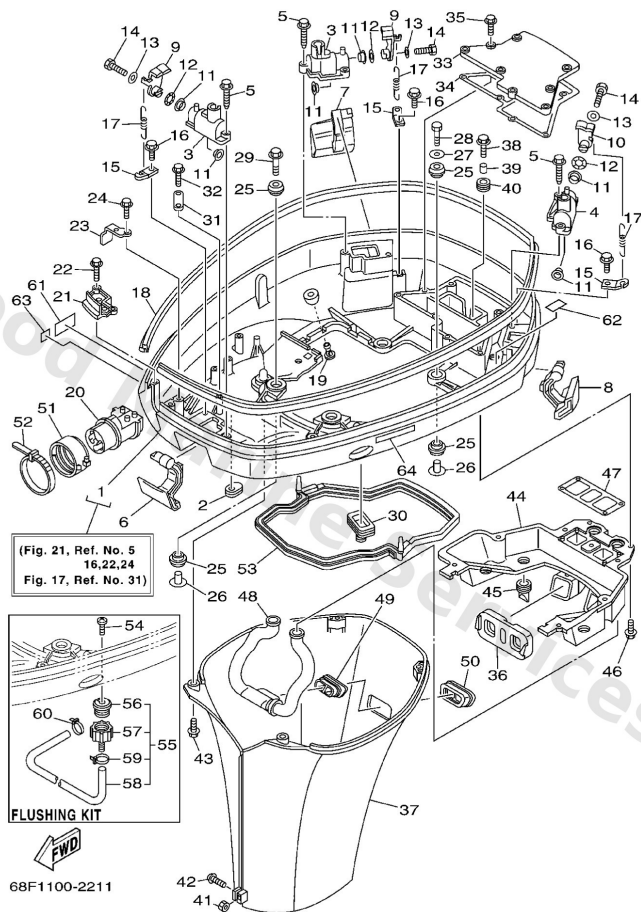


Ref	Part	
48	68F1257710 Hose 2 X	Buy now
49	68F1258201 Joint, hose 2 L	Buy now
49	68F1258210 Joint, hose 2 X	Buy now
50	68F4271800 Rubber, seal 3	Buy now
51	68F--42753--00 Fastner	Buy now
52	90464--20258 Clamp	Buy now
53	6E5--42716--10 Rubber seal 1	Buy now
54	90169--05M00 Screw truss head tapping	Buy now
55	6R3Y125J70 Flushing kit	Buy now
56	6R31257200 Adapter	Buy now
57	6R31258000 Joint assembly	Buy now
58	9044511M35 Hose (I700)	Buy now
59	9046511M10 Clamp	Buy now
61	68F2415E60 Label Caution	Buy now
62	68F4279101 Mark 1	Buy now

 Bottom Cowling

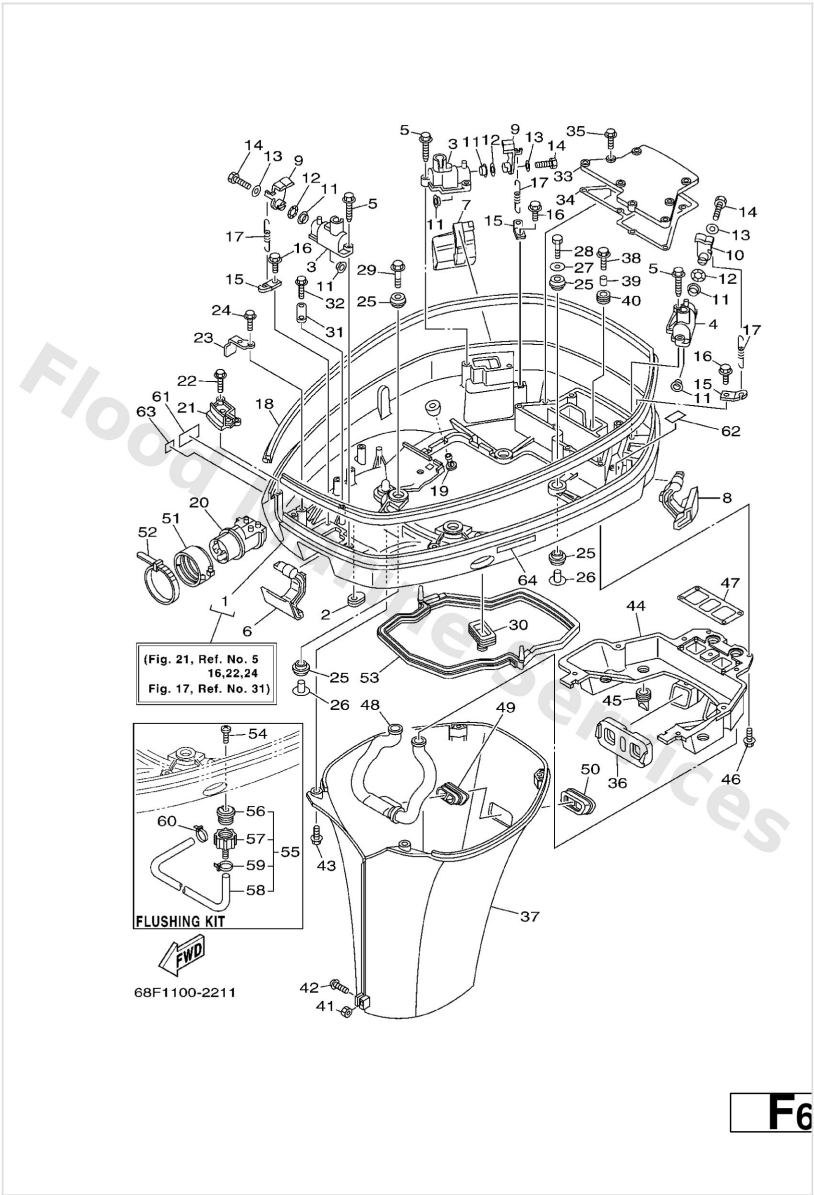


Ref	Part	
62	68H4279101 Mark 1	Buy now
63	6A1--28176--00 Label Caution	Buy now
64	6E3--8257H--00 Plate Mark	Buy now

 Bracket 1

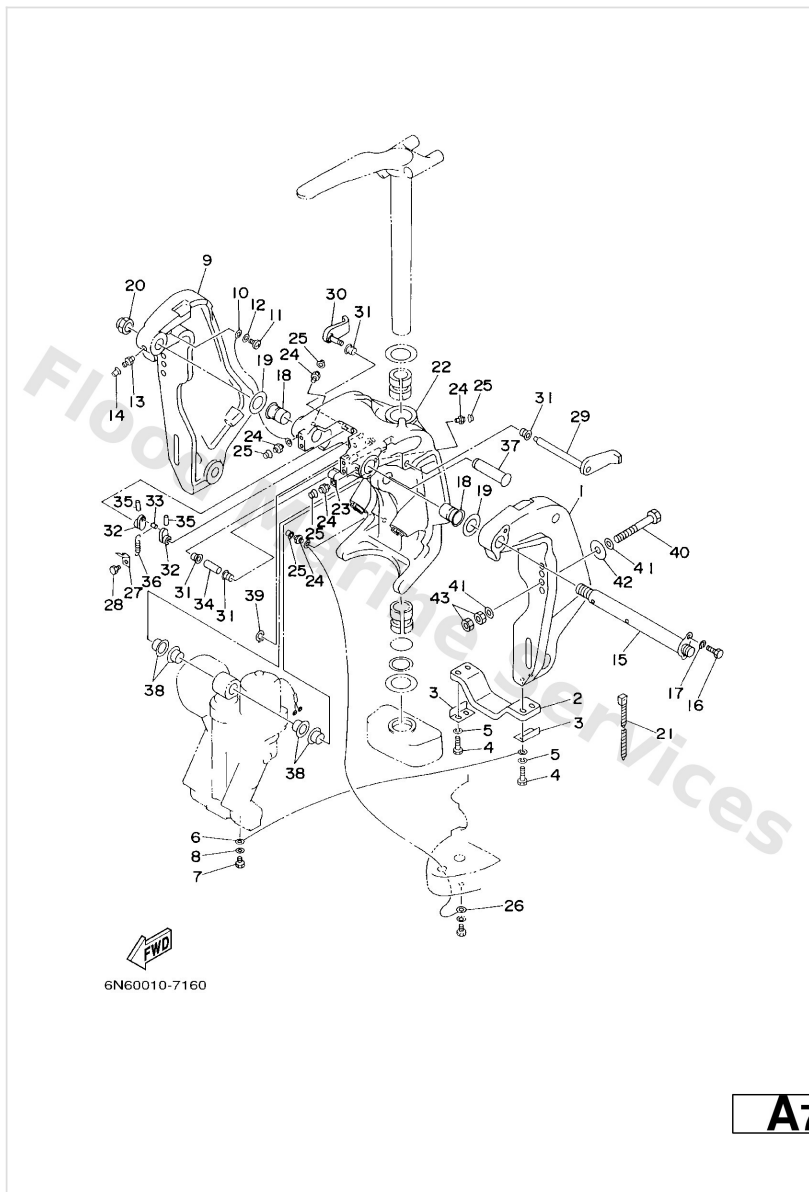


Ref	Part	
1	64E--43111--02--8D Bracket, clamp	Buy now
2	6G5--45251--02 Anode	Buy now
3	6G5--44526--00 Plate	Buy now
4	97095--06030 Bolt(jf7)	Buy now
5	92995--06100 Washer(6a1)	Buy now
6	6E5--82148--00 Wire, lead 5	Buy now
7	97095--06010 Bolt	Buy now
8	92995--06600 Washer, plain (646)	Buy now
9	64E--43112--02--8D Bracket, clamp	Buy now
11	97880--06012 Screw, pan head(62j)	Buy now
12	92990--06600 Washer, plain (646)	Buy now
13	93700--06M03 Nipple, grease(6a1)	Buy now
14	663--45119--00 Cap, grease nipple AP	Buy now
15	64E--43131--01 Bolt, clamp bracket	Buy now
16	97095--08020 Bolt, hexagon	Buy now

 Bracket 1

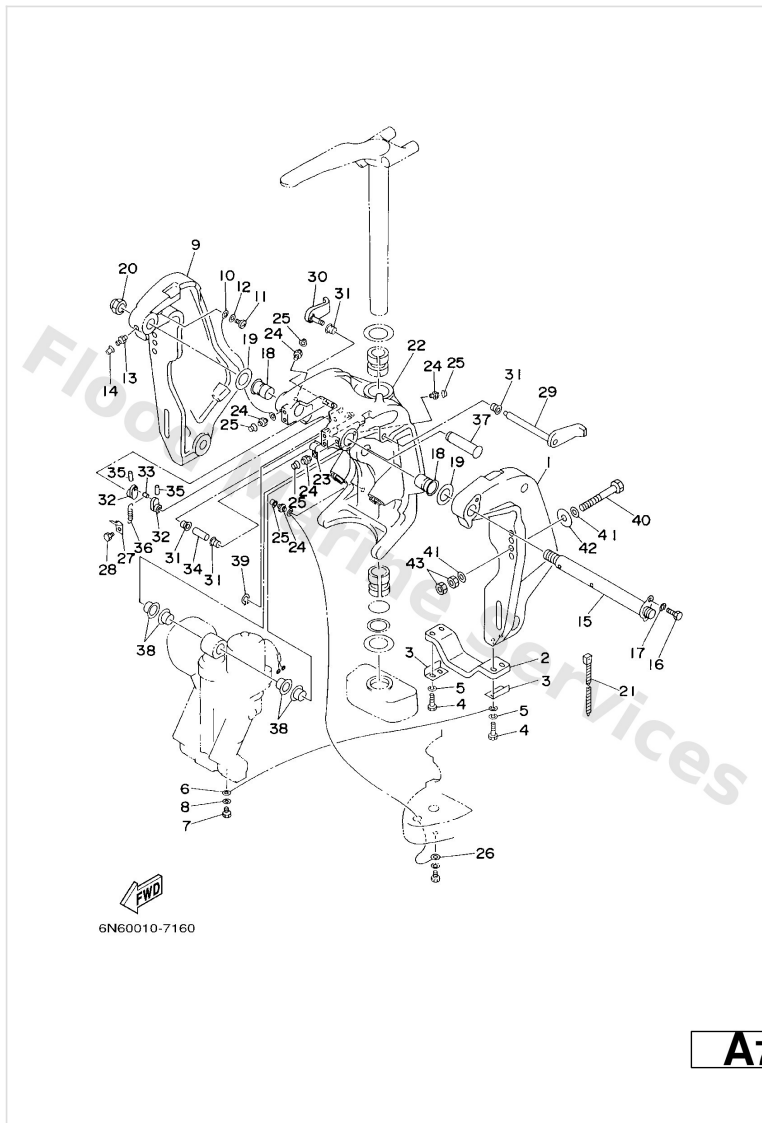


Ref	Part	
17	92995--08100 Ybs67-8 washer, spring	Buy now
18	90386--25M31 Bushing (6e5)	Buy now
19	90201--26M59 Washer, plate (6e5)	Buy now
20	90185--22M11 Nut, self-locking	Buy now
21	90465--11M10 Clamp	Buy now
22	64E--43311--10--8D Bracket, swivel L	Buy now
22	64E--43311--20--8D Bracket, swivel X	Buy now
23	90465--08M63 Clamp(61u)	Buy now
26	6E5--82147--00 Wire, lead 5 L	Buy now
26	6E5--82147--20 Wire, lead 5 X	Buy now
27	6G5--43144--00 Hook, spring	Buy now
29	6G5--43181--02 Lever, tilt stop 1	Buy now
30	6G5--43185--02 Lever, tilt stop 2	Buy now
31	90386--10M16 Bushing (688)	Buy now
32	6G5--43148--00 Collar, distance	Buy now

 Bracket 1

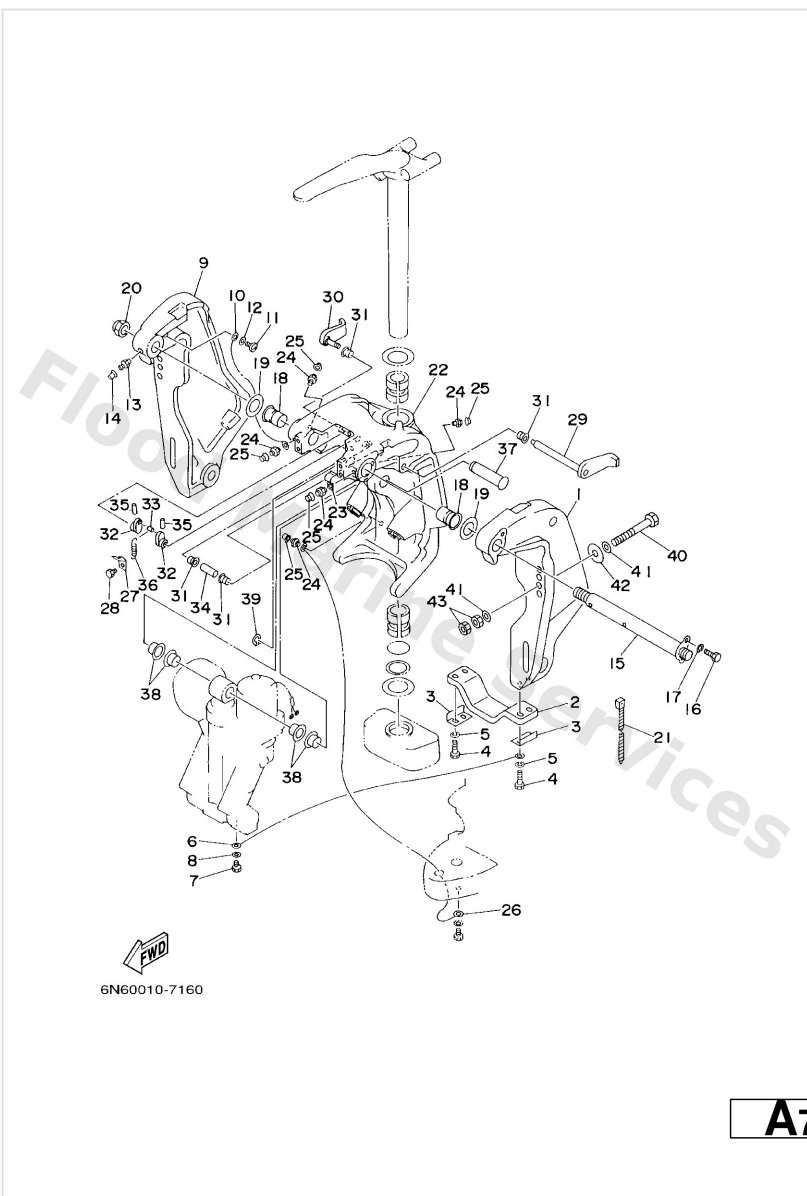


Ref	Part	
33	90249--06M19 Pin(6e5)	Buy now
34	90387--10M05 Collar(6e5)	Buy now
35	91690--30020 Pin, spring (6h4)	Buy now
36	90506--14M24 Spring, tension(6e5)	Buy now
37	64E--43126--00 Pin, upper shock mount	Buy now
38	90386--22M98 Bush(61u)	Buy now
39	93410--22M11 Circlip(61u)	Buy now
40	90101--12M03 Bolt (l:115mm)	Buy now
40	90101--12M05 Bolt (l:130mm)	Buy now
41	90201--13M01 Washer, plate(6e5)	Buy now
42	90201--12M05 Washer, plate(663)	Buy now
43	95380--12600 Nut (707)	Buy now

 Bracket 2

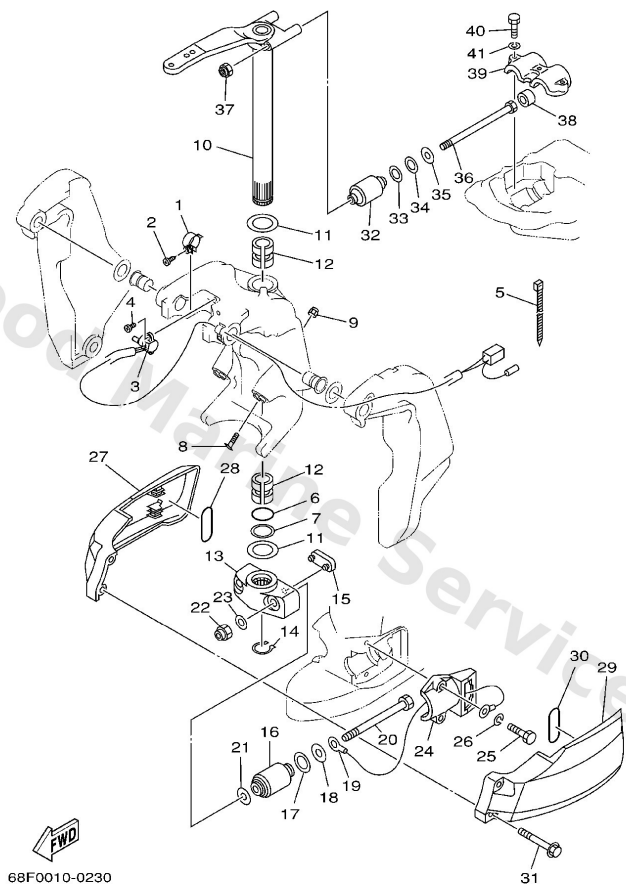


Ref	Part	
1	64E--43139--02 Cam, trim sender (with screw)	Buy now
2	97780--60525 Screw, tapping(65j)	Buy now
3	64E--83672--02 Trim sender	Buy now
4	97885--06016 Screw, pan head(6b0)	Buy now
5	90465--11M10 Clamp	Buy now
6	93210--37MH7 O-ring(61u)	Buy now
7	90202--40M47 Washer, plate(61a)	Buy now
8	61A--43376--00 Bolt, thrust receiver	Buy now
9	95780--10300 Nut, nylon (6e5)	Buy now
10	68F42510A08D Steering bracket assembly L	Buy now
10	68F42510B08D Steering bracket assembly X	Buy now
11	90201--38M60 Washer, plate (6e5)	Buy now
12	90386--38M32 Bush(6e5)	Buy now
13	68F44551008D Housing, lower mount rubber	Buy now
14	93410--37M04 Circlip (6e5)	Buy now

 Bracket 2

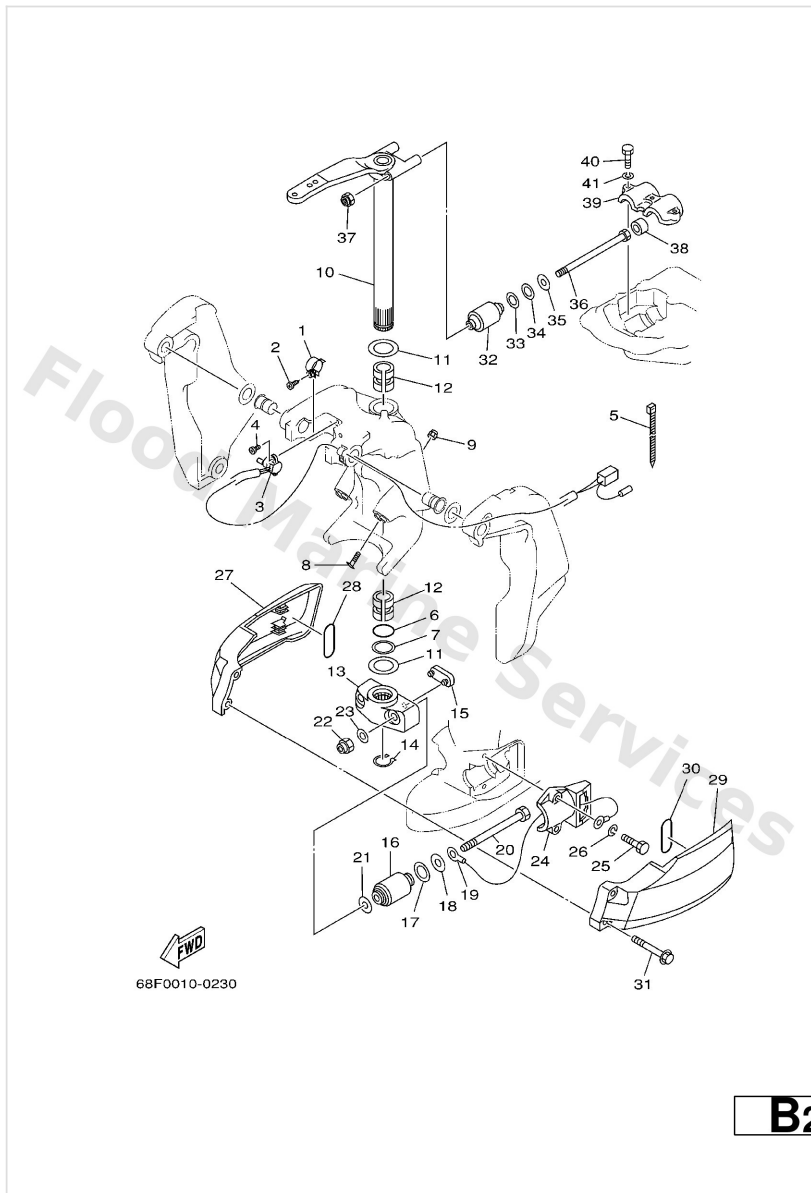

Ref	Part	
15	6E5--44575--00 Damper, lower mount rubber	Buy now
16	6G5--44555--00--94 Mount damper, lower side	Buy now
17	90202--32M19 Washer, plate (6e5)	Buy now
18	90201--16M55 Washer, plate (6e5)	Buy now
19	6E5--82149--00 Wire, lead 3	Buy now
20	9010914MA5 Bolt	Buy now
21	90201--15M58 Washer, plate (6e5)	Buy now
22	90185--14M00 Nut, self-locking(61a)	Buy now
23	92995--14600 Washer (6e5)	Buy now
24	68F44552008D Housing, lower mount rubber	Buy now
25	97095--10045 Bolt(64d)	Buy now
26	92995--10100 Ybs67-10 washer, spring	Buy now
27	68F44553004D Cover, lower mount	Buy now
28	93210--41042 O-ring (132)	Buy now
29	68F44556004D Cover, lower mount 2	Buy now

 
Bracket 2

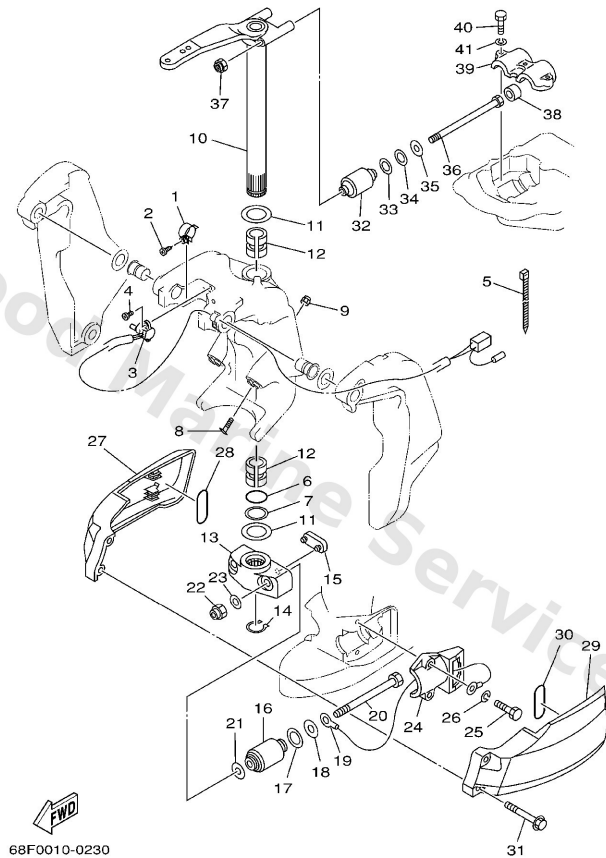

B2

Ref	Part	
31	9011906MA8 Bolt, with washer	Buy now
32	6G5--44514--00--94 Mount damper, upper side	Buy now
33	90201--26M57 Washer, plate (6e5)	Buy now
34	90202--26M18 Washer, plate (6e5)	Buy now
35	90201--14M56 Washer, plate (6e5)	Buy now
36	90109--12M37 Bolt	Buy now
37	90185--12M12 Nut, self-locking(6e5)	Buy now
38	663--44575--00 Damper, lower mount rubber	Buy now
39	6E5--44511--00--5B Cover, upper mount	Buy now

 Control

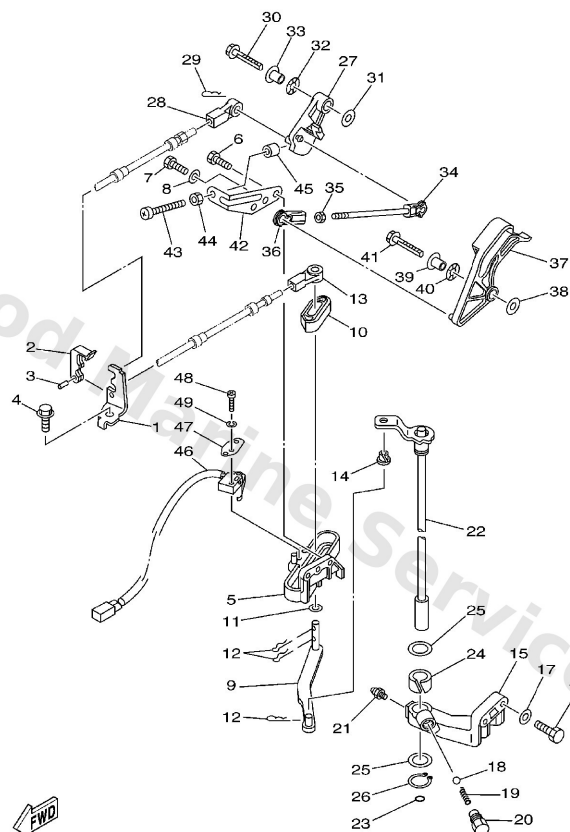


68F1300-2220

A5

Ref	Part	
1	68F4853100 Bracket, Remote Control 1	Buy now
2	663--48538--00 Clamp, cable 1	Buy now
3	91690--30010 Pin, spring (663)	Buy now
4	90109--06M80 Bolt	Buy now
5	68F44117011S Bracket	Buy now
6	97095--06020 Bolt(7u8)	Buy now
7	97013--06012 Bolt(gh1)	Buy now
8	92903--06600 Washer, plain (646)	Buy now
9	68F--44121--00 Lever, shift rod	Buy now
10	68F4412201 Bushing, Shift Rod Lever	Buy now
11	90202--08M20 Washer, plate (6e5)	Buy now
12	90468--18008 Clip 620436610000	Buy now
13	6E5--48344--00 Cable end, remote control	Buy now
14	90386--06M12 Bushing (688)	Buy now
15	6E544118011S Bracket 2	Buy now

 Control

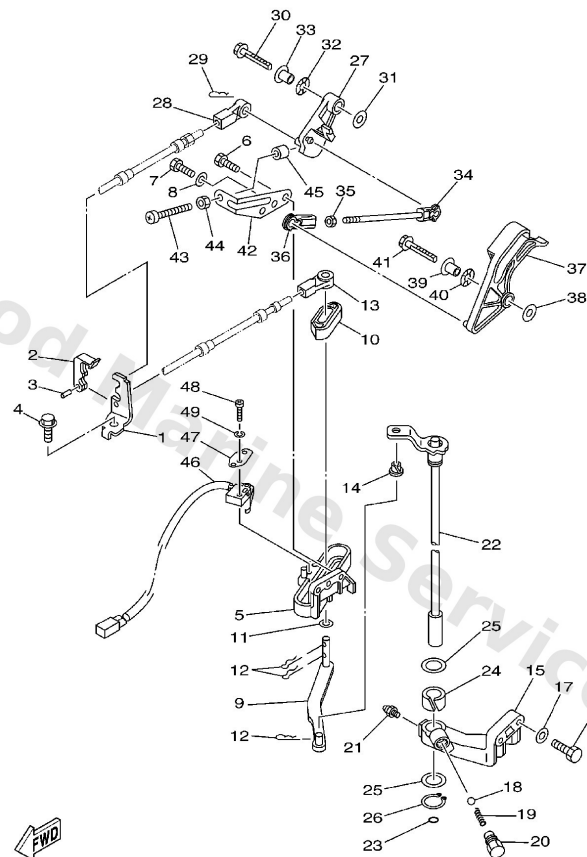


68F1300-2220

A5

Ref	Part	
16	97013--08030 Bolt	Buy now
17	92903--08600 Washer, plain (663)	Buy now
18	93501--04M02 Ball (697)	Buy now
19	90501--12082 Spring 6484411600	Buy now
20	648--42715--00 Bushing 2	Buy now
21	93700--06M03 Nipple, grease(6a1)	Buy now
22	6E5--44120--03 Handle gear shift assembly L	Buy now
22	6E5--44120--23 Handle gear shift assembly X	Buy now
23	93210--09165 O-ring	Buy now
24	90386--16M66 Bush(6e5)	Buy now
25	90202--16061 Washer, plate(663)	Buy now
26	93410--16006 Circlip	Buy now
27	67H4163200 Lever, magneto control	Buy now
30	90119--06MA4 Bolt, with washer	Buy now
31	90201--06M31 Washer (6a0)	Buy now

 Control

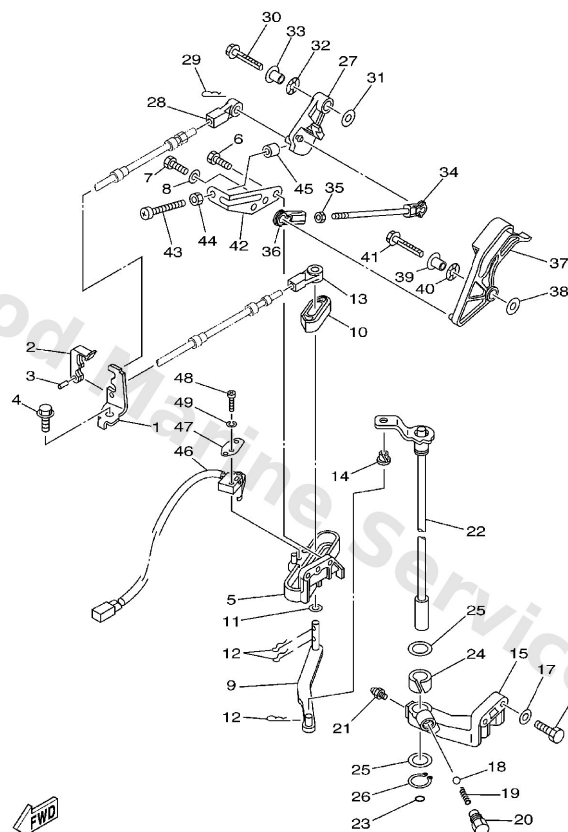


68F1300-2220

A5

Ref	Part	
32	90206--10M04 Washer, wave (676)	Buy now
33	90387--06M29 Collar (6a0)	Buy now
34	61A--41237--00 Joint, link	Buy now
35	95380--05600 Nut, hexagon (663)	Buy now
36	682--41237--00 Joint, link 2	Buy now
37	68F4121300 Cam, accel.	Buy now
42	68F4274400 Stay	Buy now
43	90157--06M11 Screw, pan head(697)	Buy now
44	95380--06600 Nut(661)	Buy now
45	688--44194--00 Cap	Buy now
46	68F8259F00 Switch assembly	Buy now
47	61A--82588--00 Plate	Buy now
48	97885--04016 Screw, panhead (796)	Buy now
49	92995--04100 Ybs67-4 washer, spring	Buy now

 
Crankshaft. Piston

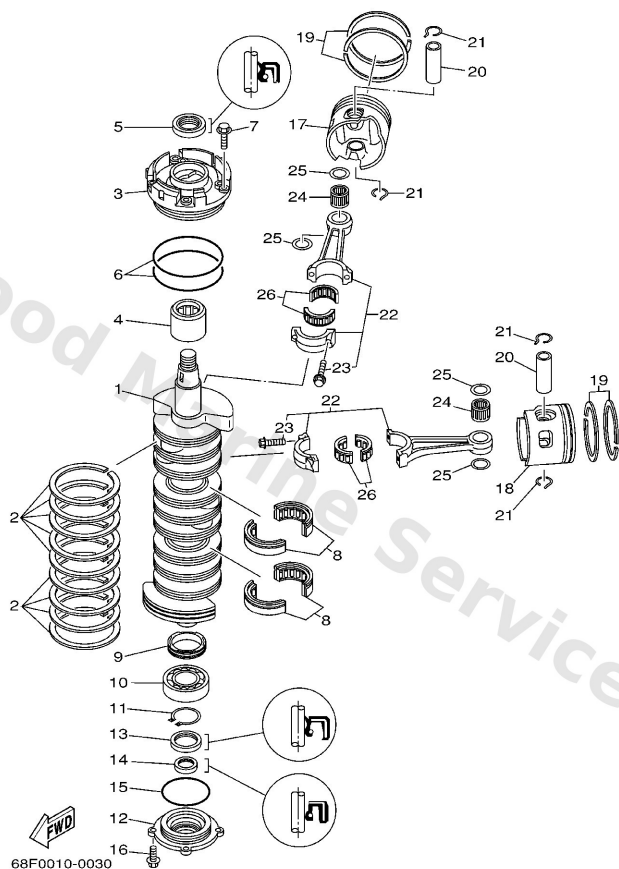

B1

Ref	Part	
1	68F1141101 Crankshaft	Buy now
2	6E5--11447--00 Seal, ring	Buy now
3	68F151630094 Housing, bearing 1	Buy now
4	93311--940U3 Brg,cyl-cal roller 36g (6e5)	Buy now
5	93102--40M14 Oil seal(61a)	Buy now
6	93211--04001 O-ring	Buy now
7	90119--06MA3 Bolt, with washer	Buy now
8	93310--954U1 Bearing, cylindrical(64c)	Buy now
9	6R3--11536--00 Gear, drive	Buy now
10	93306--208U0 Brg,r-b 6208 80mm 345g (6e5)	Buy now
11	93410--40M03 Circlip(n02)	Buy now
12	6G5--15359--00--94 Housing, oil seal	Buy now
13	9310235M61 Oil seal	Buy now
14	93101--22M15 Oil seal (6e5)	Buy now
15	93210--74M35 O-ring (6e5)	Buy now

 
Crankshaft. Piston

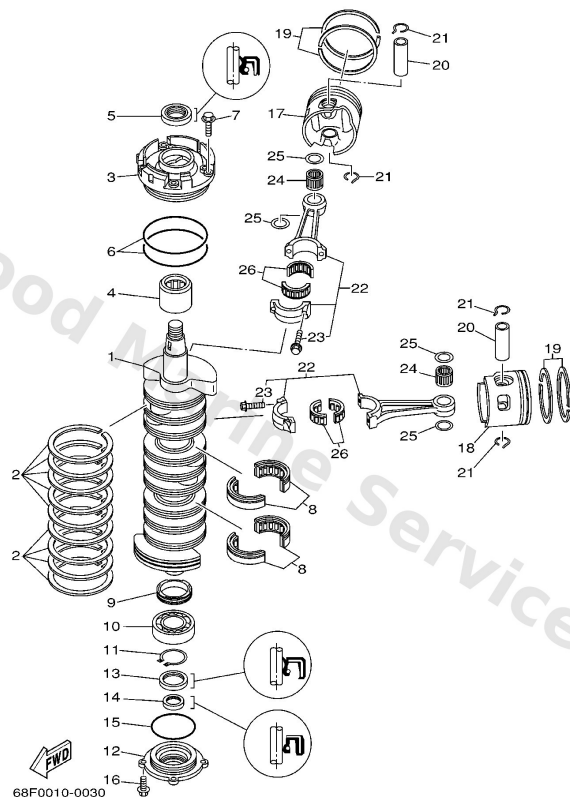

B1

Ref	Part	
16	90119--06MA2 Bolt, with washer	Buy now
17	68F116310185 Piston (std)	Buy now
17	68F1163501 Piston (0.25mm o/s) AP	Buy now
17	68F1163601 Piston (0.50mm o/s) AP	Buy now
18	68F116420185 Piston 2 (std)	Buy now
18	68F1164501 Piston 2 (0.25mm o/s) AP	Buy now
18	68F1164601 Piston 2 (0.50mm o/s) AP	Buy now
19	68F1160301 Piston ring set (std)	Buy now
19	68F1160401 Piston ring set (0.25mm o/s) AP	Buy now
19	68F1160501 Piston ring set (0.50mm o/s) AP	Buy now
20	6R5--11633--10 Pin, piston	Buy now
21	6R5--11634--10 Clip, piston pin	Buy now
22	68L1165000 Connecting rod assembly	Buy now
22	6R5--11650--10 Connecting kit	Buy now
23	90109--08022 Bolt	Buy now

 
Crankshaft. Piston

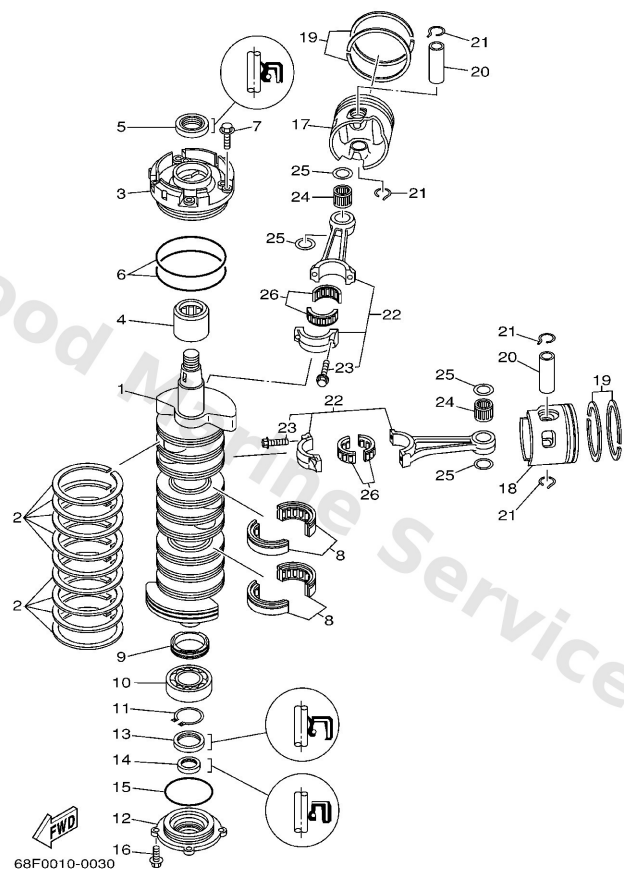

B1

Ref	Part	
24	93310--323V6 Bearing	Buy now
25	90201--23M01 Washer, plate(6g6)	Buy now
26	93310--836U0 Bearing, cylindrical(61u)	Buy now

 
Cylinder. Crankcase 1

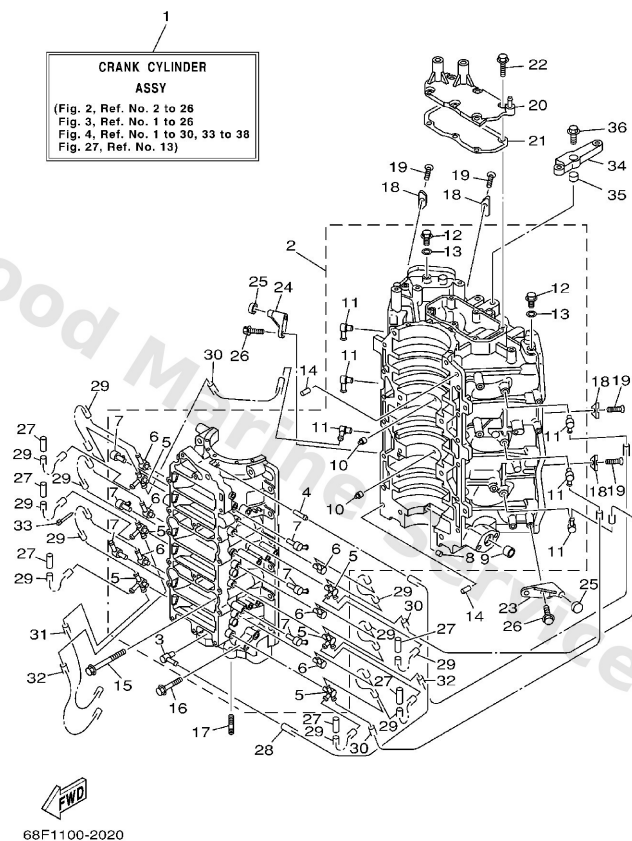

A6

Ref	Part	
3	6E5--11372--00 Nipple, hose	Buy now
4	624--14485--00 Pipe, joint	Buy now
5	68F1137200 2-	Buy now
6	650--11370--00 Check valve assembly	Buy now
7	68F1355200 Nozzle	Buy now
8	90384--06M07 Bush, bimetal formed(6r3)	Buy now
9	90384--14M09 Bush, bimetal formed(6r3)	Buy now
10	663--11518--01 Lock, bearing	Buy now
11	646--11370--00 Check valve assembly	Buy now
12	90340--14M00 Plug, straight screw(62y)	Buy now
13	90430--14115 Gasket (663)	Buy now
14	93608--12063 Pin, dowel (626)	Buy now
15	90105--10M20 Bolt (6e5)	Buy now
16	90119--08M94 Bolt, with washer	Buy now
17	90116--08M45 Bolt, stud (6e5)	Buy now

 Cylinder. Crankcase 1

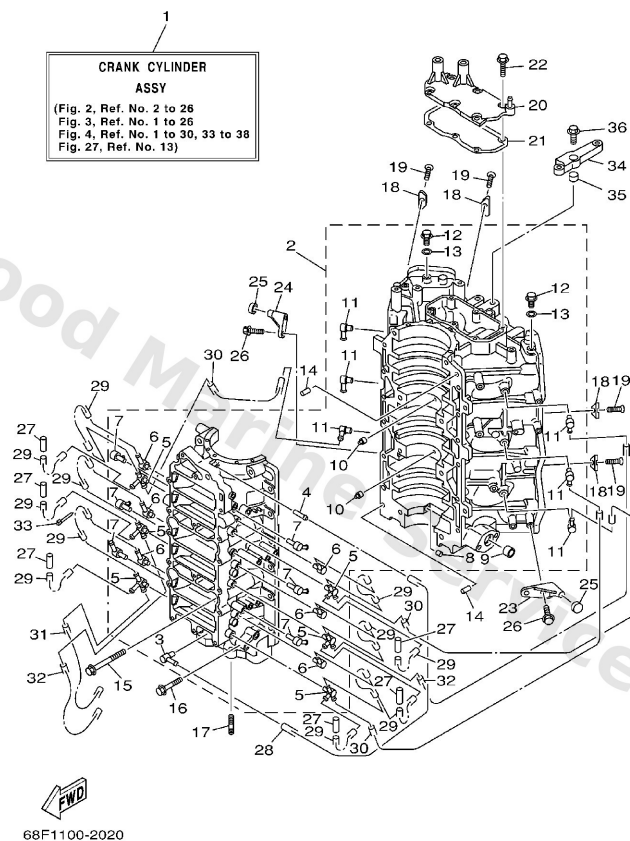


A6

Ref	Part	
18	6E5--11325--00 Anode	Buy now
19	98780--04015 Screw, flat head(ga5)	Buy now
21	68F1138100 Gasket 1	Buy now
22	90119--06MA2 Bolt, with washer	Buy now
24	6E5--42762--00--1S Stopper	Buy now
25	68F--44533--00 Damper, upper mount rubber	Buy now
27	90445--07M03 Hose (I200)	Buy now
28	90445--07M10 Hose (L770)	Buy now
29	90445--07MA6 Hose (I200)	Buy now
30	90445--07MA4 Hose (I390)	Buy now
31	90445--07M45 Hose (I390)	Buy now
32	90445--07M27 Hose (I390)	Buy now
33	90464--07M20 Clamp(6h0)	Buy now
34	68F1378200 Stay	Buy now
35	90387--08M31 Collar	Buy now

Cylinder. Crankcase 1

 1
CRANK CYLINDER
ASSY
(Fig. 2, Ref. No. 2 to 26
Fig. 3, Ref. No. 1 to 26
Fig. 4, Ref. No. 1 to 30, 33 to 38
Fig. 27, Ref. No. 13)

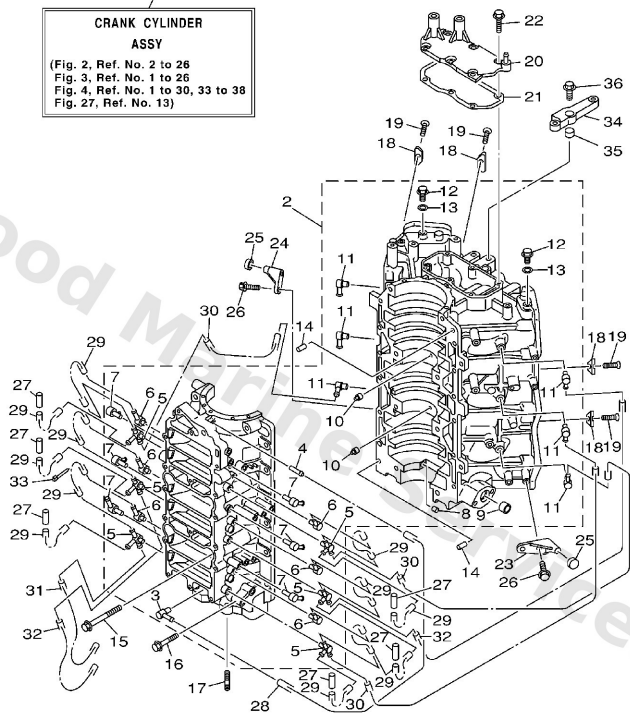


68F1100-2020

A6

Ref	Part	
36	9011008M04 Bolt, hexagon socket head	Buy now

 
Cylinder. Crankcase 2

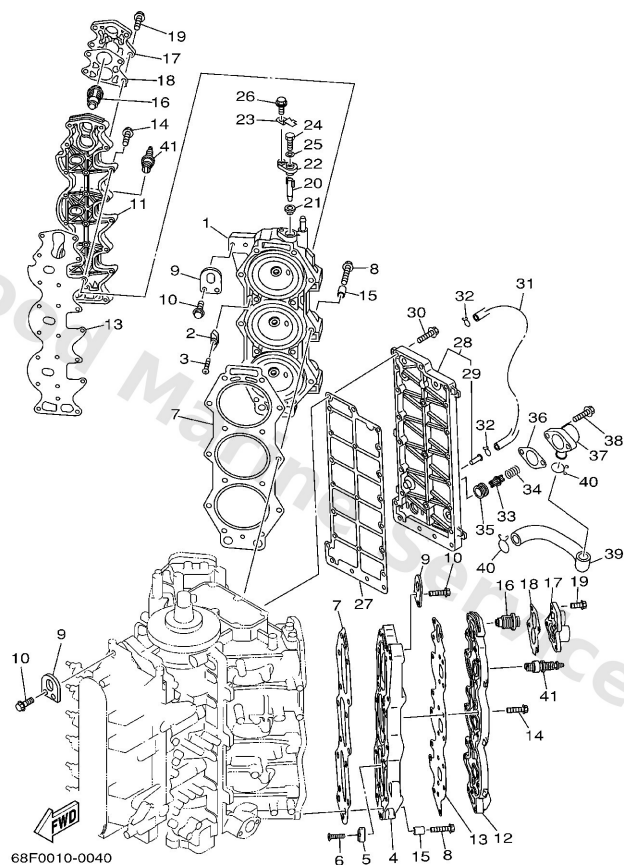

B3

Ref	Part	
1	68F111110094 Head, cylinder 1	Buy now
2	6E5--11325--00 Anode	Buy now
3	98780--04015 Screw, flat head(ga5)	Buy now
4	68F111210094 Head, cylinder 2	Buy now
7	68F1118100 Gasket, cylinder head 1	Buy now
8	90119--08MA8 Bolt, with washer	Buy now
9	68F--11119--00 Hanger, engine	Buy now
10	90119--06MA2 Bolt, with washer	Buy now
11	68F11191001S Cover, cylinder head 1	Buy now
12	68F11192001S Cover, cylinder head 2	Buy now
13	68F1119301 Gasket, head cover 1	Buy now
14	90119--06MA4 Bolt, with washer	Buy now
15	99590--10114 Pin, dowel	Buy now
16	6E5--12411--20 Thermostat	Buy now
17	688--12413--00--1S Cover, thermostat	Buy now

 
Cylinder. Crankcase 2

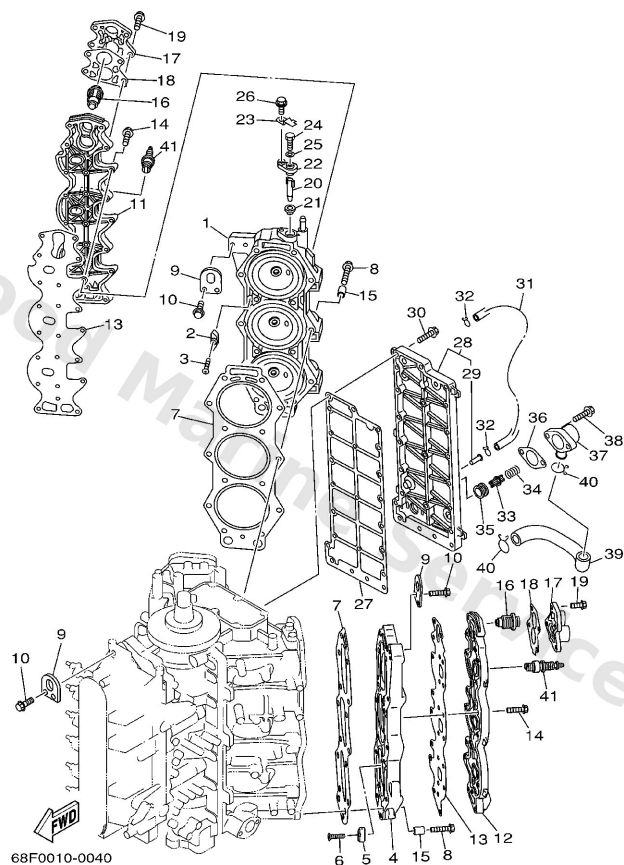

B3


Ref	Part	
18	688--12414--A1 Gasket, cover	Buy now
19	90119--06MA6 Bolt, with washer	Buy now
20	62Y--11325--00 Anode	Buy now
21	66M--11328--00 Grommet, anode	Buy now
22	66M--11327--00--94 Cover, anode	Buy now
23	66M--12535--00 Plate	Buy now
24	97095--05012 Bolt, hexagon	Buy now
25	92995--05600 Washer, plain (646)	Buy now
27	68F4111400 Gasket, exhaust outer cover	Buy now
28	68F41113001S -	Buy now
29	650--24378--00 Pipe, joint 2	Buy now
31	90445--09M25 Hose (I1500)	Buy now
32	90467--08M18 Clip	Buy now
33	6G5--12416--00 Valve, pressure control	Buy now
34	90501--16M11 Spring, compression (688)	Buy now

 Cylinder. Crankcase 2

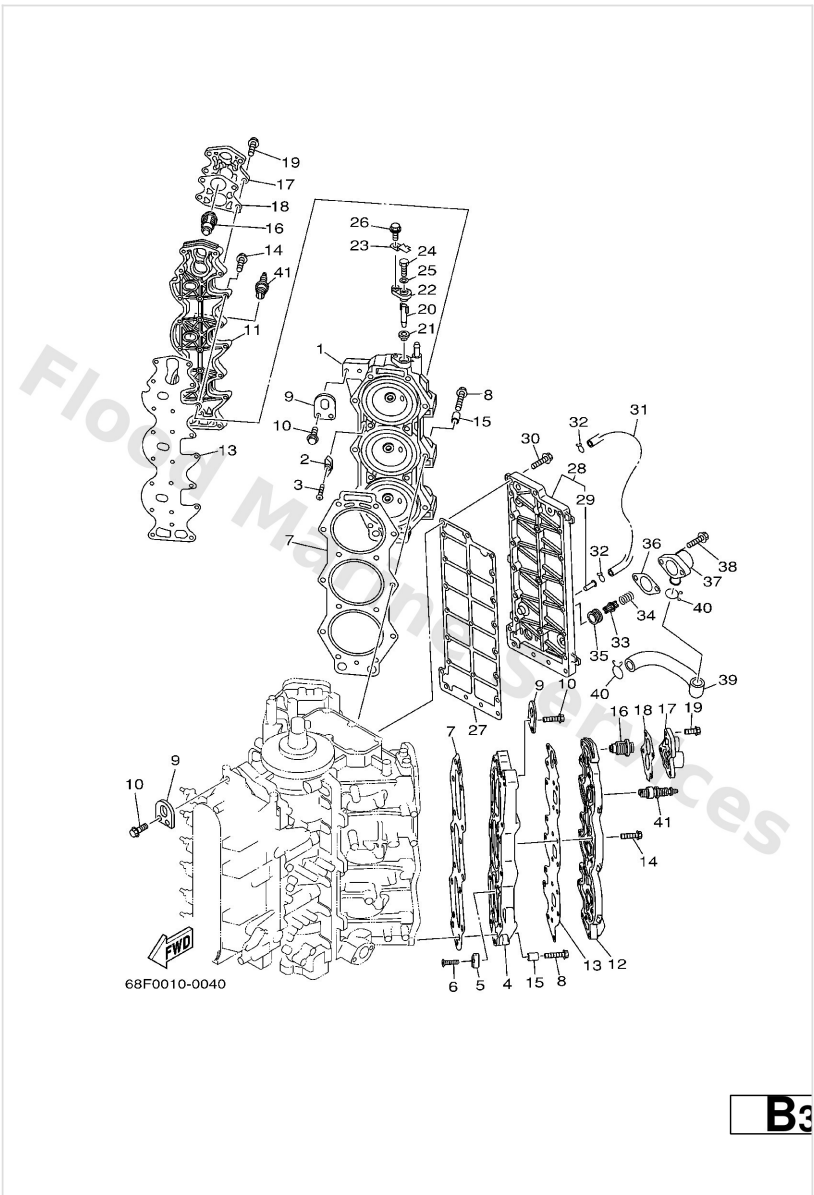


Ref	Part	
35	90480--20M05 Grommet (688)	Buy now
36	6G5--11382--A1 Gasket 2	Buy now
37	6G5--11372--00--1S Cover, bypass 2	Buy now
39	68F1257600 Hose 1	Buy now
40	90467--23M16 Clip	Buy now
41	9470200404 Plug, spark (bkr7eku)	Buy now
41	9470200405 Plug, spark (bkr6eku)	Buy now

 Electrical 1

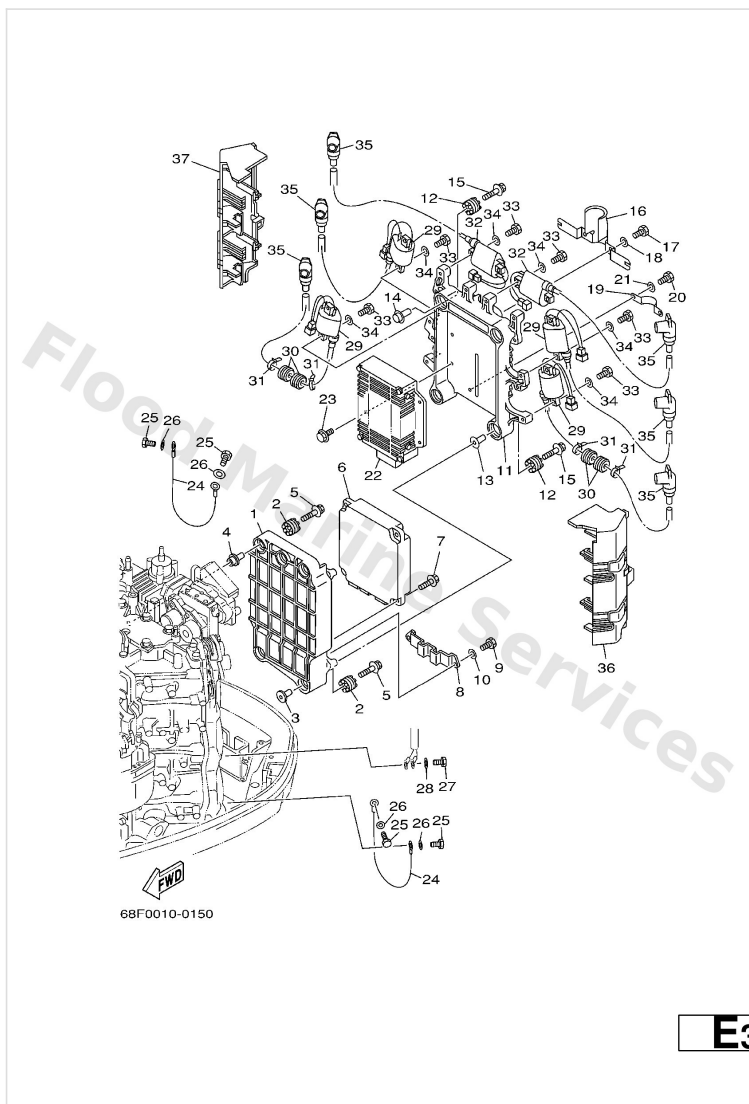

Ref	Part	
1	68F855420094 Bracket	Buy now
2	68F--85516--01 Spacer	Buy now
3	68F--86129--00 Collar	Buy now
4	68F8612910 Collar	Buy now
5	68F--85119--00 Bolt	Buy now
6	68F8591A20 Engine Control Unit assembly X	Buy now
6	68F8591A30 Engine Control Unit assembly L	Buy now
6	68H8591A10 Engine control unit assembly X	Buy now
6	68J8591A10 Engine Control Unit assembly L	Buy now
6	68L8591A10 Engine Control Unit assembly X	Buy now
7	90119--06MA3 Bolt, with washer	Buy now
8	68F8554801 Holder	Buy now
9	97013--06014 Bolt(gj3)	Buy now
10	92903--06600 Washer, plain (646)	Buy now
11	68F851420094 Bracket, Reflector 2	Buy now

 
Electrical 1

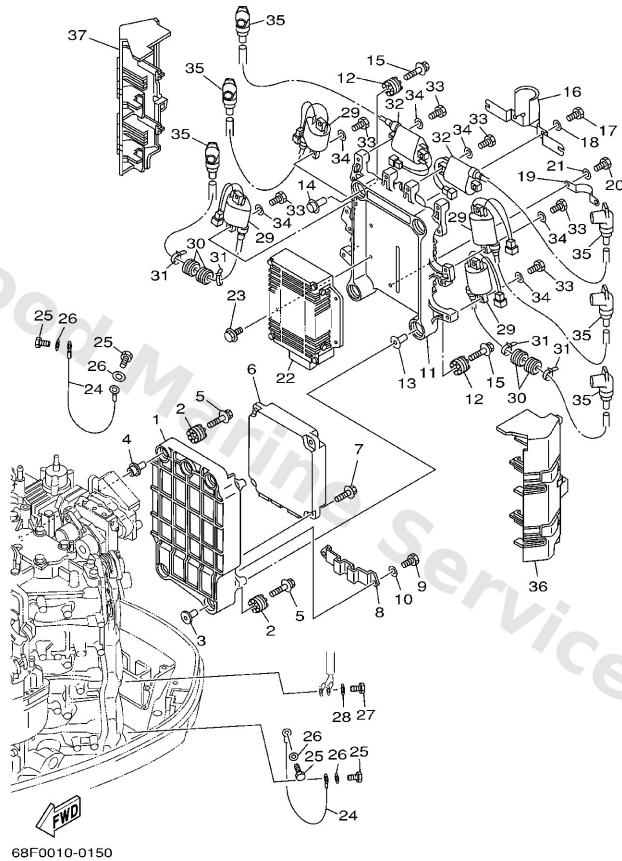

E3


Ref	Part	
16	68F8559900 Cover	Buy now
17	97013--06012 Bolt(gh1)	Buy now
19	68F8564400 Plate	Buy now
22	68F8591B00 Driver, injector assembly	Buy now
23	90119--06MA2 Bolt, with washer	Buy now
24	6G0--82519--00 Wire, earth lead	Buy now
25	97095--06012 Bolt(gh1)	Buy now
26	92995--06600 Washer, plain (646)	Buy now
29	68F8231001 Ignition coil assembly	Buy now
30	90480--22M15 Grommet (6e5)	Buy now
31	90465--11M10 Clamp	Buy now
32	68F8231011 Ignition coil assembly	Buy now
33	97013--05020 Bolt, hexagon	Buy now
34	92903--05600 Washer, plain (646)	Buy now
35	68F8237001 Plug cap assembly	Buy now

 Electrical 1

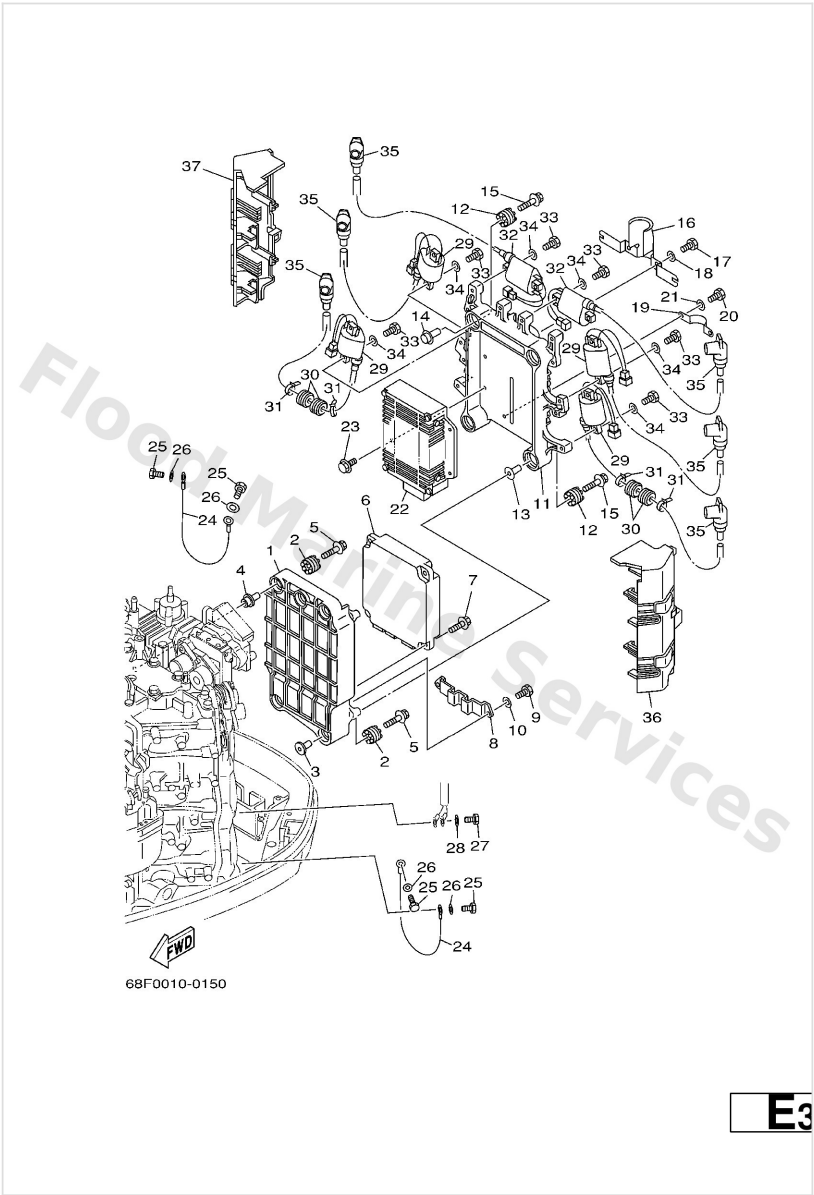

Ref	Part	
36	68F8252U00 Cover	Buy now
37	68F8252U10 Cover	Buy now

 Electrical 2

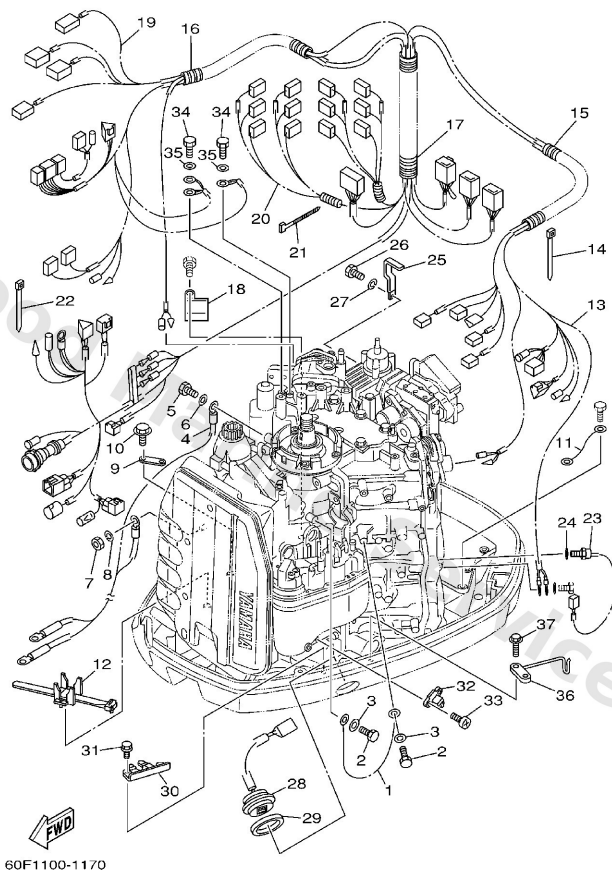


60F1100-1170

E5


Ref	Part	
1	6H2--81949--11 Wire, lead	Buy now
2	97095--06012 Bolt(gh1)	Buy now
3	92995--06600 Washer, plain (646)	Buy now
4	68F8210500 Battery cable	Buy now
5	97095--08016 Bolt, hexagon deep recess	Buy now
6	92995--08600 Washer, plain (663)	Buy now
7	95333--08600 Nut(6I2)	Buy now
8	92903--08100 Ybs67-8 washer, spring	Buy now
9	6E5--82588--00 Plate	Buy now
10	95895--06020 Bolt, flange(jk3)	Buy now
11	6E5--82531--10 Wire, lead	Buy now
12	688--82594--00 Clamp	Buy now
13	68F8259010 Wire Harness assembly	Buy now
14	90465--11M52 Clamp(6e7)	Buy now
15	9044624MF6 Hose	Buy now

 Electrical 2

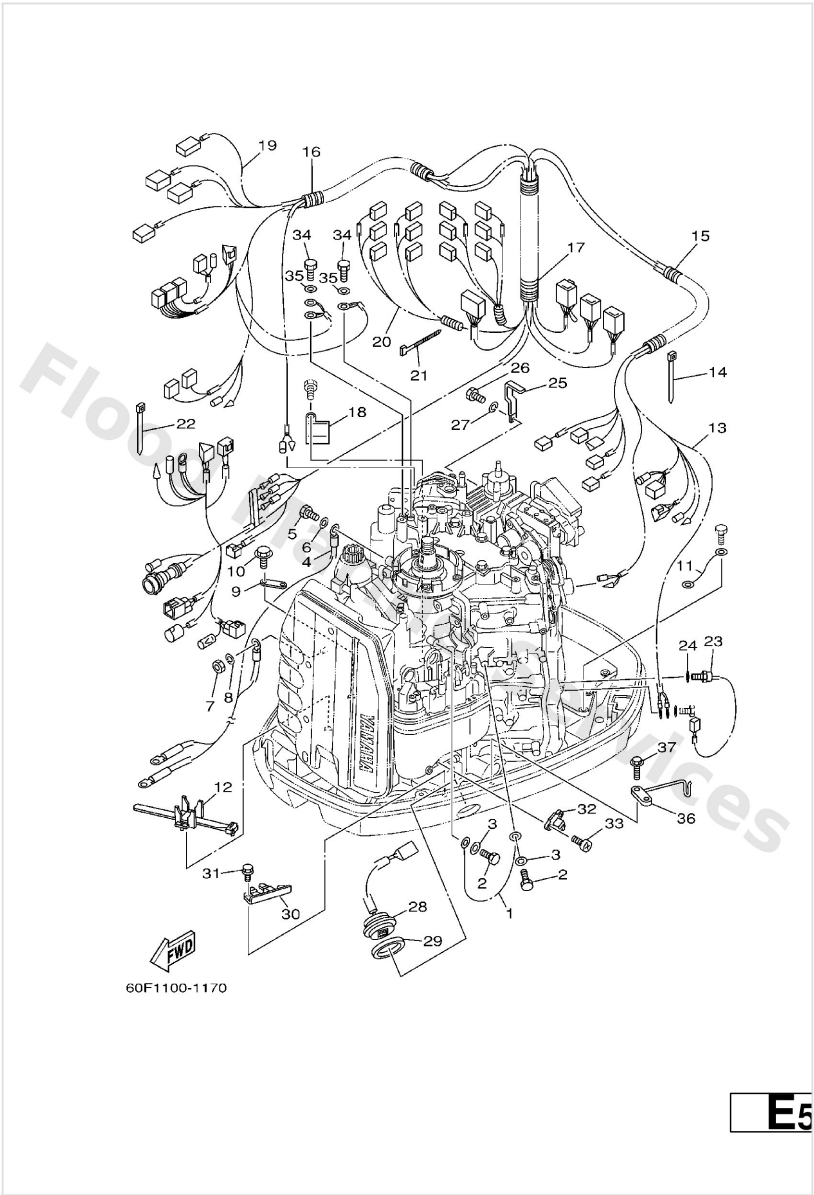**E5**


Ref	Part	
16	9044624MF7 Hose	Buy now
17	9044634MF8 Hose	Buy now
18	90465--08M89 Clamp	Buy now
19	68F8259M00 Wire Harness assembly 2	Buy now
20	68F8259N00 Wire Harness assembly 3	Buy now
21	90465--11M10 Clamp	Buy now
23	61A--85790--00 Thermosensor assembly	Buy now
24	92990--10600 Washer, plate	Buy now
25	9046512M93 Clamp	Buy now
27	92995--06100 Washer(6a1)	Buy now
28	6R3--82563--00 Trim & tilt switch assembly	Buy now
29	6E5--82587--00 Gasket	Buy now
30	6R3--83614--00 Bracket	Buy now
31	90109--06M80 Bolt	Buy now
32	67H8238000 Sensor, pressure	Buy now

 Electrical 2

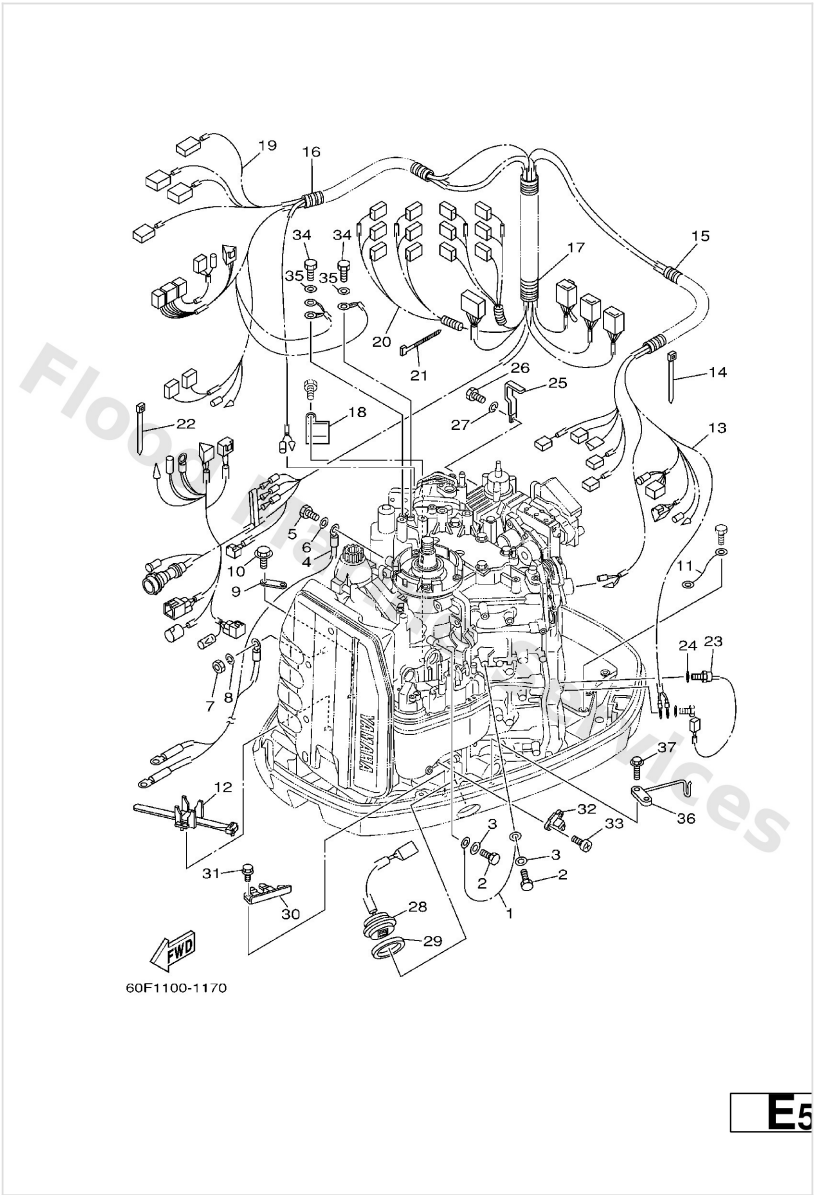

Ref	Part	
33	9858006520 Screw pan head	Buy now
34	97095--06014 Bolt(gj3)	Buy now
36	6K7--82588--00 Plate	Buy now

 
Electrical 3

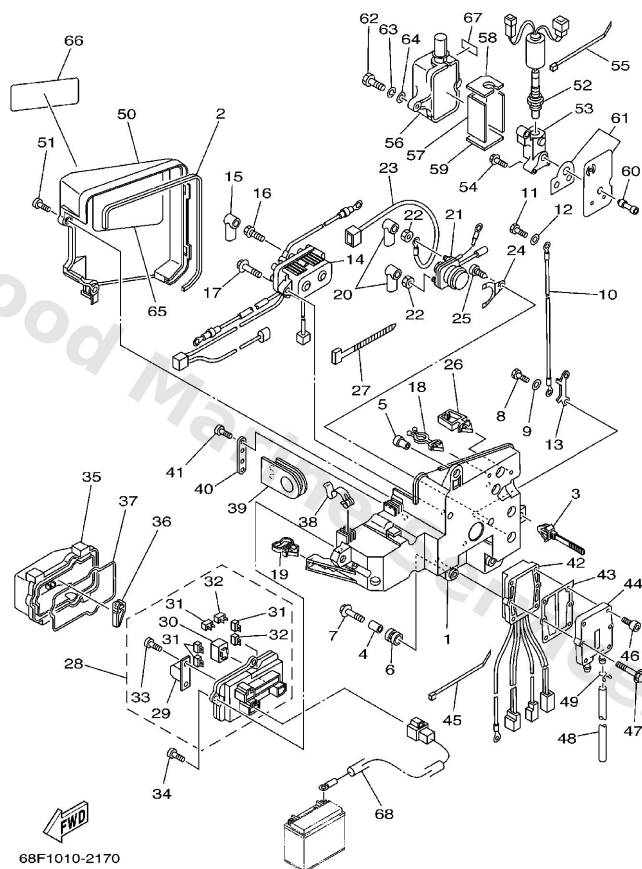

E7


Ref	Part	
1	68F8194800 Bracket	Buy now
2	68F8253500 Grommet	Buy now
3	90465--12M56 Clamp(62t)	Buy now
4	624--42542--00 Collar	Buy now
5	9038706M91 Collar	Buy now
6	6A0--82317--00 Damper, ignition coil	Buy now
7	90119--06M65 Bolt, with washer	Buy now
8	97095--06012 Bolt(gh1)	Buy now
9	92995--06600 Washer, plain (646)	Buy now
10	68F8194920 Wire, lead	Buy now
13	61A--87149--00 Connector	Buy now
14	68F8195000 Relay assembly	Buy now
15	682--82119--01 Cover, lead wire	Buy now
16	97595--06610 Bolt, hexagon w/w deep recess	Buy now
17	90119--06MA4 Bolt, with washer	Buy now

 Electrical 3

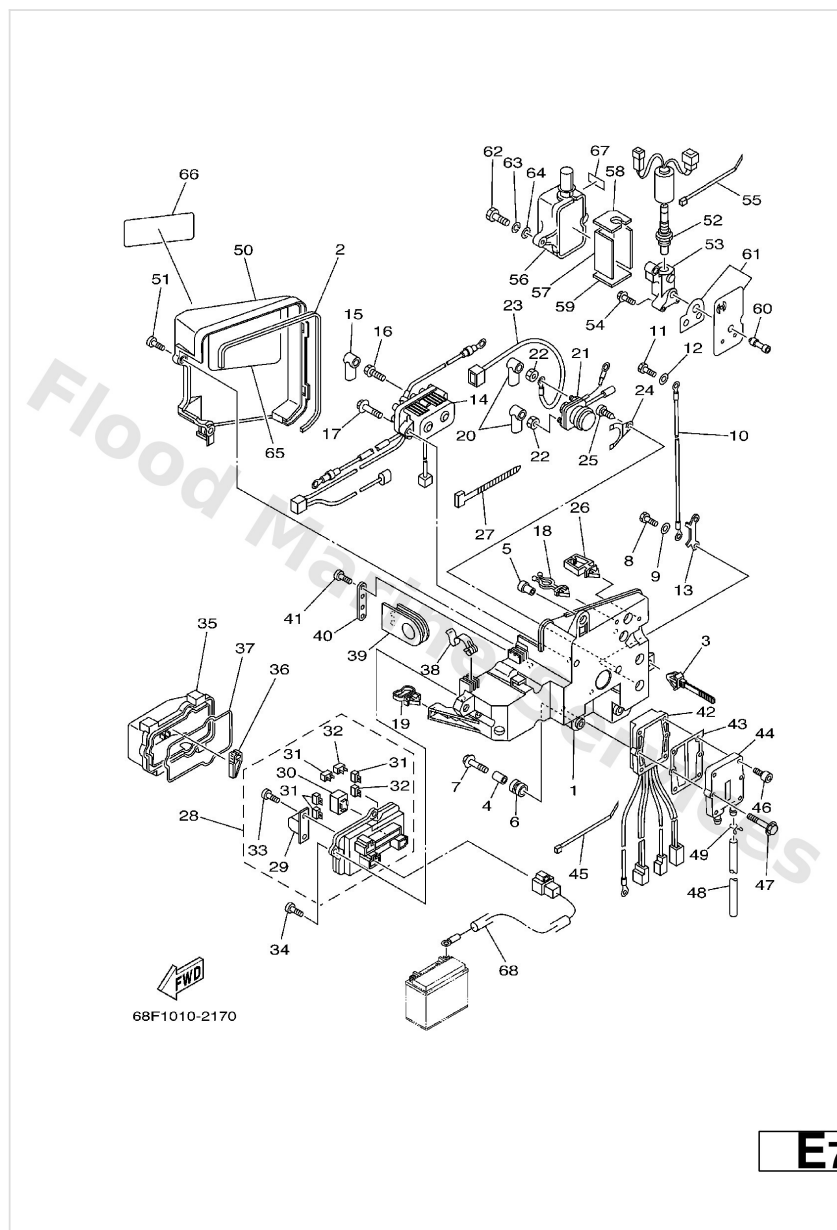


Ref	Part	
18	90464--18M46 Clamp(65j)	Buy now
19	90464--23199 Clamp(4hm)	Buy now
21	61A8194A00 Relay	Buy now
22	95780--06300 Nut, nylon (6g1)	Buy now
23	68F8211700 Wire, lead	Buy now
24	61A--81952--00 Holder, relay	Buy now
25	97780--50612 Screw, tapping(61a)	Buy now
26	90464--05141 Clamp(7ly)	Buy now
27	90465--11M52 Clamp(6e7)	Buy now
28	68F8217000 Fuse box assembly Go to P/N) PE0-OM-070038	Buy now
29	68F8215100 Fuse (80A) Go to P/N) PE0-OM-070038	Buy now
30	68F--8195A--00 Relay assembly	Buy now
31	67F--82151--00 Fuse	Buy now
32	67F--82151--10 Fuse	Buy now
33	68F--82846--00 Screw, pan head (m5)	Buy now

 Electrical 3

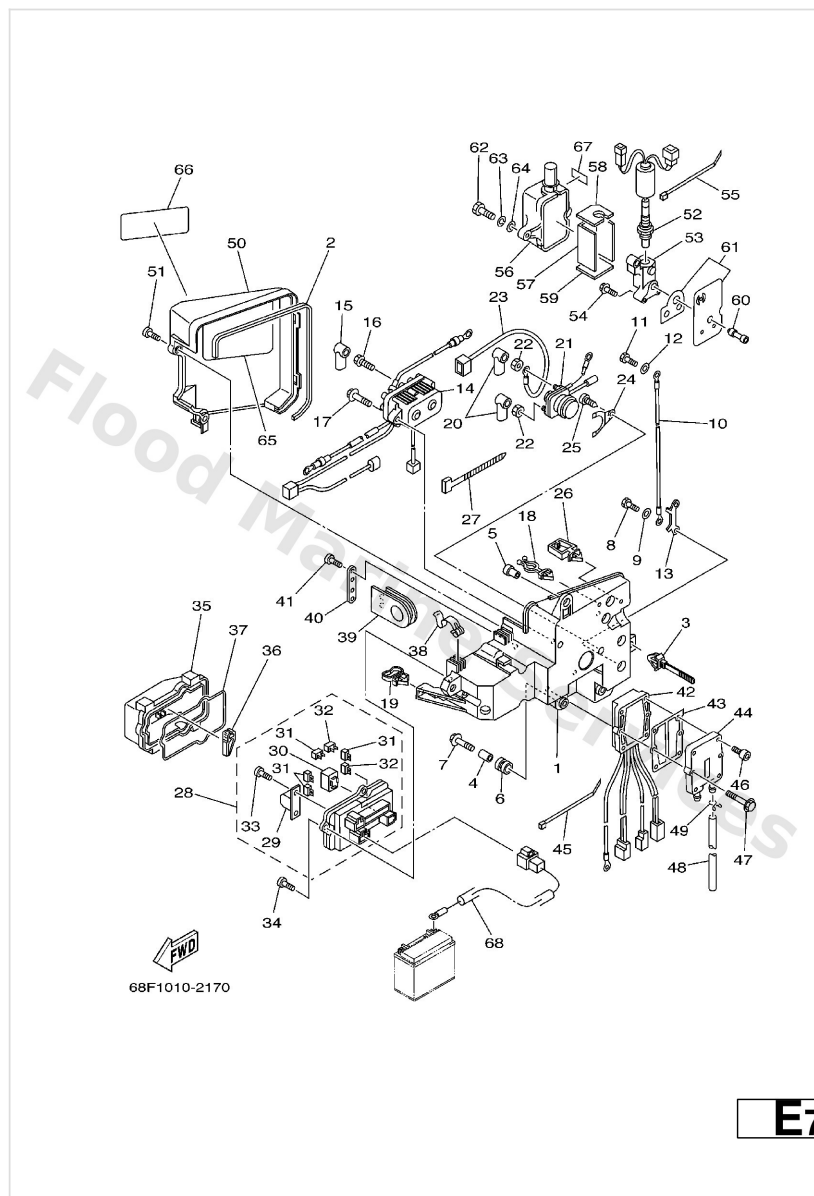

Ref	Part	
34	97780--50620 Screw, tapping	Buy now
35	68F8554400 Case	Buy now
36	67F--2812A--00 Puller, fuse	Buy now
37	68F--82176--00 Damper	Buy now
38	68F8572S00 Spring	Buy now
39	68F8133600 Grommet	Buy now
40	68F8112800 Clamp	Buy now
41	97780--50616 Screw, pan head tapping (ak5)	Buy now
42	68F8196001 Rectifier & regulator assembly	Buy now
43	69J--81975--A0 Plate, rectifier fitting	Buy now
44	69J81972011S Cover, rectifier	Buy now
45	90465--13M18 Clamp	Buy now
46	9011006M07 Bolt, hexagon socket head	Buy now
48	90445--09097 Hose (I1500)	Buy now
49	90467--08M18 Clip	Buy now

 
Electrical 3

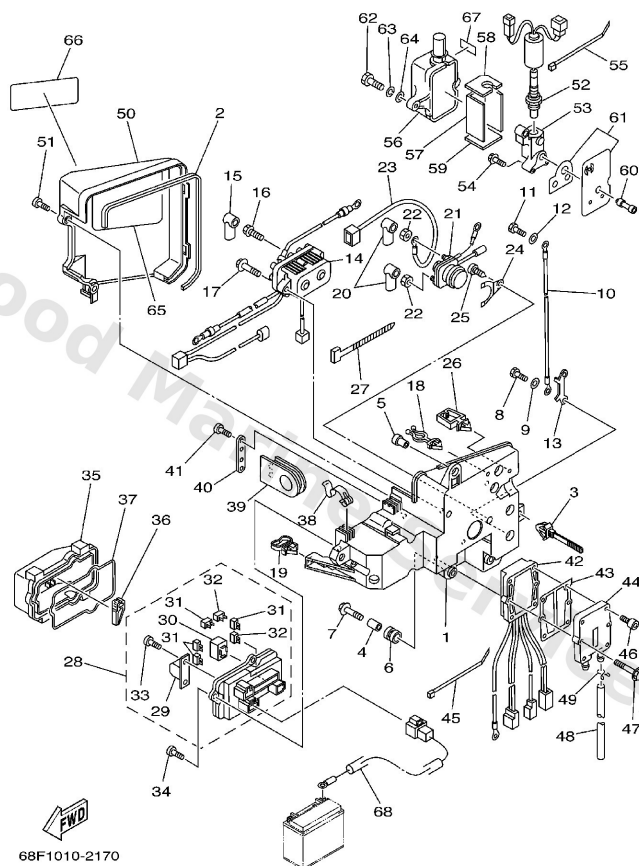

E7

Ref	Part	
50	68F8194200 Cover	Buy now
51	90169--05M00 Screw truss head tapping	Buy now
52	68F8592A00 Sensor	Buy now
53	65L--11395--00 Holder	Buy now
54	90119--06M74 Bolt, with washer(63m)	Buy now
56	65L8583200 Case, under	Buy now
57	65L--11354--00 Gasket	Buy now
58	65L--1131N--00 Gasket, holder	Buy now
59	65L--11396--00 Gasket, holder	Buy now
60	68F1135300 Joint	Buy now
61	68FW113500 Seal, cylinder	Buy now
62	97095--06030 Bolt(jf7)	Buy now
63	92995--06100 Washer(6a1)	Buy now
65	68F8191910 Graphic, Regulator	Buy now
66	68F8191900 Graphic, Regulator Go to P/N) PE0-OM-070038	Buy now

 
Electrical 3

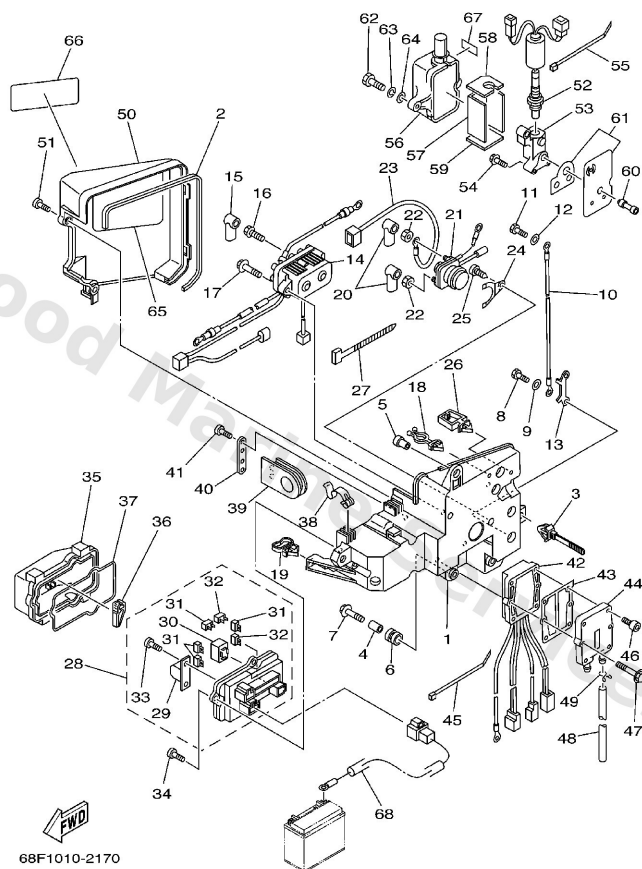

E7

Ref	Part	
67	65L8362550 Mark 5	Buy now
68	68F8194900 Wire, lead AP	Buy now

 Electrical 4

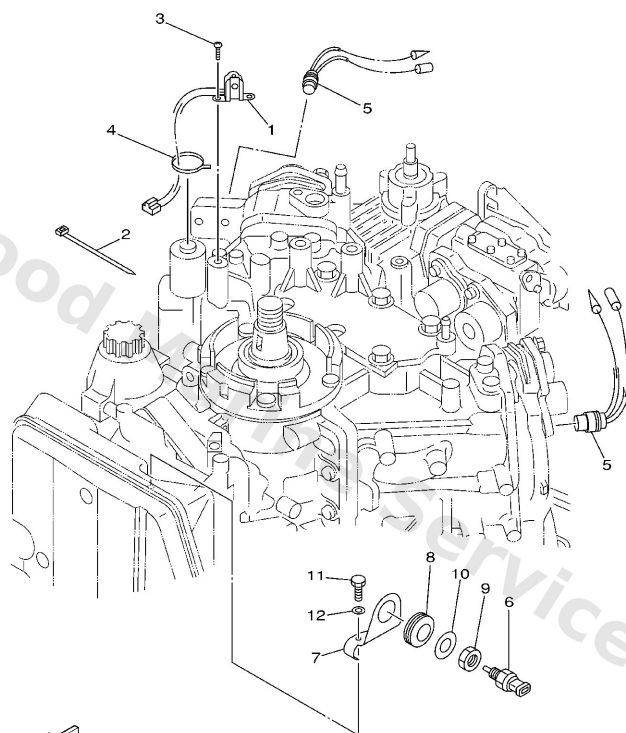


68F0010-0180

F3


Ref	Part	
1	61A8589500 Crank position sender	Buy now
2	90465--13M18 Clamp	Buy now
3	97885--05012 Screw, pan head (646)	Buy now
5	688--82560--10 Thermo switch assembly	Buy now
6	65L--85886--00 Thermosensor	Buy now
7	68F8431R00 Stay, Setting	Buy now
8	9048017M80 Grommet	Buy now
9	9017912M37 Nut	Buy now
10	9020112M08 Washer, Plate	Buy now
11	97095--06016 Bolt, hexagon deep recess	Buy now
12	92995--06600 Washer, plain (646)	Buy now

 Fuel 1

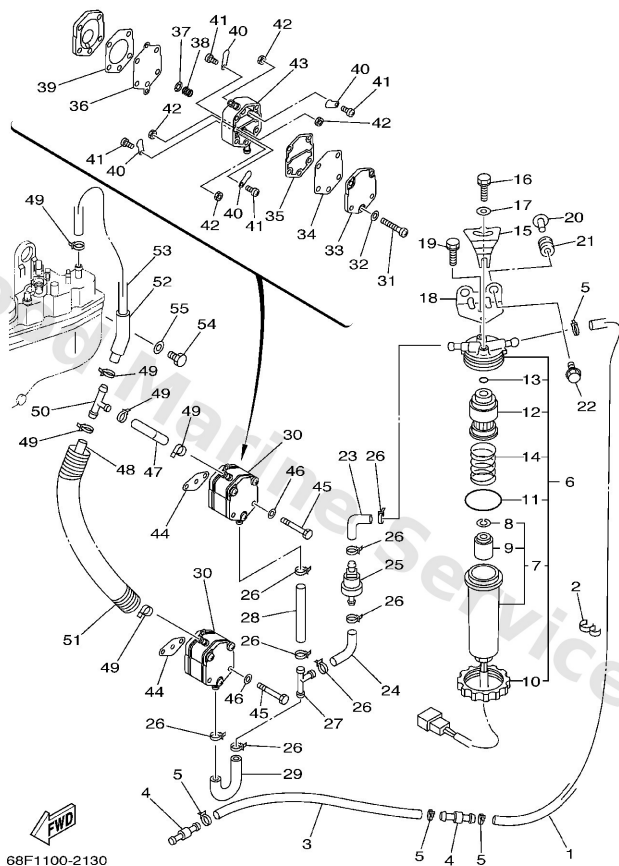

Ref	Part	
1	61A--24313--00 Pipe 3	Buy now
2	90464--13M34 Clamp(6r3)	Buy now
3	90445--13M17 Hose(l2700)	Buy now
4	6R3--24377--00 Pipe, joint 3	Buy now
5	90465--11M10 Clamp	Buy now
6	68F2456000 Filter assembly	Buy now
7	68F2456200 Cup, filter	Buy now
8	68F2451900 Clip	Buy now
9	68F2446900 Float, Water Level	Buy now
10	65L--24531--01 Nut	Buy now
11	61A--24564--00 O-ring	Buy now
12	68F2456300 Element, filter	Buy now
13	65L2456400 Gasket	Buy now
14	68F2456700 Spring	Buy now
15	65L--24558--00 Holder, filter	Buy now

 
Fuel 1

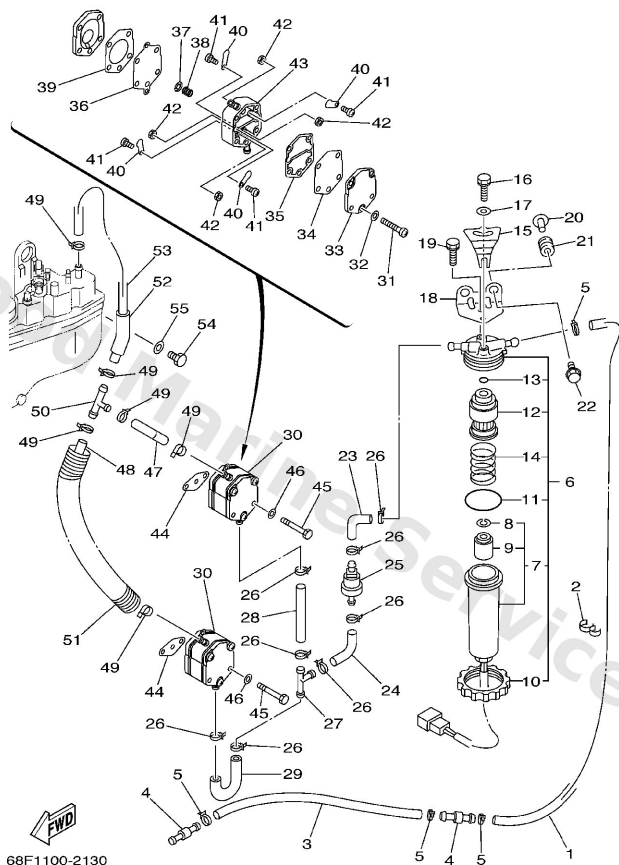

D5

Ref	Part	
16	97595--06416 Bolt, with washer(62x)	Buy now
17	90201--06068 Washer,plate (6k8)	Buy now
18	68F2456600 Bracket, filter	Buy now
19	97595--06514 Bolt(gj3)	Buy now
20	90387--06M60 Collar (6h3)	Buy now
21	90480--10M23 Grommet(6k7)	Buy now
22	90119--06M88 Bolt, with washer	Buy now
23	61A--24311--00 Pipe, fuel 1	Buy now
24	61U2431600 Pipe 6	Buy now
25	6R52440800 Fuel feed assembly	Buy now
27	6E5--24378--00 Pipe, joint 3	Buy now
28	9044513M31 Hose (L85)	Buy now
29	67H2431100 Pipe, fuel 1	Buy now
30	6E5--24410--03 Fuel pump assembly	Buy now
31	98503--05035 Screw, pan head (686)	Buy now

 
Fuel 1

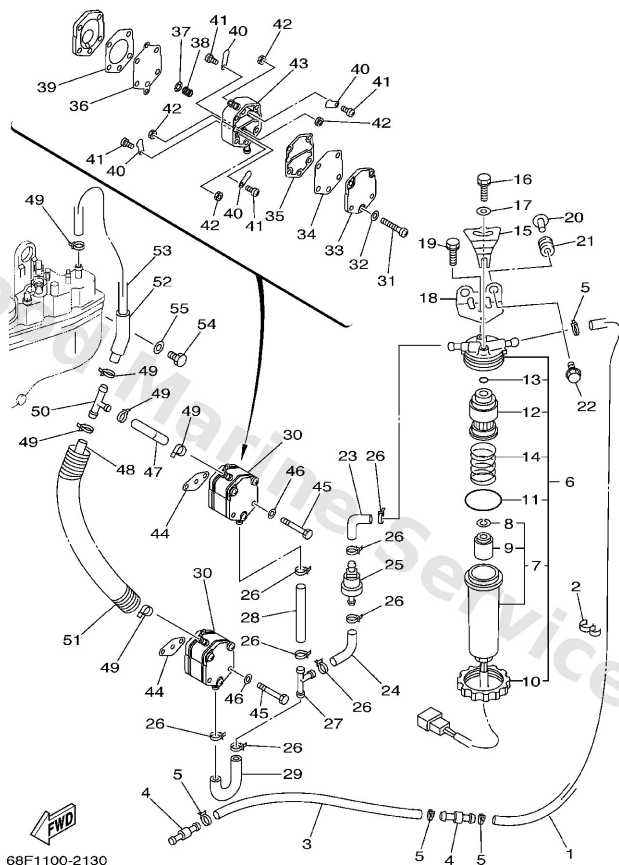

D5

Ref	Part	
32	92903--05600 Washer, plain (646)	Buy now
33	6E5--24413--00 Body 2	Buy now
34	6E5--24471--00 Diaphragm	Buy now
35	6E5--24435--00 Gasket, body 2	Buy now
36	6E5--24411--00 Diaphragm	Buy now
37	648--24424--00 Seat, spring	Buy now
38	6E5--24423--00 Spring, diaphragm	Buy now
39	6E5--24434--02 Gasket, body	Buy now
40	6A0--24421--01 Valve, check	Buy now
41	6A0--14325--00 Screw, pan head	Buy now
42	95380--03600 Nut (6g8)	Buy now
43	6E5--24412--10 Body 1	Buy now
44	650--24431--A0 Gasket, fuel pump	Buy now
45	97095--06050 Bolt(jf7)	Buy now
46	92995--06600 Washer, plain (646)	Buy now

 
Fuel 1

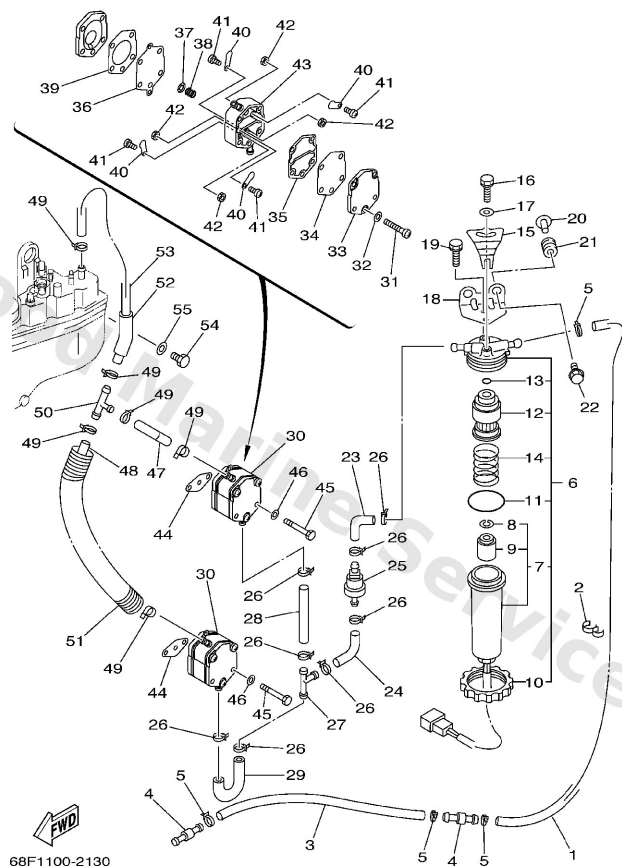

D5

Ref	Part	
48	6E5--24313--00 Pipe 3	Buy now
51	6H1--83557--00 Tube	Buy now
52	90446--15M07 Hose(6g4)	Buy now
53	9044513M12 Hose (L235)	Buy now
54	97095--06012 Bolt(gh1)	Buy now

 Fuel 2

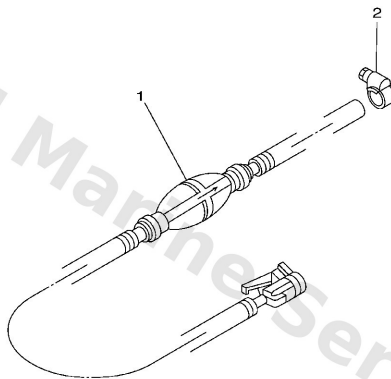


68J1100-2140

E1

Ref	Part	
1	6YK--24307--42 Fuel pipe comp. 2 AP	Buy now
2	90450--10M07 Hose, clamp AP	Buy now

 
Fuel Injection Nozzle

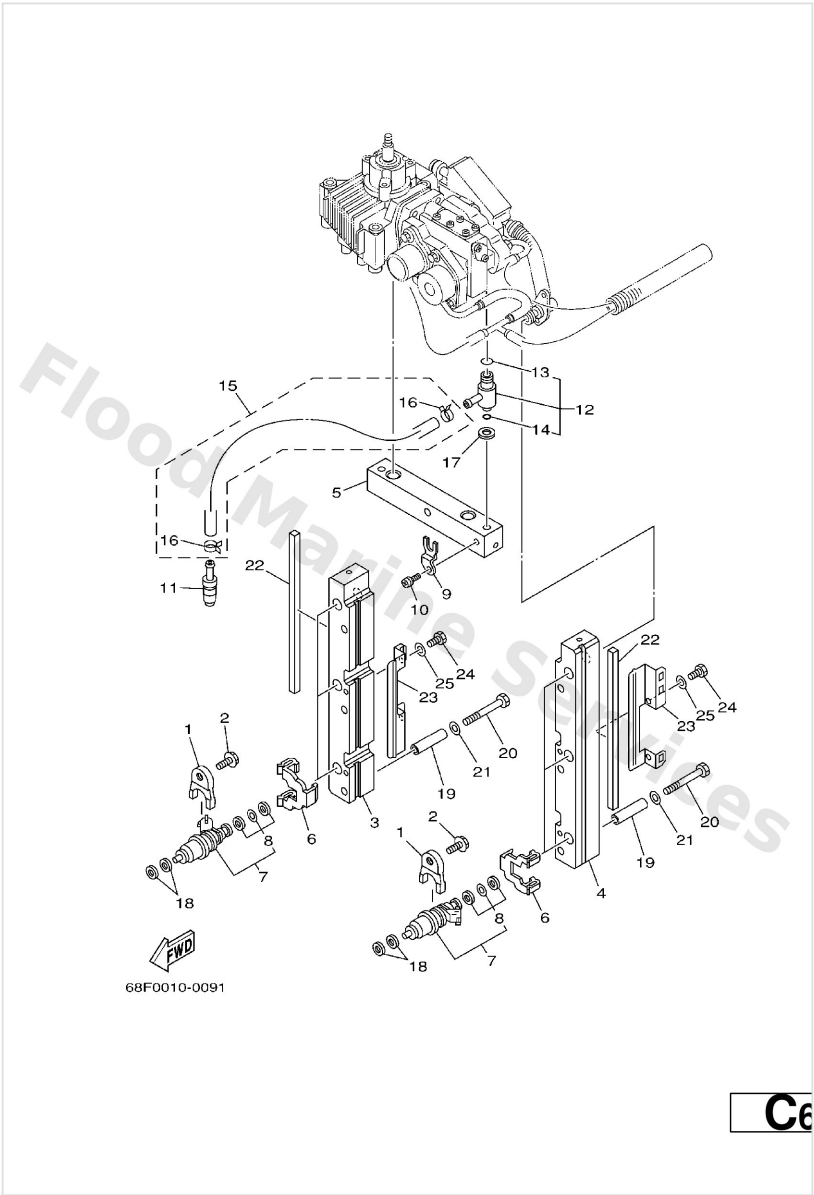

C6

Ref	Part	
1	68F1376700 Cap, injector	Buy now
2	9011908M60 Bolt (682)	Buy now
3	68F1316100 Pipe, Delivery 1	Buy now
4	68F1317100 Pipe, Delivery 2	Buy now
5	68F1393800 Pipe	Buy now
6	68F1389800 Holder	Buy now
7	68F1376100 Injector assembly	Buy now
8	68F1410B00 Packing kit	Buy now
9	68F1385300 Plate 3	Buy now
10	68F2445300 Screw	Buy now
11	68F2430000 Fuel pipe joint	Buy now
12	68F1359500 Joint	Buy now
13	68F2447900 O-Ring	Buy now
14	68F2448900 O-Ring	Buy now
15	68F1397200 Pipe, Fuel 2	Buy now

 
Fuel Injection Nozzle

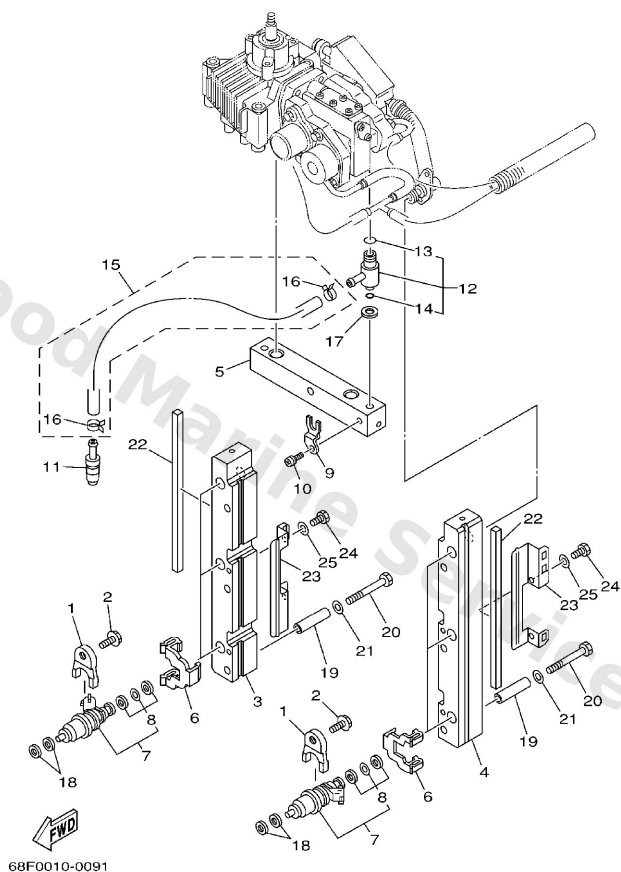

C6

Ref	Part	
16	65L--24387--00 Clip	Buy now
17	68F2417400 Spacer 1	Buy now
18	68F1376400 Gasket (t=2.2)	Buy now
19	68F1371600 Collar	Buy now
20	97013--08055 Bolt, hexagon	Buy now
21	92903--08600 Washer, plain (663)	Buy now
22	68F2411J00 Damper, Side Cover	Buy now
23	68F8254400 Clamp	Buy now
24	97013--06012 Bolt(gh1)	Buy now
25	92903--06600 Washer, plain (646)	Buy now

 
Fuel Injection Pump

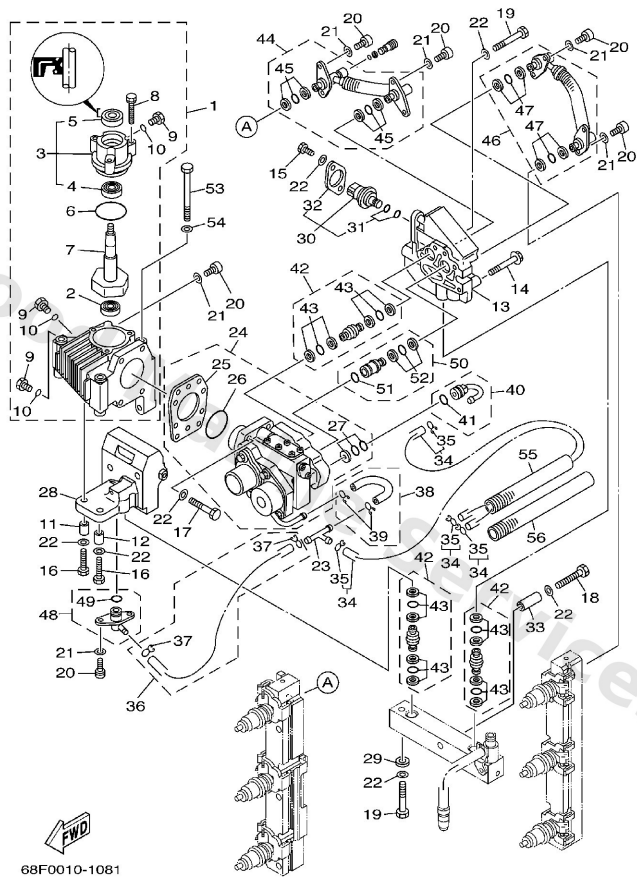

C3

Ref	Part	
1	68F1217001 Camshaft assembly 1	Buy now
2	9330600001 Brg,r-b 6000 26mm 19g ky	Buy now
3	68F1217300 Cap, camshaft 1	Buy now
4	93306001U0 Bearing	Buy now
5	68F1222300 Seal	Buy now
6	68F1243900 O-ring	Buy now
7	68F1217100 Camshaft 1	Buy now
8	68F1222800 Bolt	Buy now
9	68F1345500 Plug	Buy now
10	68F1347300 O-ring	Buy now
11	68F2437200 Joint	Buy now
12	68F2447800 Joint	Buy now
13	68F1399300 Cover	Buy now
14	68F2459200 Bolt	Buy now
15	68F1357300 Bolt 1	Buy now

 
Fuel Injection Pump

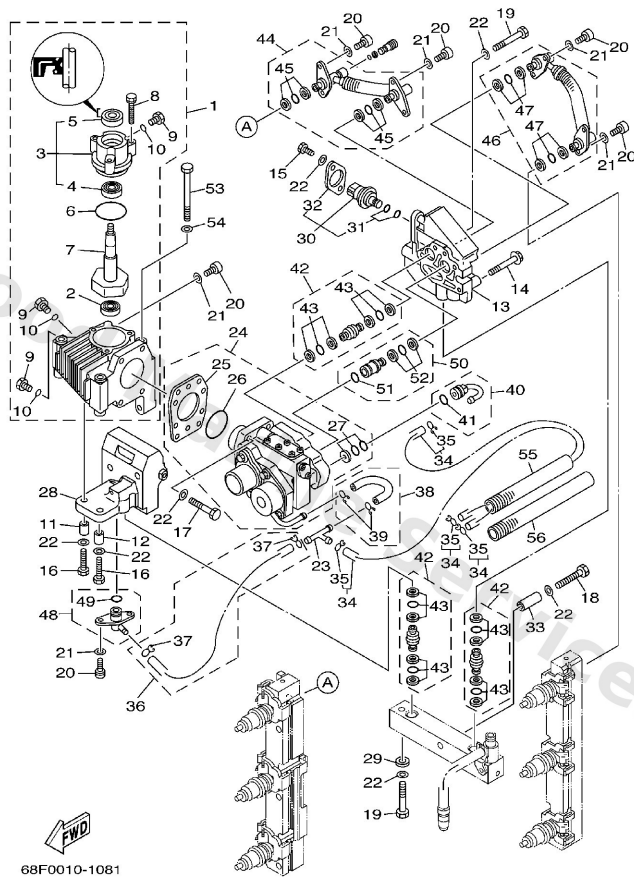

C3

Ref	Part	
16	68F1357400 Bolt 2	Buy now
17	68F2417600 Bolt 1	Buy now
18	68F1215700 Bolt	Buy now
19	68F2417800 Bolt 3	Buy now
20	68F2455100 Bolt, joint	Buy now
21	68F2457600 Washer	Buy now
22	68F2457900 Washer 2	Buy now
23	688--24378--00 Pipe, joint	Buy now
24	68F1391000 Fuel Pump assembly	Buy now
25	68F1400500 Ring, seal	Buy now
26	68F1412600 Gasket	Buy now
27	68F1394200 Valve, Outlet	Buy now
28	68F2447000 Fuel Regulator assembly	Buy now
29	68F1244300 Stay	Buy now
30	68F8238001 Sensor, pressure	Buy now

 
Fuel Injection Pump

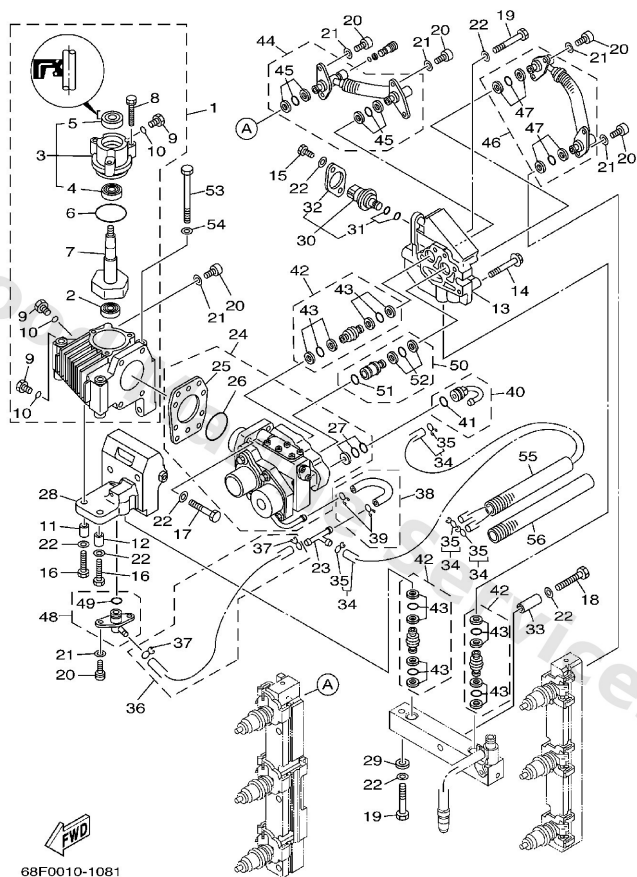

C3

Ref	Part	
31	68F8238400 Packing kit	Buy now
32	68F8238800 Plate	Buy now
33	68F2463800 Collar	Buy now
34	68F2431200 Pipe 2	Buy now
35	68F--24356--00 Clip, pipe 1	Buy now
36	68F2431300 Pipe 3	Buy now
38	68F2431400 Pipe 4	Buy now
40	68F1375800 Pipe, joint	Buy now
41	68F2448600 O-ring	Buy now
42	68F1381500 Joint 1	Buy now
43	68F2466A00 Packing kit	Buy now
44	68F1397300 Pipe Fuel 3	Buy now
46	68F1397400 Pipe Fuel 4	Buy now
48	68F2447400 Cover	Buy now
50	68F1381600 Joint 2	Buy now

 Fuel Injection Pump

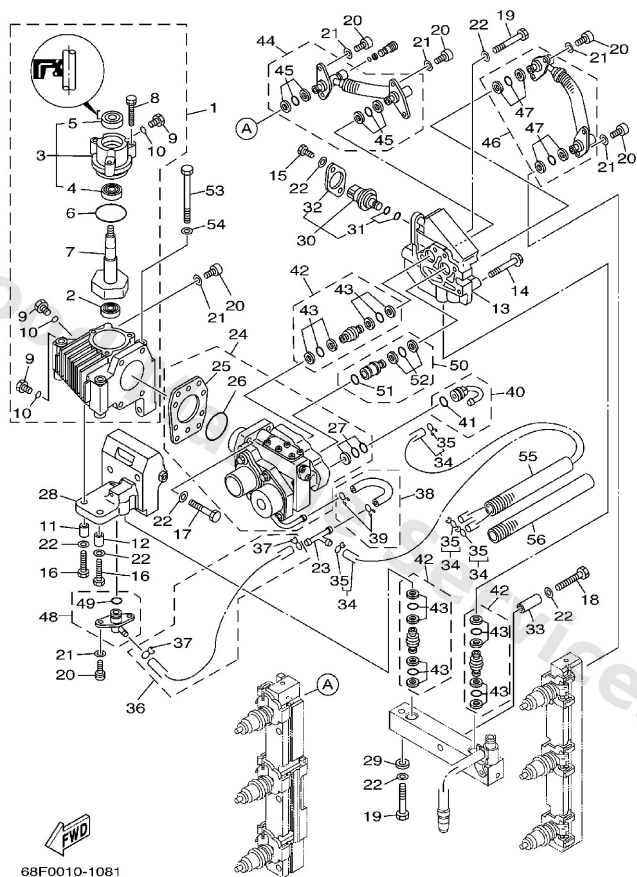


68F0010-1081

C3

Ref	Part	
53	9701308070 Bolt	Buy now
54	92903--08600 Washer, plain (663)	Buy now
55	9044624MF4 Hose (L350)	Buy now
56	90446--20MF5 Hose	Buy now

 Fuel Pump Drive Gear

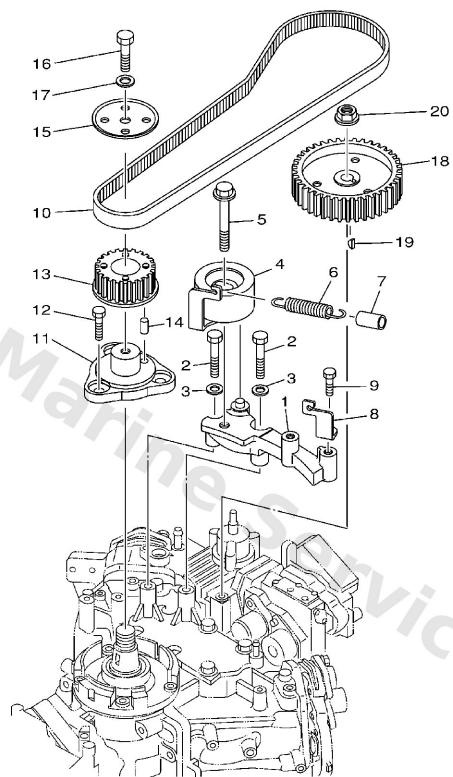


68F0010-0051

B5

Ref	Part	
1	68F115980094 Bracket, tensioner	Buy now
2	97013--08045 Bolt	Buy now
3	92903--08600 Washer, plain (663)	Buy now
4	68F1159000 Tensioner assembly	Buy now
5	90119--10M72 Bolt, with washer(6m6)	Buy now
6	90506--16M39 Spring, tension	Buy now
7	90445--15M03 Hose (I23)	Buy now
8	68F1159500 Plate, Valve	Buy now
9	97013--08012 Bolt(62e)	Buy now
10	68F4624100 Belt	Buy now
11	68F115790194 Coupling, flywheel	Buy now
13	68F115360094 Gear, drive	Buy now
14	93605--10108 Pin, dowel (8g8)	Buy now
15	68F1155700 Washer 1	Buy now
16	97095--08025 Bolt (62g)	Buy now

 Fuel Pump Drive Gear

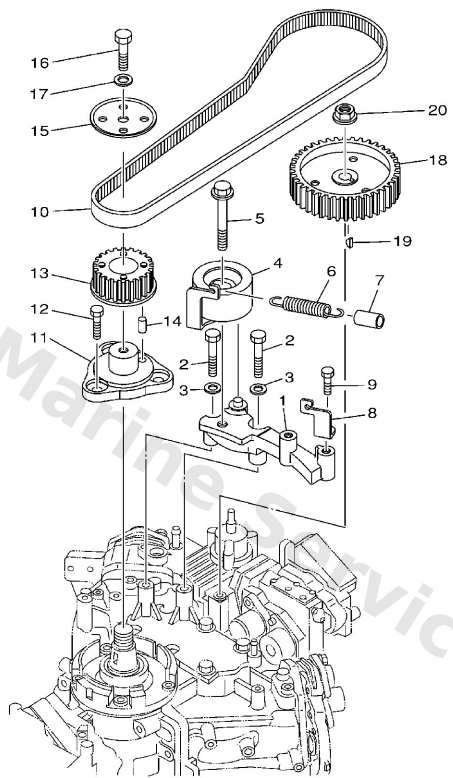


68F0010-0051

B5

Ref	Part	
17	92995--08600 Washer, plain (663)	Buy now
18	68F115370094 Gear, driven	Buy now
19	90280--03M01 Key woodruff 146115450000	Buy now
20	9570708600 Nut, flange(jn5)	Buy now

 
Generator

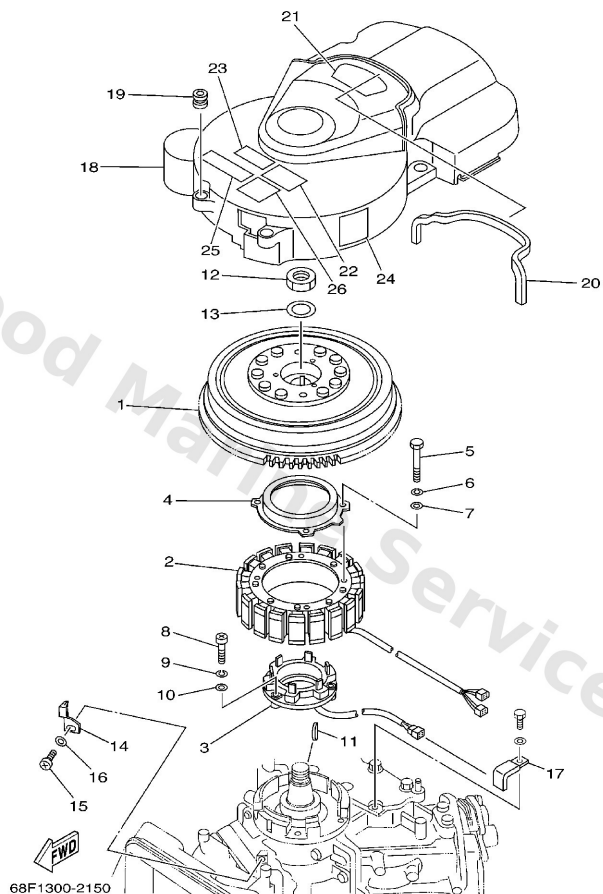

E2


Ref	Part	
1	68F8145000 Rotor assembly	Buy now
2	68F8141000 Stator assembly	Buy now
3	68F8558000 Coil, pulser	Buy now
4	61A--83721--00 Cover	Buy now
5	97013--06035 Bolt(3rv)	Buy now
6	92903--06100 Washer(6a1)	Buy now
7	92903--06600 Washer, plain (646)	Buy now
8	97885--05030 Ybs86-530 screw,panhead	Buy now
9	92995--05100 Ybs67-5 washer, spring	Buy now
10	92995--05600 Washer, plain (646)	Buy now
11	90280--05015 Key, woodruff	Buy now
12	90170--24M22 Nut(61a)	Buy now
13	9020125M02 Washer, plate(61a)	Buy now
14	6E5--81332--00 Plate, timing	Buy now
15	97885--06010 Screw pan head	Buy now

 Generator

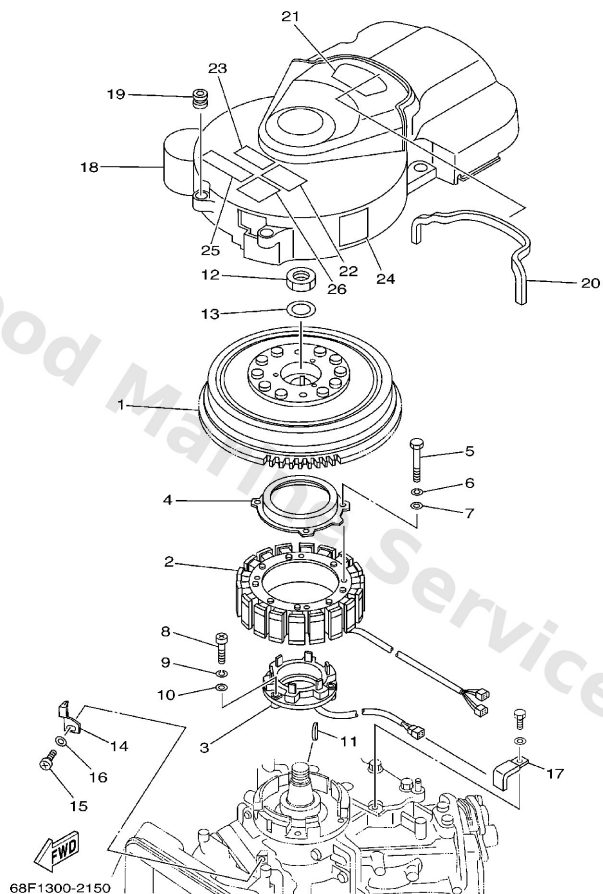


Ref	Part	
16	92995--06600 Washer, plain (646)	Buy now
17	90465--08M23 Clamp (6h3)	Buy now
18	68F8133700 Cover Flywheel	Buy now
19	663--82317--01 Damper, ignition coil	Buy now
20	68F8554701 Damper	Buy now
21	68F1448800 Label, caution	Buy now
22	6A1--83625--51 Mark 5	Buy now
23	6A1--83625--41 Mark 5	Buy now
24	6E5--85711--60 Mark Caution	Buy now
25	6K1--83623--41 Mark 3	Buy now
26	6K1--83623--50 Mark 3	Buy now

 Intake

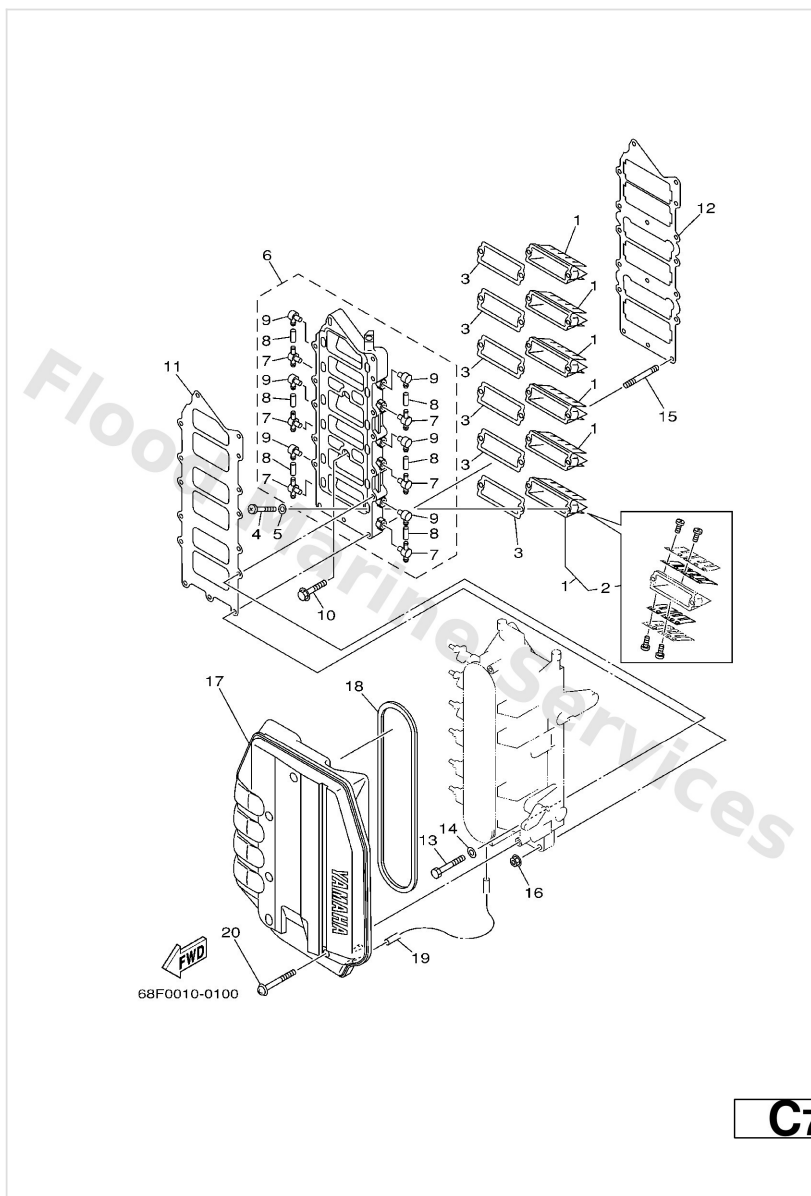

Ref	Part	
1	65L--13610--01 Reed valve assembly	Buy now
1	68H1361000 Reed valve assembly	Buy now
2	65J--W0004--01 Reed set	Buy now
3	61A--13621--A0 Gasket, valve seat	Buy now
4	97880--05016 Screw, pan head(6b0)	Buy now
5	92990--05600 Washer, plain (646)	Buy now
6	68F136240015 Plate,reed valve	Buy now
7	6F6--11372--00 Nipple, hose	Buy now
8	90445--07M03 Hose (I200)	Buy now
9	650--11370--00 Check valve assembly	Buy now
10	90105--06028 Bolt, washer based	Buy now
11	65L--13646--00 Gasket, manifold 2	Buy now
12	65L--13645--00 Gasket, manifold 1	Buy now
13	97013--06060 Bolt, hexagon	Buy now
14	92903--06600 Washer, plain (646)	Buy now

 
Intake

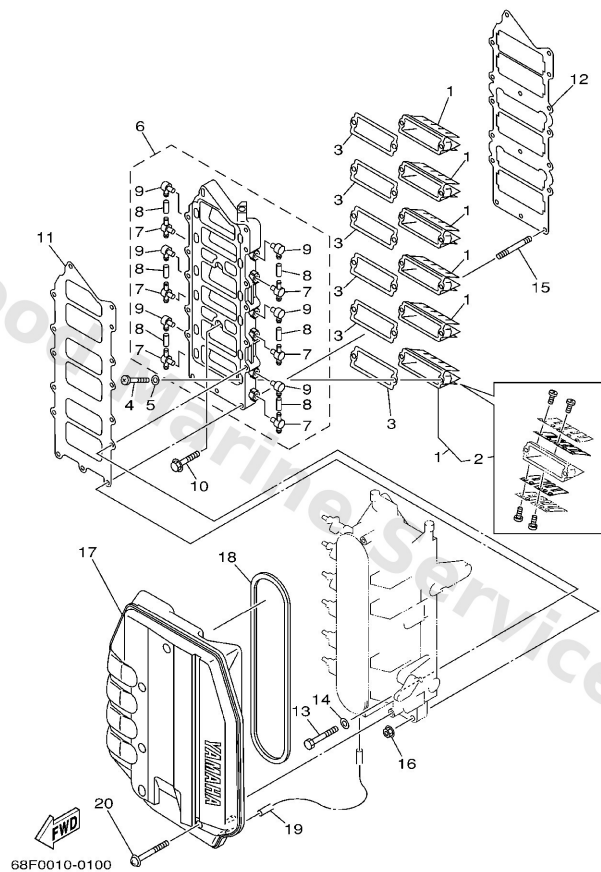

C7


Ref	Part	
15	9567006660 Bolt, stud	Buy now
16	90179--06M24 Nut(6j8)	Buy now
17	67H1444000 Silencer assembly Intake	Buy now
18	65L--14483--00 Gasket	Buy now
19	90445--07M44 Hose (I390)	Buy now
20	90159--06M16 Screw, with washer(61a)	Buy now

 Lower Casing. Drive 1

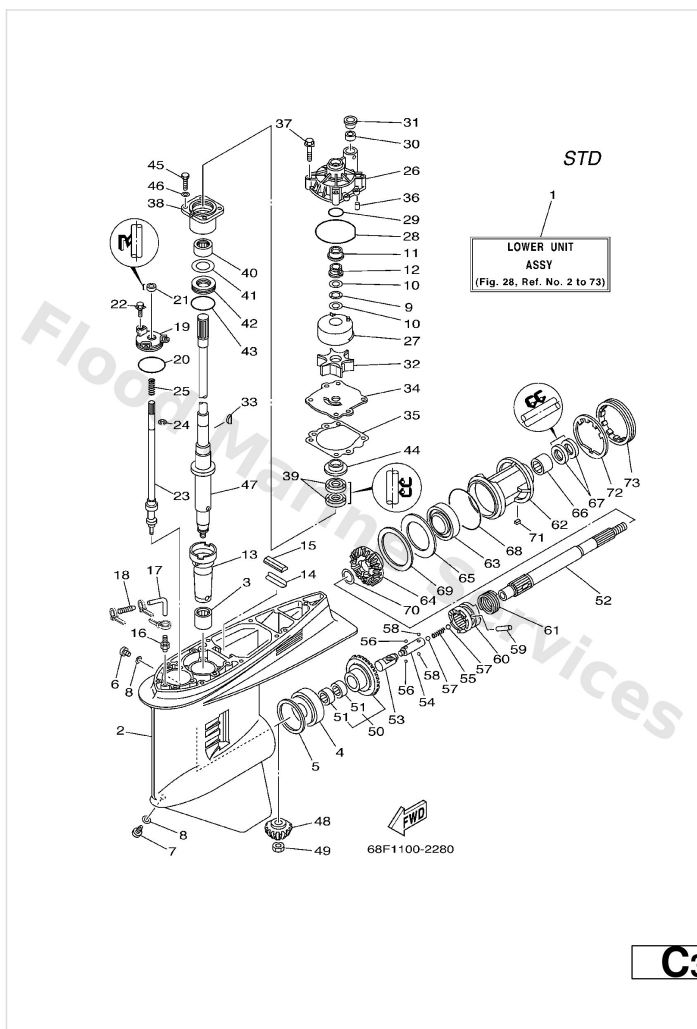


Ref	Part	
1	64E--45300--01--8D Lower unit assembly L	Buy now
1	64E--45300--21--8D Lower unit assembly X	Buy now
2	6J9--45301--04--8D Casing, lower	Buy now
3	93311--928U5 Bearing, needle (6g5)	Buy now
4	93332--000V3 Bearing, taper roller (6g5)	Buy now
5	6G5--45567--01--10 Shim (t:0.10mm) UR	Buy now
5	6G5--45567--01--12 Shim (t:0.12mm) UR	Buy now
5	6G5--45567--01--15 Shim (t:0.15mm) UR	Buy now
5	6G5--45567--01--18 Shim (t:0.18mm) UR	Buy now
5	6G5--45567--01--30 Shim (t:0.30mm) UR	Buy now
5	6G5--45567--01--40 Shim (t:0.40mm) UR	Buy now
5	6G5--45567--01--50 Shim (t:0.50mm) UR	Buy now
6	90340--08002 Plug, straight screw	Buy now
7	688--45341--10 Plug, drain	Buy now
8	90430--08020 Gasket	Buy now

 Lower Casing. Drive 1

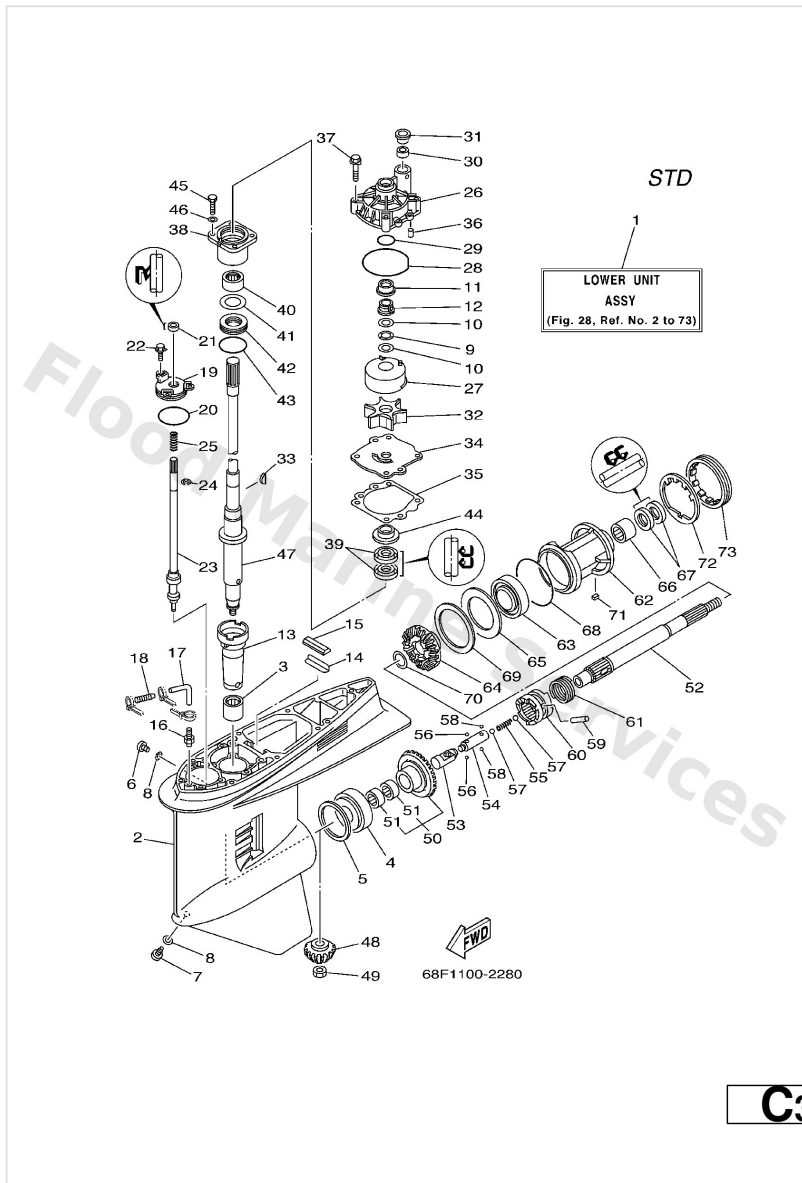


Ref	Part	
9	90206--22M19 Washer, wave(61a)	Buy now
10	90201--22M01 Washer, plate(61a)	Buy now
11	61A--45527--00 Collar, drive shaft	Buy now
12	61A--45538--00 Spacer, 1	Buy now
13	6G5--45536--01 Sleeve, drive shaft	Buy now
14	64D--45376--00--94 Guide, seal damper X	Buy now
14	663--45376--00--94 Guide, seal damper L	Buy now
15	688--45375--00 Damper, seal 2	Buy now
16	6E5--45378--00 Nipple, hose	Buy now
17	90445--07ME8 Hose (l250) L	Buy now
17	90445--07ME9 Hose (l250) X	Buy now
18	6E5--83558--10 End, nipple	Buy now
19	6E5--45321--00 Plate	Buy now
20	93210--58144 O-ring(47x)	Buy now
21	93106--09014 Oil seal	Buy now

 Lower Casing. Drive 1

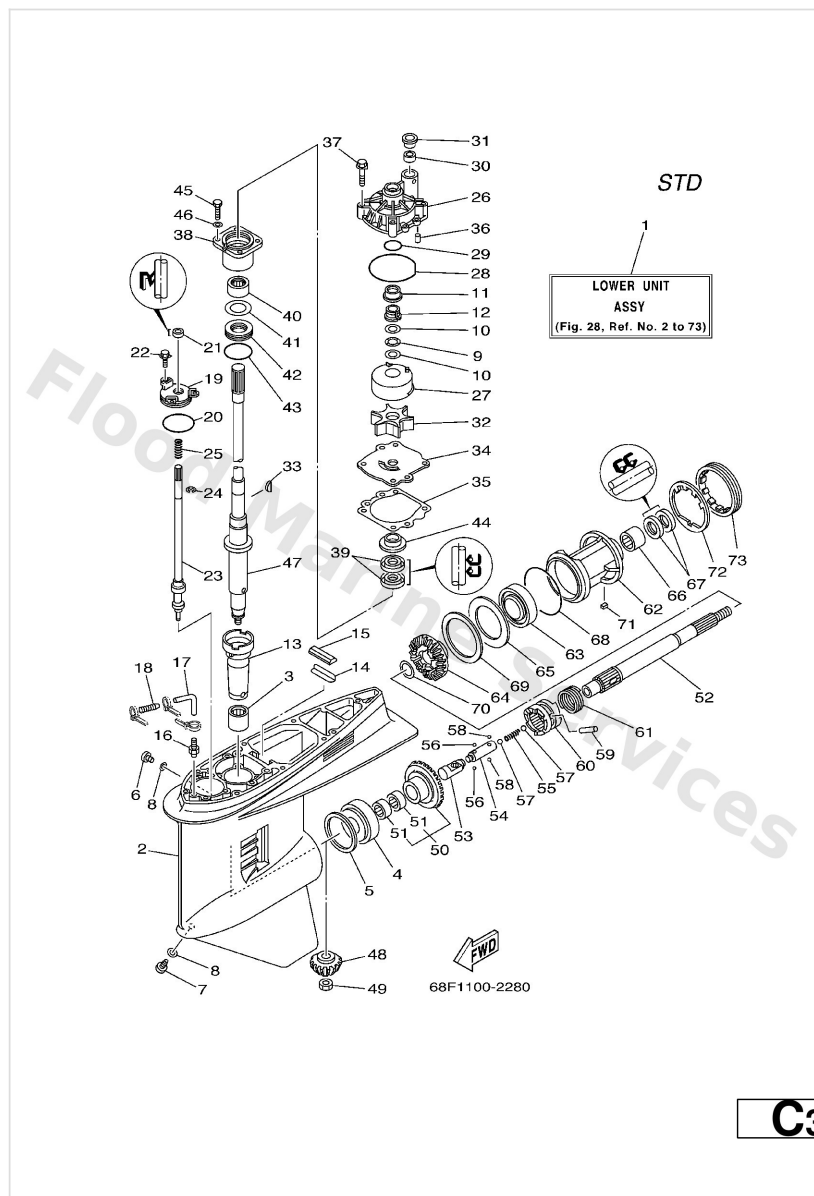


Ref	Part	
22	90119--06M10 Bolt, with washer	Buy now
23	6G5--44150--02 Shift cam assembly	Buy now
24	99001--08600 Circlip(2r6)	Buy now
25	90501--11M10 Spring, compression (663)	Buy now
26	61A--44311--01 Housing, water pump	Buy now
27	61A--44322--02 Insert, cartridge	Buy now
28	93210--86M38 O-ring (6e5)	Buy now
29	93210--37160 O-ring (6g8)	Buy now
30	6E5--44365--00 Damper, water seal 1	Buy now
31	6E5--44312--00 Cover, water pump housing	Buy now
32	6E5--44352--01 Impeller	Buy now
33	90280--04M05 Key, woodruff (6e5)	Buy now
34	6G5--44323--00 Outer plate, cartridge	Buy now
35	6E5--44315--A0 Gasket,water pump	Buy now
36	93606--12019 Pin, dowel (614)	Buy now

 Lower Casing. Drive 1

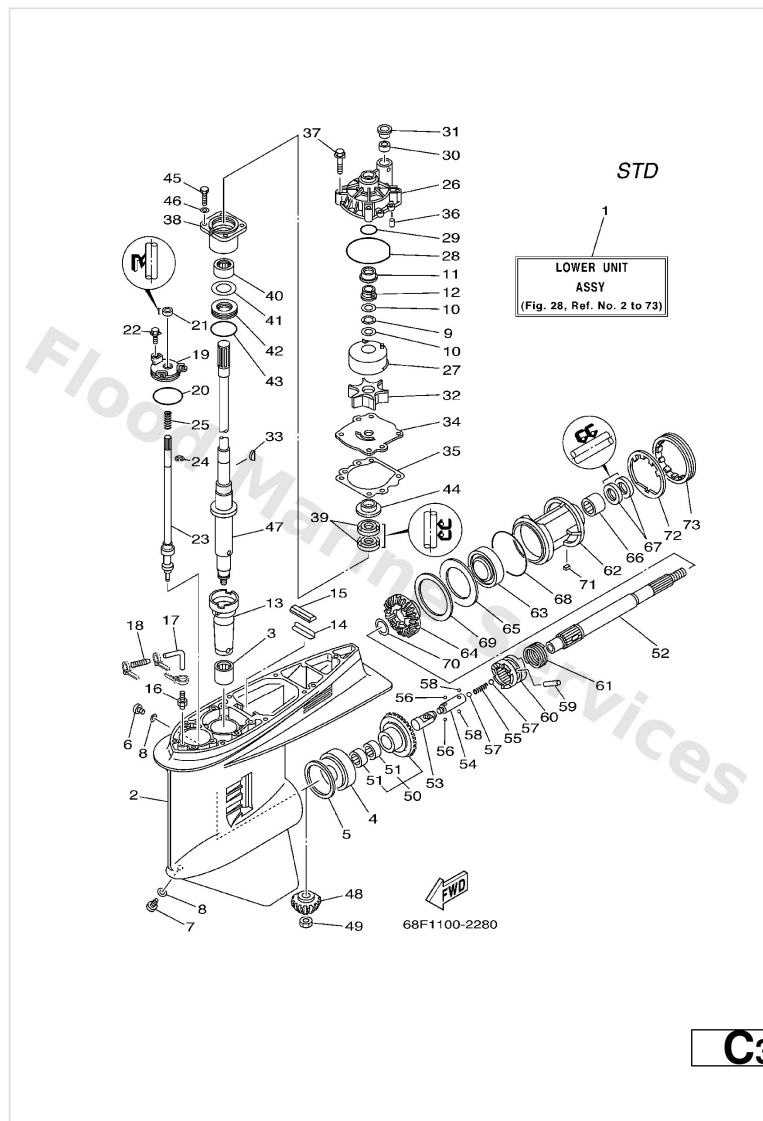


Ref	Part	
37	90119--08M14 Bolt, with washer	Buy now
38	6E5--45331--00--94 Housing, bearing	Buy now
39	93101--28M16 Oil seal (6e5)	Buy now
40	93317--330U2 Bearing, cylindrical(6k0)	Buy now
41	6E5--45587--01--10 Shim (t:0.10mm) UR	Buy now
41	6E5--45587--01--12 Shim (t:0.12mm) UR	Buy now
41	6E5--45587--01--15 Shim (t:0.15mm) UR	Buy now
41	6E5--45587--01--18 Shim (t:0.18mm) UR	Buy now
41	6E5--45587--01--30 Shim (t:0.30mm) UR	Buy now
41	6E5--45587--01--40 Shim (t:0.40mm) UR	Buy now
41	6E5--45587--01--50 Shim (t:0.50mm) UR	Buy now
42	93341--930V2 Bearing, thrust(64d)	Buy now
43	93210--55M14 O-ring (70e)	Buy now
44	6E5--45344--00 Cover, oil seal	Buy now
45	97095--08025 Bolt (62g)	Buy now

 Lower Casing. Drive 1

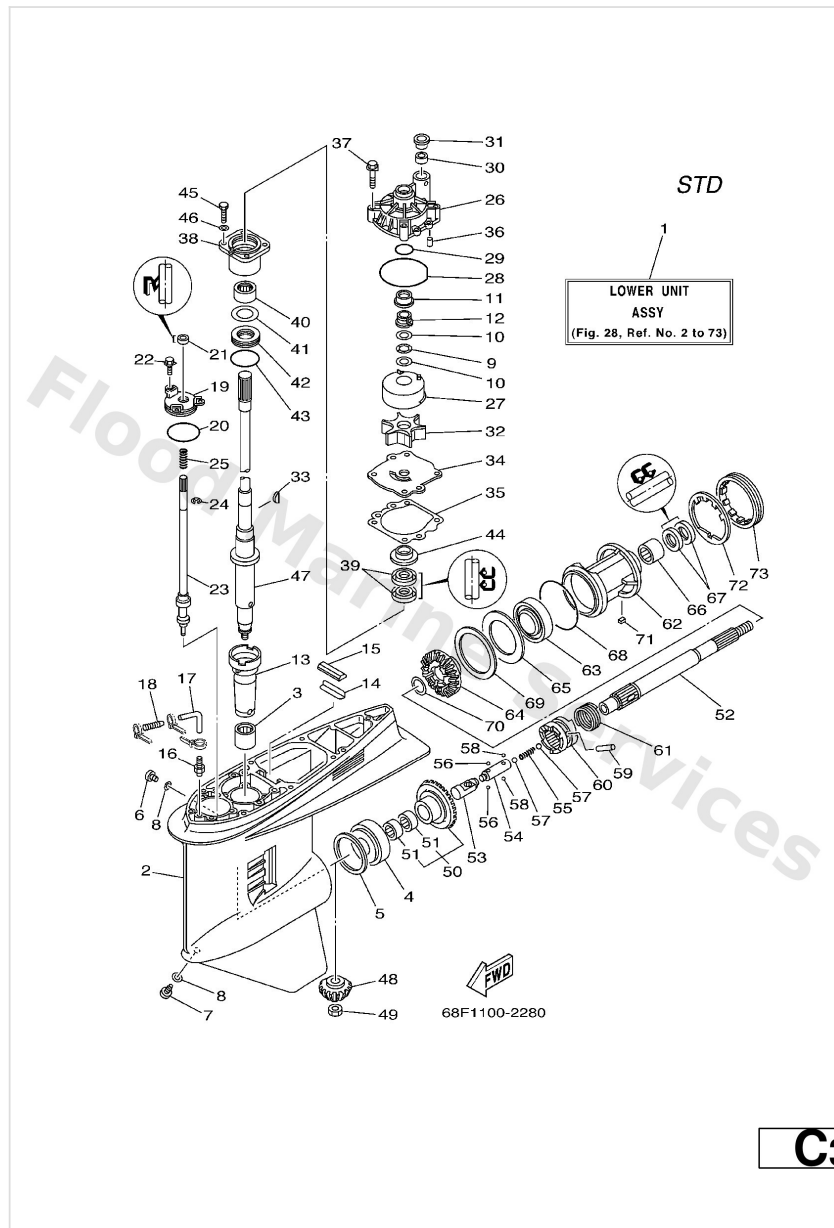


Ref	Part	
46	92995--08600 Washer, plain (663)	Buy now
47	6G5--45501--01 Drive shaft comp. L	Buy now
47	6G5--45501--21 Drive shaft comp. X	Buy now
48	6G5--45551--10 Pinion	Buy now
49	90170--16M01 Nut, hexagon (688)	Buy now
50	6G5--45560--10 Gear	Buy now
51	93315--425V3 Bearing, needle (6g5)	Buy now
52	6J9--45611--01 Shaft, propeller	Buy now
53	6E5--45641--02 Shifter	Buy now
54	6E5--45634--01 Slide, shift	Buy now
55	90501--16M37 Spring (6g5)	Buy now
56	93507--32009 Ball (12r)	Buy now
57	93511--32017 Ball (498)	Buy now
58	93503--16003 Ball	Buy now
59	90250--08M07 Pin, straight (6g5)	Buy now

 Lower Casing. Drive 1

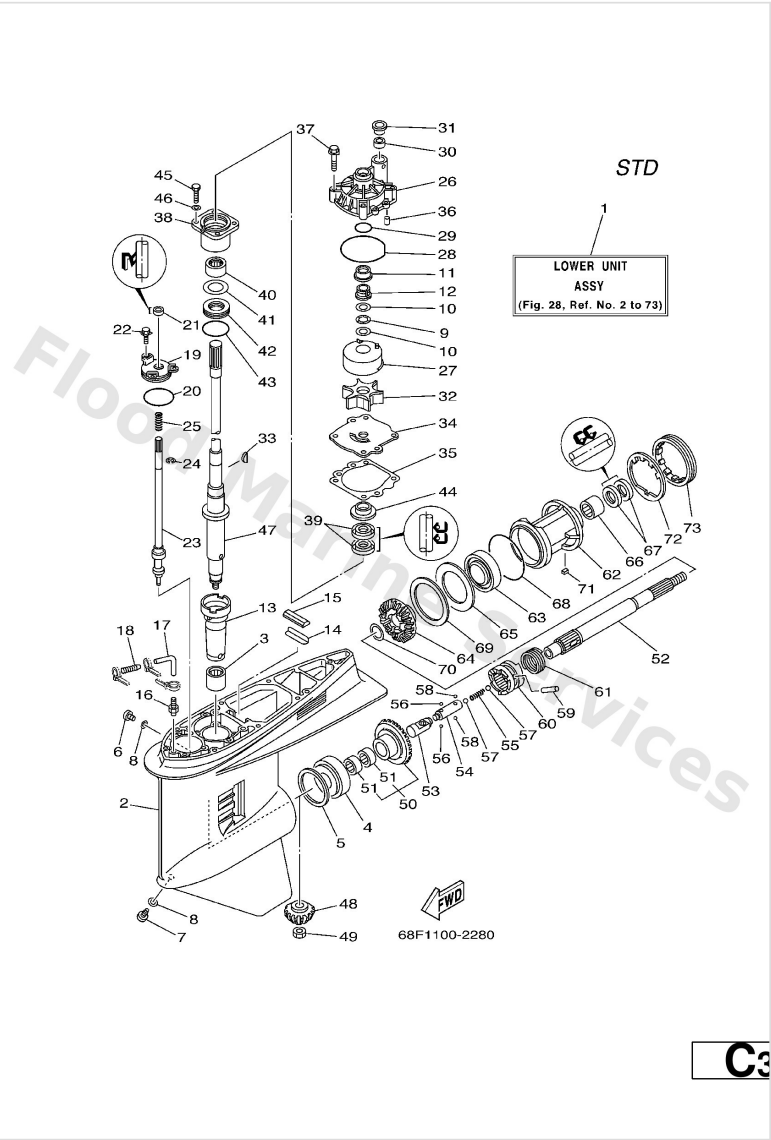

Ref	Part	
60	6G5--45631--10 Clutch, dog	Buy now
61	6E5--45633--01 Ring, cross pin	Buy now
62	6J9--45332--00--94 Housing, bearing	Buy now
63	93306--209U0 Bearing (6g5)	Buy now
64	6G5--45571--02 Gear	Buy now
65	6G5--45576--00 Washer Thrust 2	Buy now
66	93315--430U8 Bearing	Buy now
67	93101--30M17 Oil seal (6e5)	Buy now
68	93210--97M55 O-ring (6g5)	Buy now
69	6G5--45577--02--10 Shim (t:0.10mm) UR	Buy now
69	6G5--45577--02--12 Shim (t:0.12mm) UR	Buy now
69	6G5--45577--02--15 Shim (t:0.15mm) UR	Buy now
69	6G5--45577--02--18 Shim (t:0.18mm) UR	Buy now
69	6G5--45577--02--30 Shim (t:0.30mm) UR	Buy now
69	6G5--45577--02--40 Shim (t:0.40mm) UR	Buy now

 
Lower Casing. Drive 1

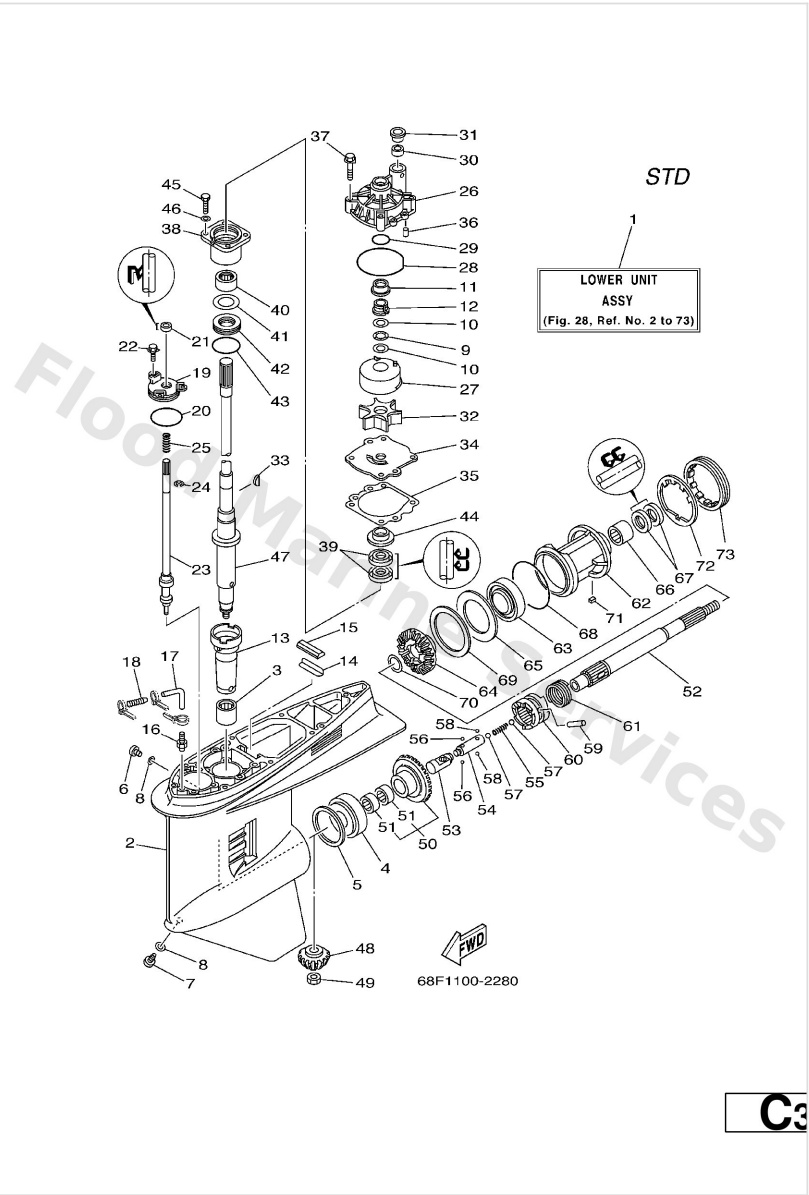

Ref	Part	
69	6G5--45577--02--50 Shim (t:0.50mm) UR	Buy now
70	90201--30M92 Washer (6g5)	Buy now
71	90282--04M00 Key, straight(6g5)	Buy now
72	6G5--45383--01 Washer, claw	Buy now
73	6G5--45384--00 Nut	Buy now

Lower Casing. Drive 2

 STD

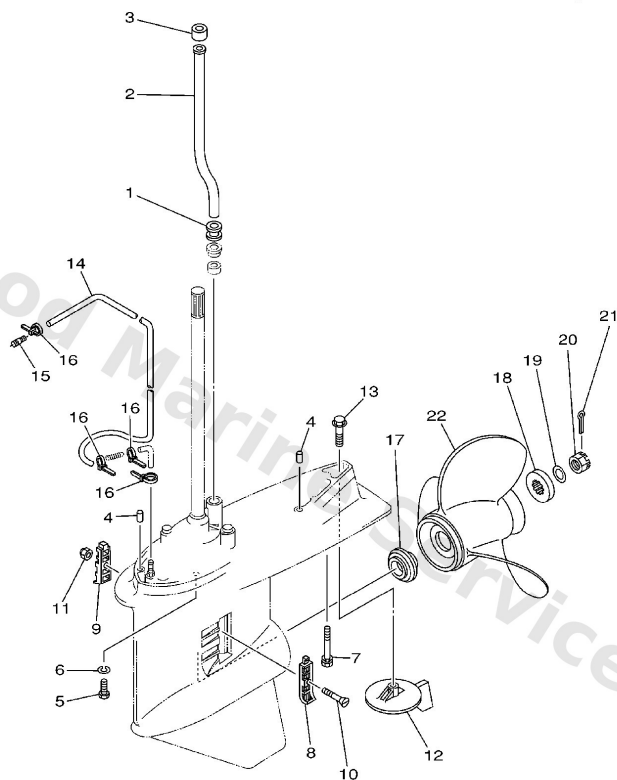


67H0100-1260

C7

Ref	Part	
1	6E5--44366--00 Damper, water seal 2	Buy now
2	6E5--44361--00 Tube, water L	Buy now
2	6E5--44361--20 Tube, water X	Buy now
3	6E5--44365--00 Damper, water seal 1	Buy now
4	93608--12M05 Pin, dowel b (6e5)	Buy now
5	97075--10045 Bolt(64d)	Buy now
6	92995--10100 Ybs67-10 washer, spring	Buy now
7	90119--10M89 Bolt, with washer	Buy now
8	6J9--45214--00 Cover, water inlet	Buy now
9	6J9--45215--00 Cover, water inlet	Buy now
10	90152--05M08 Screw, countersunk	Buy now
11	90185--05002 Nut nylon (sus)(ex4)	Buy now
12	6J9--45371--01 Tab-trim	Buy now
13	90105--10M00 Bolt, hexagon (663)	Buy now
14	90445--07M33 Hose (L1080)	Buy now

Lower Casing. Drive 2

 STD

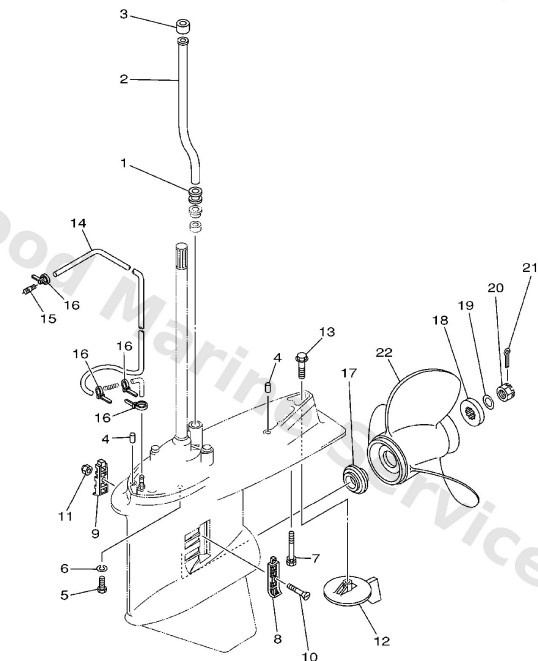


67H0100-1260

C7

Ref	Part	
15	6E5--83558--00 End, nipple	Buy now
16	90465--11M10 Clamp	Buy now
17	6E5--45987--01 Spacer 1	Buy now
18	688--45997--01 Spacer 2	Buy now
19	92990--18200 Washer (6e5)	Buy now
20	90171--18M04 Nut, castle (6e5)	Buy now
21	91490--40030 Pin, cotter (663)	Buy now
22	6G5--45941--00--98 Propeller (3x15-1/4x15"-m) UR	Buy now
22	6G5--45943--01--98 Propeller (3x13-3/4"x21"-m) UR	Buy now
22	6G5--45945--01--98 Propeller (3x14"x19"-m) UR	Buy now
22	6G5--45947--01--98 Propeller (3x14-1/2"x17"-m) UR	Buy now
22	6G5--45949--00--98 Propeller (3x13-1/2"x23"-m) UR	Buy now
22	6G5--45930--00--98 Propeller (ss 3x13-3/8"x25"-m) UR	Buy now
22	6G5--45932--00--98 Propeller (3x15-3/4"x13"-m) UR	Buy now
22	6G5--45952--00--98 Propeller (3x14-5/8"x16"-m) UR	Buy now

Lower Casing. Drive 2

 STD

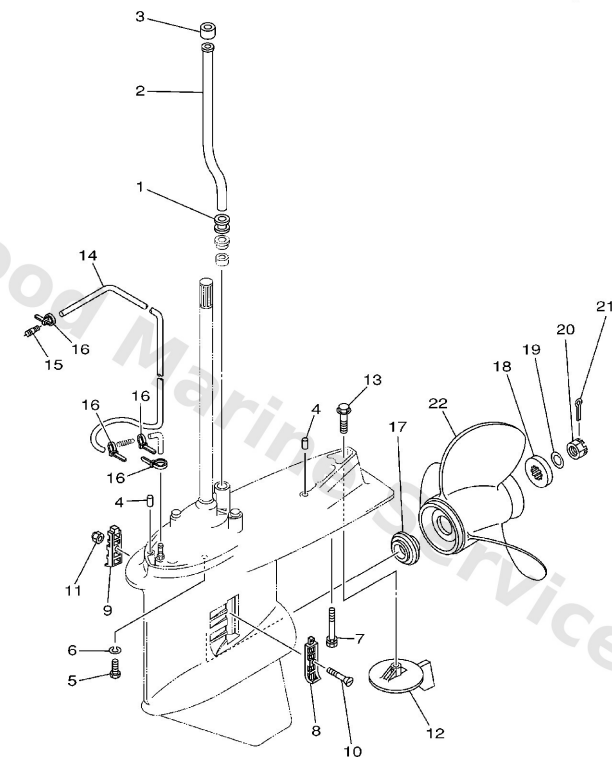


67H0100-1260

C7


Ref	Part	
22	6G5--45970--02--98 Propeller (3x15-1/4 x15 -m) UR	Buy now
22	6G5--45972--02--98 Propeller (3x13-3/4 x21 -m) UR	Buy now
22	6G5--45974--03--98 Propeller (3x13-3/4"x19"-m2) UR	Buy now
22	6G5--45976--01--98 Propeller (3x13-3/8"x23"-m) UR	Buy now
22	6G5--45978--03--98 Propeller (3x13-3/4"x17"-m2) UR	Buy now
22	6R4--45970--A0 Propeller (3X15-1/4"X19"-M) UR	Buy now
22	6R4--45972--A0 Propeller (3X14-7/8"X21"-M) UR	Buy now
22	6R4--45974--A0 Propeller (3X14-1/2"X23"-M) UR	Buy now
22	6R4--45976--A0 Propeller (3X14-1/2"X15"-M) UR	Buy now
22	6R4--45978--A0 Propeller (3X15-1/4"X17"-M) UR	Buy now

 Lower Casing. Drive 3

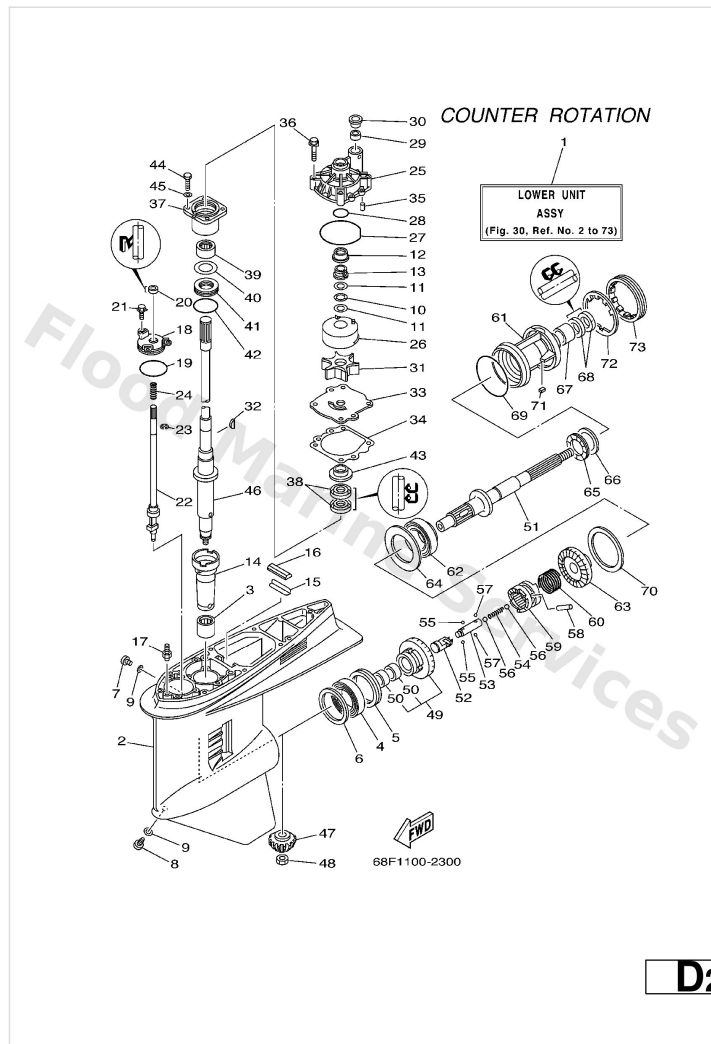


Ref	Part	
1	64H45300218D Lower unit assembly X	Buy now
2	6J9-45301-04-8D Casing, lower	Buy now
3	93311-928U5 Bearing, needle (6g5)	Buy now
4	93390-000U2 Bearing(6k0)	Buy now
5	93341-465U4 Bearing, thrust (6k0)	Buy now
6	6G5-45567-01-10 Shim (t:0.10mm) UR	Buy now
6	6G5-45567-01-12 Shim (t:0.12mm) UR	Buy now
6	6G5-45567-01-15 Shim (t:0.15mm) UR	Buy now
6	6G5-45567-01-18 Shim (t:0.18mm) UR	Buy now
6	6G5-45567-01-30 Shim (t:0.30mm) UR	Buy now
6	6G5-45567-01-40 Shim (t:0.40mm) UR	Buy now
6	6G5-45567-01-50 Shim (t:0.50mm) UR	Buy now
7	90340-08002 Plug, straight screw	Buy now
8	688-45341-10 Plug, drain	Buy now
9	90430-08020 Gasket	Buy now

 Lower Casing. Drive 3

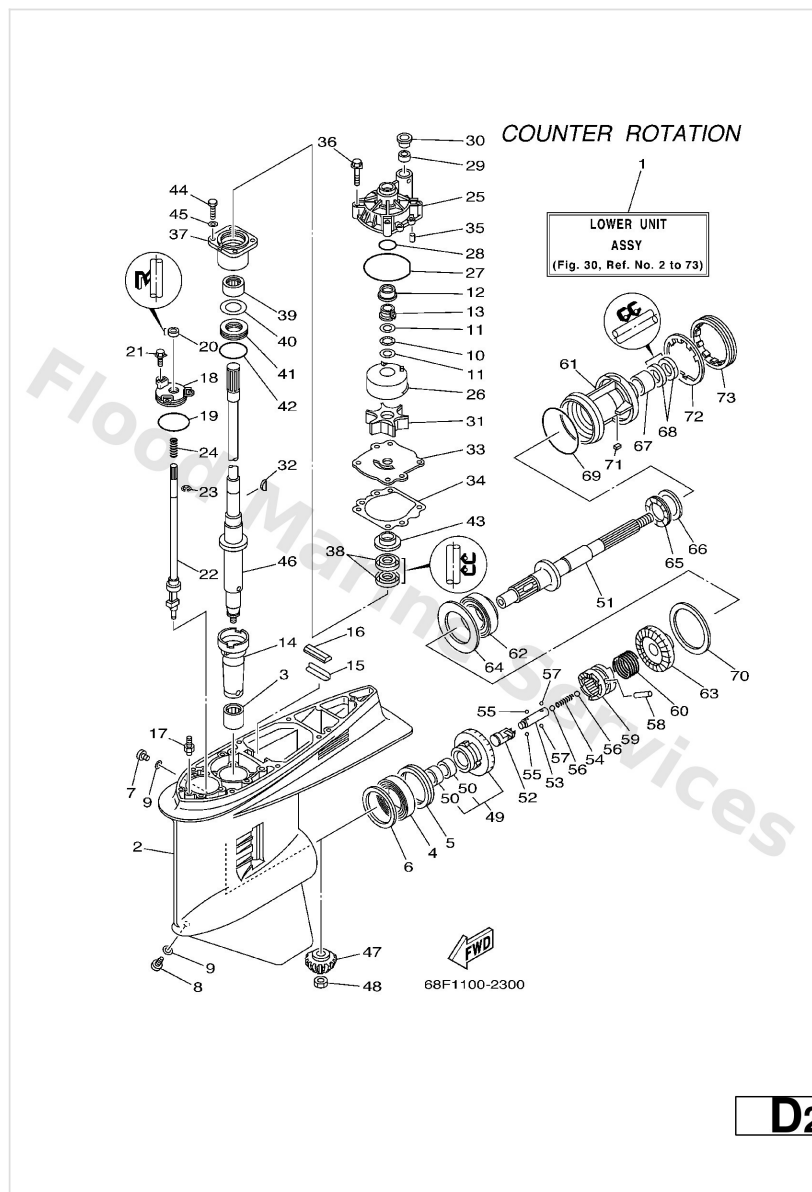


Ref	Part	
10	90206--22M19 Washer, wave(61a)	Buy now
11	90201--22M01 Washer, plate(61a)	Buy now
12	61A--45527--00 Collar, drive shaft	Buy now
13	61A--45538--00 Spacer, 1	Buy now
14	6G5--45536--01 Sleeve, drive shaft	Buy now
15	64D--45376--00--94 Guide, seal damper X	Buy now
16	688--45375--00 Damper, seal 2	Buy now
17	6J8--45378--00 Nipple, hose (plug)	Buy now
18	6E5--45321--00 Plate	Buy now
19	93210--58144 O-ring(47x)	Buy now
20	93106--09014 Oil seal	Buy now
21	90119--06M10 Bolt, with washer	Buy now
22	6K1--44150--01 Shift cam assembly	Buy now
23	99001--08600 Circlip(2r6)	Buy now
24	90501--11M10 Spring, compression (663)	Buy now

 Lower Casing. Drive 3

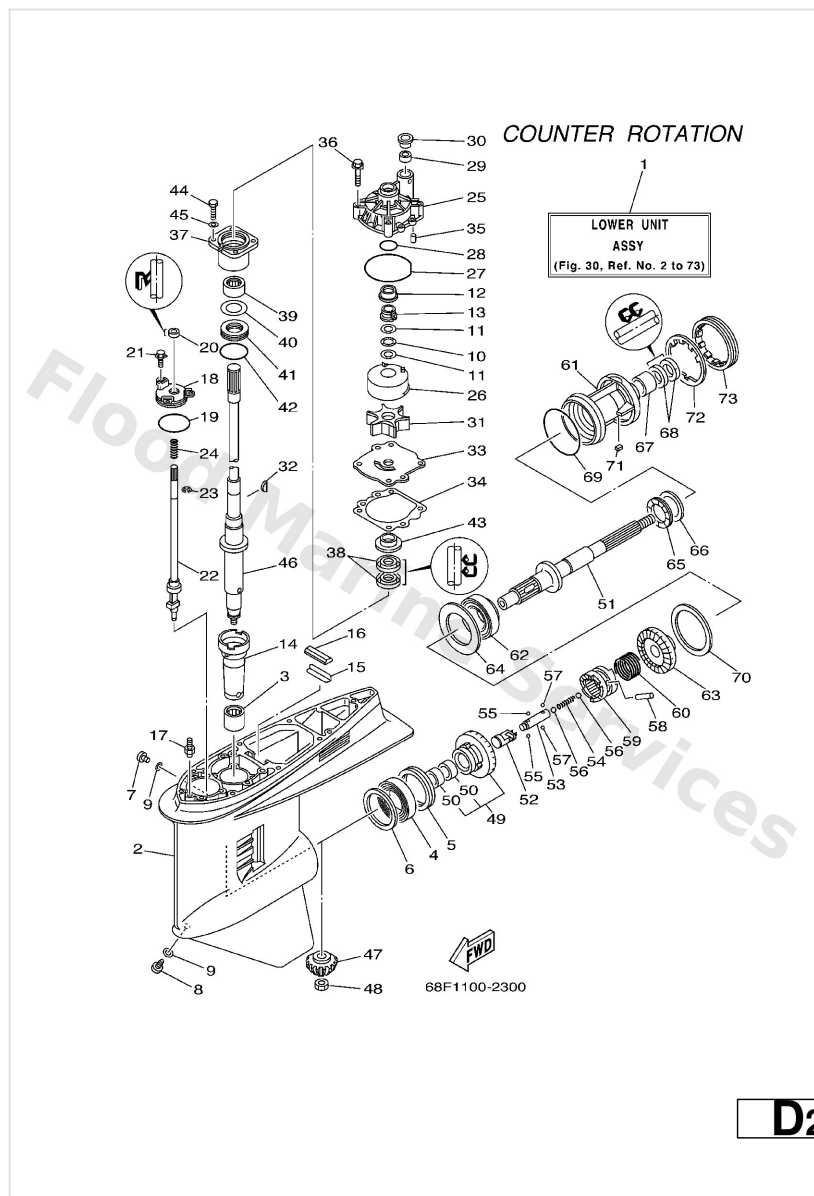


Ref	Part	
25	61A--44311--01 Housing, water pump	Buy now
26	61A--44322--02 Insert, cartridge	Buy now
27	93210--86M38 O-ring (6e5)	Buy now
28	93210--37160 O-ring (6g8)	Buy now
29	6E5--44365--00 Damper, water seal 1	Buy now
30	6E5--44312--00 Cover, water pump housing	Buy now
31	6E5--44352--01 Impeller	Buy now
32	90280--04M05 Key, woodruff (6e5)	Buy now
33	6G5--44323--00 Outer plate, cartridge	Buy now
34	6E5--44315--A0 Gasket, water pump	Buy now
35	93606--12019 Pin, dowel (614)	Buy now
36	90119--08M14 Bolt, with washer	Buy now
37	6E5--45331--00--94 Housing, bearing	Buy now
38	93101--28M16 Oil seal (6e5)	Buy now
39	93317--330U2 Bearing, cylindrical(6k0)	Buy now

 Lower Casing. Drive 3

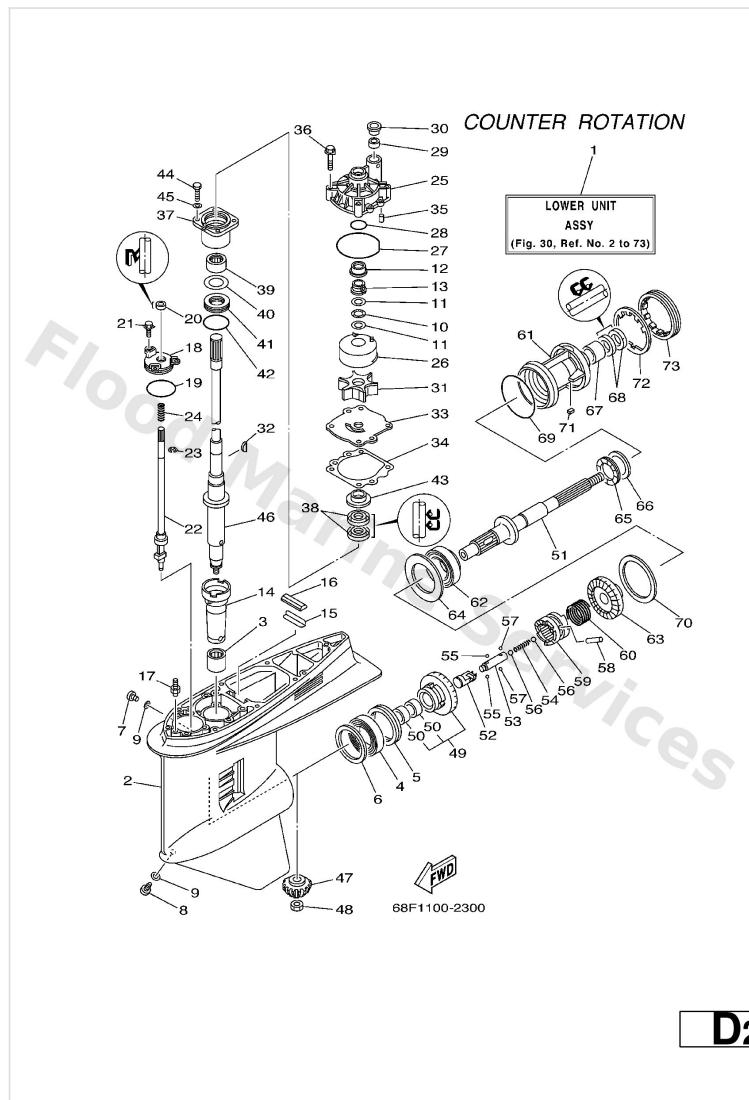


Ref	Part	
40	6E5--45587--01--10 Shim (t:0.10mm) UR	Buy now
40	6E5--45587--01--12 Shim (t:0.12mm) UR	Buy now
40	6E5--45587--01--15 Shim (t:0.15mm) UR	Buy now
40	6E5--45587--01--18 Shim (t:0.18mm) UR	Buy now
40	6E5--45587--01--30 Shim (t:0.30mm) UR	Buy now
40	6E5--45587--01--40 Shim (t:0.40mm) UR	Buy now
40	6E5--45587--01--50 Shim (t:0.50mm) UR	Buy now
41	93341--930V2 Bearing, thrust(64d)	Buy now
42	93210--55M14 O-ring (70e)	Buy now
43	6E5--45344--00 Cover, oil seal	Buy now
44	97095--08025 Bolt (62g)	Buy now
45	92995--08600 Washer, plain (663)	Buy now
46	6G5--45501--21 Drive shaft comp. X	Buy now
47	6G5--45551--10 Pinion	Buy now
48	90170--16M01 Nut, hexagon (688)	Buy now

 Lower Casing. Drive 3

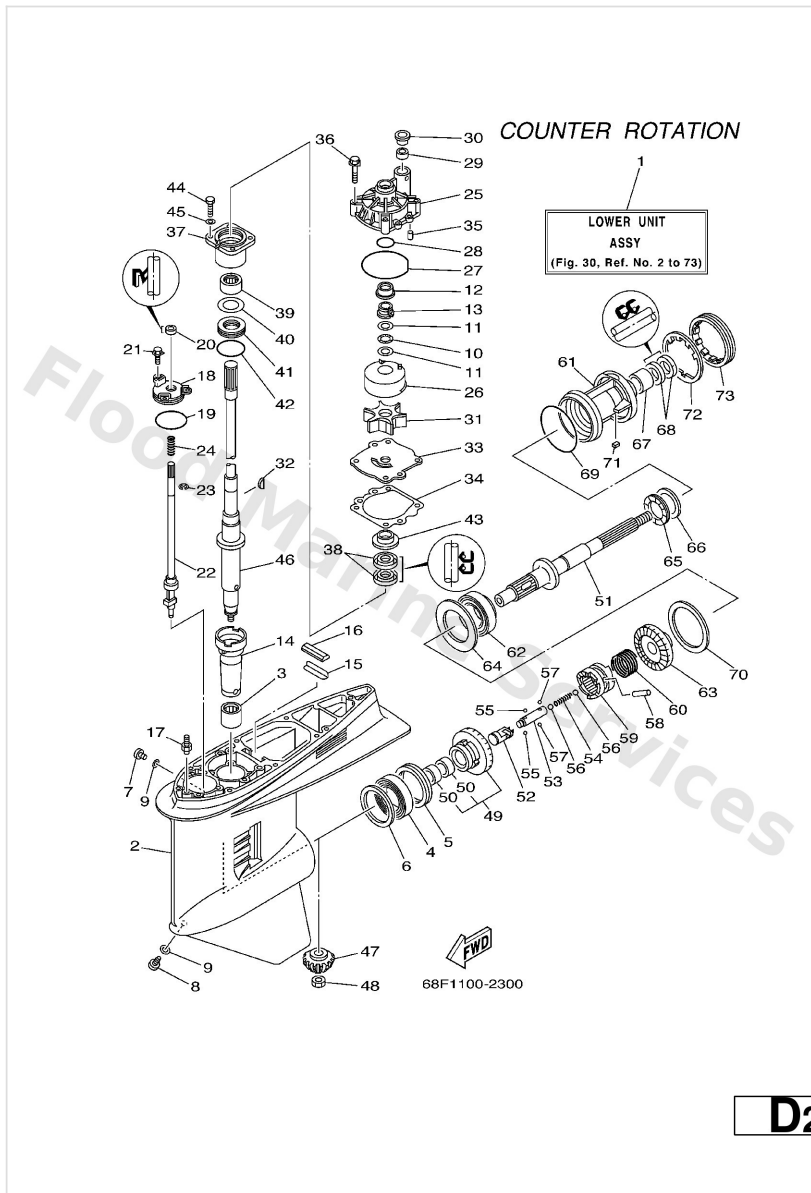

Ref	Part	
49	6K1--45560--01 Gear	Buy now
50	93315--425V3 Bearing, needle (6g5)	Buy now
51	6K1--45611--10 Shaft, propeller	Buy now
52	6K1--45641--01 Shifter	Buy now
53	6E5--45634--01 Slide, shift	Buy now
54	90501--16M37 Spring (6g5)	Buy now
55	93507--32009 Ball (12r)	Buy now
56	93511--32017 Ball (498)	Buy now
57	93503--16003 Ball	Buy now
58	90250--08M07 Pin, straight (6g5)	Buy now
59	6G5--45631--10 Clutch, dog	Buy now
60	6E5--45633--01 Ring, cross pin	Buy now
61	6K1--45332--01--94 Housing, bearing	Buy now
62	93332--00048 Bearing(6k0)	Buy now
63	6K1--45570--20 Gear	Buy now

 
Lower Casing. Drive 3

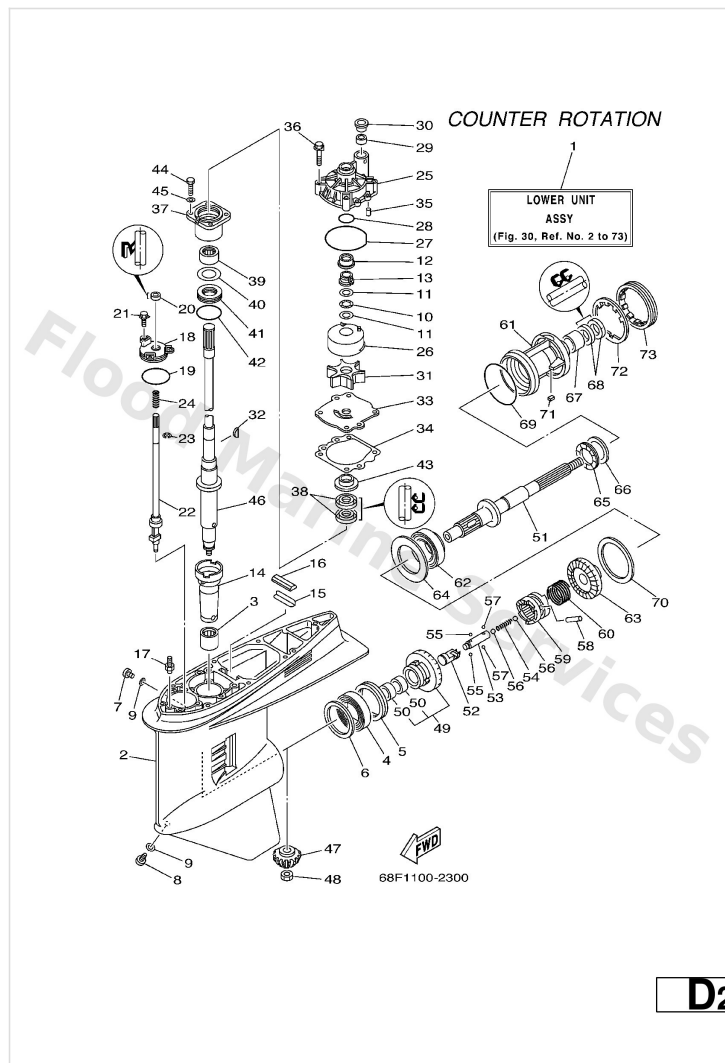

D2

Ref	Part	
64	6K1--45576--00 Washer, thrust	Buy now
65	93341--440U5 Bearing, thrust (6k0)	Buy now
66	6K1--45578--01--10 Shim (t:0.10mm) UR	Buy now
66	6K1--45578--01--12 Shim (t:0.12mm) UR	Buy now
66	6K1--45578--01--15 Shim (t:0.15mm) UR	Buy now
66	6K1--45578--01--18 Shim (t:0.18mm) UR	Buy now
66	6K1--45578--01--30 Shim (t:0.30mm) UR	Buy now
66	6K1--45578--01--40 Shim (t:0.40mm) UR	Buy now
66	6K1--45578--01--50 Shim (t:0.50mm) UR	Buy now
67	93315--430U8 Bearing	Buy now
68	93101--30M17 Oil seal (6e5)	Buy now
69	93210--97M55 O-ring (6g5)	Buy now
70	6G5--45577--02--10 Shim (t:0.10mm) UR	Buy now
70	6G5--45577--02--12 Shim (t:0.12mm) UR	Buy now
70	6G5--45577--02--15 Shim (t:0.15mm) UR	Buy now

 
Lower Casing. Drive 3

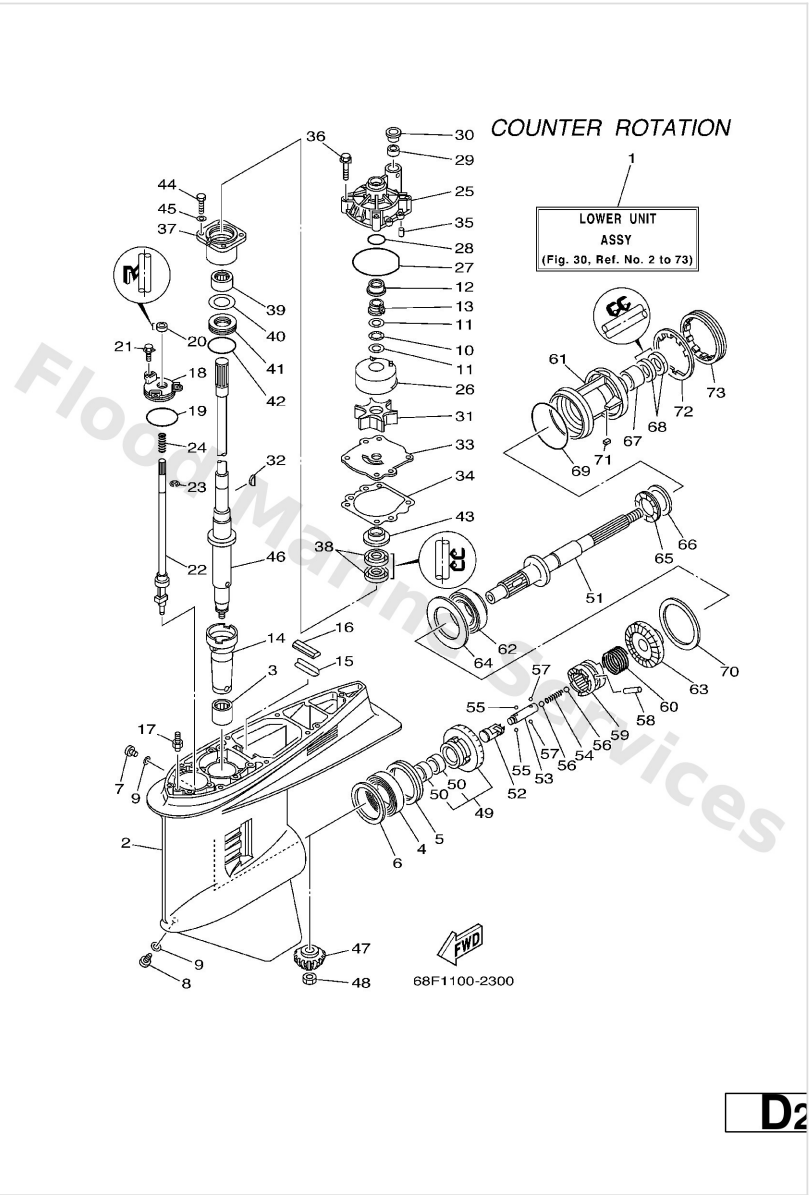

Ref	Part	
70	6G5--45577--02--18 Shim (t:0.18mm) UR	Buy now
70	6G5--45577--02--30 Shim (t:0.30mm) UR	Buy now
70	6G5--45577--02--40 Shim (t:0.40mm) UR	Buy now
70	6G5--45577--02--50 Shim (t:0.50mm) UR	Buy now
71	90282--04M00 Key, straight(6g5)	Buy now
72	6G5--45383--01 Washer, claw	Buy now
73	6G5--45384--00 Nut	Buy now


D2

 Lower Casing. Drive 4

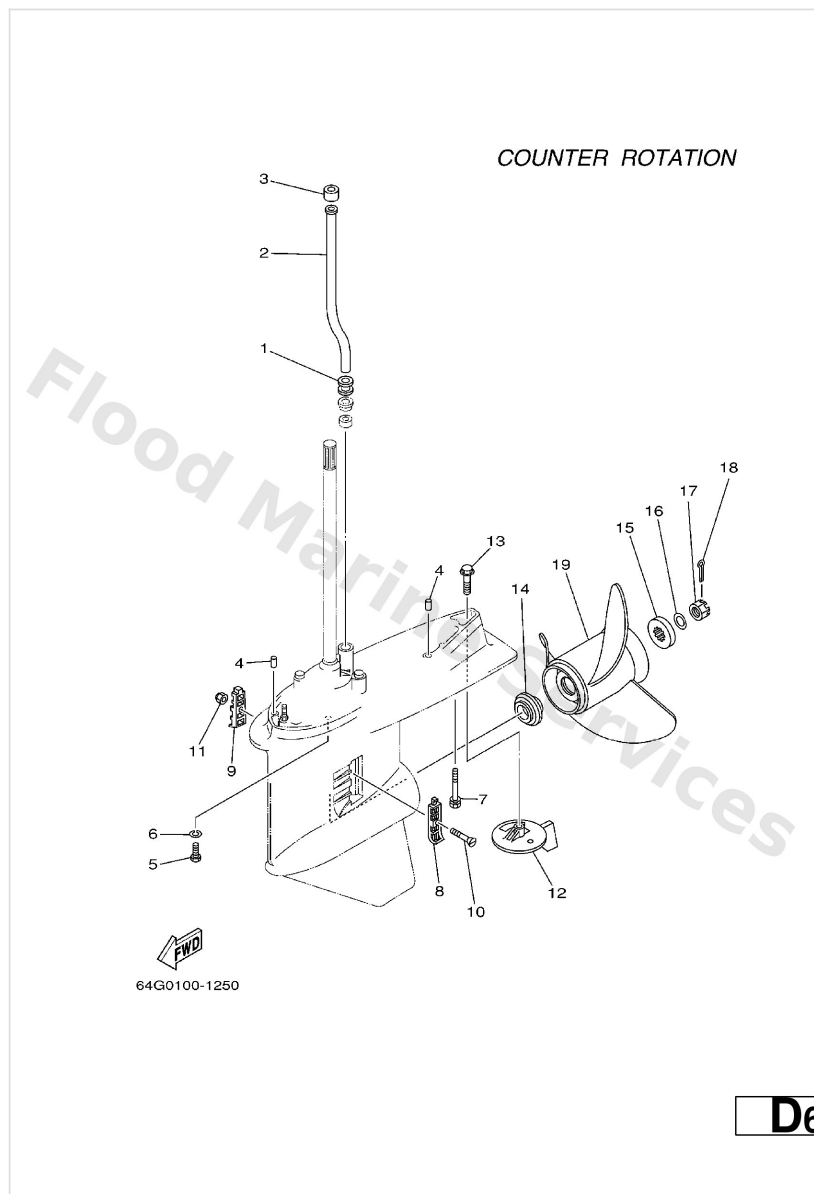


Ref	Part	
1	6E5--44366--00 Damper, water seal 2	Buy now
2	6E5--44361--20 Tube, water X	Buy now
3	6E5--44365--00 Damper, water seal 1	Buy now
4	93608--12M05 Pin, dowel b (6e5)	Buy now
5	97075--10045 Bolt(64d)	Buy now
6	92995--10100 Ybs67-10 washer, spring	Buy now
7	90119--10M89 Bolt, with washer	Buy now
8	6J9--45214--00 Cover, water inlet	Buy now
9	6J9--45215--00 Cover, water inlet	Buy now
10	90152--05M08 Screw, countersunk	Buy now
11	90185--05002 Nut nylon (sus)(ex4)	Buy now
12	6K1--45371--02 Tab-trim	Buy now
13	90105--10M00 Bolt, hexagon (663)	Buy now
14	6E5--45987--01 Spacer 1	Buy now
15	688--45997--01 Spacer 2	Buy now

 Lower Casing. Drive 4

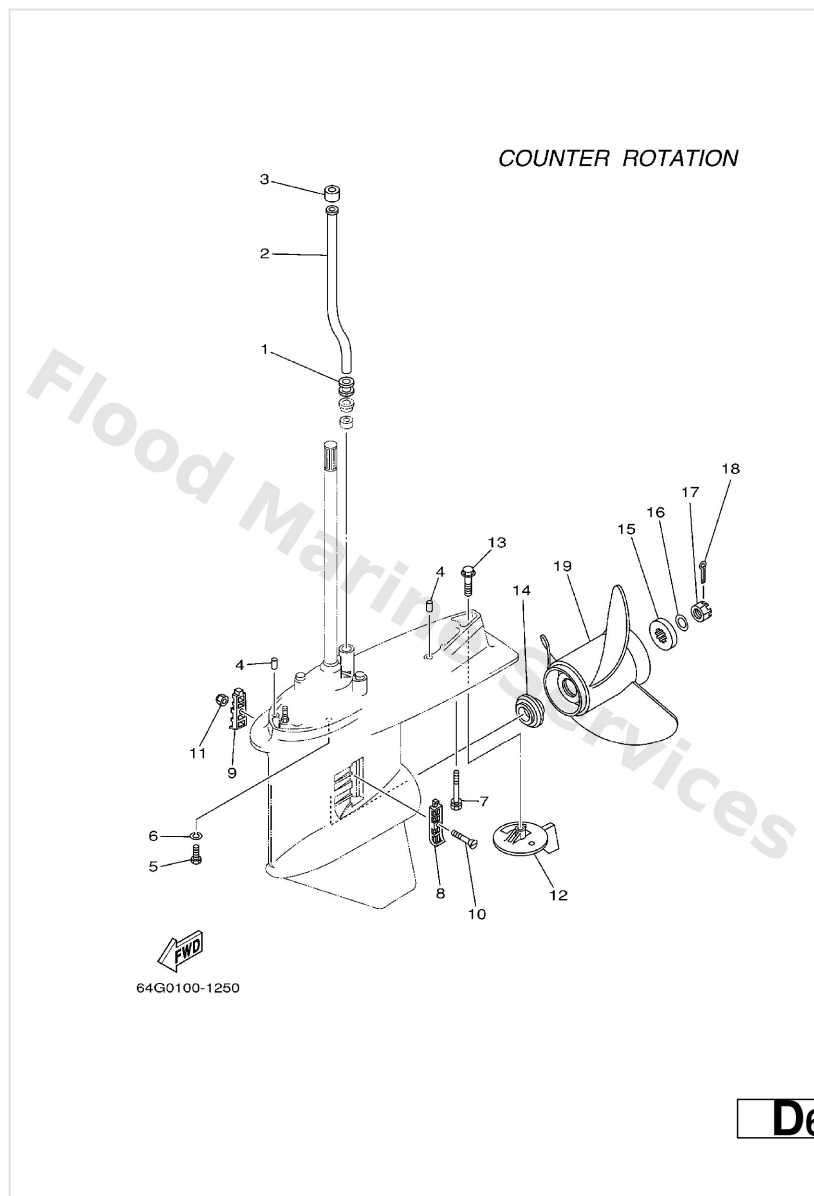


Ref	Part	
16	92990--18200 Washer (6e5)	Buy now
17	90171--18M04 Nut, castle (6e5)	Buy now
18	91490--40030 Pin, cotter (663)	Buy now
19	6K1--45970--01--98 Propeller (3x15-1/4"x15"-ml) UR	Buy now
19	6K1--45972--01--98 Propeller (3x13-3/4"x21"-ml) UR	Buy now
19	6K1--45974--02--98 Propeller (3x13-3/4"x19"-ml1) UR	Buy now
19	6K1--45978--02--98 Propeller (3x13-3/4"x17"-ml1) UR	Buy now
19	6R1--45970--A0 Propeller, Ss (3 X 15-1/4" X 19"-MI) UR	Buy now
19	6R1--45972--A0 Propeller (3X14-7/8"X21"-MI) UR	Buy now
19	6R1--45974--A0 Propeller (3X14-1/2"X23"-MI) UR	Buy now
19	6R1--45976--A0 Propeller (3X15-1/4"X15"-MI) UR	Buy now
19	6R1--45978--A0 Propeller (3X15-1/4"x17"-MI) UR	Buy now

 Meter

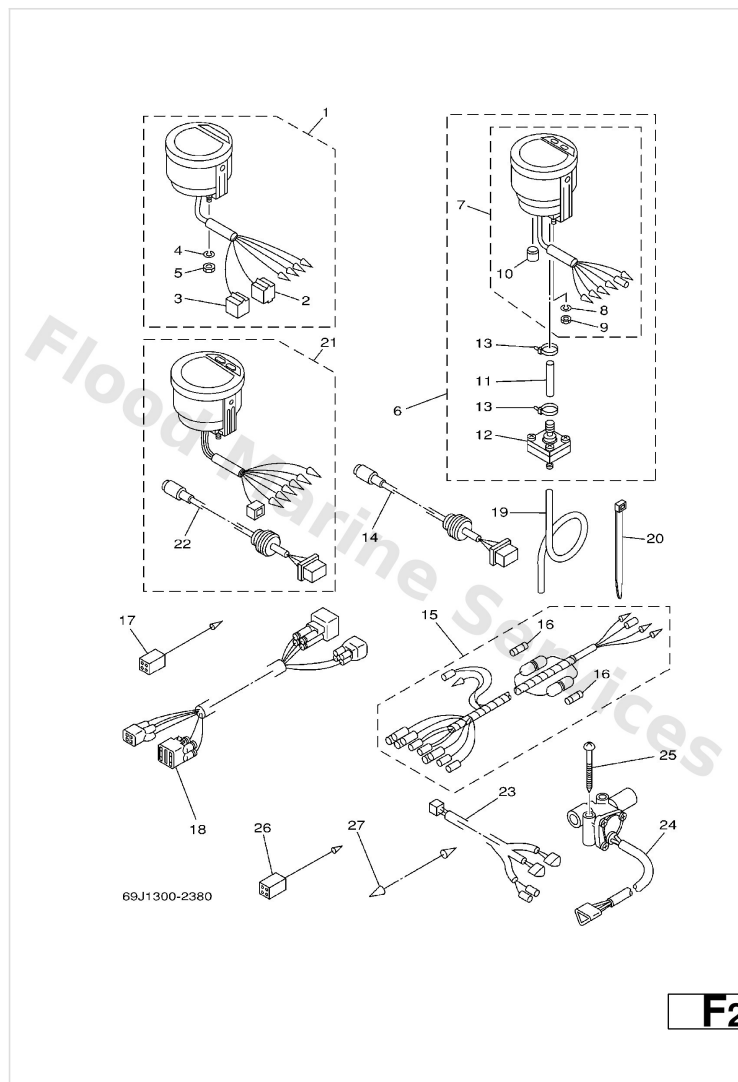


Ref	Part	
1	6Y5--8350T--01 Digital tachometer assembly AP	Buy now
2	9E450--04433 Housing, connector (m-4-w) M-4-W	Buy now
3	9E450--04533 Housing, f-4-w(5pcs) F-4-W	Buy now
4	92990--04100 Ybs67-4 washer, spring	Buy now
5	95380--04600 Nut,hex	Buy now
6	6Y5--83500--S5 Meter assembly AP	Buy now
7	6Y5--83570--S5 Speedometer assembly	Buy now
10	6Y5--83533--T2 Grommet	Buy now
11	6Y5--83557--31 Tube	Buy now
12	6Y5--83728--00 Connector assembly	Buy now
20	90465--11M10 Clamp AP	Buy now
14	6Y5--87122--S0 Cord assembly 1 AP	Buy now
15	6Y5--83553--00 Wire, lead (l=2.5m) AP	Buy now
15	6Y5--83553--M0 Wire, lead (l=2.5m) AP	Buy now
16	1E6--82151--00 Fuse (10a) FOR 6Y5--83553--M0	Buy now

 Meter

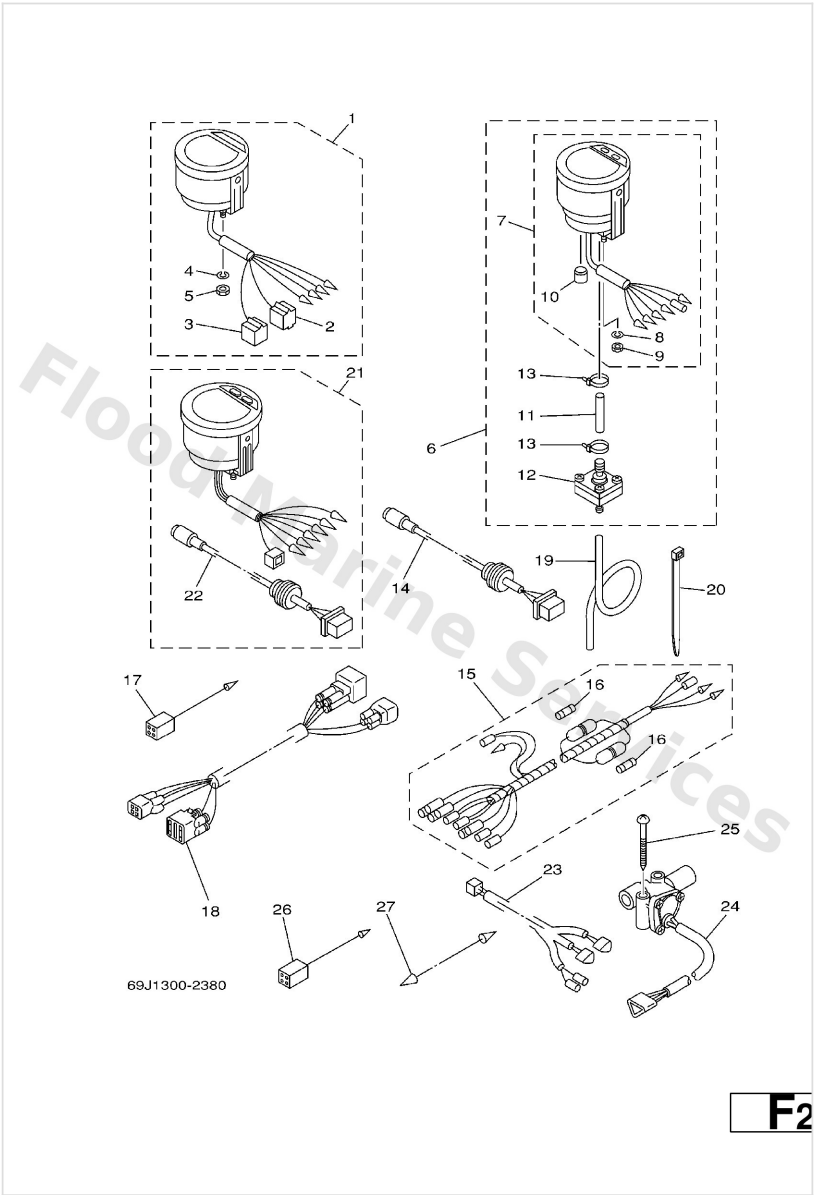


Ref	Part	
17	6Y5--82117--00 Wire, lead AP	Buy now
18	68F--82553--80 Extension, wire lead (8m) AP	Buy now
18	68F--82553--90 Extension, wire lead (9m) AP	Buy now
19	6Y5--83557--10 Tube (8m) AP	Buy now
21	6Y5--8350F--00 Fuel meter movement assembly AP	Buy now
23	6Y5--83553--F1 Wire, lead AP	Buy now
24	6Y5--85752--01 Sender unit assembly, fuel meter AP	Buy now
25	90158--06002 33 – AP	Buy now
27	703--82531--00 Wire, lead AP	Buy now

 Oil Pump

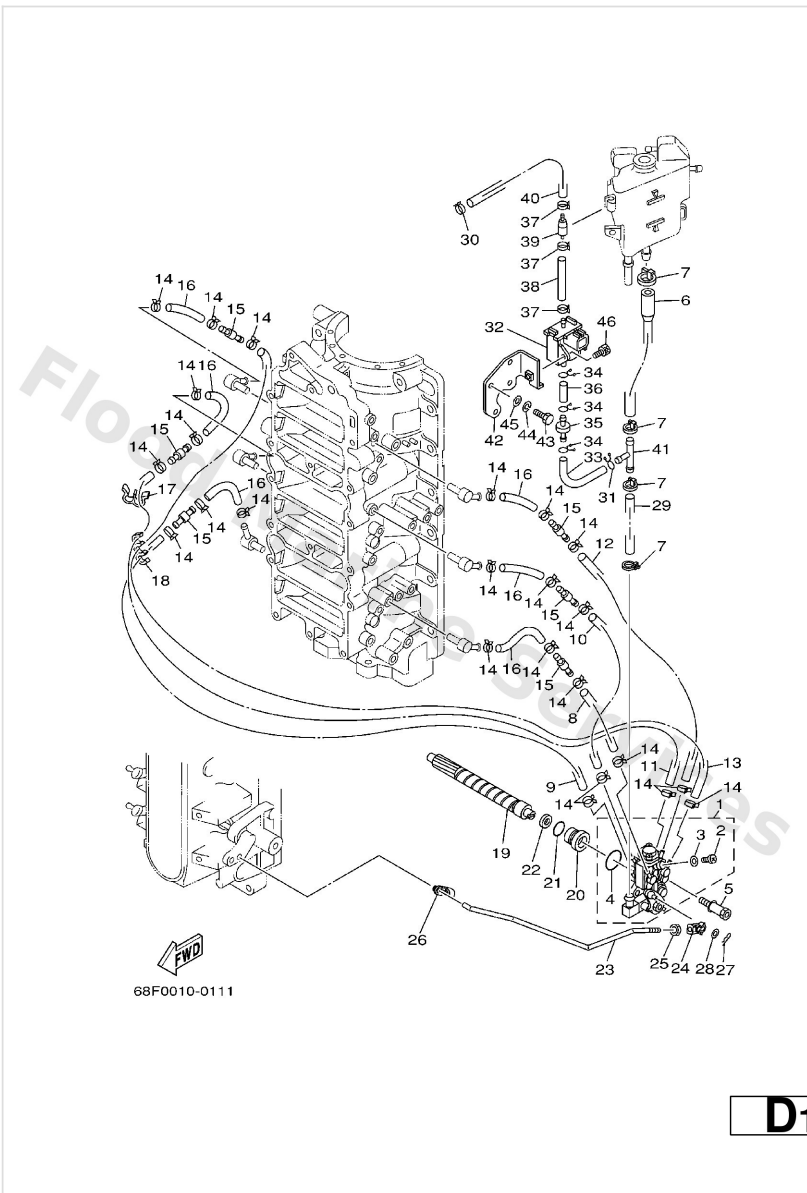


Ref	Part	
1	68F1320000 Oil injection pump assembly	Buy now
1	68H1320000 Oil injection pump assembly	Buy now
1	68L1320000 Oil injection pump assembly	Buy now
2	6R3--13471--00 Screw	Buy now
3	6L2--13475--00 Gasket, breather bolt	Buy now
4	93210--19M82 O-ring(6j8)	Buy now
5	90109--06M40 Bolt(6h0)	Buy now
6	6G51341600 Pipe, oil 1	Buy now
7	90465--11M10 Clamp	Buy now
8	90445--07M00 Hose (I200)	Buy now
9	90445--07M09 Hose (I390)	Buy now
10	90445--07MA5 Hose (I200)	Buy now
11	90445--07M10 Hose (L770)	Buy now
12	90445--07MA4 Hose (I390)	Buy now
13	9044507M80 Hose (I770)	Buy now

 Oil Pump

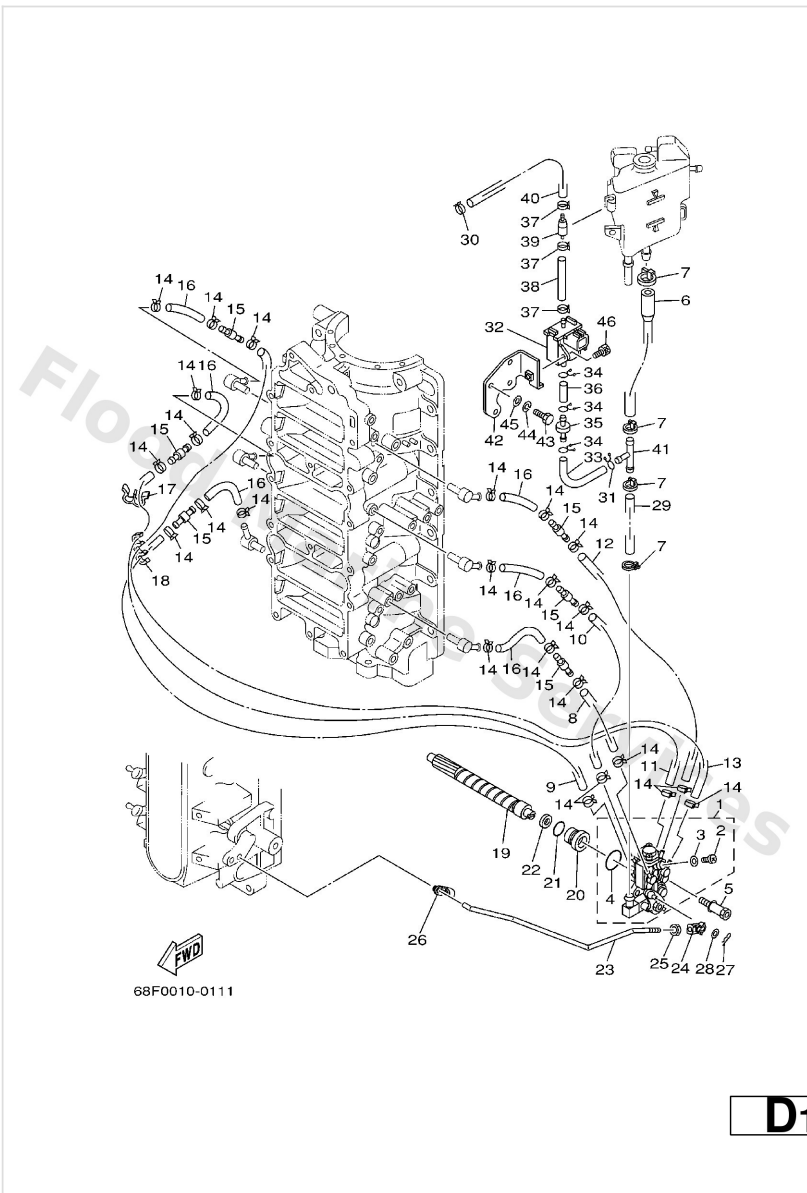


Ref	Part	
14	90468--07M02 Clip (6e5)	Buy now
15	6R31318300 Valve, check	Buy now
16	90445--07M04 Hose(62t)	Buy now
17	90464--07M20 Clamp(6h0)	Buy now
18	90464--07M05 Clamp (6g5)	Buy now
19	6R3--11537--00 Gear, driven	Buy now
20	6R3--13117--00 Collar, distance	Buy now
21	93210--13M04 93210-13m04	Buy now
22	90202--08M44 Washer, plate(6r3)	Buy now
23	67H4124100 Rod, link	Buy now
24	6H1--41237--00 Joint, link	Buy now
25	95380--05600 Nut, hexagon (663)	Buy now
26	6R5--41237--00 Joint, link	Buy now
27	90468--05M03 Clip(6j8)	Buy now
28	90202--05088 Washer, plate (666)	Buy now

 Oil Pump

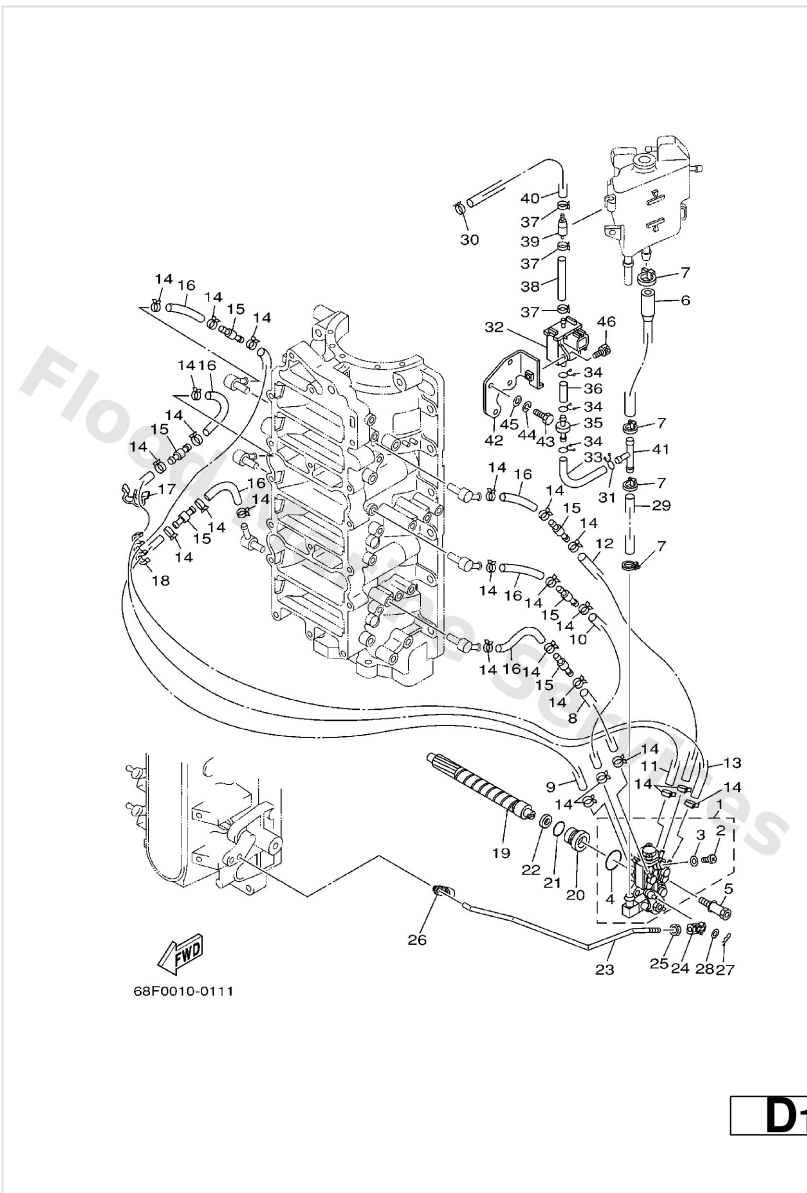


Ref	Part	
29	9044512M14 Hose (I50)	Buy now
31	90467--08M18 Clip	Buy now
32	68F1310000 Solenoid pump assembly	Buy now
33	68F1341800 Hose 4	Buy now
34	68F1318400 Spring, oil pipe	Buy now
35	68F1344000 Filter assembly	Buy now
36	68F1316F00 Hose 1	Buy now
37	68F1313300 Clip	Buy now
38	68F1316G00 Hose 2	Buy now
39	68F1316A00 Check Valve assembly	Buy now
40	68F1341600 Hose 3	Buy now
41	68F--14485--00 Pipe, joint	Buy now
42	68F1319K00 Plate	Buy now
43	97095--06020 Bolt(7u8)	Buy now
44	92995--06100 Washer(6a1)	Buy now

 Oil Pump

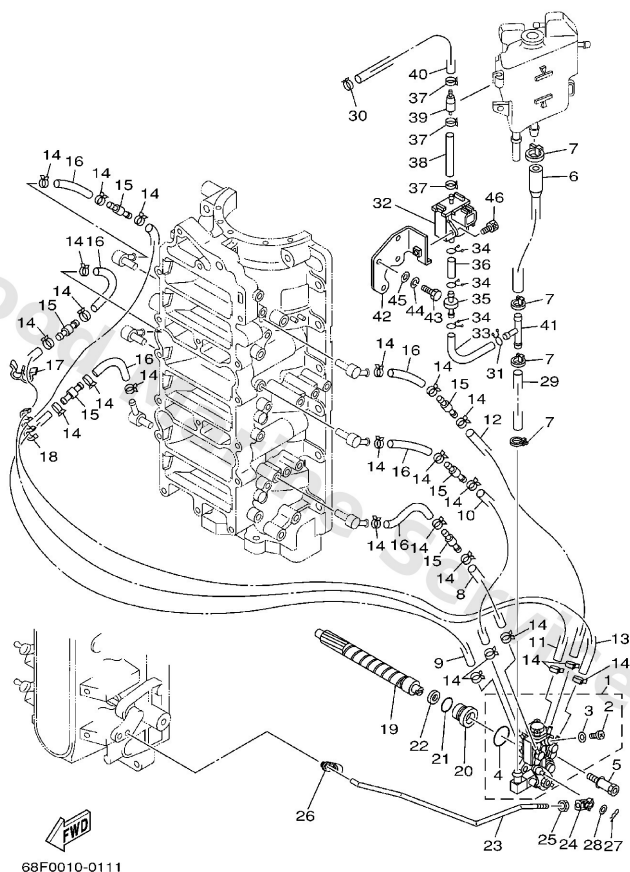


Ref	Part	
45	92995--06600 Washer, plain (646)	Buy now
46	9011006M06 Bolt, hexagon socket head	Buy now

 Oil Tank

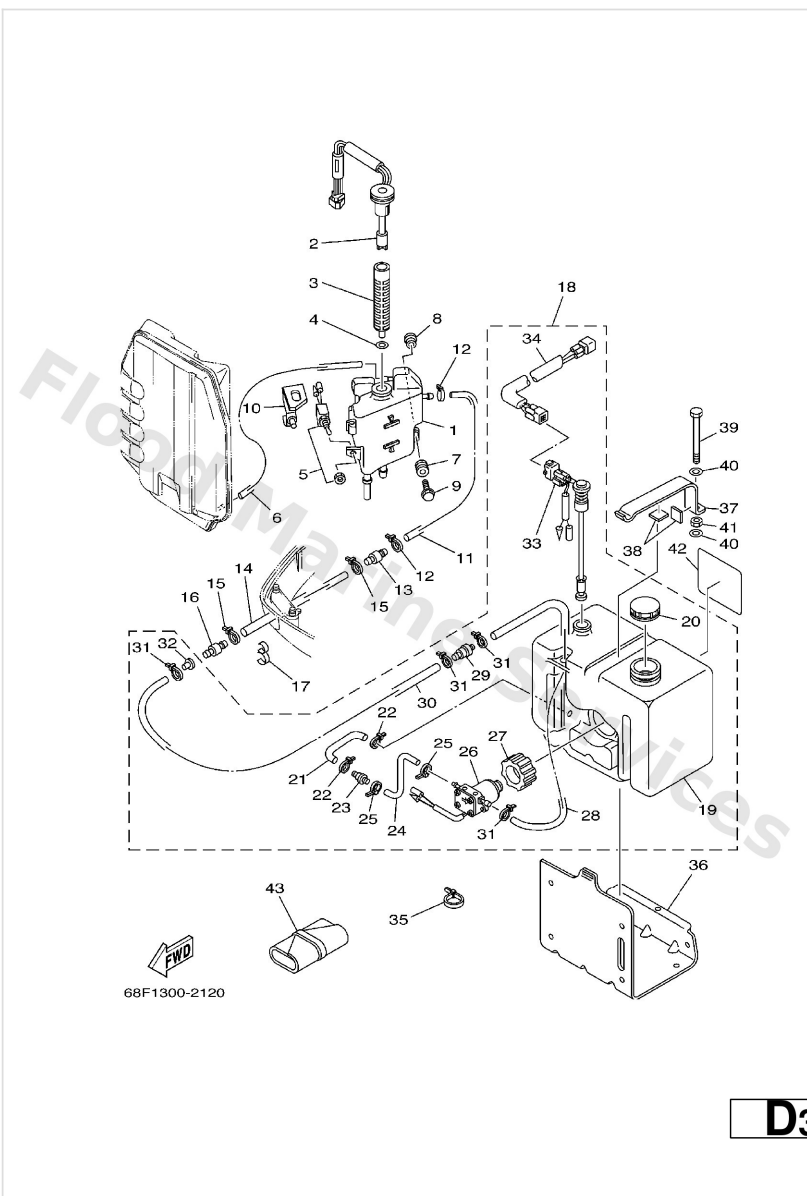


Ref	Part	
1	68F2175000 Oil tank assembly	Buy now
2	67H8573001 Oil level gauge assembly	Buy now
3	6E5--13411--00 Strainer, oil	Buy now
4	6E5--13414--00 Gasket, strainer cover	Buy now
5	6R3--8259E--00 Switch assembly	Buy now
6	9044507M43 Hose (I600)	Buy now
7	6A0--82317--00 Damper, ignition coil	Buy now
8	624--42542--00 Collar	Buy now
9	90119--06M65 Bolt, with washer	Buy now
10	9046512M92 Clamp	Buy now
11	6E5--24323--00 Pipe 12	Buy now
12	90465--11M10 Clamp	Buy now
13	6E5--24379--00 Pipe, joint 4	Buy now
14	90445--12207 Hose (I3000)	Buy now
17	90464--13M34 Clamp(6r3)	Buy now

 Oil Tank

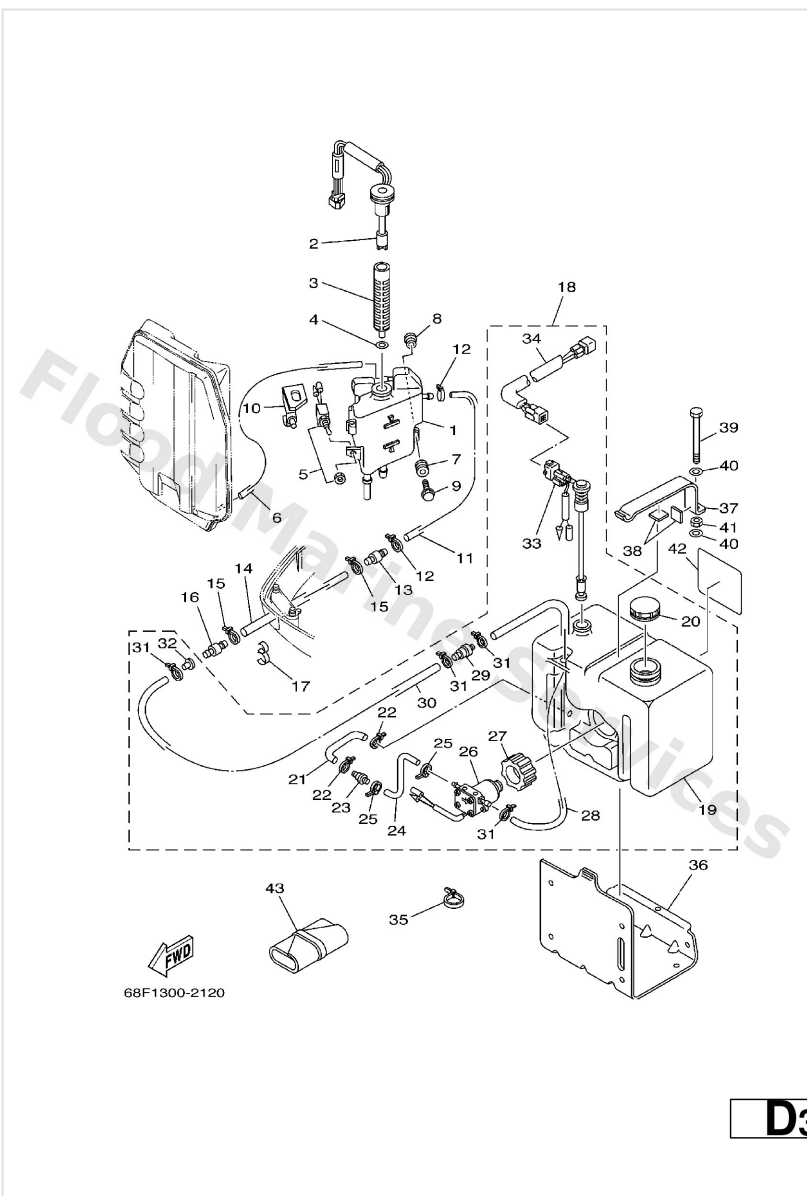


Ref	Part	
18	61A--21708--03 Sub oil tank assembly.	Buy now
19	6E5--21733--02 Sub tank, oil (10.5l)	Buy now
20	6E5--21770--03 Oil tank cap assembly	Buy now
21	6E5--24322--00 Pipe 11	Buy now
23	646--24251--02 Strainer 1	Buy now
24	6E5--24319--01 Pipe, oil	Buy now
26	6E5--81900--01 Oil feed pump assembly	Buy now
27	6E5--81922--00 Grommet	Buy now
28	6E5--24321--01 Pipe 10	Buy now
30	90445--11M26 Hose (l8000)	Buy now
32	90480--06M19 Grommet (6e3)	Buy now
33	6E5--85720--04 Oil level gauge assembly	Buy now
34	6R3--85721--80 Wire, lead	Buy now
35	90465--13M11 Clamp (6e5)	Buy now
36	6E5--21734--01--33 Holder, oil sub tank	Buy now

 Oil Tank

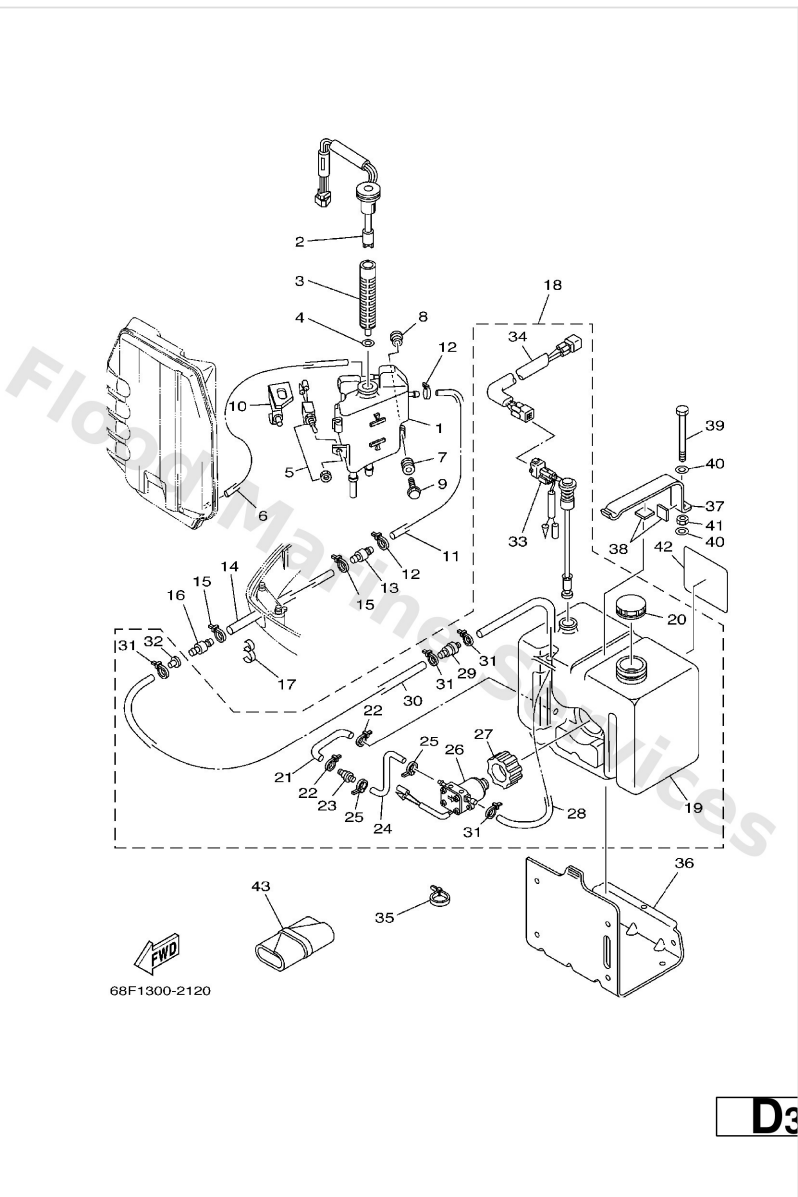


Ref	Part	
37	6E5--21798--01--33 Bracket, damper	Buy now
38	6E5--21746--00 Damper	Buy now
39	97080--06100 Bolt, hexagon	Buy now
40	92990--06600 Washer, plain (646)	Buy now
41	95380--06600 Nut(661)	Buy now
42	6E5--13437--62 Mark Caution	Buy now
43	68F2810000 Tool kit	Buy now

 Power Trim & Tilt Assy 1

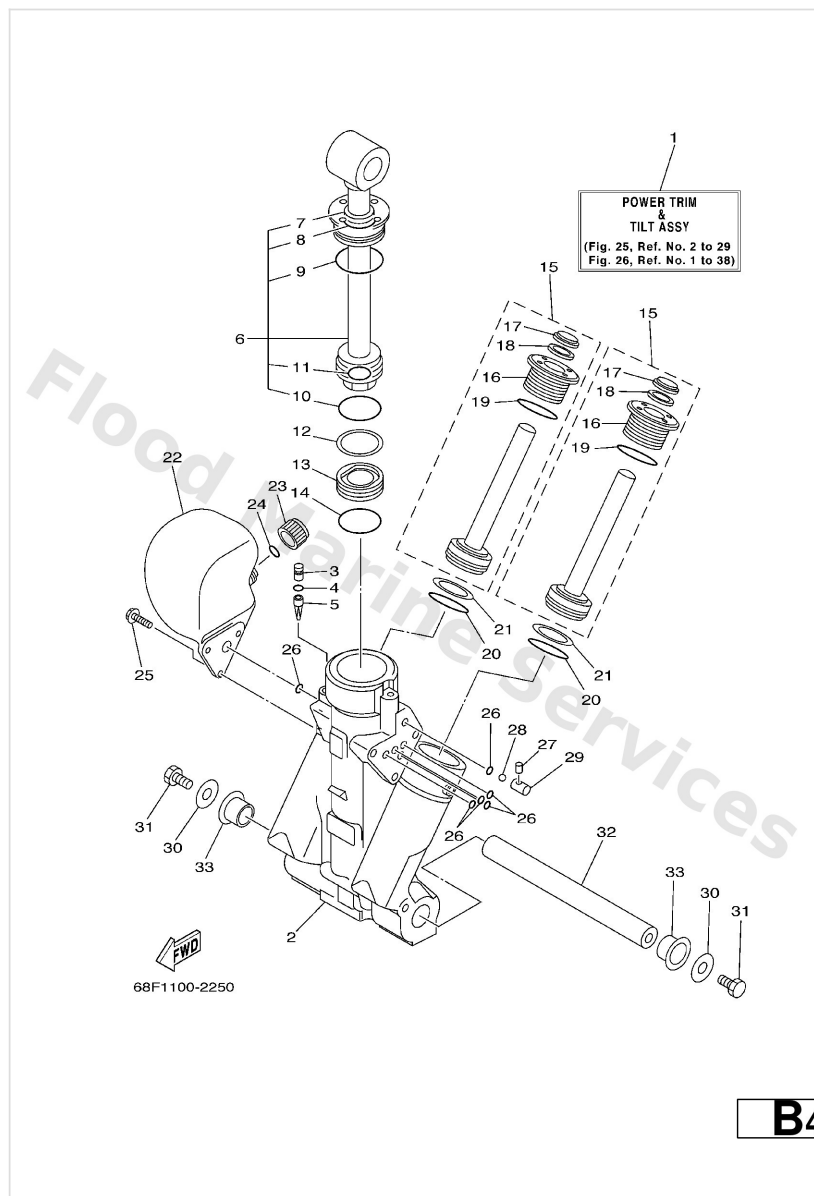


Ref	Part	
1	68F43800014D Power trim & tilt assembly	Buy now
2	64E--43825--01 Housing Trim & Tilt	Buy now
3	64E--4388J--00 Plug 2	Buy now
4	93210--10M74 O-ring	Buy now
5	64E--43817--00 Filter 2	Buy now
6	64E--43810--00 Tilt piston sub assembly	Buy now
7	64E--43898--00 Seal, dust 2	Buy now
8	64E--43867--00 O-ring 7	Buy now
9	64E--43866--00 O-ring 6	Buy now
10	6E5--43862--00 O-ring 2	Buy now
11	64E--43883--00 O-ring 10	Buy now
12	6E5--43872--00 Ring, back-up 2	Buy now
13	6E5--43814--02 Piston, free	Buy now
15	64E--43820--00 Trim piston sub assembly	Buy now
16	64E--43821--00 Screw, trim cylinder end	Buy now

 Power Trim & Tilt Assy 1

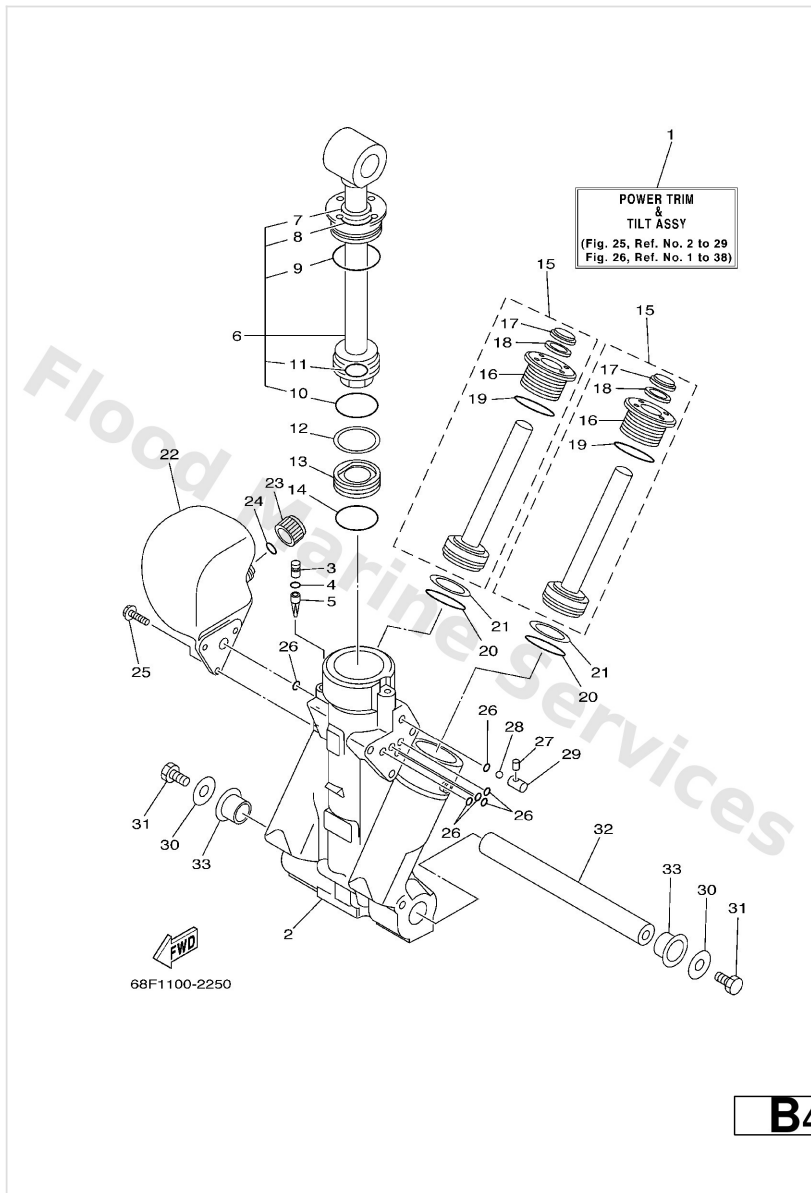


Ref	Part	
17	64E--43822--00 Seal, trim dust	Buy now
18	64E--4384J--00 Seal, trim down	Buy now
19	6G5--43864--00 O-ring 4	Buy now
20	6E5--43864--00 O-ring 4	Buy now
21	6E5--43874--01 Ring, back-up 4	Buy now
22	64E--43828--00 Body, reservoir	Buy now
23	64E--43829--00 Plug, reservoir	Buy now
24	64E--43897--00 O-ring	Buy now
25	64E--4388E--00 Bolt ,screw (l:14mm)	Buy now
26	64E--43869--00 O-ring 9	Buy now
27	64E--4381G--00 Pin 1	Buy now
28	6E5--43858--00 Ball 1	Buy now
29	64E--4382G--00 Valve seat	Buy now
30	90201--08M14 Washer, plate	Buy now
31	97080--08016 Bolt	Buy now

 Power Trim & Tilt Assy 1

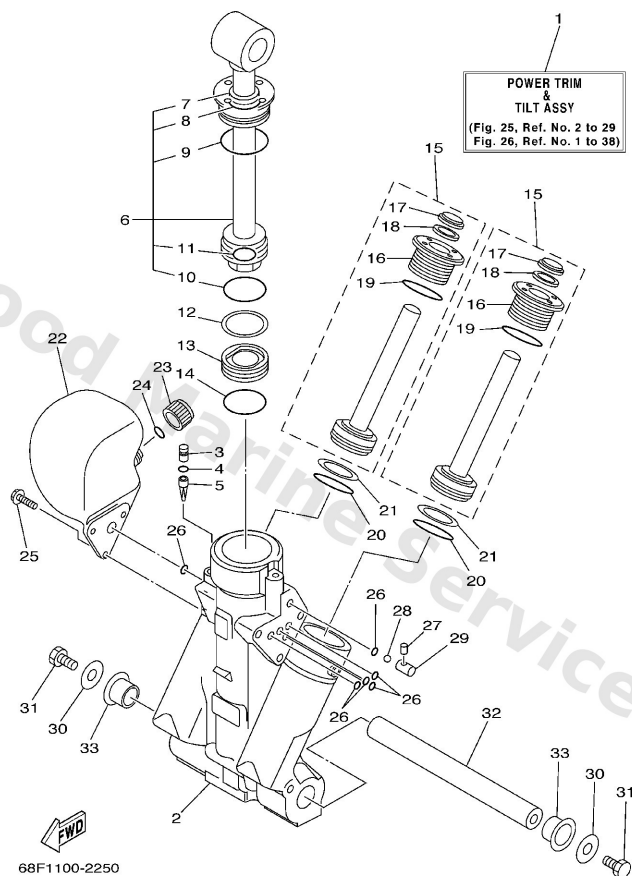


Ref	Part	
32	64E--43818--01 Lower shock mount pin set	Buy now
33	90386--22M98 Bush(61u)	Buy now

 Power Trim & Tilt Assy 2

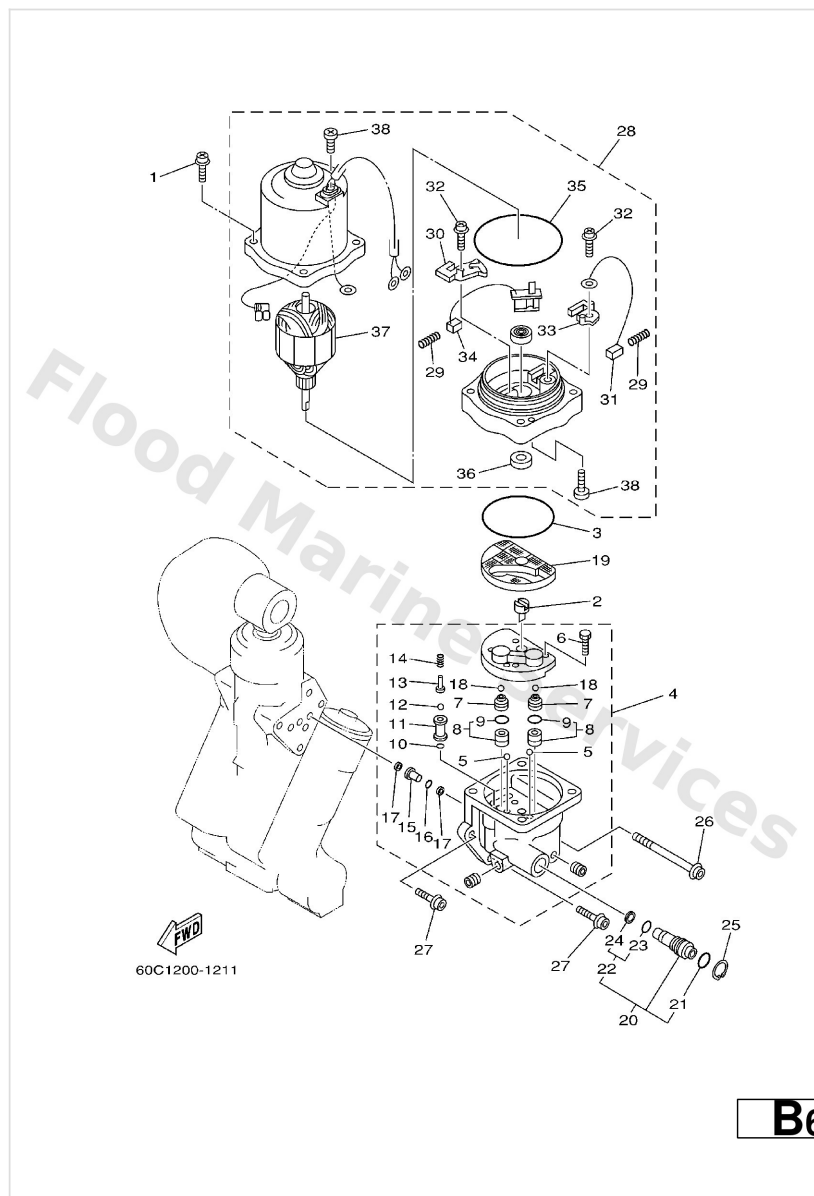


Ref	Part	
1	64E--4388E--10 Bolt ,screw (l:34.7mm)	Buy now
2	64E--43831--00 Connector, shaft	Buy now
3	64E--43868--00 O-ring 8	Buy now
4	64E--43830--00 Gear pump assembly	Buy now
5	72X--43858--00 Ball	Buy now
6	64E--43843--00 Screw, valve lock	Buy now
7	64E--43841--00 Piston, shuttle	Buy now
8	64E--43802--00 Valve sub assembly	Buy now
9	6E5--43896--00 O-ring	Buy now
10	6G5--43863--00 O-ring 3	Buy now
11	64E--43851--00 Seat, Relief Valve	Buy now
12	64E--43858--00 Ball	Buy now
13	64E--43859--00 Pin, Valve Support	Buy now
14	64E--43855--00 Spring, up relief	Buy now
15	64E--43850--00 Valve sub assembly	Buy now

 Power Trim & Tilt Assy 2

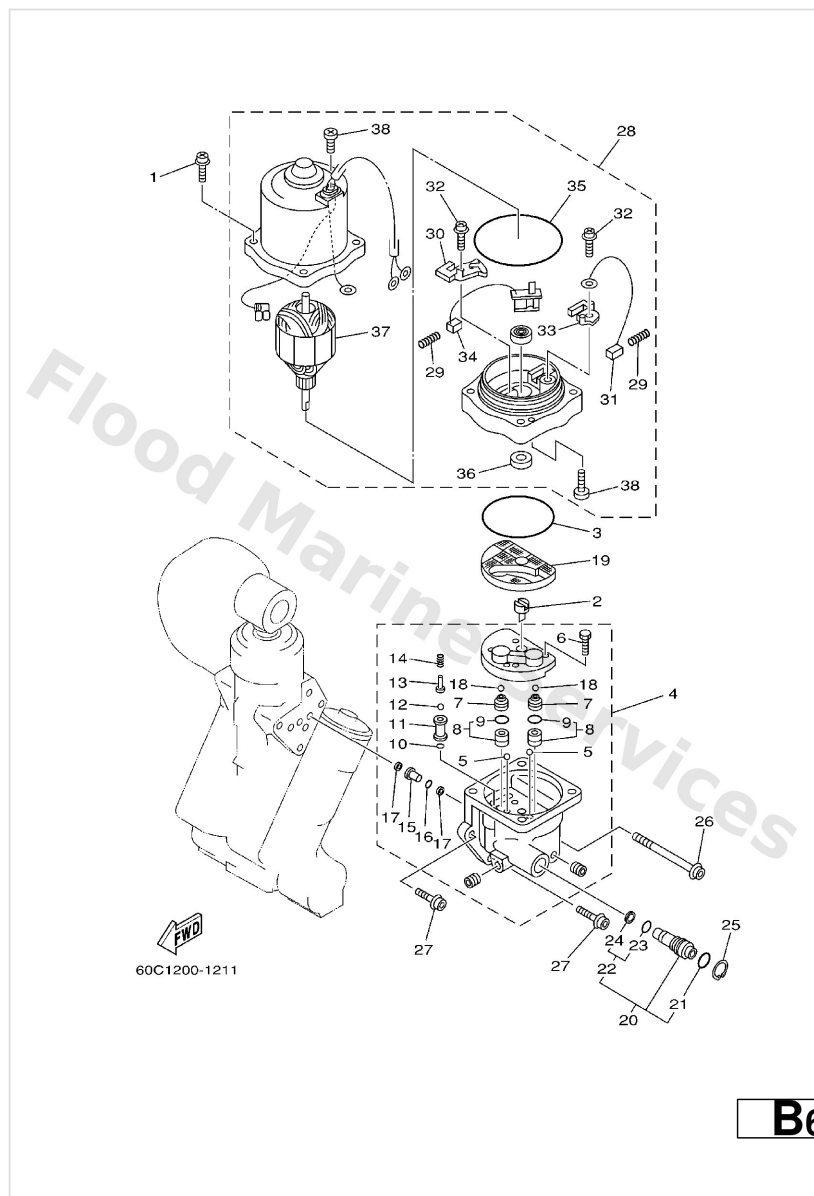


Ref	Part	
16	64E--43865--00 O-ring 10	Buy now
17	64E--43816--00 Filter 1	Buy now
19	64E--43817--10 Filter 2	Buy now
20	64E--43860--00 Manual valve sub-assembly	Buy now
21	72X--85075--L0 O-ring (nsd161)	Buy now
22	64E--43827--00 Ring set	Buy now
23	64E--4387A--00 O-ring	Buy now
24	64E--43873--00 Ring, back up	Buy now
25	64E--43875--00 Ring, snap	Buy now
26	64E--43879--10 Screw, with washer	Buy now
27	64E--43879--00 Screw, with washer	Buy now
28	67H4388001 Motor assembly	Buy now
29	6H1--4386K--10 Spring, brush	Buy now
30	64E--4380J--00 Holder Brush	Buy now
31	64E--43891--00 Brush 1	Buy now

 Power Trim & Tilt Assy 2

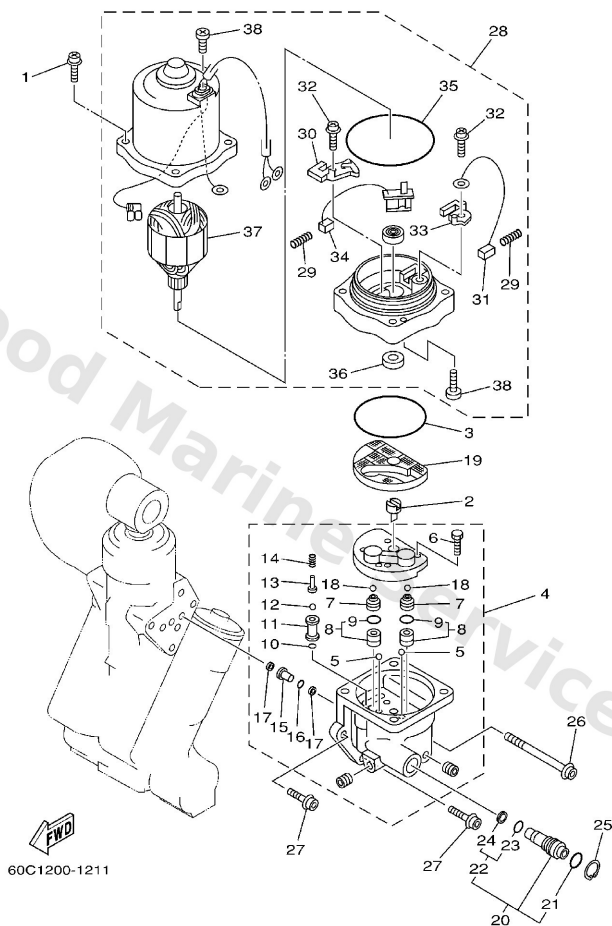

Ref	Part	
32	97607--04310 Screw, pan head(6g8)	Buy now
33	64E--4380F--00 Holder, brush 2	Buy now
34	64E--43892--00 Breaker comp. (brush 2)	Buy now
35	6G5--43865--00 O-ring	Buy now
36	93102--08M43 Oil seal(6b0)	Buy now
37	64E--43805--00 Armature assembly	Buy now
38	64E--43843--10 Screw valve lock	Buy now

 
Remote Control Assy 1

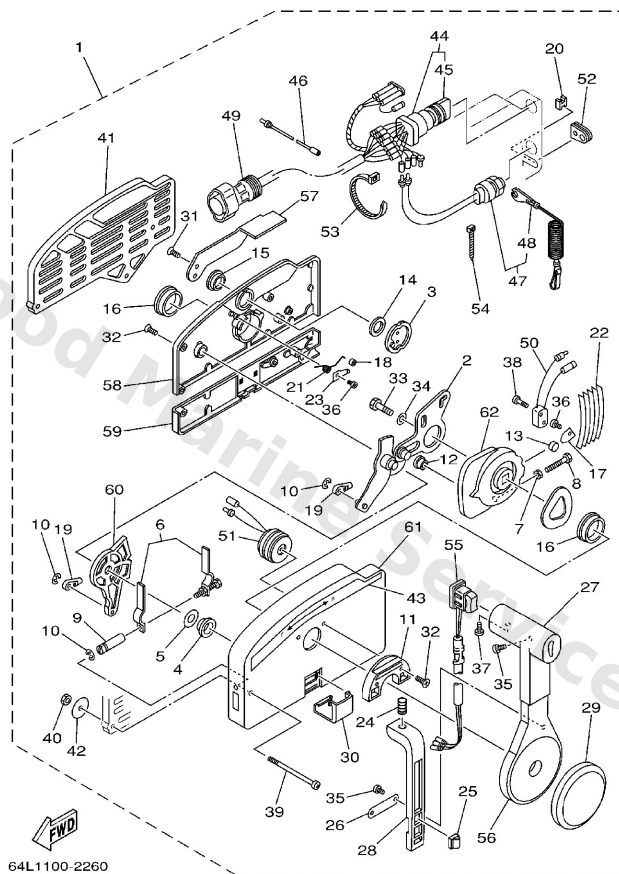

E3

Ref	Part	
1	703--48205--17 Remote control assembly (10p, ptt) AP WITH PT/T SW.	Buy now
2	703--48261--01 Arm, throttle	Buy now
3	703--48153--00 Shaft, free accel.	Buy now
4	703--48235--00 Bushing	Buy now
5	703--48268--00 Spacer 3	Buy now
6	703--48264--00 Throttle, friction	Buy now
7	95380--05600 Nut, hexagon (663)	Buy now
8	97380--05025 28 -	Buy now
9	703--48265--00 Shaft Friction	Buy now
10	93430--06024 Circlip (701)	Buy now
11	703--48245--00 Plate, lock	Buy now
12	703--48252--00 Roller, cam	Buy now
13	701--48248--00 Roller, free accel	Buy now
14	703--48198--00 Washer, wave 3	Buy now
15	703--48243--00 Bushing 3	Buy now

 
Remote Control Assy 1

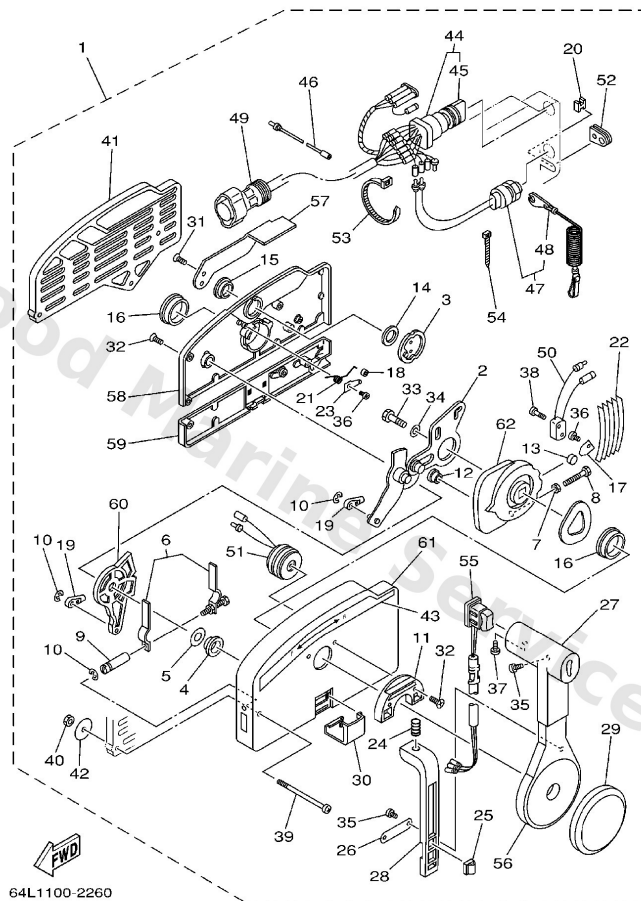

E3

Ref	Part	
16	703--48236--00 Bushing	Buy now
17	703--48189--00 Retainer	Buy now
18	703--48234--00 Roller, detent	Buy now
19	703--48345--01 Cable end, remote control 2	Buy now
20	703--48358--00 Anchor, cable	Buy now
21	703--48244--00 Spring, free accel.	Buy now
22	703--48238--00 Spring, detent	Buy now
23	703--48246--00 Spacer 1	Buy now
24	703--48227--00 Spring, neutral lock	Buy now
25	703--82594--00 Clamp WITH PT/T SW.	Buy now
26	703--48226--00 Plate, stopper	Buy now
27	703--48222--00 Grip, control lever SINGLE	Buy now
28	703--48223--00 Lock, neutral	Buy now
29	703--48225--00 Cover	Buy now
30	703--48219--00 Cover, lead	Buy now

 
Remote Control Assy 1

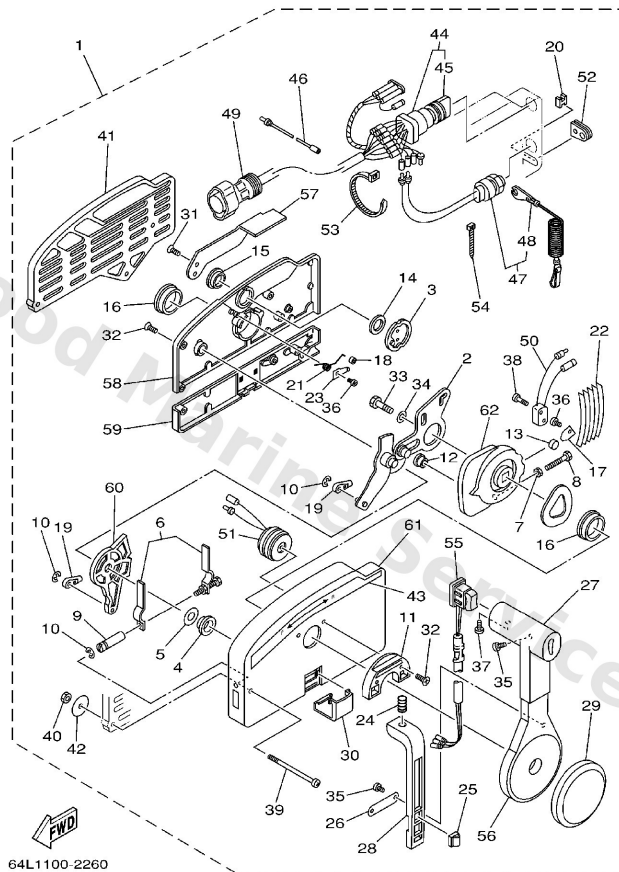

E3

Ref	Part	
31	703--48281--00 Screw, flat head	Buy now
32	703--48282--00 Screw	Buy now
33	97380--08030 Bolt, hexagon (fj1)	Buy now
34	92990--08600 Washer, plain (663)	Buy now
35	98580--04010 Screw, pan head (e56)	Buy now
36	98580--04006 Screw, pan head (7h3)	Buy now
37	98580--05010 Screw, pan head(62x)	Buy now
38	98580--03015 Screw, pan head (n151)	Buy now
39	703--48291--10 Screw	Buy now
40	95380--06600 Nut(661)	Buy now
41	703--48293--10 Spacer, remote control SINGLE	Buy now
42	701--48287--00 Washer 1	Buy now
43	703--48215--00 Graphic	Buy now
44	703--82510--43 Main switch assembly	Buy now
45	703--82577--00 Cap, key	Buy now

 
Remote Control Assy 1

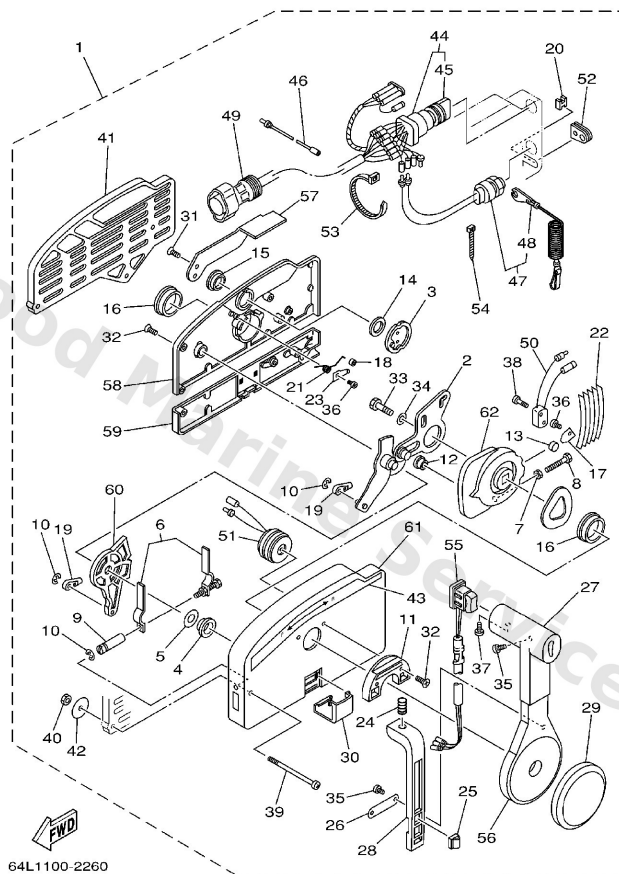

E3


Ref	Part	
46	703--82531--00 Wire, lead	Buy now
47	688--82575--01 Engine stop switch assembly	Buy now
48	682--82556--00 Lanyard, stop switch	Buy now
49	688--8258A--20 10p main harness mec 2m (6ft) L)5M (10P)	Buy now
50	703--82540--00 Neutral switch assembly	Buy now
51	703--83383--02 Buzzer	Buy now
52	703--48284--00 Grommet	Buy now
53	703--82591--00 Band	Buy now
54	703--82592--00 Band	Buy now
55	703--82563--02 Trim & tilt switch assembly	Buy now
56	703--48221--00 Grip	Buy now
57	703--48152--00 Knob, free accel	Buy now
58	703--48212--00 Rear housing	Buy now
59	703--48213--00 Back, panel	Buy now
60	703--48271--00 Arm, shift	Buy now

 Remote Control Assy 1

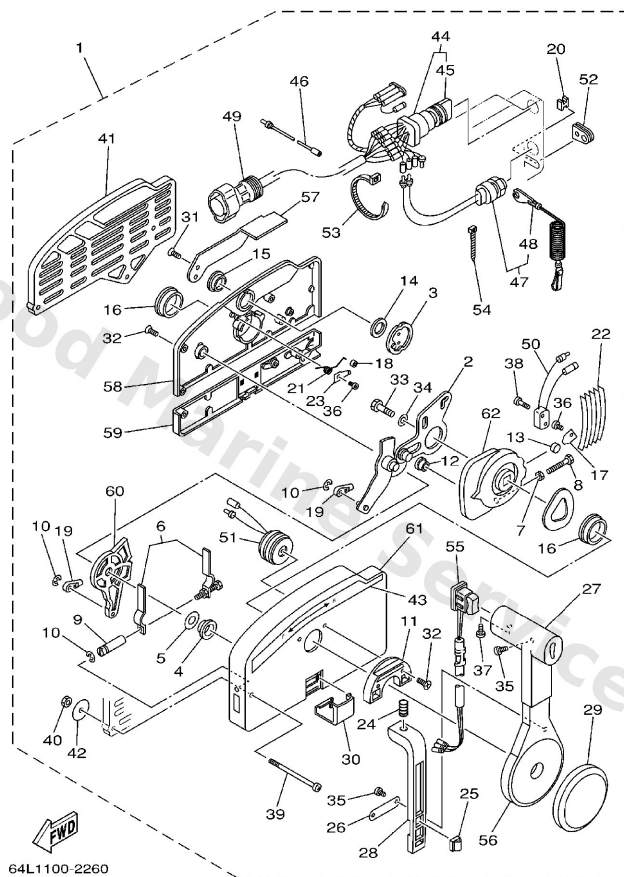

Ref	Part	
61	703--48211--01 Housing,1	Buy now
62	703--48232--00 Drive gear	Buy now

 
Remote Control Assy 2

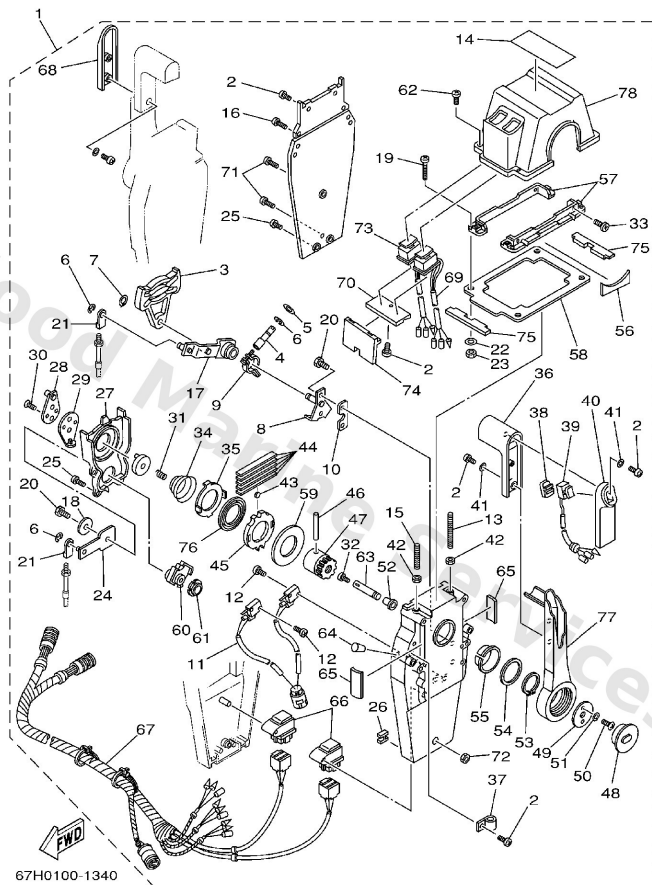

E6

Ref	Part	
1	704--48207--23 Remote Control assembly AP WITH PT/T SW.	Buy now
2	97890--05016 Screw, pan head(6b0)	Buy now
3	EL8--48251--00 Plate, cam	Buy now
4	704--48265--00 Shaft, friction	Buy now
5	701--48246--00 Spacer	Buy now
6	93430--06024 Circlip (701)	Buy now
7	EL8--48259--00 Circlip 1	Buy now
8	704--48262--00 Shaft, throttle	Buy now
9	704--48264--00 Friction, throttle	Buy now
10	704--48266--00 Spacer 2	Buy now
11	704--82540--10 Neutral switch assembly	Buy now
12	6A5--48129--10 Screw, pan head (n151)	Buy now
13	EL8--48281--00 Screw 1	Buy now
14	704--48215--10 Graphic 1	Buy now
15	704--48281--00 Screw1	Buy now

 
Remote Control Assy 2

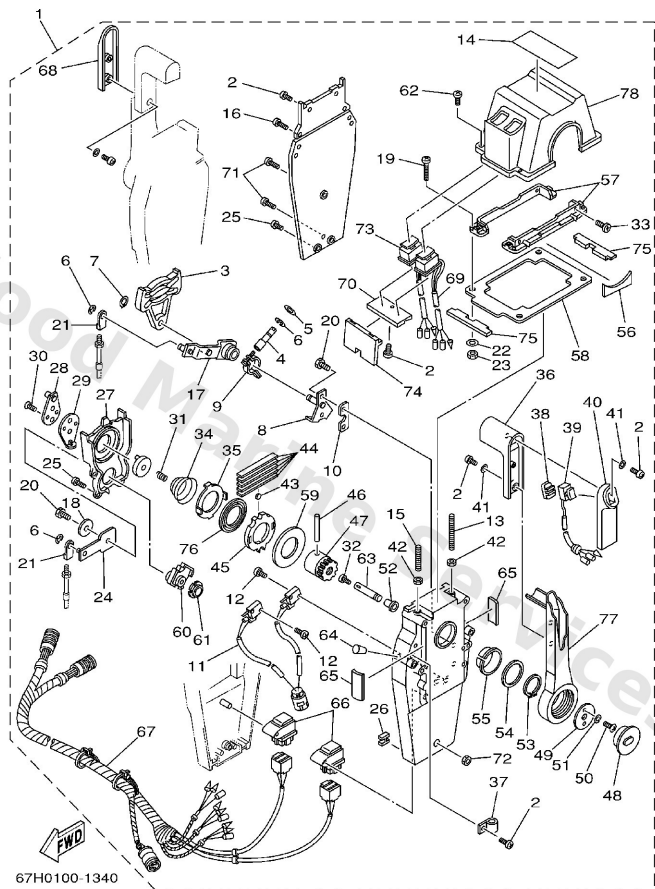

E6

Ref	Part	
16	97890--05025 Screw, panhead (a93)	Buy now
17	704--48261--00 Arm, throttle	Buy now
18	EL8--48191--00 Washer 1	Buy now
19	704--48283--00 Screw, panhead (eg9)	Buy now
20	97380--06018 Bolt (fj0)	Buy now
21	703--48345--01 Cable end, remote control 2	Buy now
22	704--48287--00 Washer 1	Buy now
23	95380--05600 Nut, hexagon (663)	Buy now
24	EL8--48271--00 Arm, shift	Buy now
25	EL8--48127--00 Screw 1	Buy now
26	703--48358--00 Anchor, cable	Buy now
27	EL8--48231--00 Housing, gear	Buy now
28	EL8--48241--00 Arm, drive	Buy now
29	EL8--48254--00 Stopper Throttle Adjusting	Buy now
30	92780--06020 Screw flat head	Buy now

 
Remote Control Assy 2

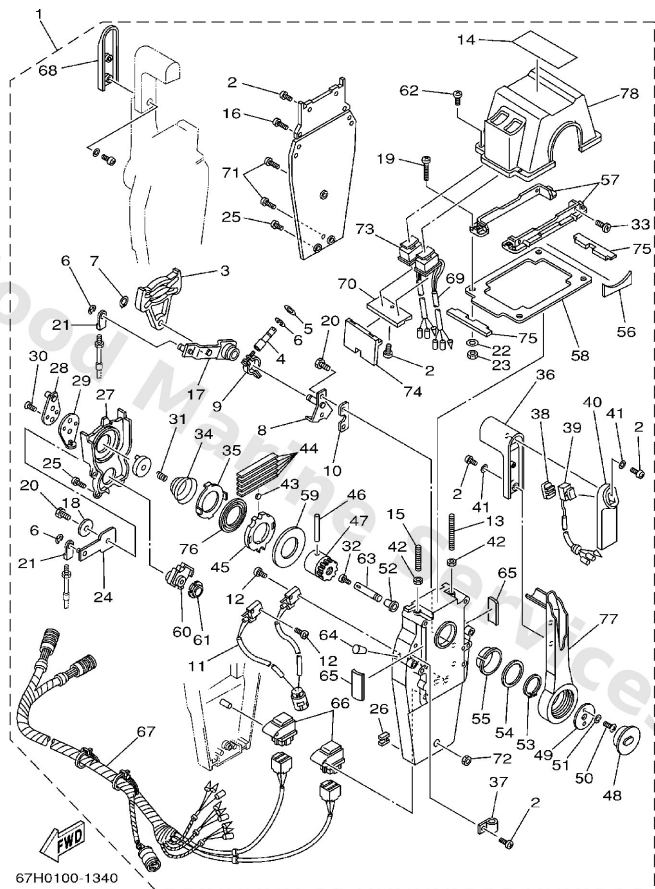

E6

Ref	Part	
31	EL8--48158--00 Spring 1	Buy now
32	98580--04006 Screw, pan head (7h3)	Buy now
33	98780--05018 Screw (704)	Buy now
34	EL8--48244--00 Spring, free accel.	Buy now
35	EL8--48245--00 Plate, lock	Buy now
36	704--48222--00 Grip, control lever	Buy now
37	704--82594--00 Clamp	Buy now
38	704--48228--00 Holder, switch	Buy now
39	704--82563--31 Trim & tilt switch assembly	Buy now
40	704--48229--00 Grip, control lever 2	Buy now
41	92990--05300 Washer, tooth	Buy now
42	95380--06600 Nut(661)	Buy now
43	701--48248--00 Roller, free accel	Buy now
44	703--48238--00 Spring, detent	Buy now
45	EL8--48232--00 Gear 1	Buy now

 
Remote Control Assy 2

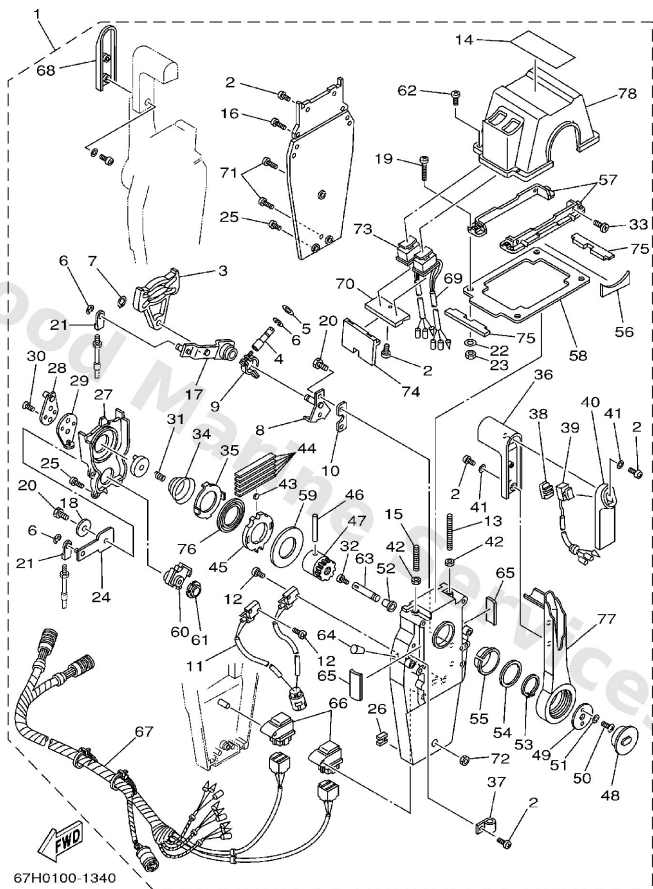

E6

Ref	Part	
46	EL8--48164--00 Pin 2	Buy now
47	704--48242--00 Shaft, drive	Buy now
48	704--48225--00 Cover	Buy now
49	704--48192--00 Washer 2	Buy now
50	97890--06018 Screw, pan head(6e5)	Buy now
51	92990--06300 Washer, tooth	Buy now
52	702--48263--00 Bushing 4	Buy now
53	EL8--48279--00 Circlip 2	Buy now
54	704--48193--00 Washer 3	Buy now
55	EL8--48234--00 Bushing 1	Buy now
56	704--48219--00 Cover, lead	Buy now
57	704--48144--00 Plate, stopper 2	Buy now
58	704--48176--10 Grommet	Buy now
59	703--48192--00 Washer 2	Buy now
60	EL8--48233--00 Gear 2	Buy now

 
Remote Control Assy 2

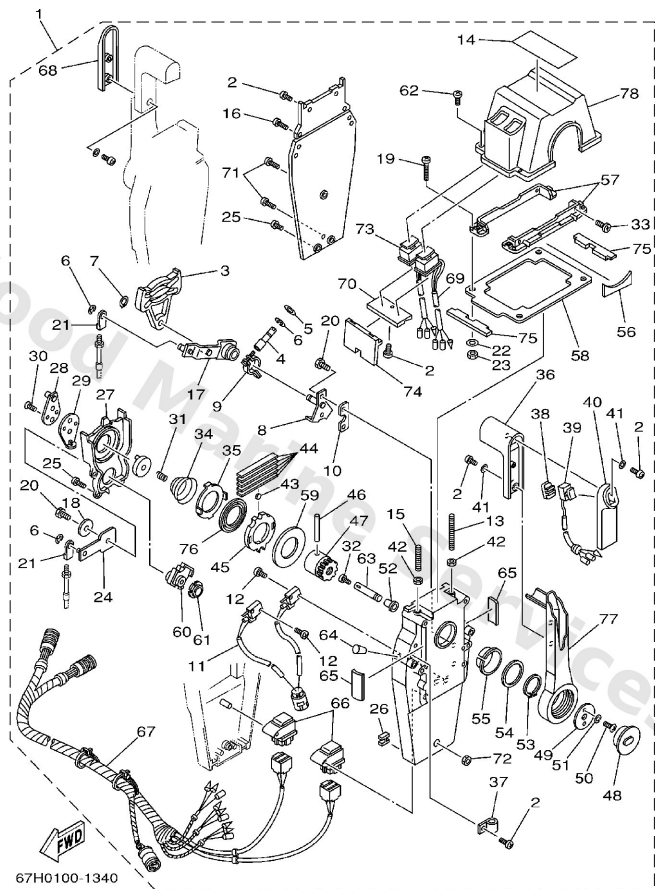

E6

Ref	Part	
61	703--48235--00 Bushing	Buy now
62	704--48282--00 Screw 2	Buy now
63	EL8--48153--10 Shaft, free accel.	Buy now
64	704--48166--00 Plug	Buy now
65	704--48284--00 Grommet	Buy now
66	704--81950--00 Relay assembly	Buy now
67	704--82590--10 Wireharness assembly	Buy now
68	704--48229--10 Grip, control lever 2	Buy now
69	704--82563--E0 Trim & tilt switch assembly	Buy now
70	704--48228--10 Holder, switch	Buy now
71	704--48128--00 Screw, pan head	Buy now
72	704--48156--00 Nut 1	Buy now
73	704--82563--F0 Trim & tilt switch assembly	Buy now
74	704--48285--00 Grommet 2	Buy now
75	704--48286--00 Grommet 3	Buy now

 
Remote Control Assy 2

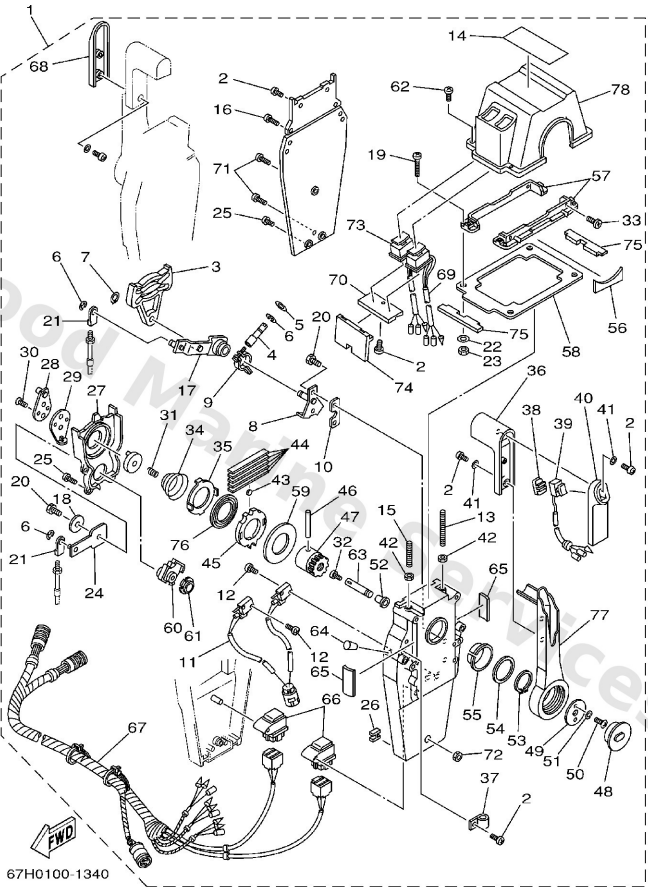

E6


Ref	Part	
76	704--48178--00 Plate, shift	Buy now
77	704--48221--00 Lever control	Buy now
78	704--48119--20 Cover	Buy now

 Remote Control Box

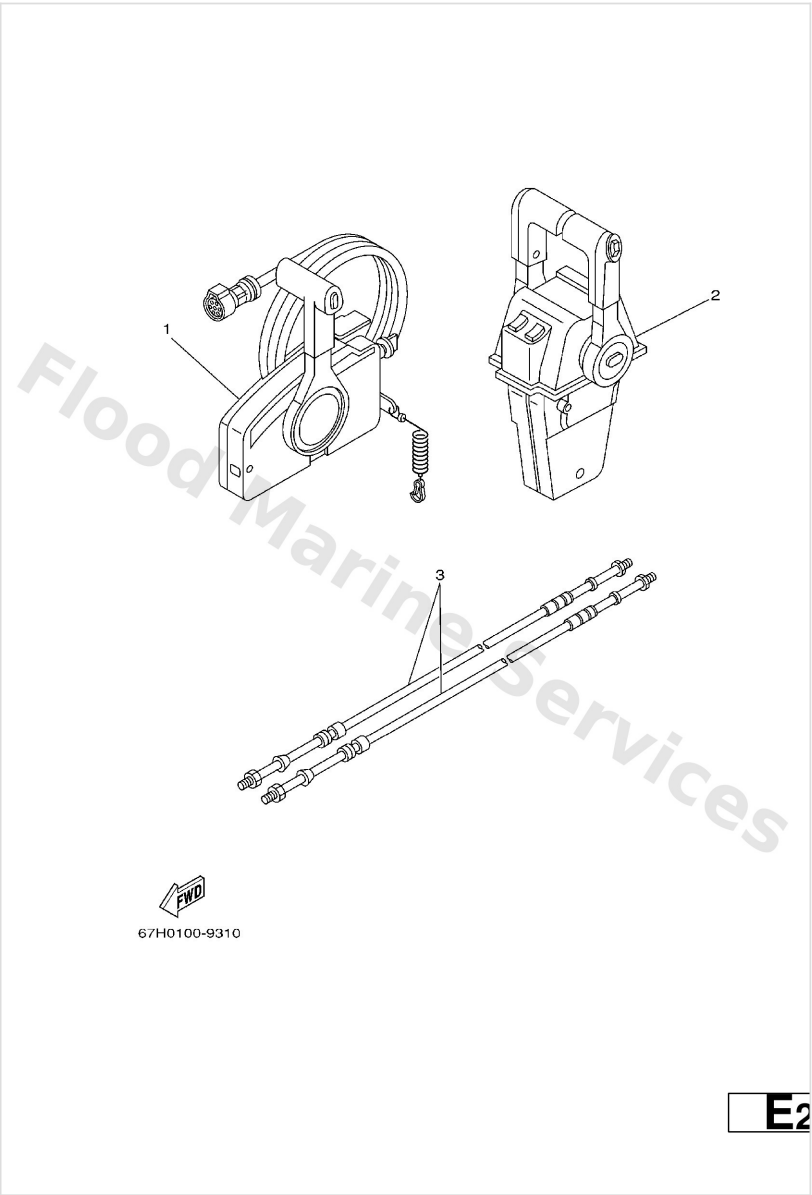


Ref	Part	
1	703--48205--17 Remote control assembly (10p, ptt) AP WITH PT/T SW.	Buy now
2	704--48207--23 Remote Control assembly AP WITH PT/T SW.	Buy now
3	701--48320--50 Cable, Remote Control L=15F UR	Buy now
3	701--48320--60 Cable, Remote Control L=16F UR	Buy now
3	701--48320--80 Cable, Remote Control L=17F UR	Buy now
3	701--48350--00 Cable, Remote Control L=21F UR	Buy now
3	701--48350--20 Cable, Remote Control L=23F UR	Buy now

 Repair Kit 1

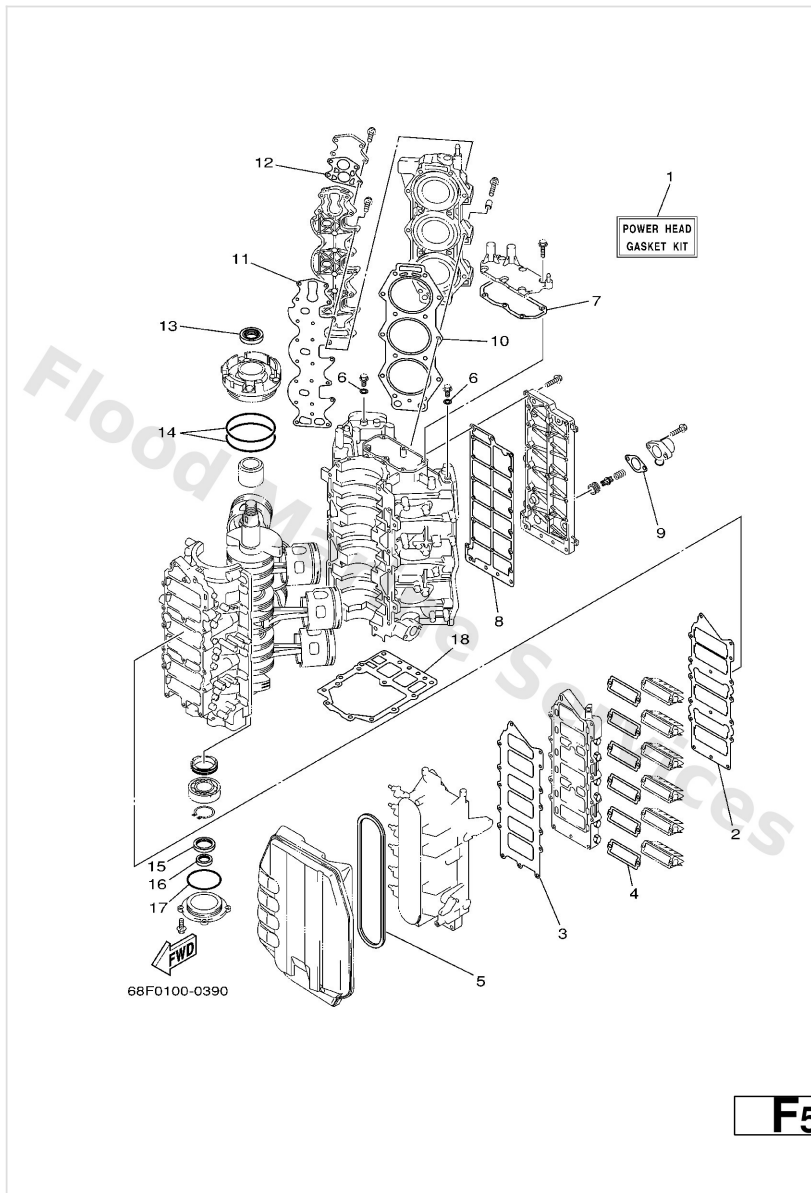


Ref	Part	
1	68FW000100 Power head gasket kit	Buy now
2	65L--13645--00 Gasket, manifold 1	Buy now
3	65L--13646--00 Gasket, manifold 2	Buy now
4	61A--13621--A0 Gasket, valve seat	Buy now
5	65L--14483--00 Gasket	Buy now
6	90430--14115 Gasket (663)	Buy now
7	68F1138100 Gasket 1	Buy now
8	68F4111400 Gasket, exhaust outer cover	Buy now
9	6G5--11382--A1 Gasket 2	Buy now
10	68F1118100 Gasket, cylinder head 1	Buy now
11	68F1119301 Gasket, head cover 1	Buy now
12	688--12414--A1 Gasket, cover	Buy now
13	93102--40M14 Oil seal(61a)	Buy now
14	93211--04001 O-ring	Buy now
15	9310235M61 Oil seal	Buy now

 Repair Kit 1

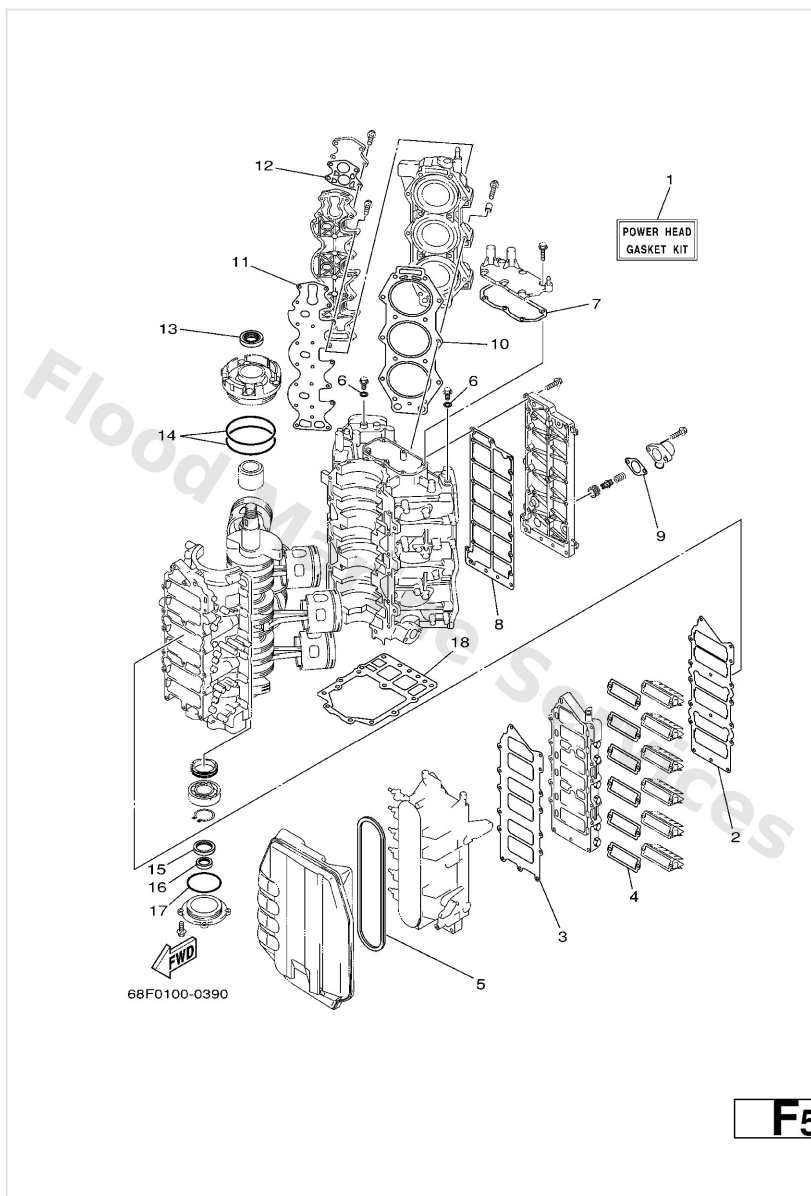


Ref	Part	
16	93101--22M15 Oil seal (6e5)	Buy now
17	93210--74M35 O-ring (6e5)	Buy now
18	68F4511300 Gasket, upper casing	Buy now

 Repair Kit 2

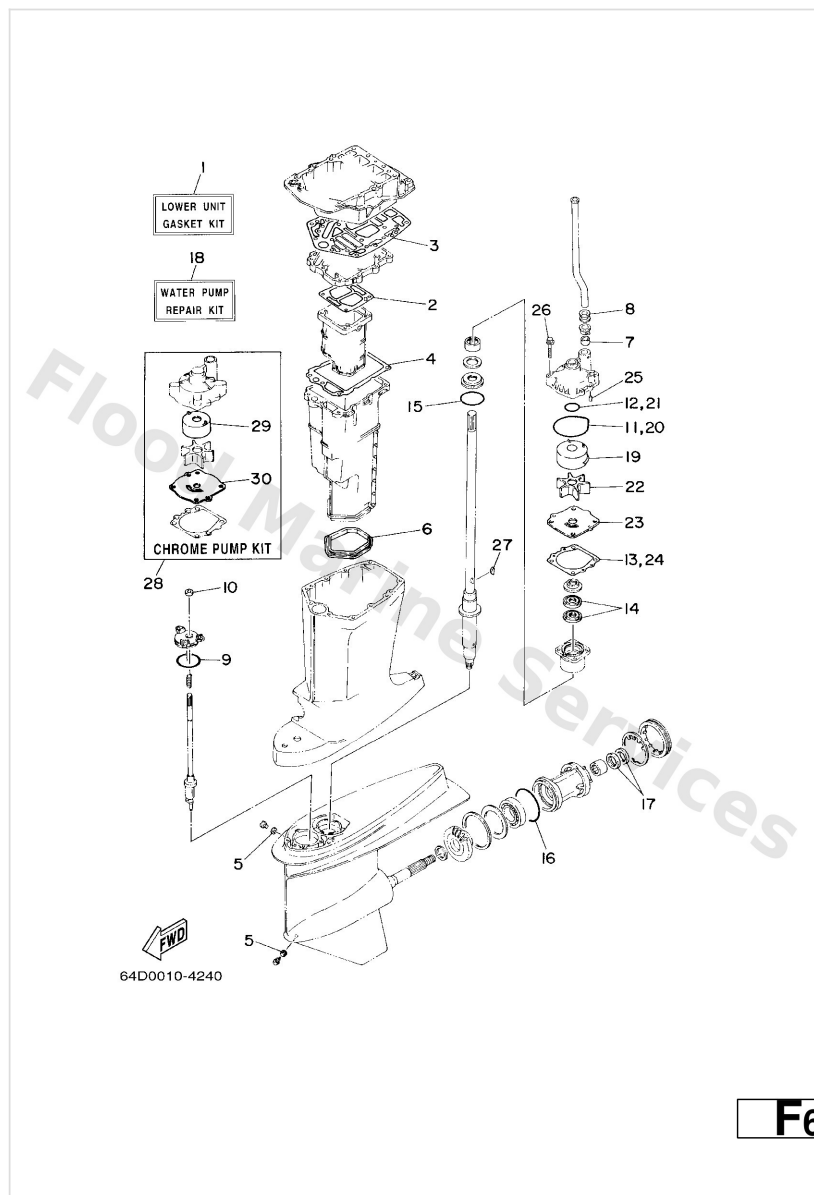

Ref	Part	
1	6G5--W0001--C1 Lower unit gasket kit	Buy now
2	6G5--41134--A0 Gasket, exhaust manifold	Buy now
3	6G5--45114--A0 Gasket, upper casing	Buy now
4	6E5--41135--A0 Gasket, exhaust manifold	Buy now
5	90430--08020 Gasket	Buy now
6	6E5--45123--00 Gasket, muffler	Buy now
7	6E5--44365--00 Damper, water seal 1	Buy now
8	6E5--44366--00 Damper, water seal 2	Buy now
9	93210--58144 O-ring(47x)	Buy now
10	93106--09014 Oil seal	Buy now
11	93210--86M38 O-ring (6e5)	Buy now
12	93210--37160 O-ring (6g8)	Buy now
13	6E5--44315--A0 Gasket,water pump	Buy now
14	93101--28M16 Oil seal (6e5)	Buy now
15	93210--55M14 O-ring (70e)	Buy now

 
Repair Kit 2

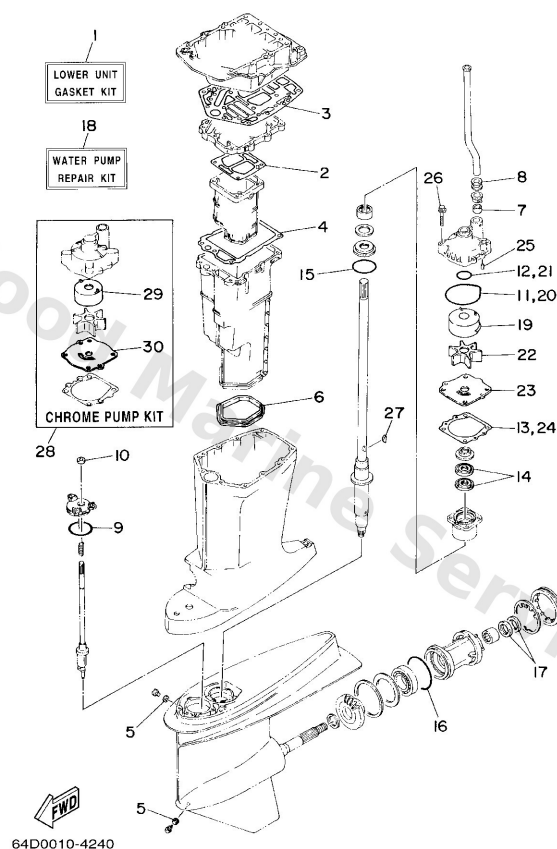

F6

Ref	Part	
16	93210--97M55 O-ring (6g5)	Buy now
17	93101--30M17 Oil seal (6e5)	Buy now
18	61A--W0078--A3 Water pump repair kit	Buy now
19	61A--44322--02 Insert, cartridge	Buy now
22	6E5--44352--01 Impeller	Buy now
23	6G5--44323--00 Outer plate, cartridge	Buy now
25	93606--12019 Pin, dowel (614)	Buy now
26	90119--08M14 Bolt, with washer	Buy now
27	90280--04M05 Key, woodruff (6e5)	Buy now
28	61A--W0078--1A Chrome pump kit	Buy now
29	6R3--44322--41 Insert, cartridge	Buy now
30	6G5--44323--40 Outer plate, cartridge	Buy now

 
Starting Motor

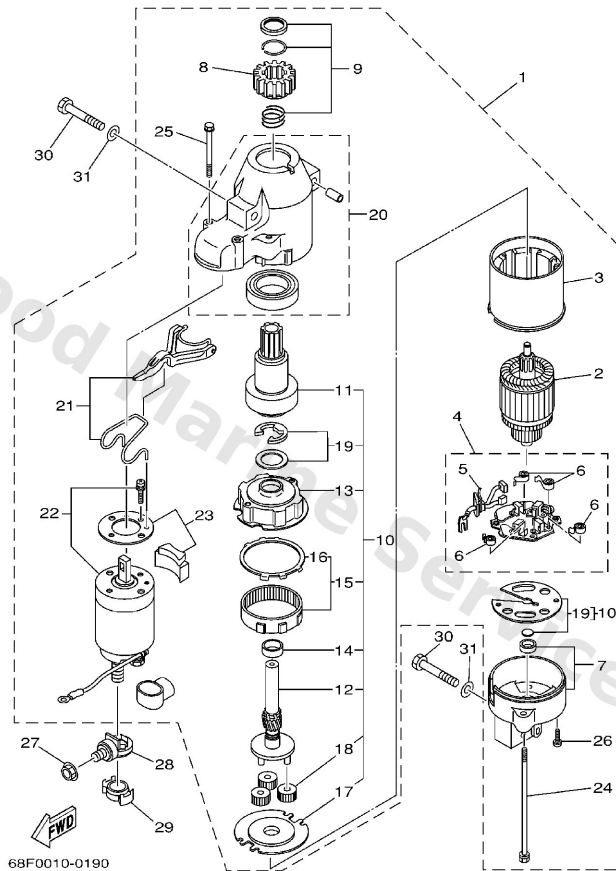

F4

Ref	Part	
1	68F8180001 Starting motor assembly	Buy now
2	67F--81850--00 Armature assembly	Buy now
3	67F--81810--00 Stator assembly	Buy now
4	68F--81840--00 Brush holder assembly	Buy now
5	67F--81801--00 Brush set	Buy now
6	67F--81813--00 Spring, brush	Buy now
7	68F--81820--00 Rear bracket assembly	Buy now
8	67F--81808--00 Pinion assembly	Buy now
9	67F--81857--00 Pinion stopper set	Buy now
10	67F--81807--00 Gear assembly, starting motor	Buy now
11	67F--81832--00 Clutch, over run	Buy now
12	67F--81836--00 Shaft, pinion	Buy now
13	67F--81821--00 Bracket, center 1	Buy now
14	67F--81841--00 Bearing	Buy now
15	67F--81891--00 Gear, ring	Buy now

 
Starting Motor

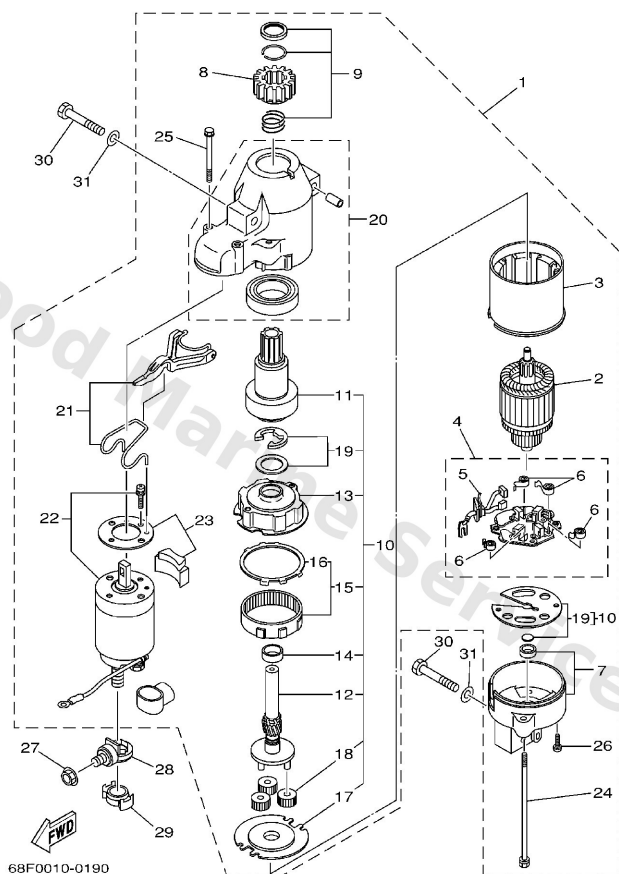

F4

Ref	Part	
16	67F--8183R--00 Gasket	Buy now
17	67F--81830--00 Bracket, center 2	Buy now
18	67F8183T00 Gear, Idler	Buy now
19	67F--81809--00 Washer kit	Buy now
20	67F--81842--00 Cover	Buy now
21	67F--81839--00 Lever assembly	Buy now
22	68F8194101 Starter Relay assembly	Buy now
23	67F--81869--00 Cover, dust	Buy now
24	6K7--81826--10 Bolt	Buy now
25	67F--81828--00 Bolt 2	Buy now
26	67F--81846--00 Screw	Buy now
27	90179--08003 Nut	Buy now
28	68F8192500 Terminal	Buy now
29	68F--82582--00 Cover, wire harness	Buy now
30	97013--08045 Bolt	Buy now

 
Starting Motor

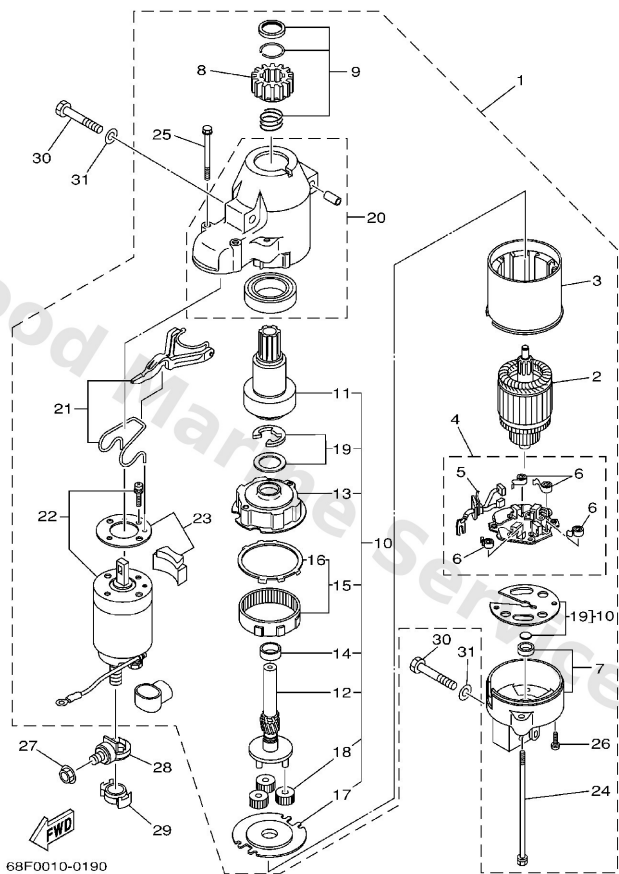

F4

Ref	Part	
31	92903--08600 Washer, plain (663)	Buy now

 Steering Guide Attachment 1

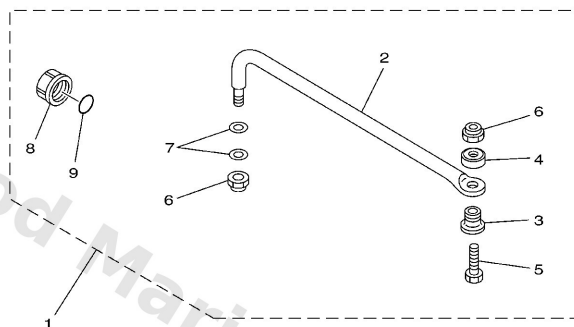


67H0100-9290

D7

Ref	Part	
1	6E5--61350--02 Steering guide attachment kit AP	Buy now
2	6E5--61351--01 Rod, steering link	Buy now
3	90387--10M61 Collar (6e5)	Buy now
4	90560--12M01 Spacer (6e5)	Buy now
5	6E5--61355--00 Bolt	Buy now
6	90185--09M01 Nut, nylon (663)	Buy now
7	90201--10M20 Washer, plate (663)	Buy now
8	6E5--43145--01 Cap, clamp bracket	Buy now
9	93210--16275 O-ring	Buy now

 Steering Guide Attachment 2

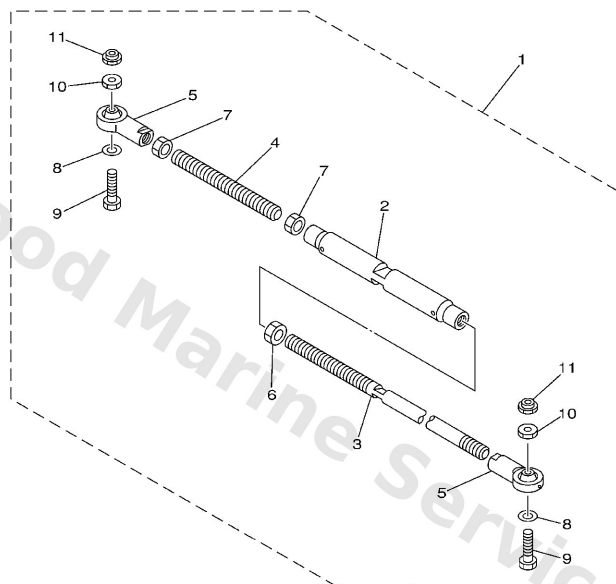


67H0100-0300

E1


Ref	Part	
1	6E5--61301--01 Tie bar assembly (l:600-800mm) AP	Buy now
2	6E5--61313--00 Adjuster	Buy now
3	6E5--61311--11 Tie bar	Buy now
4	6E5--61315--00 Tie bar, 2	Buy now
5	6E5--61303--00 Steering axle comp.	Buy now
6	90170--14M06 Nut (6e5)	Buy now
7	95380--14700 Nut (6e5)	Buy now
8	90201--10M76 Washer, plate (6e5)	Buy now
9	90101--09M70 Bolt (6e5)	Buy now
10	90170--09M05 Nut, hexagon (6e5)	Buy now
11	90185--09M01 Nut, nylon (663)	Buy now

 Switch. Panel

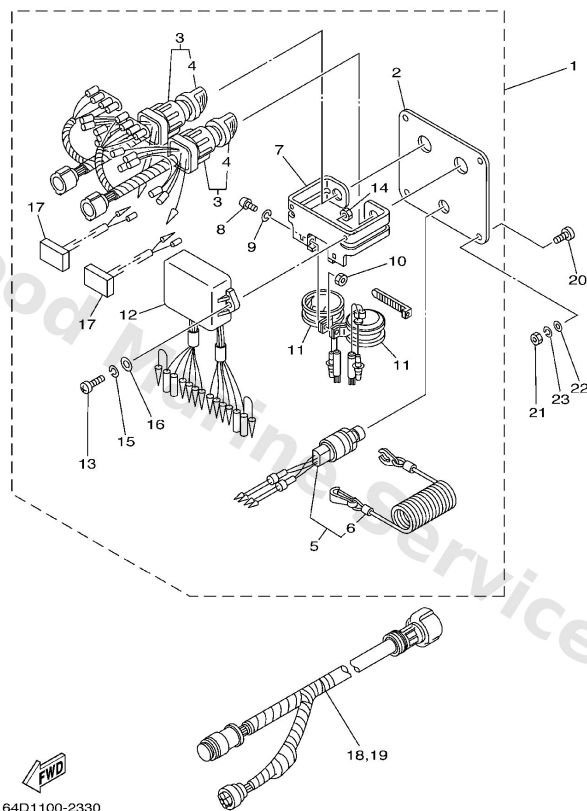

Ref	Part	
1	6K1--82570--07 Panel switch assembly AP	Buy now
2	6K1--82571--01 Plate, panel switch	Buy now
3	6K1--82510--06 Main switch assembly	Buy now
4	703--82577--00 Cap, key	Buy now
5	6K1--82575--00 Engine stop switch assembly	Buy now
6	682--82556--00 Lanyard, stop switch	Buy now
7	6K1--83614--01 Bracket	Buy now
8	98980--05010 Screw, bind(6k1)	Buy now
23	92990--05100 Ybs67-5 washer, spring AP	Buy now
21	95380--05600 Nut, hexagon (663) AP	Buy now
11	688--83383--11 Buzzer	Buy now
12	6K1--85830--01 Control unit assembly	Buy now
13	98980--06020 Screw, bind (j17)	Buy now
14	95380--06600 Nut(661)	Buy now
15	92990--06100 Washer(6a1)	Buy now

 
Switch. Panel

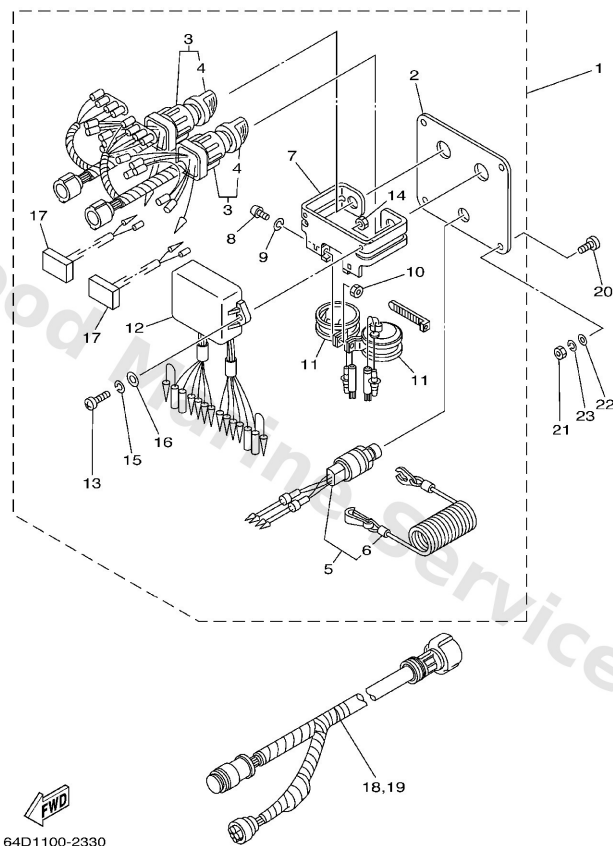

F4

Ref	Part	
16	92990--06600 Washer, plain (646)	Buy now
17	6K1--81980--00 Diode assembly	Buy now
18	6K1--8258A--40 Extension, wire harness AP	Buy now
19	61B--8258A--01 Extension, wire harness AP	Buy now
20	90149--05M05 Screw(6k0) AP	Buy now
22	92990--05600 Washer, plain (646) AP	Buy now

 
Top Cowling

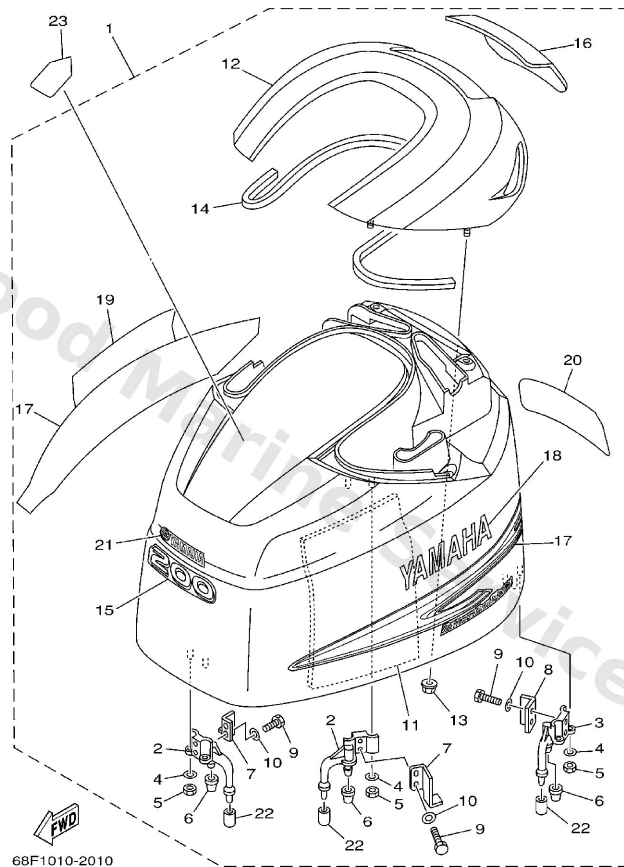

A4

Ref	Part	
1	68F42610504D Top cowling assembly	Buy now
1	68H42610504D 1-	Buy now
1	68L42610504D Top cowling assembly	Buy now
2	68F426470194 Holder, clamp band	Buy now
3	68F426480194 Holder, clamp band	Buy now
4	92990--06100 Washer(6a1)	Buy now
5	95380--06600 Nut(661)	Buy now
6	68F--42663--00 Damper 2	Buy now
7	68F4265100 Hook	Buy now
8	67F4265200 Hook	Buy now
9	97095--06016 Bolt, hexagon deep recess	Buy now
10	92995--06600 Washer, plain (646)	Buy now
11	68F4261900 Damper, form	Buy now
12	68F42613004D Molding, air duct	Buy now
13	90179--06M24 Nut(6j8)	Buy now

 
Top Cowling

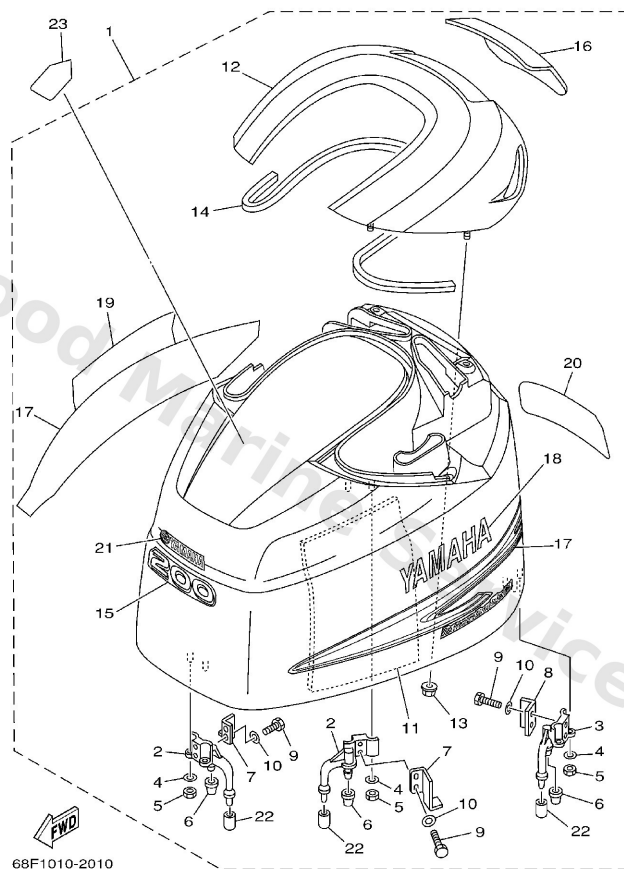

A4

Ref	Part	
14	68F4266200 Damper	Buy now
15	68F4267750 Graphic, front	Buy now
15	68H4267750 Graphic, front	Buy now
15	68L4267750 Graphic, front	Buy now
16	68F4268710 Emblem, rear	Buy now
17	68FW007050 Graphic set	Buy now
18	68F4268150 Mark, cowling	Buy now
19	68F4268250 Mark, cowling	Buy now
20	68F4267850 Graphic, rear	Buy now
20	68H4267850 Graphic, front	Buy now
20	68L4267850 -	Buy now
21	68F4267760 Graphic, front	Buy now
22	67F--13448--00 Cap	Buy now
23	68F1343400 Label, Caution	Buy now

 
Upper Casing

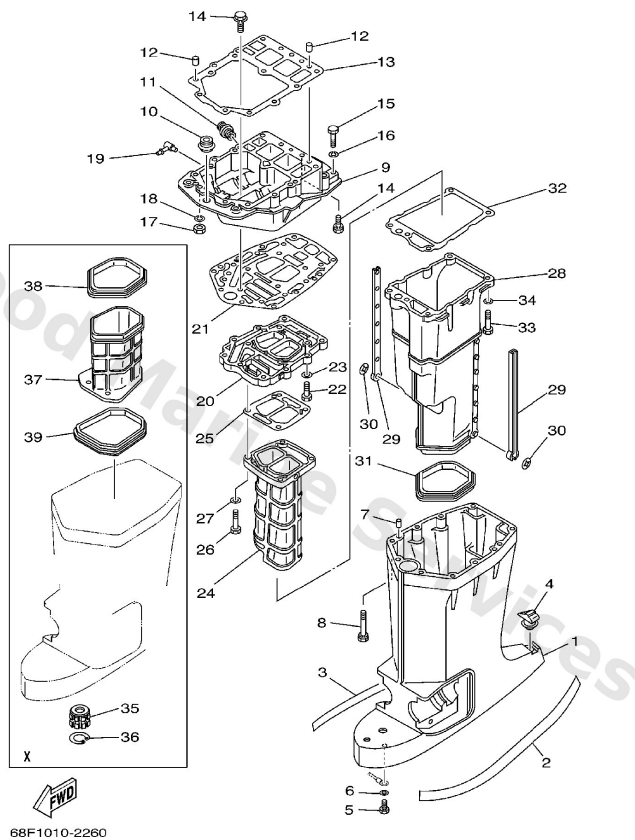

C1

Ref	Part	
1	6E5--45111--02--8D Casing, upper L	Buy now
1	6E5--45111--23--8D Casing, upper X	Buy now
2	6R3--42791--41 Mark 1	Buy now
3	6R3--42792--41 Mark	Buy now
4	6E5--45155--00 Cap	Buy now
5	97095--06010 Bolt	Buy now
6	92995--06600 Washer, plain (646)	Buy now
7	93608--12M05 Pin, dowel b (6e5)	Buy now
8	90119--08027 Bolt, with washer	Buy now
9	6G5--41137--11--94 Guide, exhaust FLUSHING KIT	Buy now
10	6E5--42724--00 Grommet	Buy now
11	6G5--12581--00 Joint, hose	Buy now
13	68F4511300 Gasket, upper casing	Buy now
14	90119--08M79 Bolt, hexagon (fj1)	Buy now
15	97095--08045 Bolt, hexagon	Buy now

 
Upper Casing

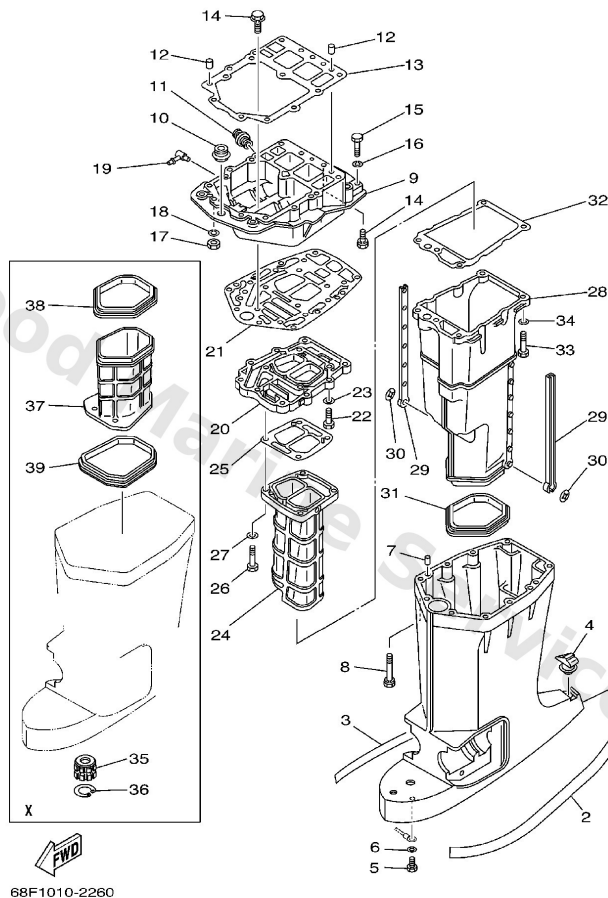

C1

Ref	Part	
16	92995--08100 Ybs67-8 washer, spring	Buy now
17	95380--08700 Nut(661)	Buy now
19	6H1--11372--00 Nipple, hose FLUSHING KIT	Buy now
20	6G5--41131--01--5B Manifold, ext. 1	Buy now
21	6G5--45114--A0 Gasket, upper casing	Buy now
22	97095--08030 Bolt, hexagon (fj1)	Buy now
23	92995--08600 Washer, plain (663)	Buy now
24	64D--41132--00--5B Manifold, exhaust	Buy now
25	6G5--41134--A0 Gasket, exhaust manifold	Buy now
28	6E5--14711--01--5B Muffler 1	Buy now
29	6E5--14737--00 Damper, muffler	Buy now
30	90183--05M02 Nut, spring (6e5)	Buy now
31	6E5--45123--00 Gasket, muffler	Buy now
32	6E5--41135--A0 Gasket, exhaust manifold	Buy now
35	6E5--45318--00 Bushing, drive shaft 3 X	Buy now

 Upper Casing

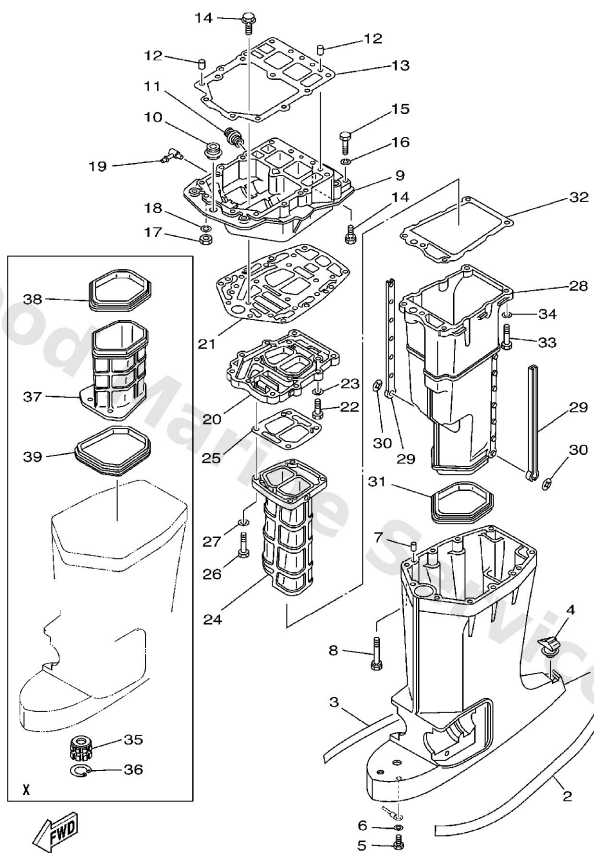


68F1010-2260

C1

Ref	Part	
36	93420--36M01 Circlip (6a0) X	Buy now
37	64D--14721--20--5B Muffler 2 X	Buy now
38	64D--45123--00 Gasket, muffler X	Buy now
39	64D--45375--00 Damper, seal X	Buy now

 
Vapor Separator 1

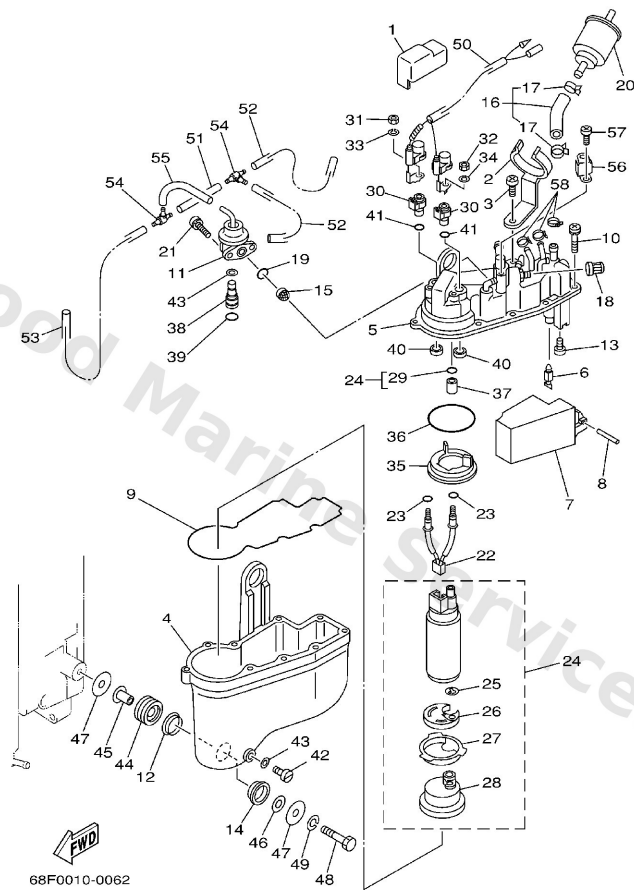

B6


Ref	Part	
1	68F1378400 Cover, pump	Buy now
2	68F2421600 Stay	Buy now
3	68F2447300 Screw	Buy now
4	66K--14980--00 Body, float chamber	Buy now
5	68F1418201 Cover, float chamber	Buy now
6	65L--14546--00 Valve, needle	Buy now
7	66K--14985--00 Float	Buy now
8	66K1454801 Pin, float arm	Buy now
9	66K--14984--00 Gasket, float chamber	Buy now
10	65L--14125--00 Screw	Buy now
11	68F1390600 Regulator, pressure	Buy now
12	66K1423900 Seal	Buy now
13	66K1432501 Screw, pan head	Buy now
14	66K--14163--00 Spacer	Buy now
15	65L--13905--00 Filter comp	Buy now

 Vapor Separator 1

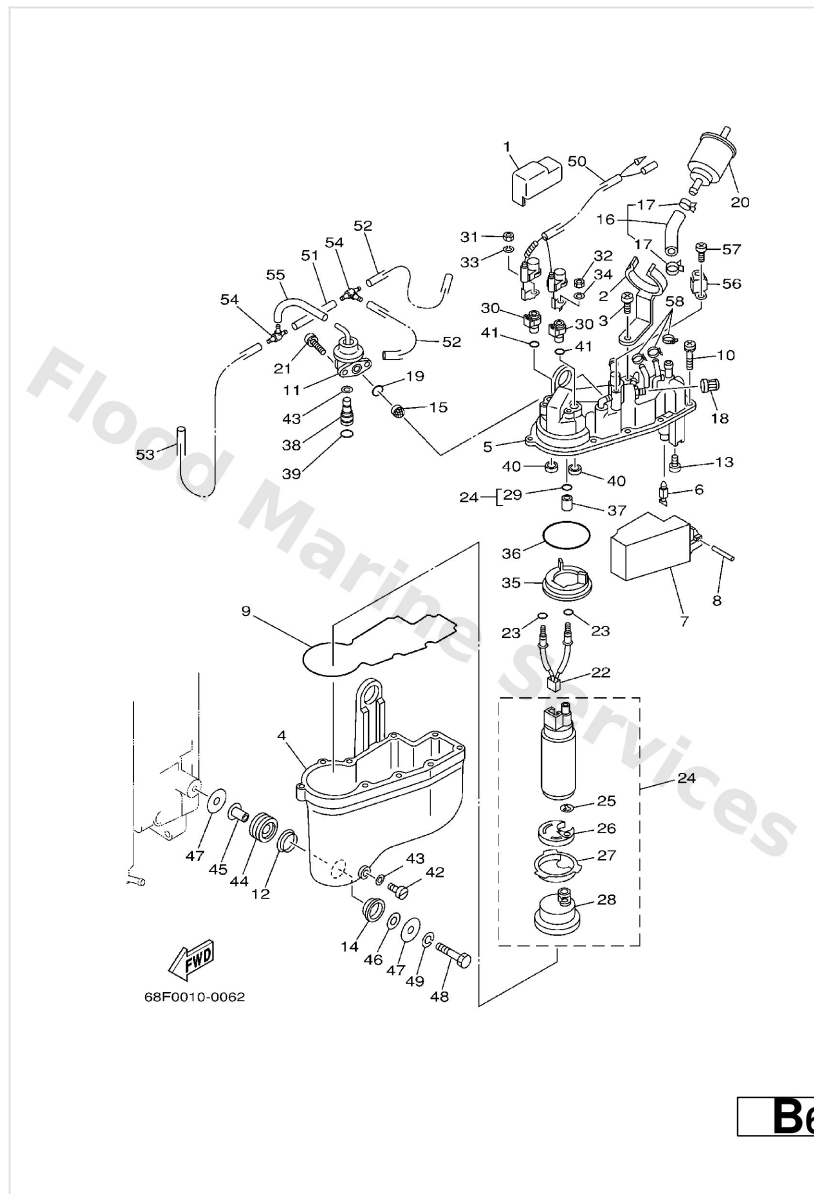


Ref	Part	
16	68F1397100 Pipe, fuel 1	Buy now
17	65L--24387--00 Clip	Buy now
18	65L--14966--00 Cap	Buy now
19	65L--24486--00 O-ring	Buy now
20	68F2425100 Strainer 1	Buy now
21	66K1424500 Screw, guide	Buy now
22	68F8250900 Wire, sub lead	Buy now
23	65L--14227--00 Washer	Buy now
24	68F1390700 Fuel pump comp.	Buy now
25	65L1415900 Clip	Buy now
26	68F1378100 Damper, pump	Buy now
27	68F1384400 Plate 2	Buy now
28	68F1391500 Filter	Buy now
29	65L--1416A--00 O-ring	Buy now
30	66K1427100 Insulator	Buy now

 Vapor Separator 1

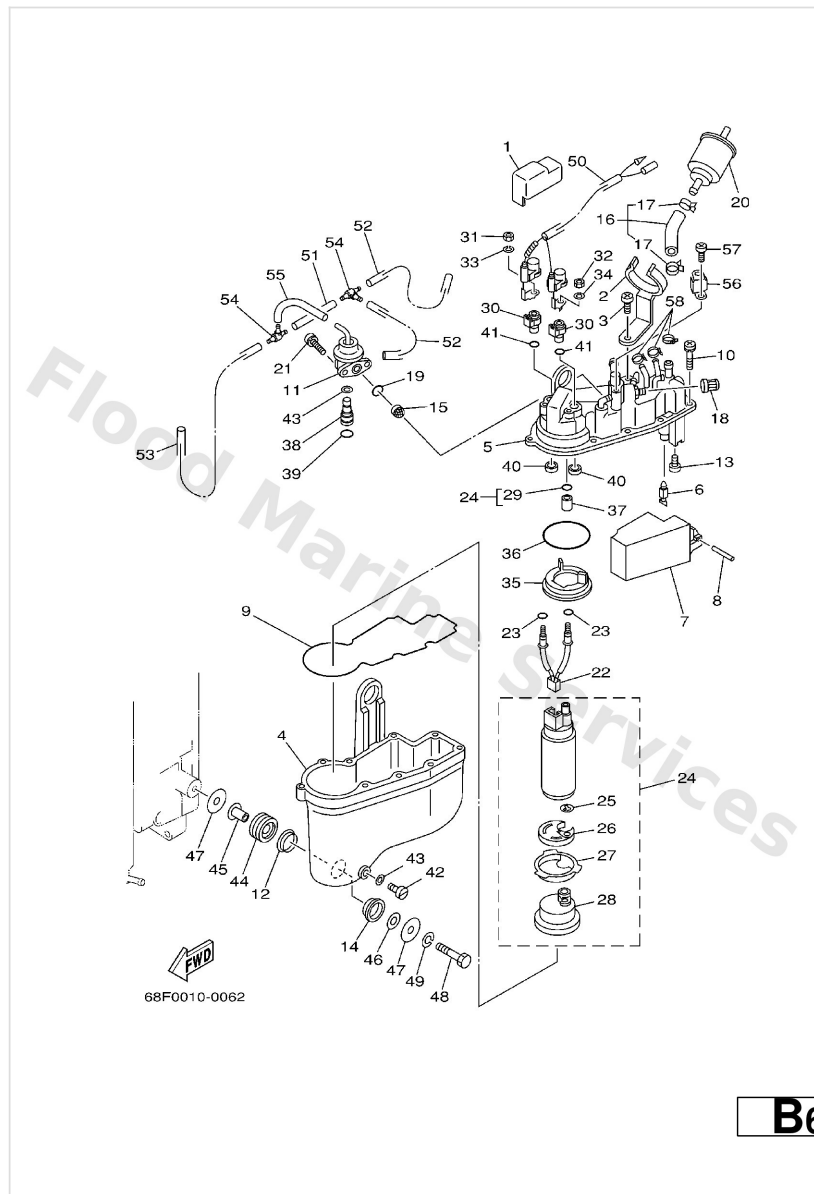


Ref	Part	
31	65L8182A00 Nut	Buy now
32	65L8182K00 Nut	Buy now
33	65L--8182E--00 Washer	Buy now
34	65L--8182F--00 Washer	Buy now
35	68F1384300 Plate 1	Buy now
36	65L--14147--00 O-ring	Buy now
37	68F1427400 Connector	Buy now
38	66K2437600 Pipe, joint 1	Buy now
39	66K2448900 O-ring	Buy now
40	68F1427100 Insulator	Buy now
41	65L--14397--00 O-ring	Buy now
42	65L--14992--00 Screw, drain	Buy now
43	65L--14997--00 Seal	Buy now
44	65L2437500 Grommet	Buy now
45	65L--24397--00 Collar	Buy now

 Vapor Separator 1

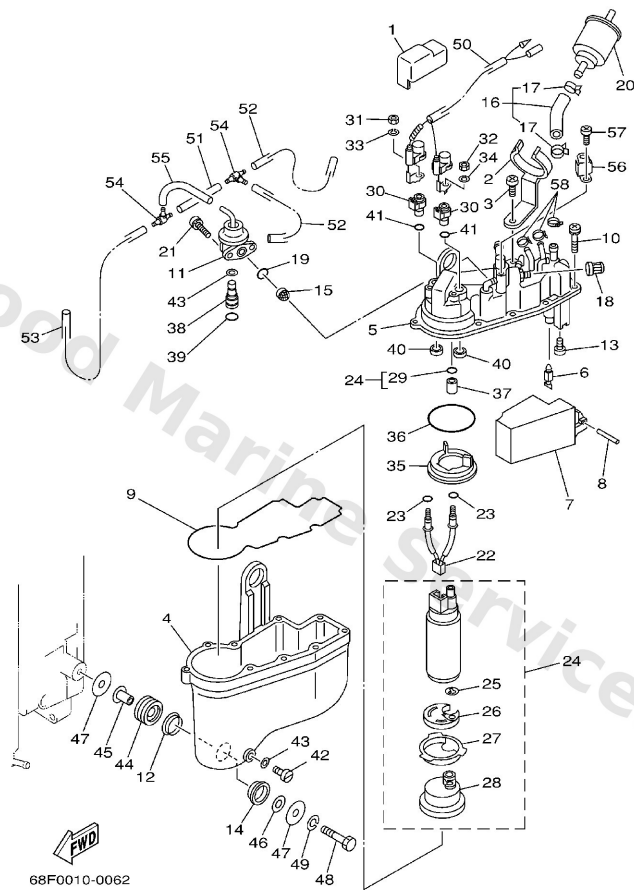

Ref	Part	
46	65L--24576--00 Washer	Buy now
47	66K--24579--00 Washer 2	Buy now
48	65L--24592--00 Bolt	Buy now
49	65L2416900 Washer, lock	Buy now
50	68F8250700 Wire, lead	Buy now
51	66K--13542--00 Hose, vacuum sensing 1	Buy now
52	66K--13544--00 Hose, Vacuum Sensing 2	Buy now
53	66K--13532--00 Hose, vacuum sensing 3	Buy now
54	65L--24461--00 Pipe, joint 4	Buy now
55	66K--13533--00 Hose, vacuum sensing 4	Buy now
56	65L--13898--00 Plate 4	Buy now
57	65L--14565--00 Screw	Buy now
58	90465--11M10 Clamp	Buy now

 Vapor Separator 2

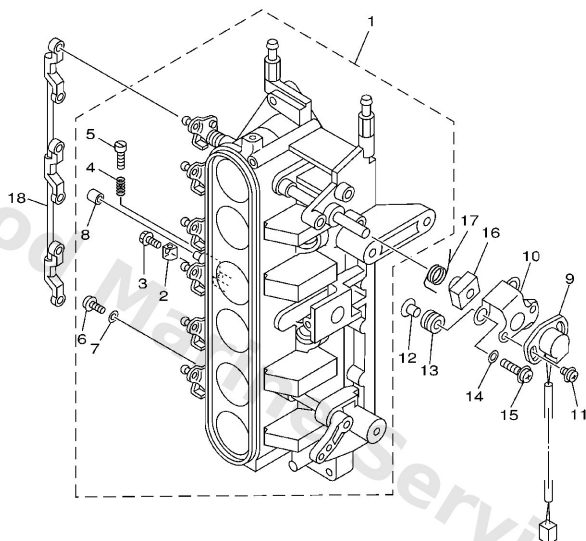


68F0010-0070

C2

Ref	Part	
1	68F1375100 Body, throttle 1	Buy now
2	65L--14527--00 Plate	Buy now
3	65L--14565--00 Screw	Buy now
4	65L--14334--00 Spring, air adjusting	Buy now
5	65L--14523--00 Screw, stop	Buy now
6	6K5--14592--00 Screw	Buy now
7	90201--05552 Washer, plate(65j)	Buy now
8	65L--14578--00 Collar	Buy now
9	61A--85885--00 Throttle sensor assembly	Buy now
10	6K7--85886--00 Bracket	Buy now
11	97985--05212 Screw, with washer(6g7)	Buy now
12	90387--05M00 Collar(6k7)	Buy now
13	90480--10M23 Grommet(6k7)	Buy now
14	65L--14596--00 Washer	Buy now
15	97985--05330 Screw, with washer(61b)	Buy now

 Vapor Separator 2

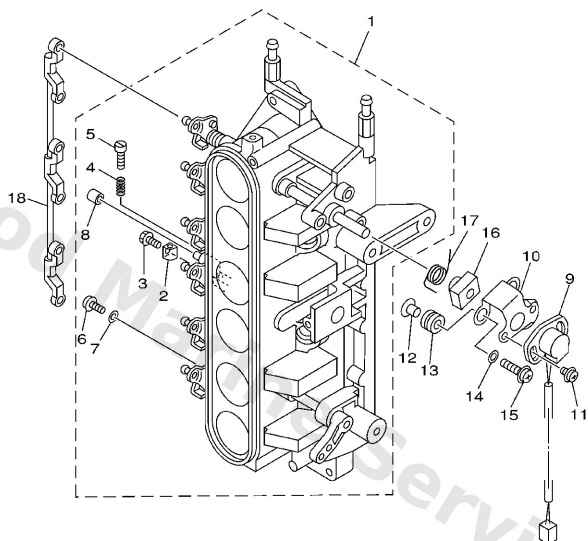

68F0010-0070

C2

Ref	Part	
16	65L1457300 Lever	Buy now
17	65L1457900 Spring	Buy now
18	65L--41217--00 Rod, accel. lever	Buy now

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.